

Assembly Instructions

Thank you for purchasing a Birlea product.

For a chance to win a *Love 2 Shop* voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture and using the hashtag **#ShareYourStyle** and **#Birlea**. One winner will be selected at random each month.

To view our full terms and conditions please visit our website. www.birlea.com

Are you happy with your purchase?

- Yes: That's great, we would love to hear more from you. Please leave us a review on our social media channels or Trustpilot. Your feedback will be greatly appreciated.
- **No:** If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer you purchased the item from. We will work with the retailer to resolve your issue as quickly as possible.



www.birlea.com

ASSEMBLY INSTRUCTIONS CROXLEY 7 DRAWER RATTAN CHEST

IMPORTANT : READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE YOUR CROXLEY 7 DRAWER RATTAN CHEST.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY:


Assembly should be carried out with this item laying flat, not standing upright. Assemble on a soft, clean surface to prevent damages. To erase the numbers printed on the pieces, use the rubber inside the accessories pack.

HEALTH & SAFETY:


DO NOT use this product if any parts are missing, damaged or worn. DO NOT use this product unless all fixings are secured. Always use on a level, even surface.

CARE & MAINTENANCE:

Periodically check all screws & fixings to ensure they are secure. DO NOT push this product as this will cause damage. Always lift this product with two people to repositions. Keep any sharp objects away from this product.

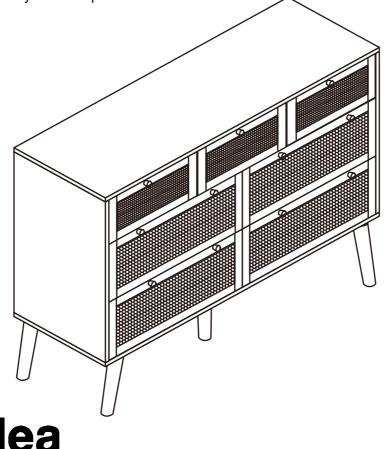



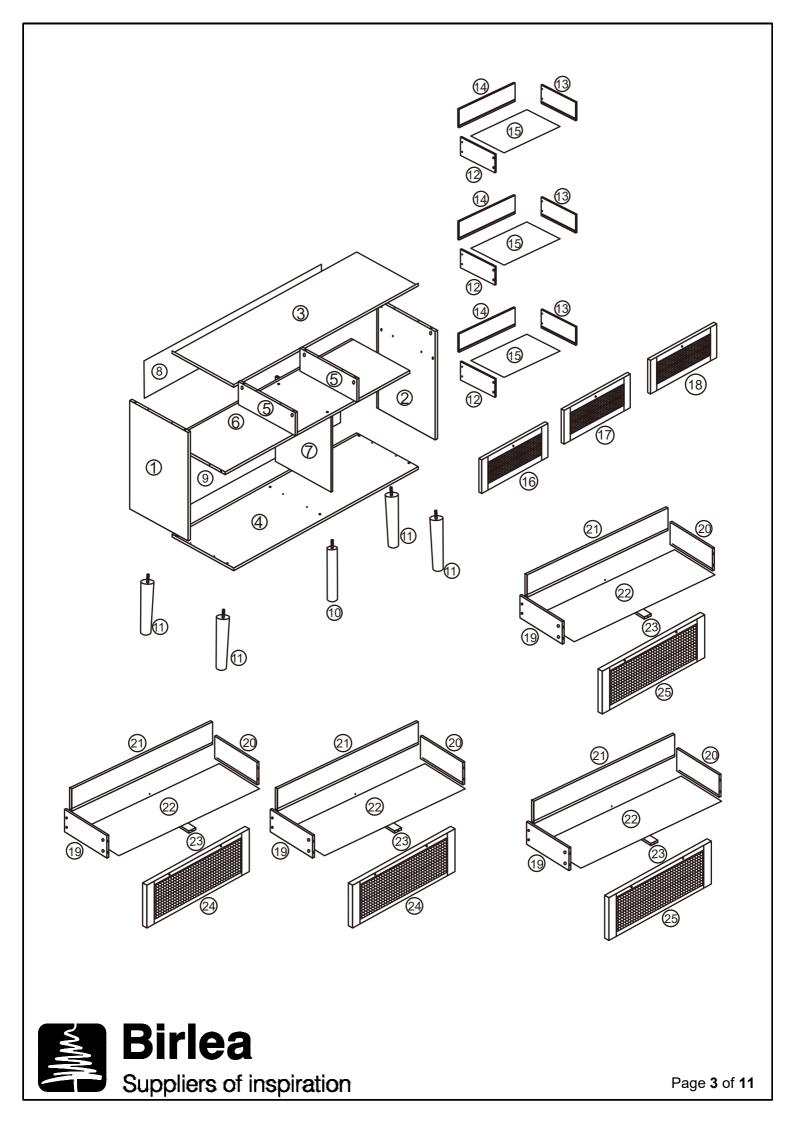


Parts List				Hardware List			
Part	Description	Box	Qty	Part	Description]	Qty
1	Side Panel(Left)	1	1	А	CAM BOLT	\$)	44
2	Side Panel(Right)	1	1	В	CAM LOCK	S	44
3	Top Panel(Right)	1	1	С	Wooden Dowel		32
4	Bottom Panel(Right)	1	1	D	Screw	(A)_000000000000000000000000000000000000	32
5	Center Panel	2	1	E	Handle+Screw	~ 🛇	11
6	Center Panel	1	1	F	Screw	etteter a	23
7	Center Panel	1	1	G	Screw	Le and and a series and a series a s	70
8	Back Panel(Up)	1	1	н	Metal Sheet		4
9	Back Panel(Down)	1	1	I	Foot pad	0	4
10	Mid Wooden Leg	2	1	J	Screw	O management	12
11	Wooden Leg	2	4	к	Hole Sticker		28
12	Drawer Side(Left)	2	3	L	Allen key		1
13	Drawer Side(Right)	2	3	М	Washer	0	2
14	Drawer Back	2	3	N	Safe strap		2
15	Drawer Bottom	2	3	0	Plastic Wedge+Scre	w 1	4
16	Drawer Front(Left)	1	1	DL	Rail		7
17	Drawer Front(Mid)	1	1	DR	Rail		7
18	Drawer Front(Right)	1	1	CL	Rail	A	7
19	Drawer Side(Left)	2	4	CR	Rail		7
20	Drawer Side(Right)	2	4				
21	Drawer Back	2	4				
22	Drawer Bottom	2	4				
23	Drawer Bone	2	4				
24	Drawer Front(Left)	1	2				
25	Drawer Front(Right)	1	2				


** You will need a small mallet and a screwdriver for assembly.


** Some screws and wooden dowel


** Note : To secure the item to the wall.



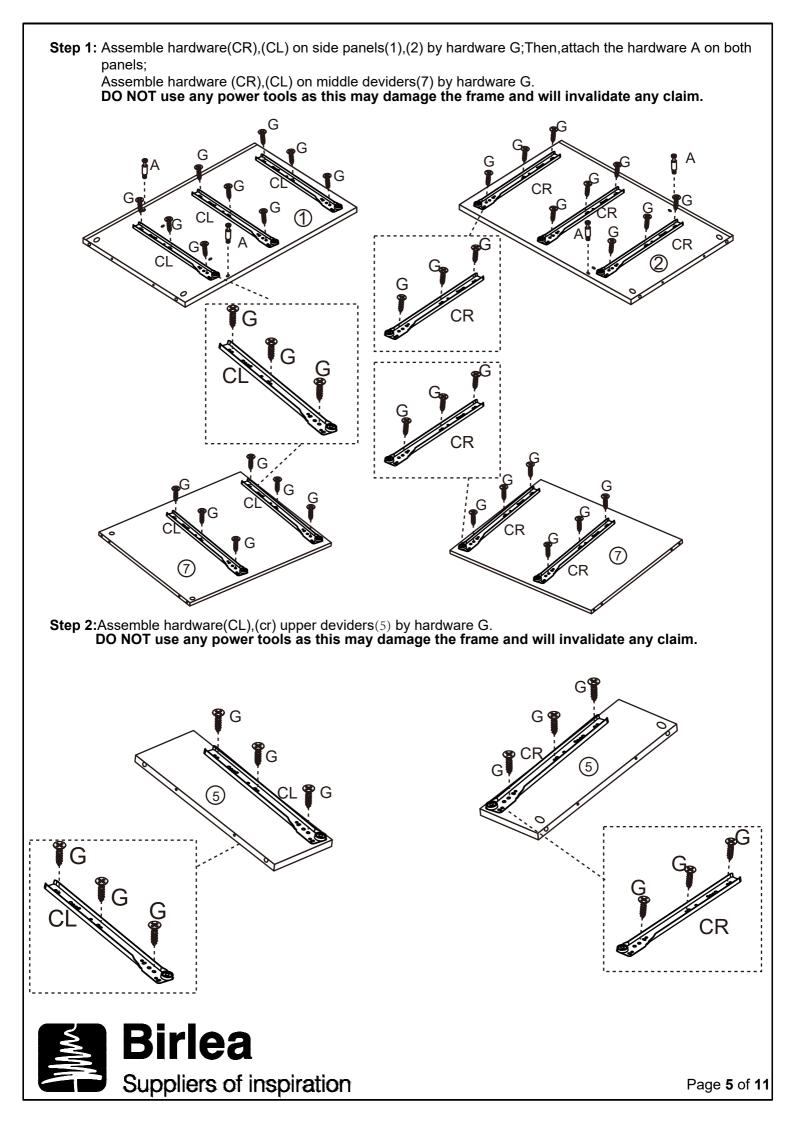


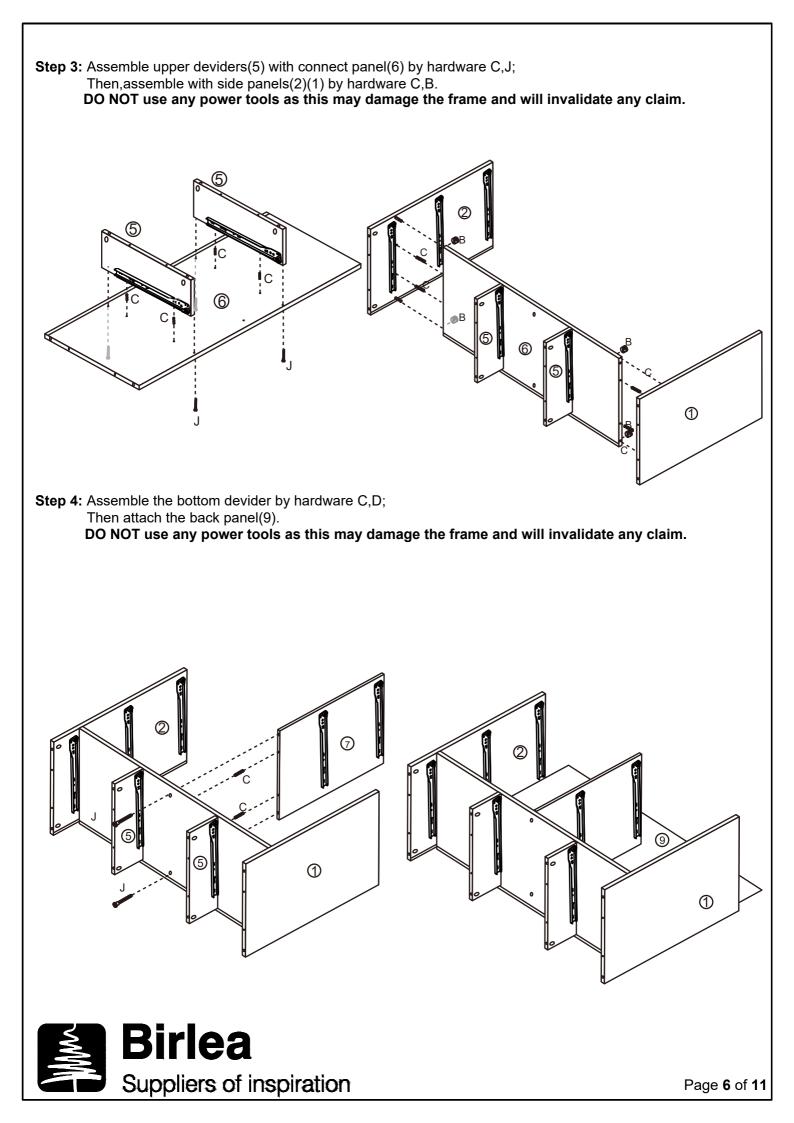


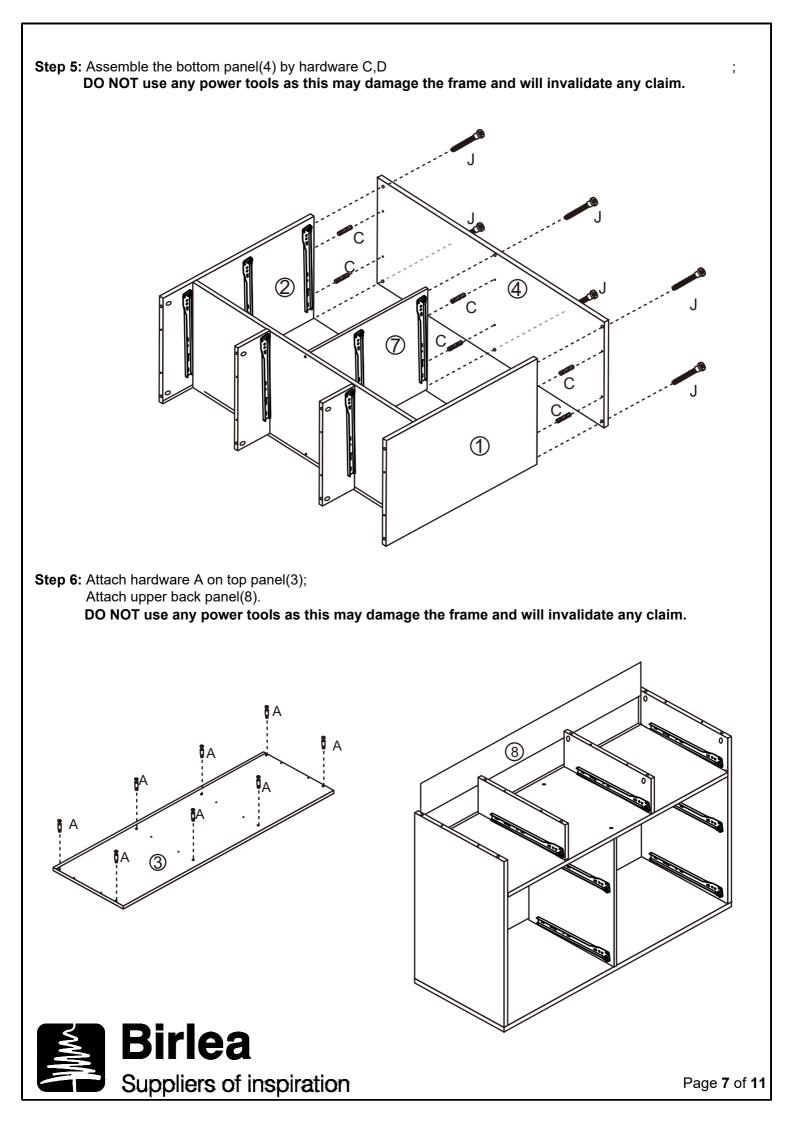


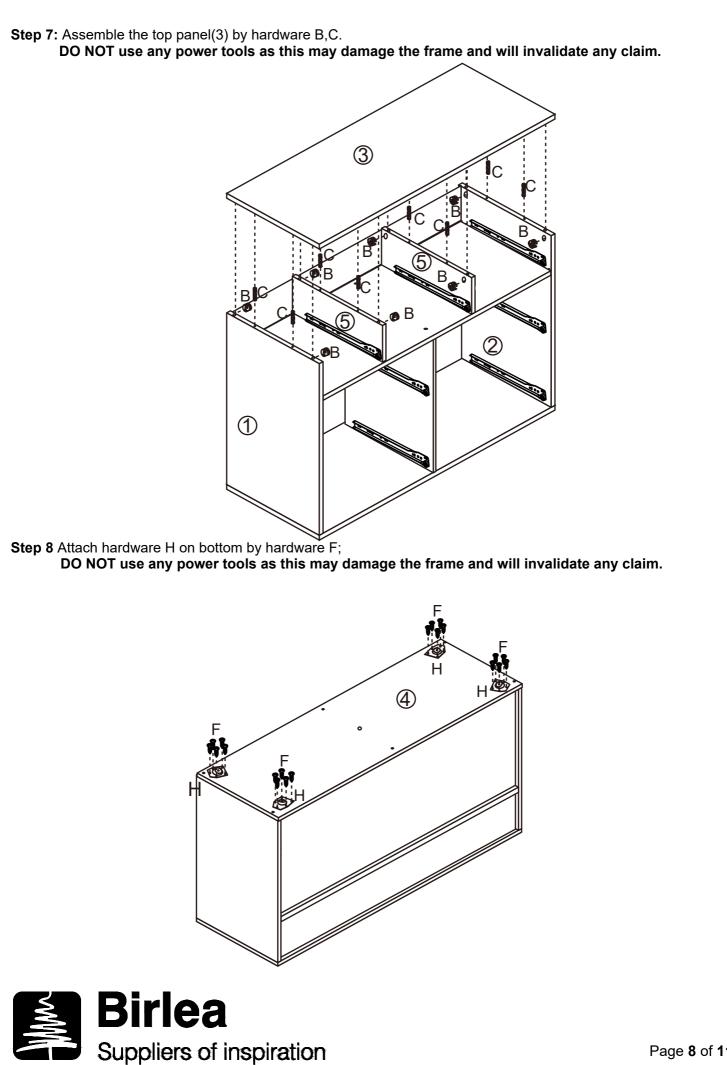

Page 8 of 11

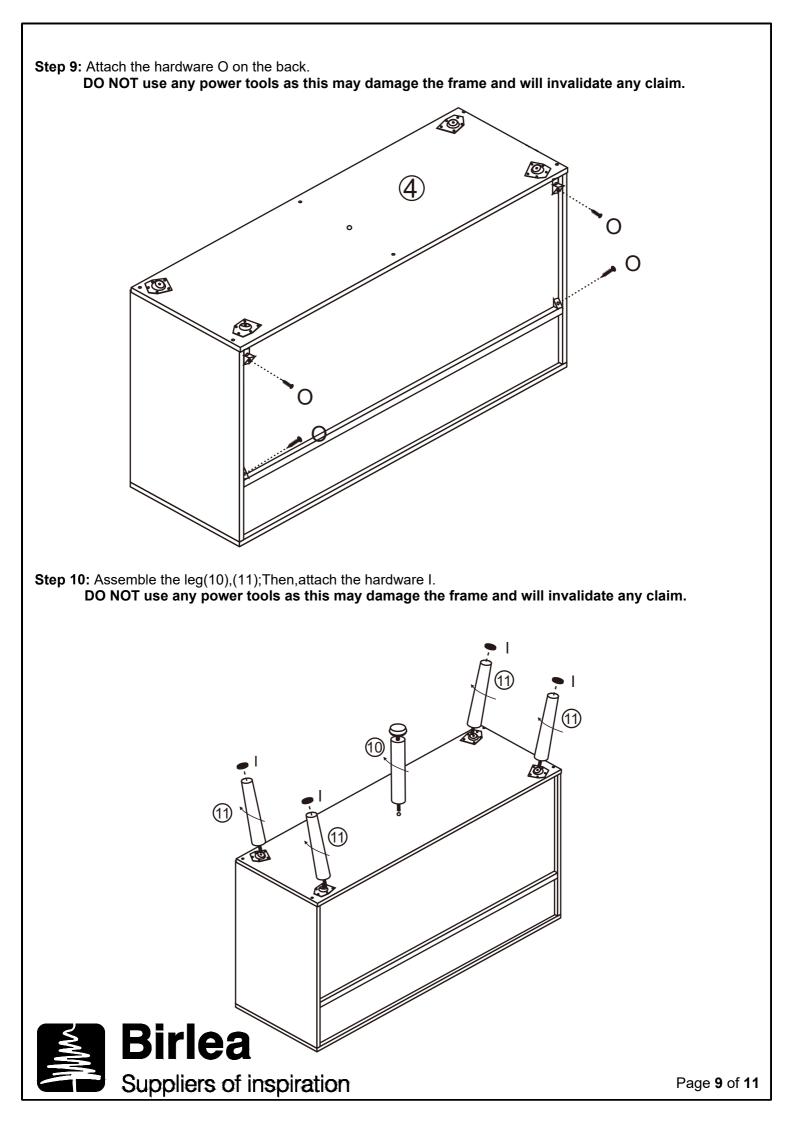

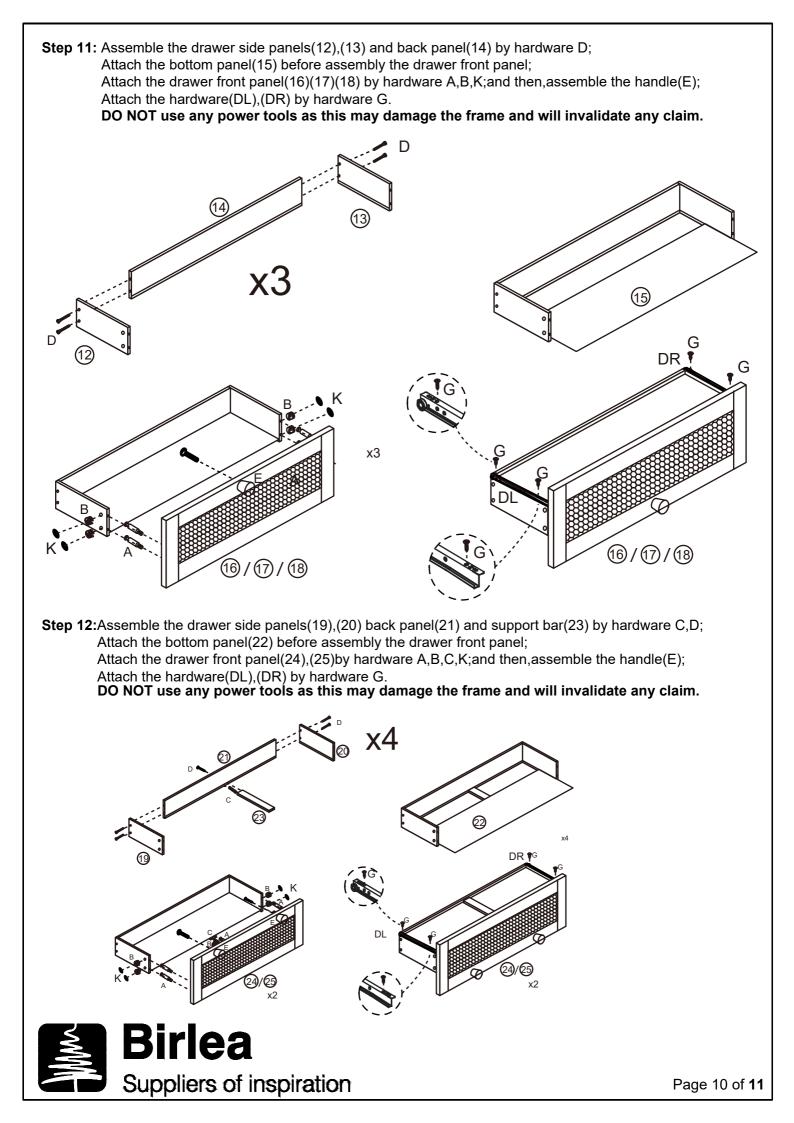

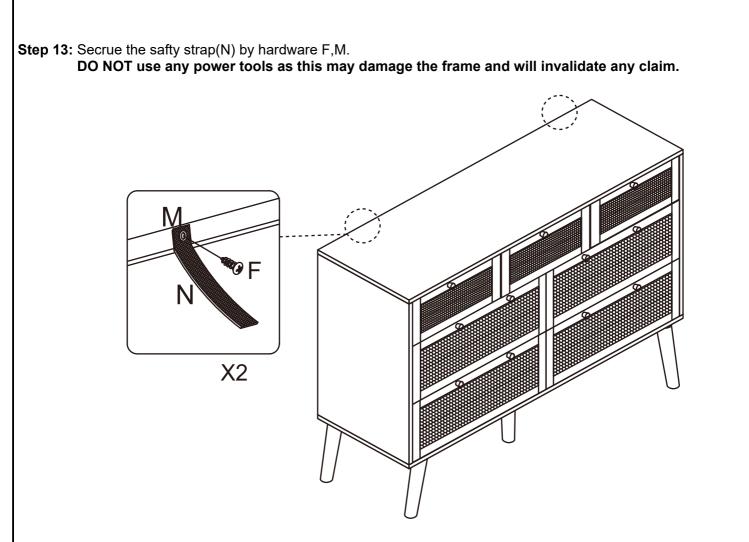

PLEASE NOTE that wall fixings are not supplied as different wall materials require different fixing devices. You must use fixings devices suitable for the type of wall you intend to mount product to. Ensure the head of any screw used has a diameter greater than the mounting hole and the fixing is safe and secure before use.

Birlea Furniture advise you use the wall straps provided to further enhance the safety of this product.

Additional Information:

- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to <u>info@birlea.com</u> to be shared in our #birleahome feature on instagram.

