

WALL ATTACHMENT GUIDE

WARNINGS!

 


- This unit is provided with a safety wall strap to prevent accidental tipping. It is important that the strap is correctly fitted. Failure to fit the strap could lead to serious injury.
- Never allow children to climb or hang on drawers, doors or shelves.
- Place heaviest items in the lower drawers or shelves.
- Never open more than one drawer at a time.
- From time to time check the fitting to ensure the wall plugs or screws do not become loose.
- Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

YOU WILL NEED:











HARDWARE:

 

 


Screw (to attach strap to product)

Strap and washers


Wall fixings (plugs and screws) are not included please source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson.



 Wood If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure



 Brick or Masonry Use an appropriate wall plug provided you are sure your wall is sound



Cavity Wall Special toggle wall plugs are needed, seek expert advice

Step 1.

Attach strap using screw and washer provided to the product.

Step 2.

Mark the desired position of the hole on to the wall with a pencil.

Drill and insert suitable screw (not included) for wall through the washer and strap into a wall plug (not included) in the wall.

