

- Section 1 - Attaching castors, glides or legs
- Section 2 - Connecting the bases
- Section 3 - Attaching a strutted headboard
- Section 4 - Attaching floor-standing or winged headboard
- Section 5 - Removing wings from a winged headboard
- Section 6 - Ottoman Bases
- Section 7 - Connecting Ottoman Bases
- Section 8 - Motorised Ottoman Bases
- Section 9 - Hybrid Divan Base
- Section 10 - Hybrid TV Base



Do not overload the drawers

- Conti drawers - max 6kg
- Standard drawers - max 12kg

Before you start you will need:
Rubber Mallet, Screwdriver,
Pliers, Scissors.


WARNING - REMOVE ALL PACKAGING AND DISPOSE OF SAFELY. KEEP AWAY FROM CHILDREN. DO NOT STAND ON THE BASE DURING ASSEMBLY. TO AVOID THE RISK OF INJURY, IT IS RECOMMENDED THAT A MINIMUM OF TWO PEOPLE ASSEMBLE AND INSTALL THIS PRODUCT.

Unwrapping

Carefully remove any cardboard protectors and all packaging staples with pliers to avoid injury. Dispose of all polythene immediately to avoid the risk of suffocation to children. Where possible please recycle all packaging.

Fittings – Platform or drawer bases


Remove the fittings from the bags attached to the divan base. In a drawer base these may be stored within the storage area. Release the drawers by cutting the temporary restraining straps and trim off any excess. Do not pull the straps off as this may tear the fabric.

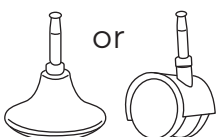

Feet/Castors



Metal U Clip

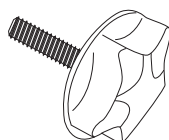



Headboard Bolts with Plastic Cap

	Feet	U Clip	Bolt
Base with one headboard fixing position			
75/90cm	6		2
120/135/150cm (per section)	4	1	1
180cm (per section)	6	1	2
Base with two headboard fixing positions			
75/90cm	6		4
120/135/150cm (per section)	4	1	2
180cm (per section)	6	1	4

- 1 **Attaching castors, legs, feet or glides**
Carefully turn over the base to expose the fittings.

For Glides and Castors:

Push the glide/castor into the labelled corner sockets and gently tap with a wooden/rubber mallet until it is fully 'home'. Do not use a metal hammer or object as this may damage the castors or divan base.

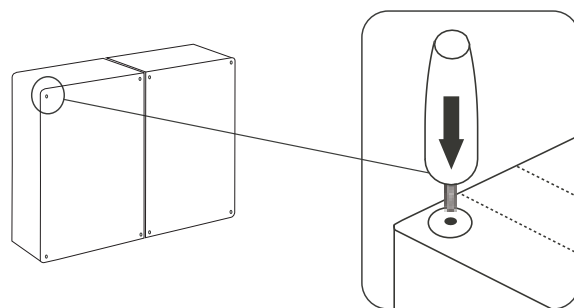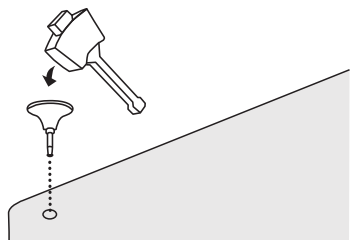


For Legs:

Screw the leg bolts into the threaded holes as marked on the base. Make sure the leg is screwed in tightly.


- 2 **Connecting the bases** (platform or drawer options)
Carefully turn over the divan halves on their side and attach the U clips as indicated on the diagram.

Once secured, use two people to turn the base back to the correct position, being careful not to drop the base as this may damage the base and legs, castors or glides.

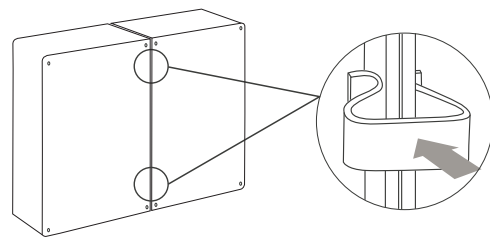

- 3 **Attaching a strutted headboard**


First of all, decide which end of the bed is to be used for a headboard, then use scissors to carefully pierce the fabric where stickers are placed. Insert the headboard bolt into the hole and fasten into place. Lower the headboard in to position, make sure the headboard is level before fully tightening the bolt.

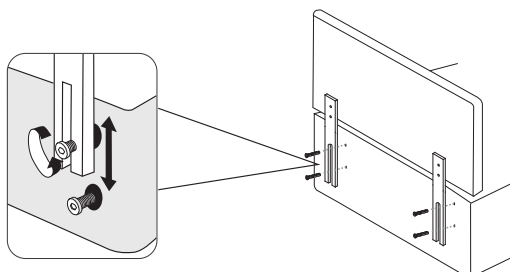

- 4 **Attaching floor-standing or winged headboard**

Line up the headboard slots with the holes marked on the divan base and thread the headboard bolt through the slot. Some headboards are supplied with a separate white plastic cap or a one piece unit with a cap. Tighten into position, make sure the headboard is straight and level before fully tightening the bolts.


Plastic spacers may have been supplied to be used with the ottoman bases.

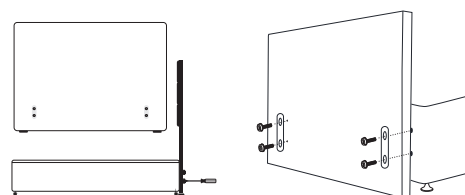

Please note the image shows two headboard fixing points but some styles may only have one


- 5 **Removing wings from a winged headboard**

Some of our winged headboards allow you to remove the wings for ease of access. If the back fabric is attached with Velcro, the model will allow you to do so. To remove the wings, gently unpeel the backing fabric at the Velcro section, exposing the bolts that attach the wings both at the top and bottom of the frame. Undo the bolts taking care to support both sections of the headboard. When the headboard is in position, reattach the wings using the same bolts and replace the Velcro.

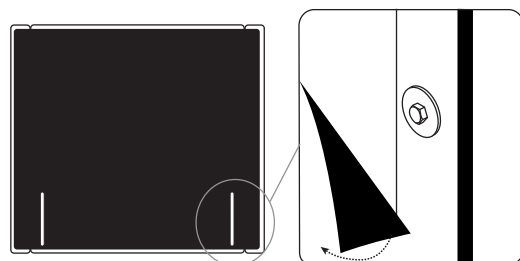

- 6 **Ottoman Bases**

	Feet	Metal Washer	White Spacer	Bolt	Plastic Washer	Long Bolt	Connecting Bolt
Side opening ottoman base							
90cm	4	4	4		4	4	
120/135/150cm (per section)	4	2	2		2	2	3
180cm (per section)	4	4	4		4	4	3
Front opening ottoman base							
75/90cm	4			4			
120/135/150cm (per section)	4			2			3
180cm (per section)	4			4			3

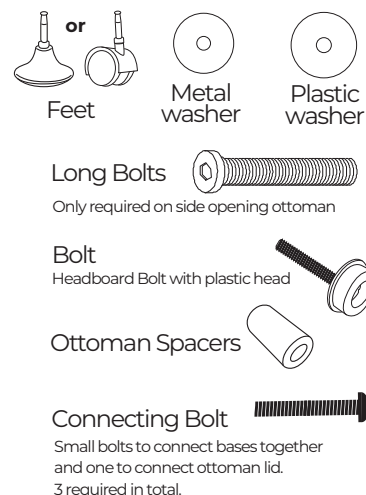

Warning: Be careful when cutting the holding ties securing the ottoman lids.
The mechanism is under pressure and can spring open with force.

WARNING: Please read and follow all safety instructions carefully before using the ottoman bed.
Failure to do so may result in injury.

1.

Proper Use Only: The pressurised opening mechanism is designed to assist with lifting the ottoman bed base. It should only be used for this purpose. Do not attempt to modify or misuse the mechanism in any way.
2.

Secure the Area: Always ensure that the area around the ottoman bed is clear of objects and people, especially children and pets when opening or closing the bed.
3.

Controlled Operation: Open and close the ottoman bed in a controlled manner. For manual ottomans close the divan by gently pushing down with both hands centrally on the mattress. The pressurised mechanism may apply significant force, so keep hands, fingers, and other body parts away from moving parts during operation. We recommend opening at arm's length using only the handles or cutouts supplied with the bed. Make sure your mattress is squarely fitted to the base before lifting. Never operate an ottoman base without a mattress. Do not allow anyone to remain on the mattress when the lid is being raised or in the 'up' position.
4.

Weight Limitations: Do not exceed the recommended weight limit for items stored inside the ottoman storage compartment. Max storage weight is 40kg distributed evenly. Exceeding the limit can compromise the safety and functionality of the mechanism.
5.

Children's Safety: This ottoman bed is not a toy. Keep children from playing with or on the bed, especially near the lifting mechanism. Never allow children to operate the bed unassisted.
6.

Entrapment: Do not place items inside the ottoman base that may become out of reach. Do not climb inside the base or allow children and pets to climb inside while open. We recommend a second person to support or supervise the lid while the storage is being accessed.
7.

Regular Maintenance: Periodically check the pressurised struts and hinges to ensure they are functioning correctly. If you notice any wear, damage, or malfunction, discontinue use immediately and contact a professional for repair.
8.

No Overloading: Do not overload the mattress or any items on the bed when attempting to lift the base, as this can strain the mechanism and pose a risk of failure.
9.


Proper Installation: Ensure the bed is assembled according to the manufacturer's instructions. Improper installation or assembly may result in malfunction or injury. If you need to remove the mattress for any reason, make sure the ottoman lid is secure, once the weight is removed, the lid could flip open, causing injury.

7 **Connecting Ottoman Bases**


Standard side or front opening

Follow the instructions for platform and drawer divans as shown in section 1 to attach the feet. Turn both ½ divans upright, being careful to keep the lids closed as the ottoman struts are under pressure. Line both halves side by side with the headboard fittings to the back. Connect the two divans where they meet in the middle with the small bolts provided, please make sure that the lid is fully opened and supported before you reach in to affix the bolts.

As the gas struts are under pressure, we suggest you leave the lids open until you are ready to put your mattress on top to avoid them springing open.

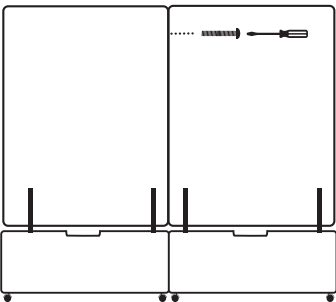

With the lids still fully opened and supported, connect the top lids together with the 3rd bolt.

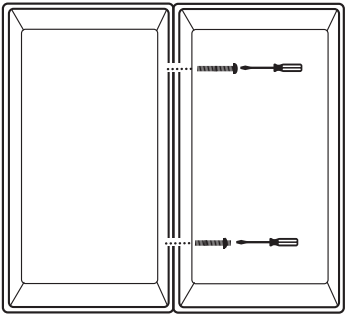

Close the ottoman lids and with two people, gently lift your mattress into place.

Don't drop the mattress or stand on the base while positioning

8 **Motorised Ottoman Bases**


	Feet	Bolt	Connecting Bolt
Motorised front opening ottoman base			
135/150cm	4	2	3
180cm	4	4	3

Follow the instructions as section 7.
The electric hinge mechanism will already be fixed to the inside walls of your ottoman base, the mechanism should look like the image opposite and be positioned at the head end.

Do not connect to the power if your base does not match the photograph or any part looks damaged, missing or unattached.

 Do not connect to power before the feet have been fitted

Two 9V batteries are required (not provided)
NOTE: when standing at the foot of the divan the USB point is positioned on the left side.

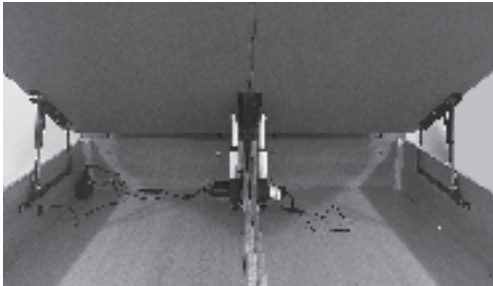

Slide open the adapter battery case and insert the two 9V batteries, taking care to make sure the pins are the right way round. Replace the casing and connect the power cable supplied to the left hand side.

Connect the adapter to the 2 pin cable which is attached to the divan base.
Do not switch on the power until all the cables are correctly connected.





The remote will be paired with the base and ready for use. There is also an action control button on the left side of the base.

Should you need to re-sync the base and handset, press and hold the re-set button on the motor panel inside the base, at the same time press the up/down buttons on the handset.

The Control box will beep once to indicate the pairing is successful.

To lock the ottoman open, press and hold the two buttons on the base action switch for 3 seconds. The control box will beep once to indicate the base is locked open. The remote will be locked out.

To unlock, press and hold the two buttons again for 3 seconds and the control box will beep twice. The remote will then be usable. If any button is touched while the base is locked open, a buzzer will sound.

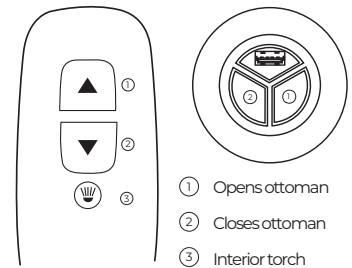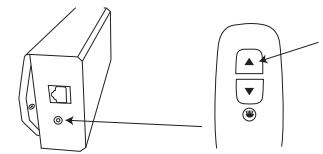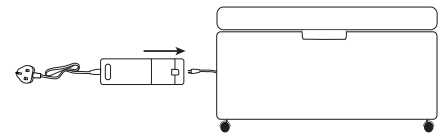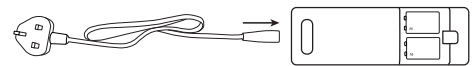

CAUTION: This is a wireless remote and can be used away from the base. Base lock should be used AT ALL TIMES when not being accessed. Keep locked open when access is required or locked closed when not in use.

9 Hybrid models - standard footend

Follow the instructions above to add feet and connect bases. Please note that these bases will be supplied with brackets at one end so the headboard will be at the opposite end to these brackets.

Once assembled the headboard is attached as section 4. The footboard brackets are pre-fitted and need to be lined up with those on the bottom of the base, and simply lifted on and pushed down gently.

10 Hybrid models - TV Footend

Follow the instructions for Hybrid bases as section 9.

To add the TV foot end, gently lie the TV foot end on its side, being careful not to pull on the lid. Insert the two glides into the pre-drilled holes.

While the footend is on its side, attach the mains power to the motor box through the cut out in the bottom. The motor, TV action and wired remote boxes will be pre-attached inside the TV footend. Stand the footend back up on its glides. Do not use the lid to support the weight. We recommend two people do this.

When the cables are attached, turn on the power and raise the TV action to its full height, being careful to keep yourself and any loose items out of the way of the action as it rises.

Make sure the runners are straight and slide the TV brackets onto the runners. You should have two brackets (top and bottom) on either side of the centre column. With the TV action at its full height, adjust the vertical runners to fit the width of your TV. Once you are happy with the position use the bolts to secure your TV to the TV action.

Please note: the bolts to attach the TV to the bracket may be different than those we supply. Always use the fittings supplied with your TV for best fit.

When the TV is secure lower the action into the frame. Loop any cables through the plastic loop towards the base of the frame to avoid having any cables round the mechanism or trapped under the frame. Turn off the power and lift the foot end (we recommend at least two people) and slide down the pre-attached brackets on the foot of the base.

The wireless remote control supplied with the bed is ready to use. Pressing the up button once the TV action will raise and stop automatically.

Press the down button and the action will return inside the frame.

