



ASSEMBLY INSTRUCTIONS

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR HIGHGATE 3 DOOR WARDROBE .

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HEALTH & SAFETY:

DO NOT use this item if any parts are missing, damaged or worn.

DO NOT use this item unless all fixings are secured.

Please keep small parts out of reach of children.

Always use on a level, even surface.

It is recommended that two people handle and assemble the item.

Birlea advise you use the wall straps provided to further enhance the safety of this product.

CARE & MAINTENANCE:

Assemble in the room of use.

To avoid damages assemble the item on a soft, clean surface

Periodically check all screws & fixings to ensure they are secure.

DO NOT push the item as this will damage the base.

Always lift the item with two people to reposition.

Keep any sharp objects away from the item.

This product is manufactured in pine which is a wood with natural characteristics including knots, grains, clusters or indentations.




On unpacking the item you may notice an odour due to production processes but this will disappear after a period of time.


DO NOT place the item next to a radiator or direct sunlight - this item is susceptible to temperature change. It is recommended an even room temperature be maintained with no sudden fluctuations.

DO NOT place hot or cold items directly onto the surface of the item as marking will occur

For general cleaning use a duster or damp cloth (almost dry) not wet - do not use soap and water, detergents, aerosol sprays or any polish as use of these materials would invalidate any claims.

DO NOT place the item onto wet or damp flooring as staining may occur to the floor.

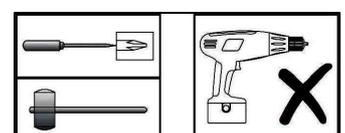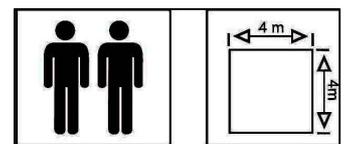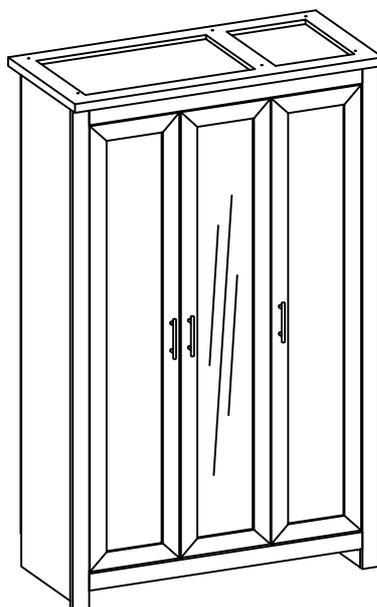

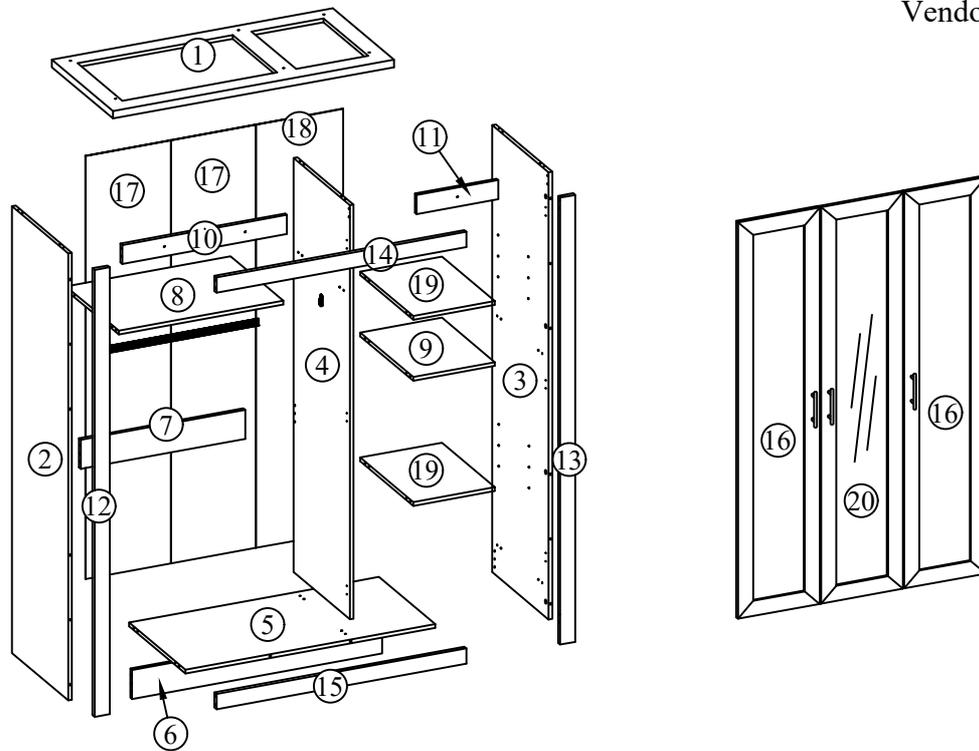

PARTS LIST

Carton 1 of 2:

Part	Description	Qty
1	Top Panel	1
2	Left Panel	1
3	Right Panel	1
9	Fix Shelf Panel(small)	1
12	Left Post Panel	1
13	Right Post Panel	1
14	Top Post Panel	1
15	Bottom Post Panel	1
17	Back Panel	2
18	Back Panel	1
19	Movable Shelf Panel	2

PARTS LIST


Carton 2 of 2:

Part	Description	Qty
4	Center Panel	1
5	Bottom Panel	1
6	Plinth Panel	1
7	Back Support Panel	1
8	Fix Shelf Panel	1
10	Top Support Panel	1
11	Top Support Panel (small)	1
16	Door	2
20	Door with Mirror	1

HARDWARE LIST: Carton 2 of 2

Part	Description	Qty
A	CAM NUT 15mm	31
B	CAM BOLT	31
C	WOOD DOWEL M6 x 25mm	44
D	CSK SCREW M3.5 x 12mm	4
E	CSK SCREW M4 x 16mm	38
F	CSK SCREW M4 x 25mm	3
G	CSK SCREW M4 x 65mm	8
H	T/MS SCREW M4 x 22mm	6
I	HINGES 7/8"	6
J	TXM METAL BAR HANDLE 96mm	3
K	PVC NAIL	4
L	NAIL	40
M	OVAL BRACKET	2
N	OVAL PIPE (648mm)	1
O	CSK SCREW M4 x 45mm	2
P	WASHER (M4)	4
Q	ANTI TIP STRAP	2
R	CSK SCREW M4 x 20mm	2
S	HINGES 2/8"	3
T	DOOR STOPPER	2
U	METAL SHELF SUPPORT	8

** You will need a screwdriver and a small mallet (NOT provided)

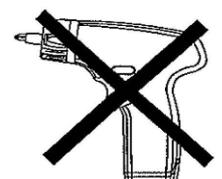


** WARNING: THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

1

A		31
B		29
C		44
D		4
E		18
I		6
K		4
M		2
S		3


Insert hardware part A & part B using a screwdriver (not provided).
 Insert hardware part C using a small mallet (not provided).
 Insert hardware part K using a small mallet (not provided).
 Fix hardware I & S with screw E using screwdriver (not provided).
 Fix hardware M with screw D using screwdriver (not provided).
 DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Vendor: S000398


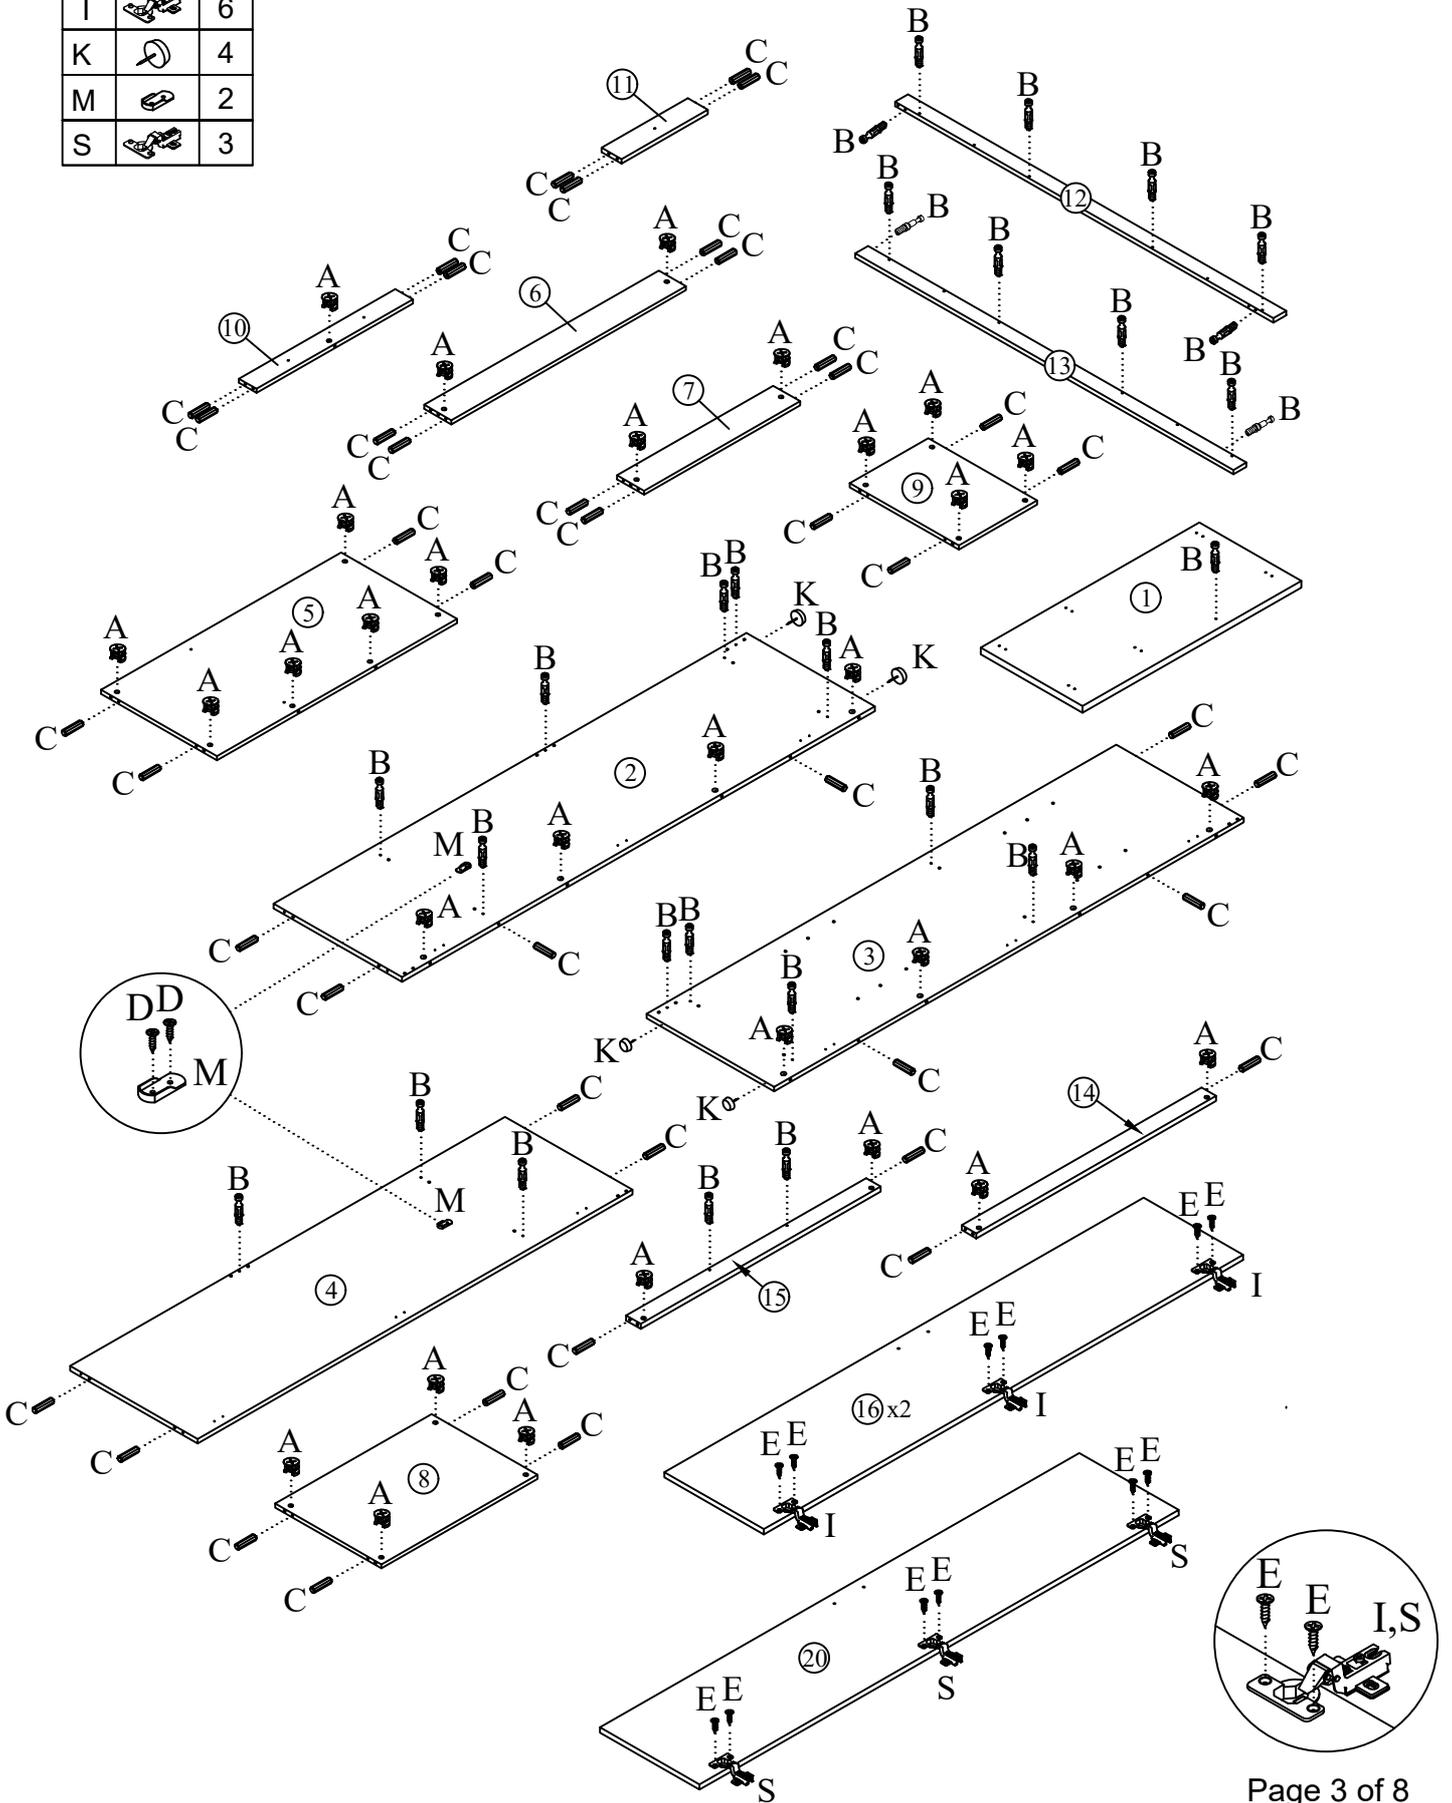


2 Attach the Post Panel together (12),(13),(14)&(15) by screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Vendor: S000398

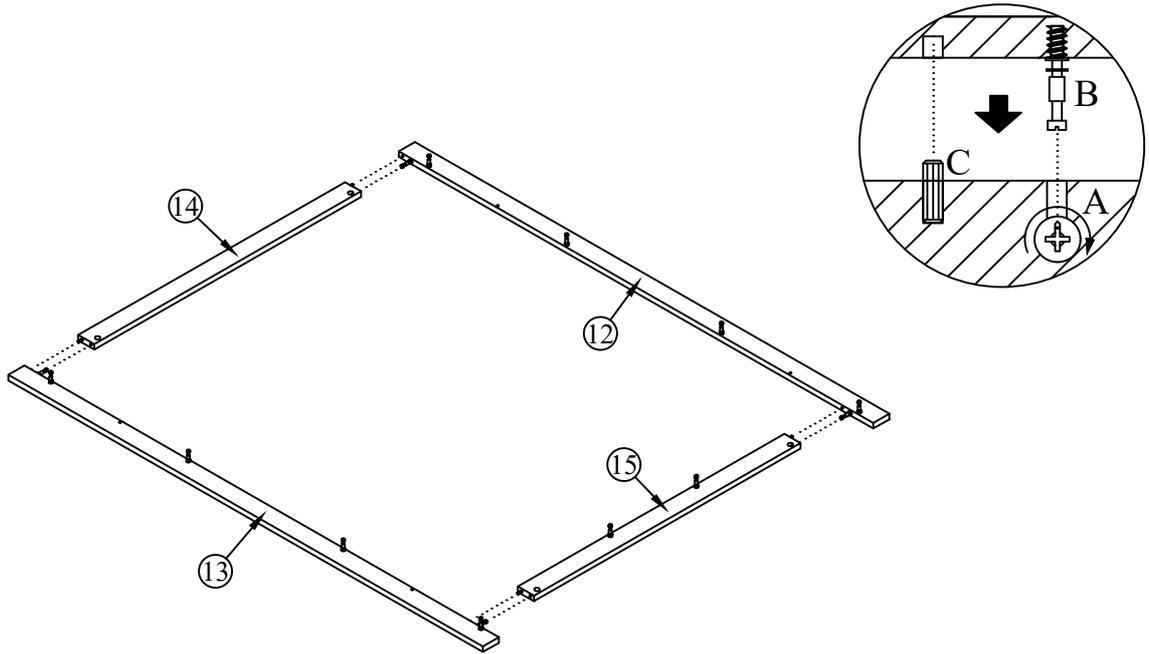

3    Attach Bottom Panel (5) to Center Panel (4) Using Screw (F) by screwdriver (not provided). Attach Fix Shelf Panel (11) and Back Support Panel (7) to Center Panel (4) by screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

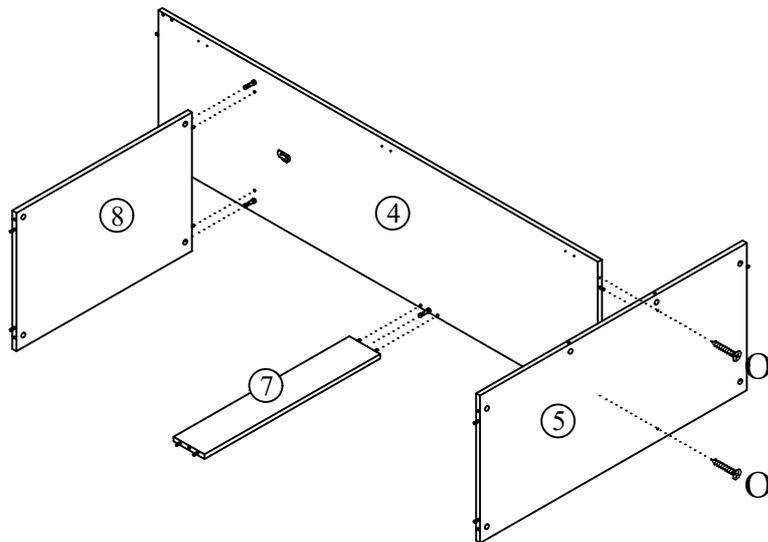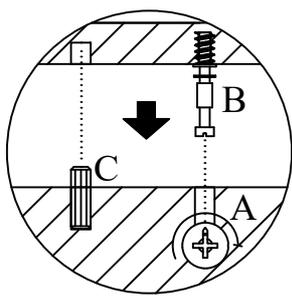



4 B 2

Before attach Fix Shelf Panel (9) to Center Panel (4) Insert hardware part (B) by screwdriver (not provided).

Vendor: S000398



Attach Left Panel (2) to Bottom Panel (5), Fix Shelf Panel (8), Back Support Panel (7) and Top Support Panel (10) by screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

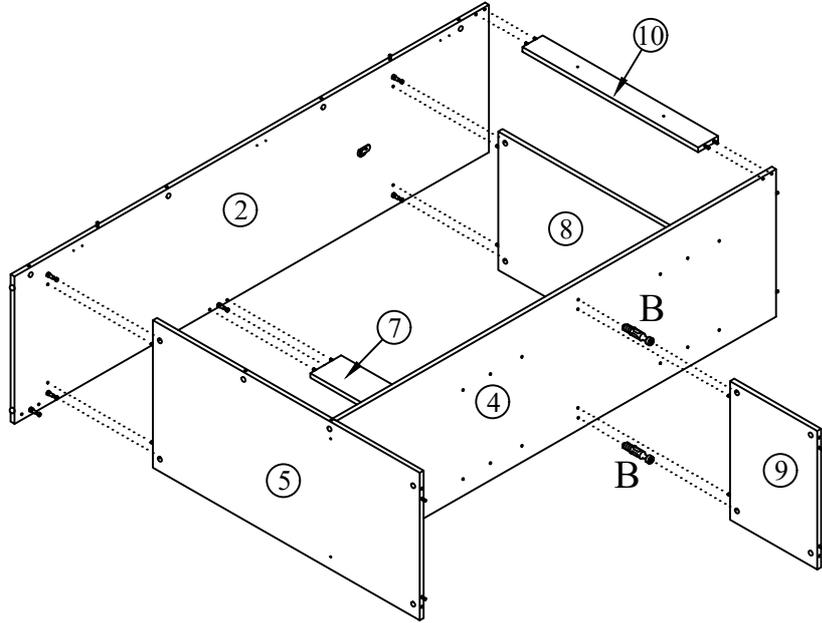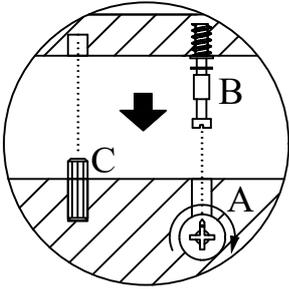

5 Attach Right Panel (3) to Bottom Panel (5), Fix Shelf Panel (small) (9), Plinth Panel (6) and Top Support Panel (small) (11) by screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

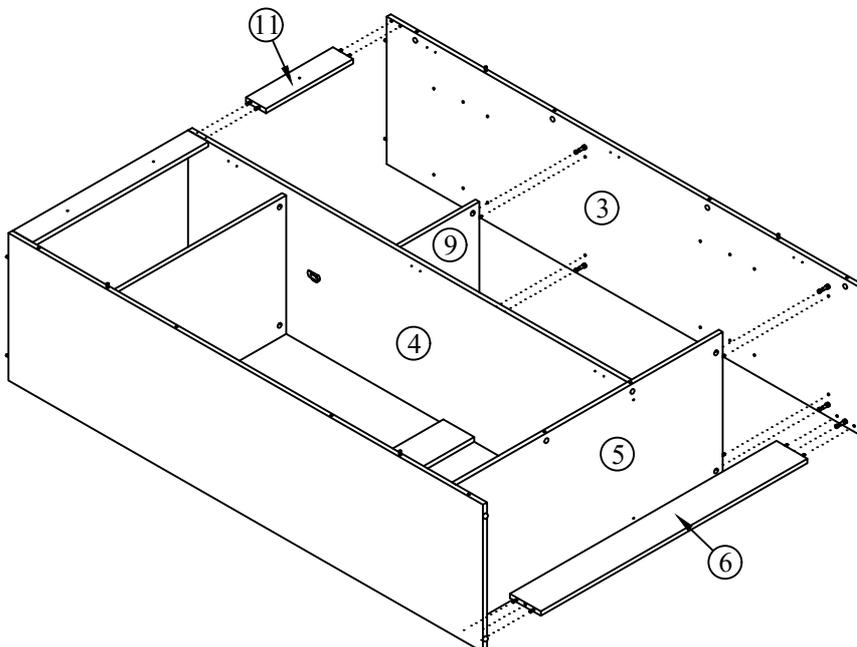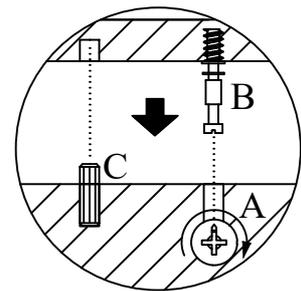

6




Attach ALL Post Panel (12) , (13) , (14) & (15) to Left , Right & Bottom Panel (2) ,(3) & (5) by screwdriver (not provided).

Vendor: S000398

Fix both Top Support Panel (8) to Top Post Panel (14) using screw (F) by screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

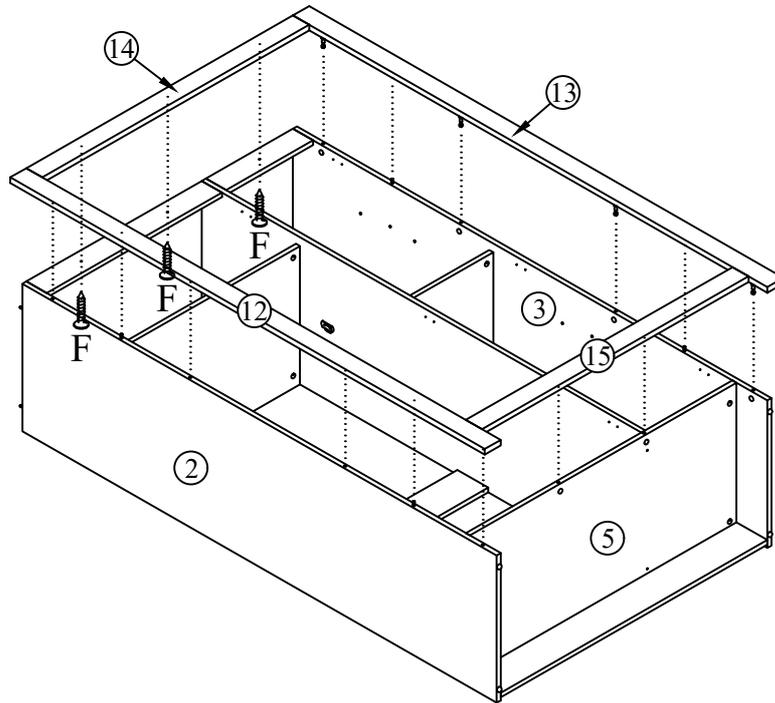


7



Attach the Top Panel (1) to Left , Right Panel (2) , (3) , Center Panel (4),and Left and Right Post Panel (12) & (13) using screw (G) By screwdriver (not provided).

Fix the Top panel (1) to Top Support Panel (10) by screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

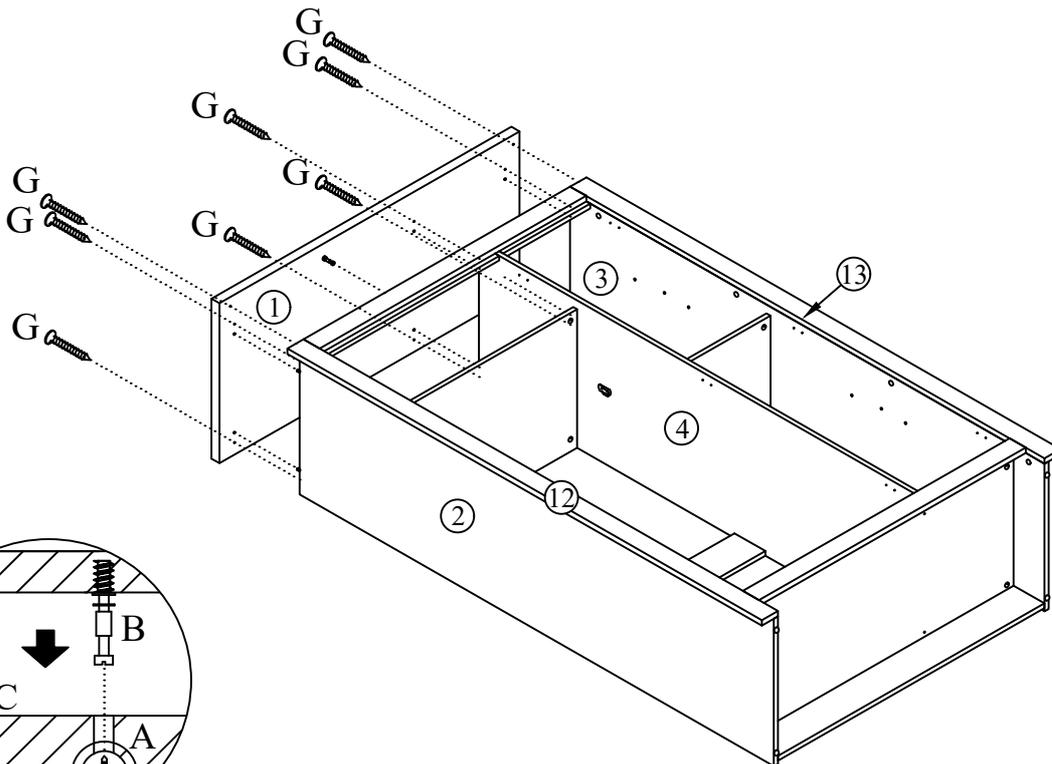

8


L		40
P		2
Q		2
R		2

Attach The Back Panel (17) & (18) using Nail (K) by screwdriver
(not provided).

Vendor: S000398

Fix Anti tip strap (P) with washer (O) and Screw (Q) To Top Panel (1) by screwdriver
(not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.


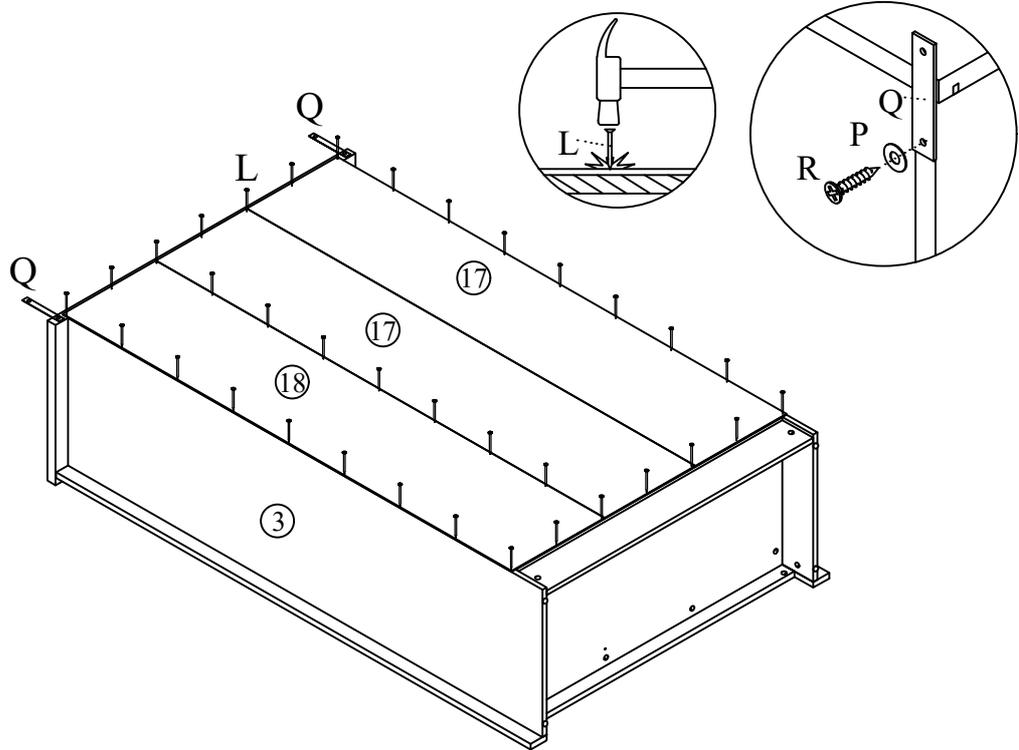


9

U		8
---	---	---

Insert hardware U as shown and slide in panel 19.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.



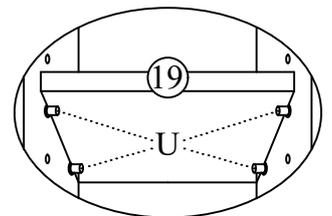
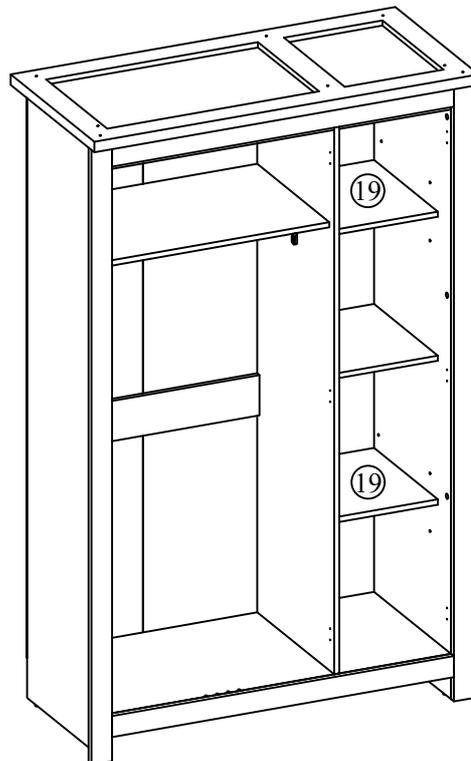


10

E		20
H		6
J		3
N		1
T		2

Attach the Door (13) to Left , Right Panel (2) , (3) and Center Panel (4) with Hinges (I)& (S) using screw (E) by screwdriver (not provided).
 Fix Handle (J) to Door (16) and (20) using screw (H) by screwdriver (not provided).
 Fix Door Stopper (T) with Screw (E) To Bottom Panel by screwdriver (not provided).
 DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Vendor: S000398

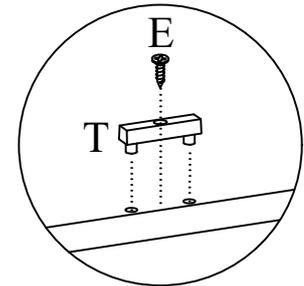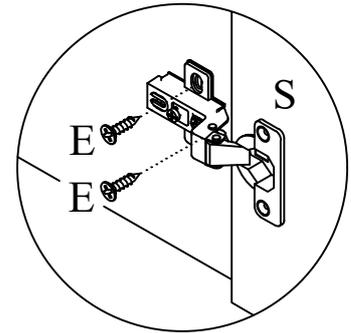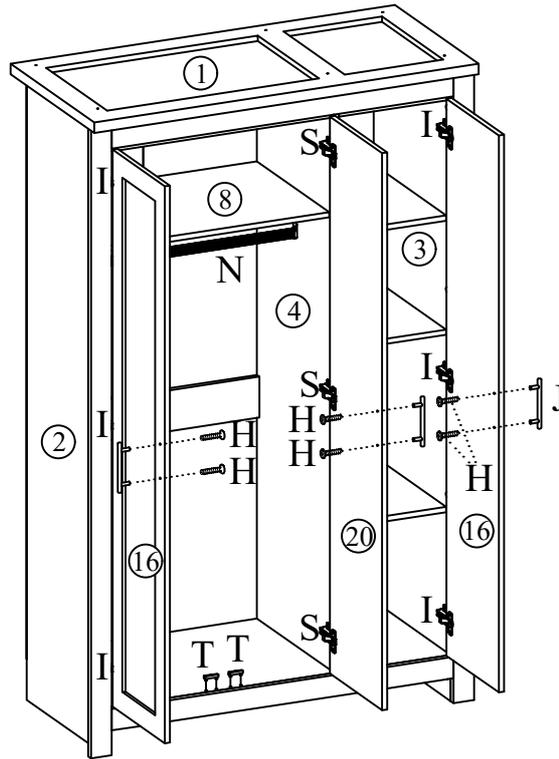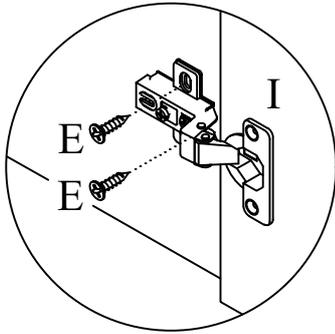



11

P		2
---	---	---

Fix Anti tip strap (Q) with washer (P) and Screw (R) to wall by screwdriver (not provided).

- Make sure it is firmly attached and make sure it is snug fit
- Seek advice from a qualified trade person on how to attach this safety strap to your specific wall.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

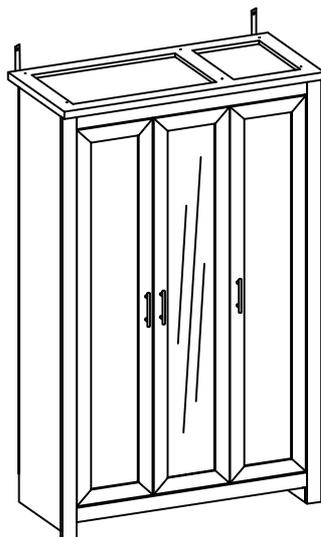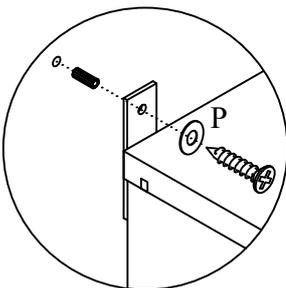

PLEASE NOTE that wall fixings are not supplied as different wall materials require different fixing devices. You must use fixings suitable for the type of wall you intend to mount product to. Ensure the head of any screw used has a diameter greater than the mounting hole and the fixing is safe and secure before use. Birlea Furniture advise you use the wall straps provided to further enhance the safety of this product. There is a risk of serious injury from cabinets falling on children. Before drilling holes, check the there are electrical wires or water pipes.

Birlea.

.Additional Information:

.For complete product information, images and dimension diagrams please visit the website www.birlea.com

.If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.

.Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on Instagram.