 


# CHARISMA SIDEBOARD ASSEMBLY INSTRUCTIONS

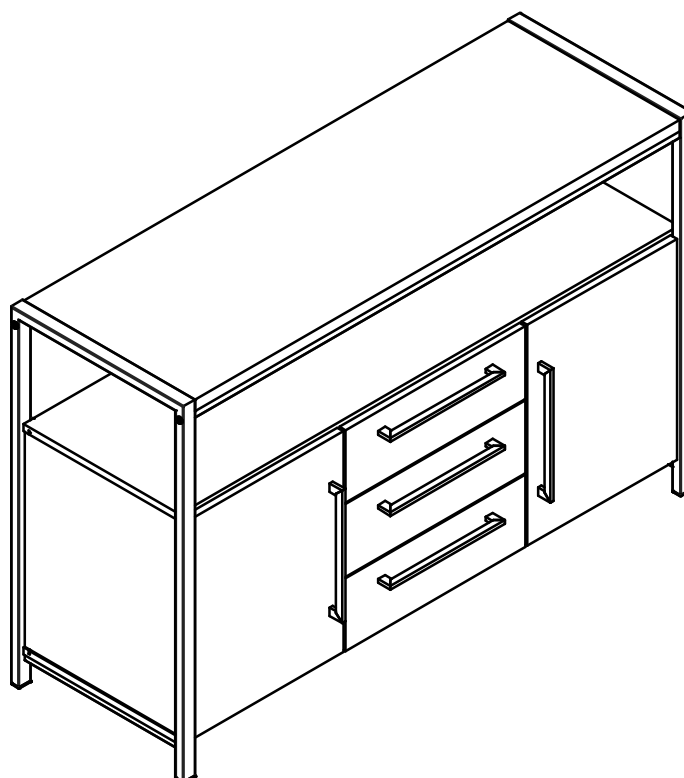

 
 
## IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

## CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

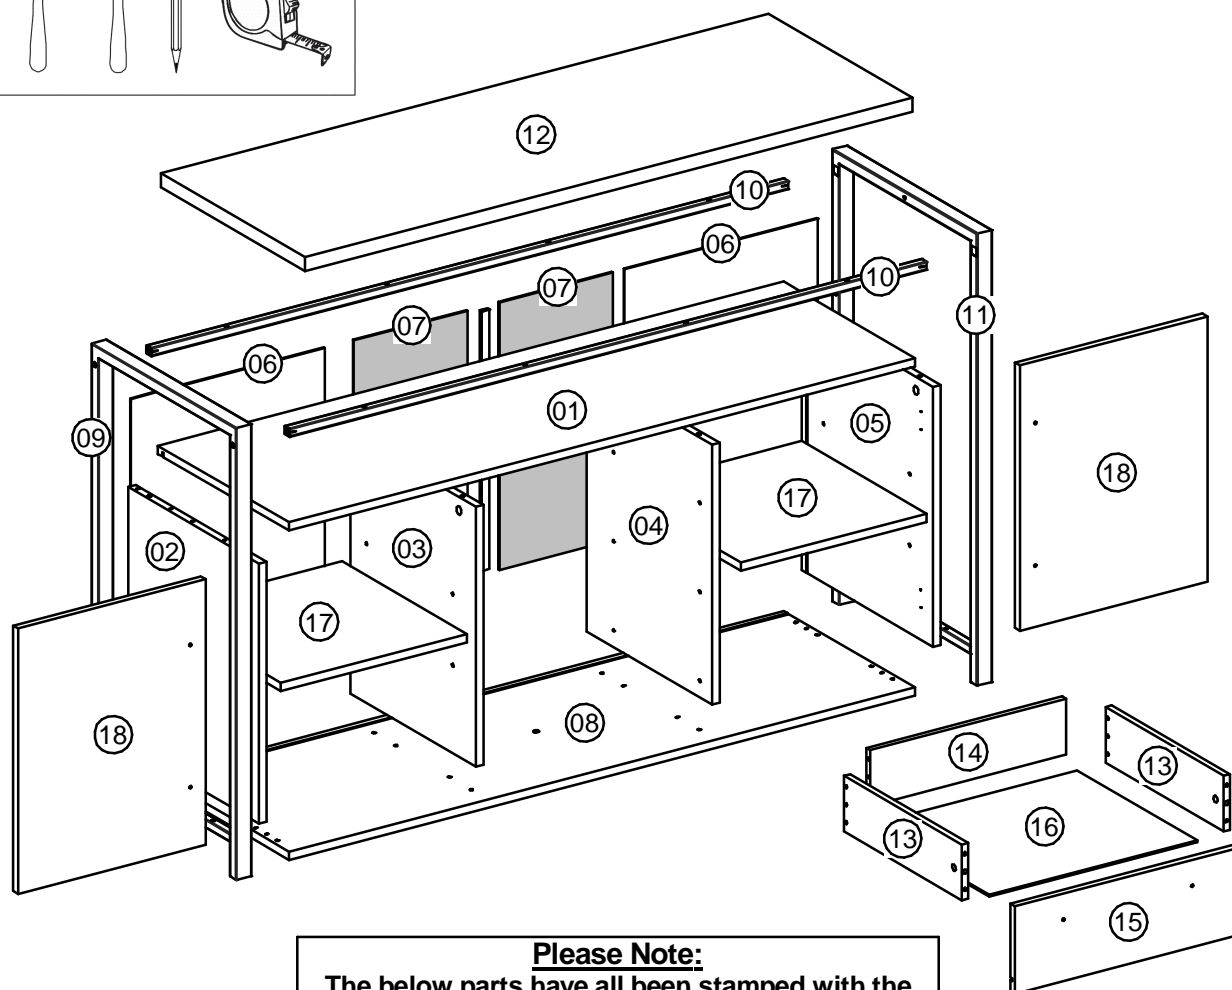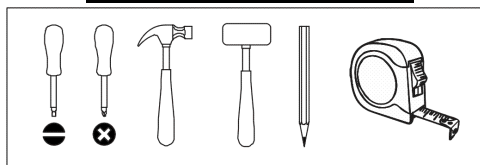**TOOLS REQUIRED**

**Please Note:**  
The below parts have all been stamped with the part number to help identify them during assembly.





 
 

 




 
 



 
 
 

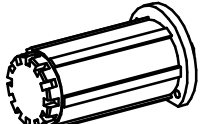 






! Use power tools to assemble this product will invalidate any claim and damage this product making it unsafe !!!  
\* Please assemble on a clean soft surface to avoid damage.

! Please check contents and read the instructions before commencing assembly.  
\* Assemble this product following the enclosed instructions carefully.  
\* Please take care to avoid damaging panels during assembly.

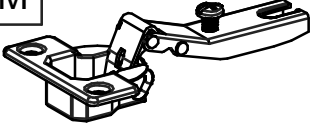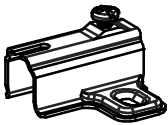**PARTS LIST**


 
No.	Part Name	Qty.	Box No.	No.	Part Name	Qty.	Box No.
<b>01</b>	Nest Top Panel	x1	1/2	<b>10</b>	Support Top Panel	x2	2/2
<b>02</b>	Left Side Panel	x1	1/2	<b>11</b>	Right Foot	x1	2/2
<b>03</b>	Left Division Panel	x1	1/2	<b>12</b>	Top Panel	x1	2/2
<b>04</b>	Right Division Panel	x1	1/2	<b>13</b>	Drawer Side	x6	1/2
<b>05</b>	Right Side Panel	x1	1/2	<b>14</b>	Drawer Back	x3	1/2
<b>06</b>	Side Back Panel	x2	1/2	<b>15</b>	Drawer Front	x3	1/2
<b>07</b>	Central Back Panel	x2	1/2	<b>16</b>	Drawer Bottom	x3	1/2
<b>08</b>	Nest Base Panel	x1	1/2	<b>17</b>	Shelf	x2	1/2
<b>09</b>	Left Foot	x1	2/2	<b>18</b>	Door	x2	1/2
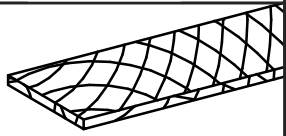
## FITTINGS LIST
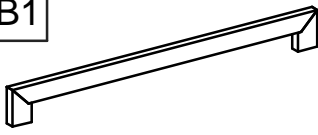 
<b>A</b>  Flat Head Screw Ø6,0 x 10mm (12x)	<b>B</b>  Flat Head Screw Ø4,0 x 14mm (36x)	<b>C</b>  Flan Head Screw Ø3,5 x 25mm (10x)	<b>D</b>  Flat Head Screw Ø4,0x 50mm (14x)
<b>E</b>  Flat Head Screw Ø5,0 x 30mm (8x)	<b>F</b>  Flan Head Screw Ø4,5 x 50mm (4x)	<b>G</b>  Flat Head Screw Ø4,2 x 13mm (2x)	<b>H</b>  Flat Head Screw Ø6,35 x 30mm (4x)
<b>I</b>  Dowel Ø6,0 x 30mm (40x)	<b>J</b>  Nail 10 x 10 (33x)	<b>K</b>  Back Panel Bracket (6x)	<b>L</b>  "L" Bracket (2x)
<b>M</b>  Hinge (4x)	<b>N</b>  Hinge Plate (4x)	<b>O</b>  Glue (2x)	<b>P</b>  Hole Plugs (30x)
<b>Q</b>  Cam Nut Ø12mm (6x)	<b>R</b>  Cam Nut Ø15mm (8x)	<b>S</b>  Cam Bolt (14x)	<b>T</b>  Support Pin (8x)
<b>U</b>  Plastic Foot (4x)	<b>V</b>  Leveling Foot (1x)	<b>W</b>  Back Panel Strip (1x)	<b>X</b>  Washer (2x)
<b>Y</b>  Strap (1x)	<b>Z</b>  Allen Key 3mm (1x)	<b>A1</b>  Allen Key 4mm (1x)	<b>B1</b>  Handle (5x)

## TIPS FOR FITTINGS CAM-LOCKS

   
WHEN FITTING CAM NUT, ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT CONNECTING CAM BOLT TURN CLOCKWISE UNTIL SECURE

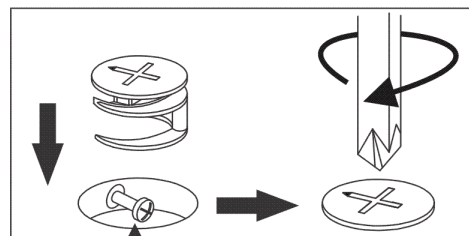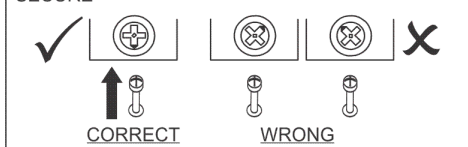
 



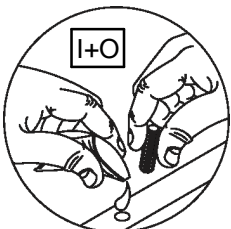 
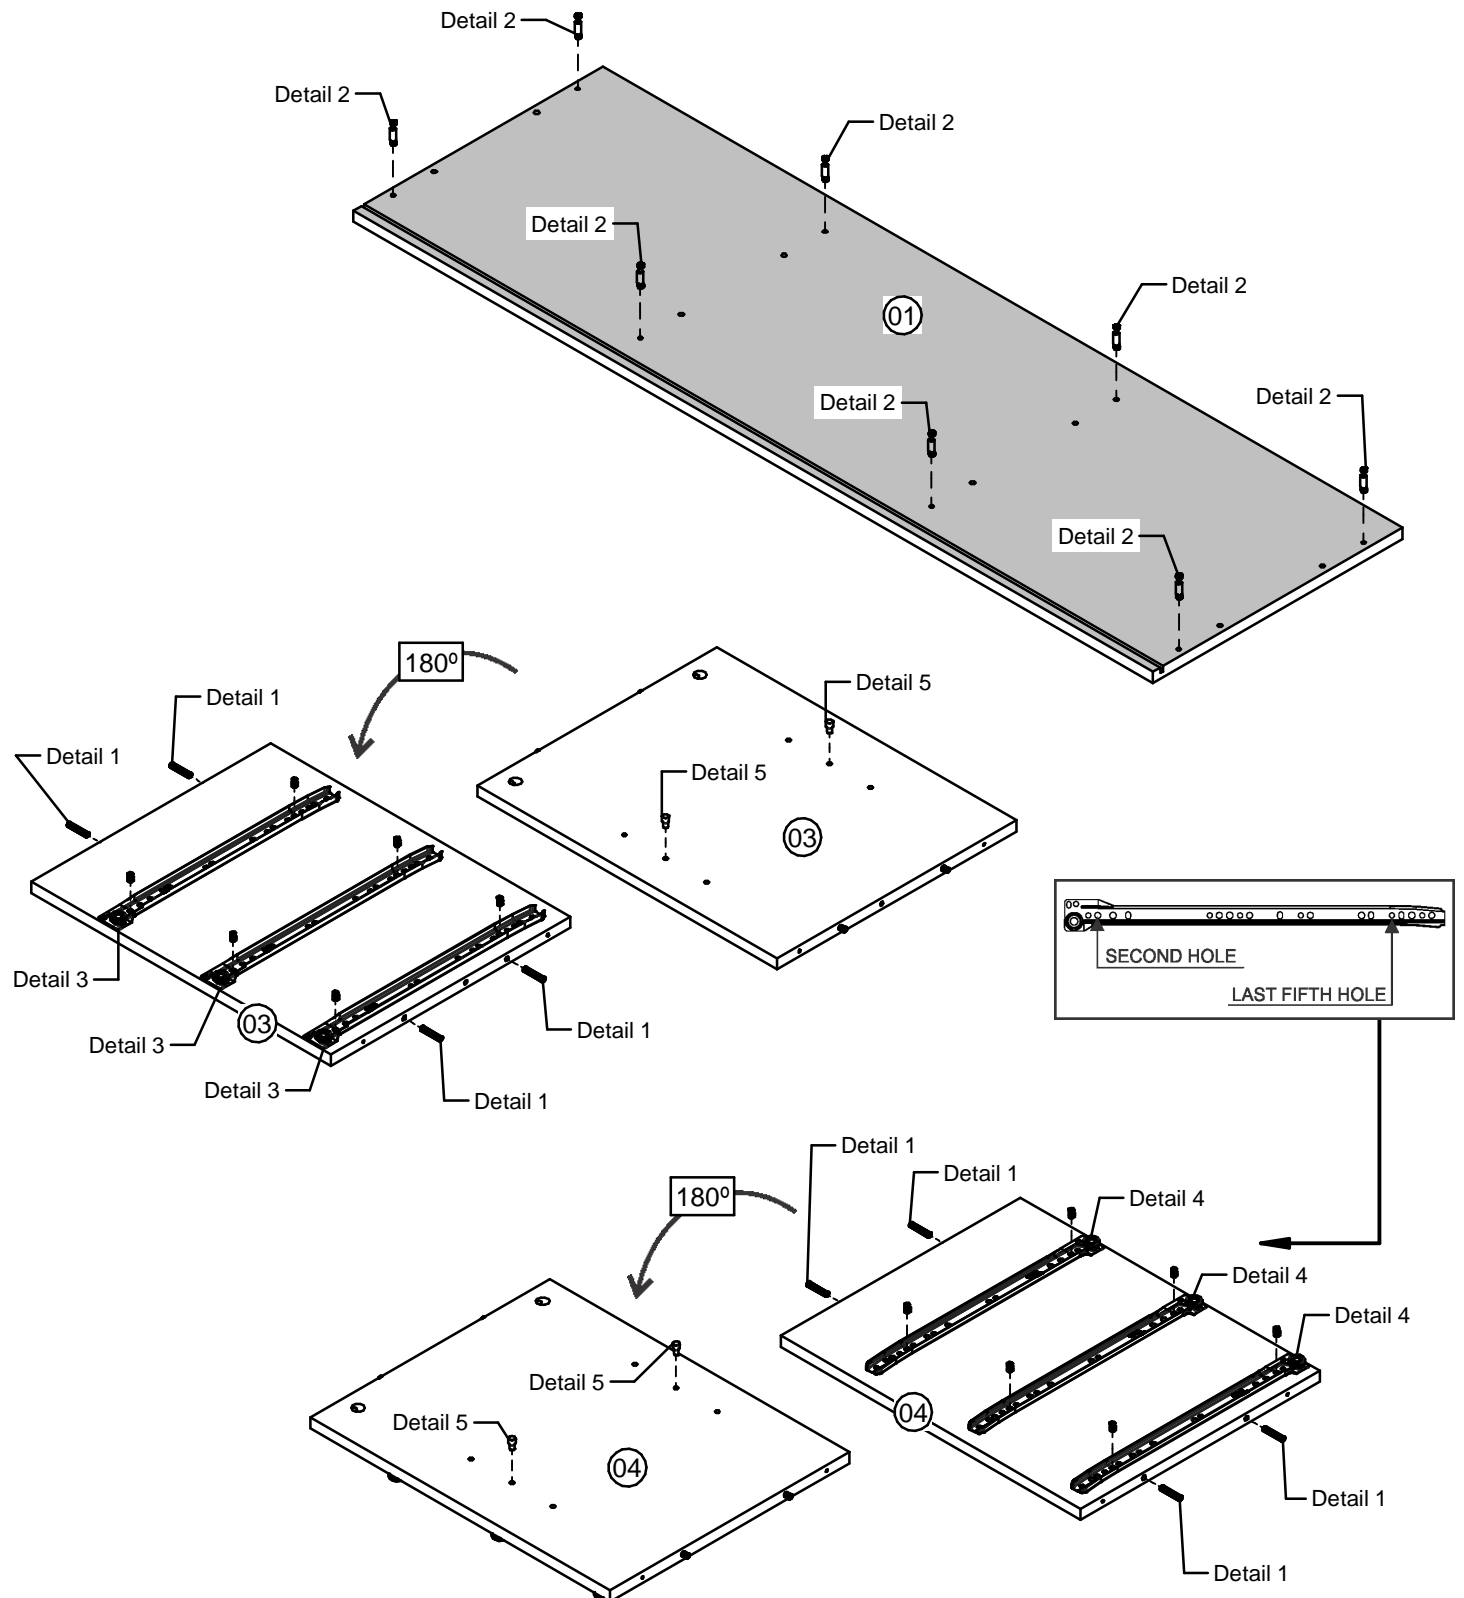 
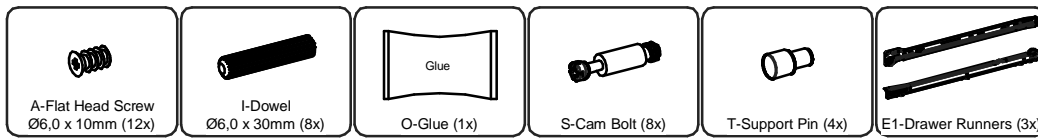 
Cam bolt head needs to be in centre

### CAMBOLT


Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example below)

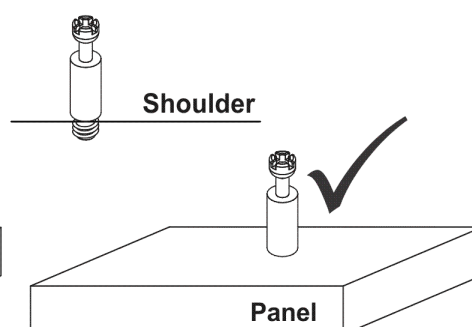


<b>C1</b>  Flat Head Screw Ø3,5 x 20mm (2x)
<b>D1</b>  Flan Head Screw Ø3,5 x 30mm (1x)
<b>E1</b>  Drawer Runners (3x)



 
Detail 1

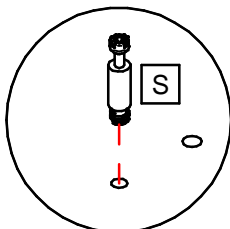


Detail 2

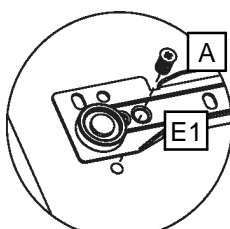 




Detail 3

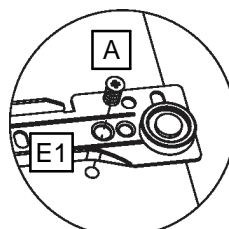 


Detail 4

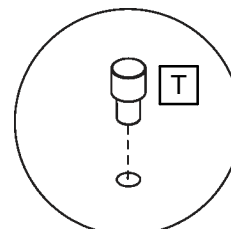 


Detail 5

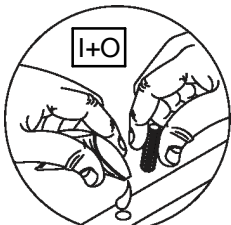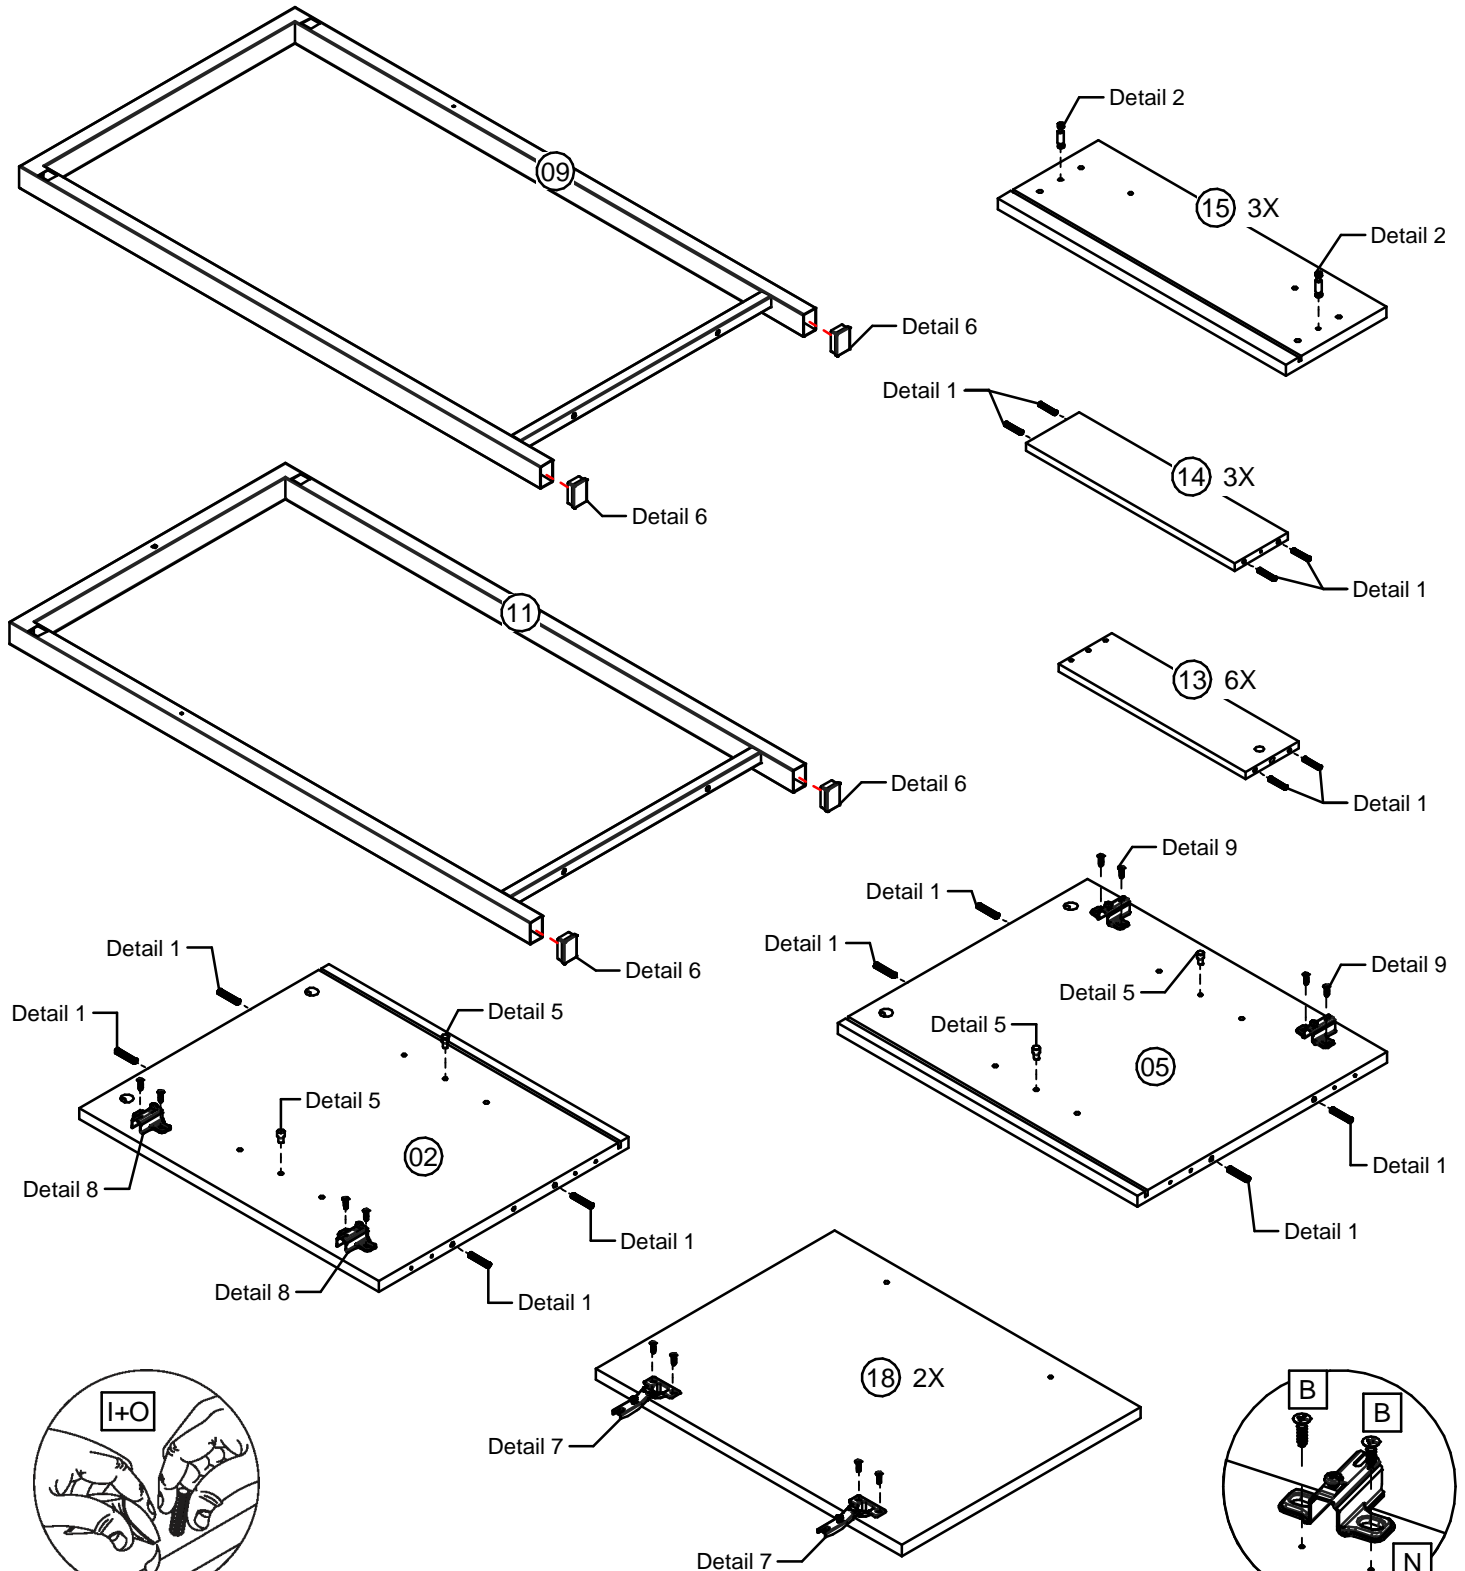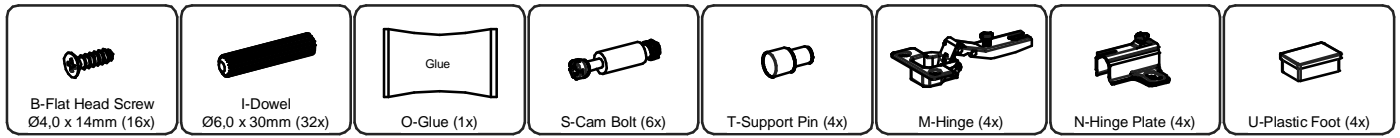   


Detail 1

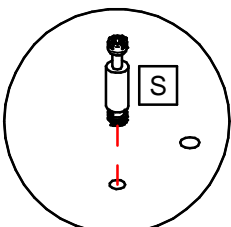 


Detail 2

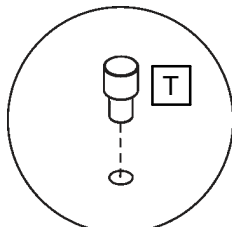 


Detail 5

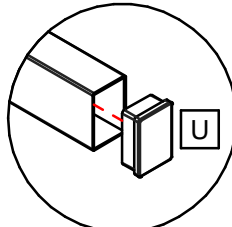 


Detail 6

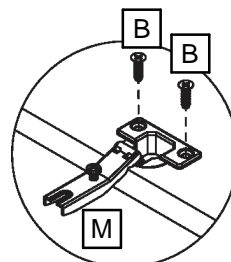 

Detail 7



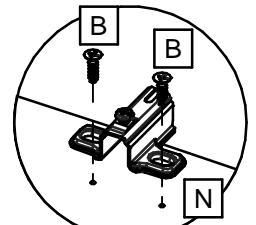 


Detail 9

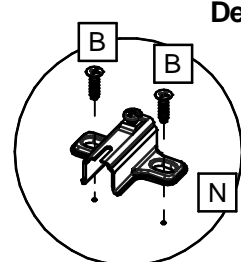 


Detail 8

   1

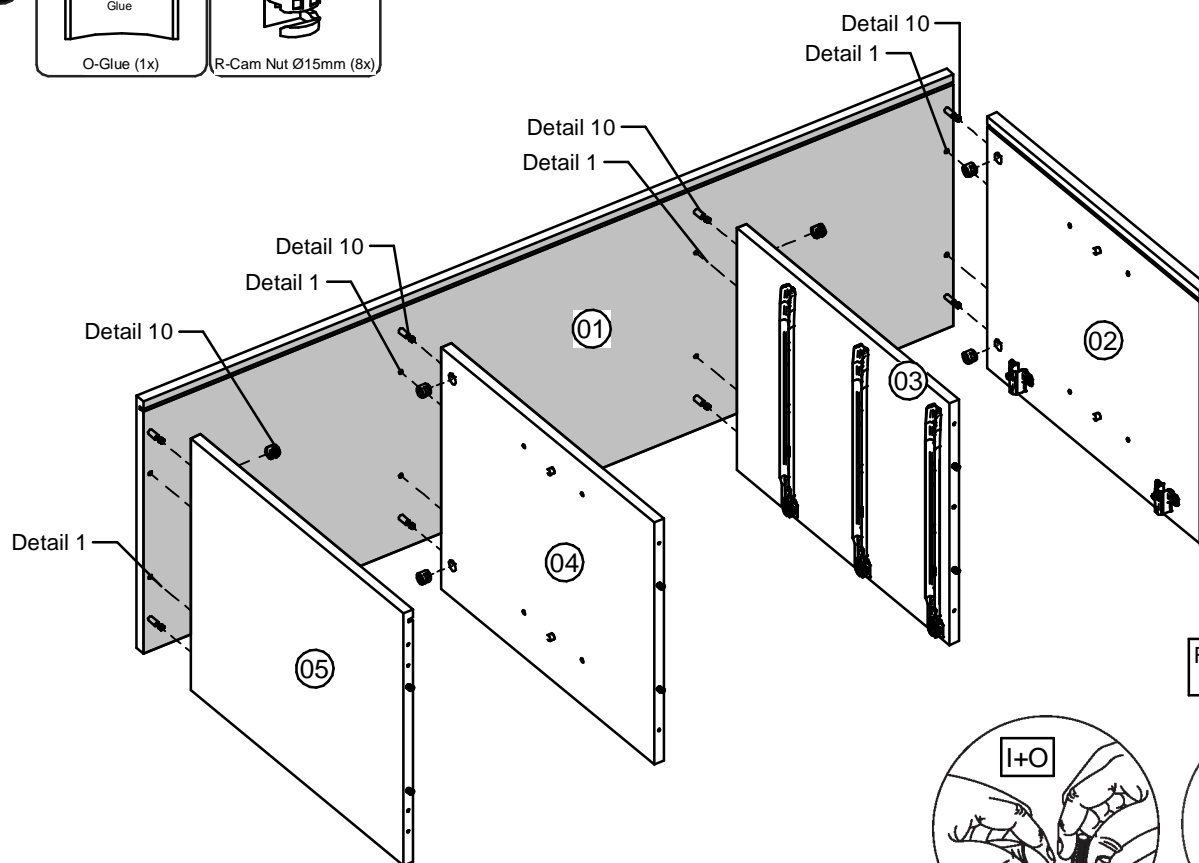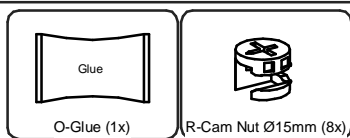
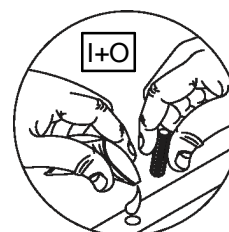
FIT AND TURN THE  
CAM CLOCKWISE

 Detail 1


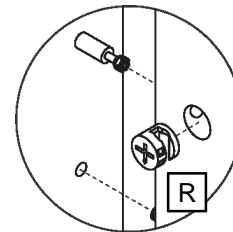


Detail 10

    2

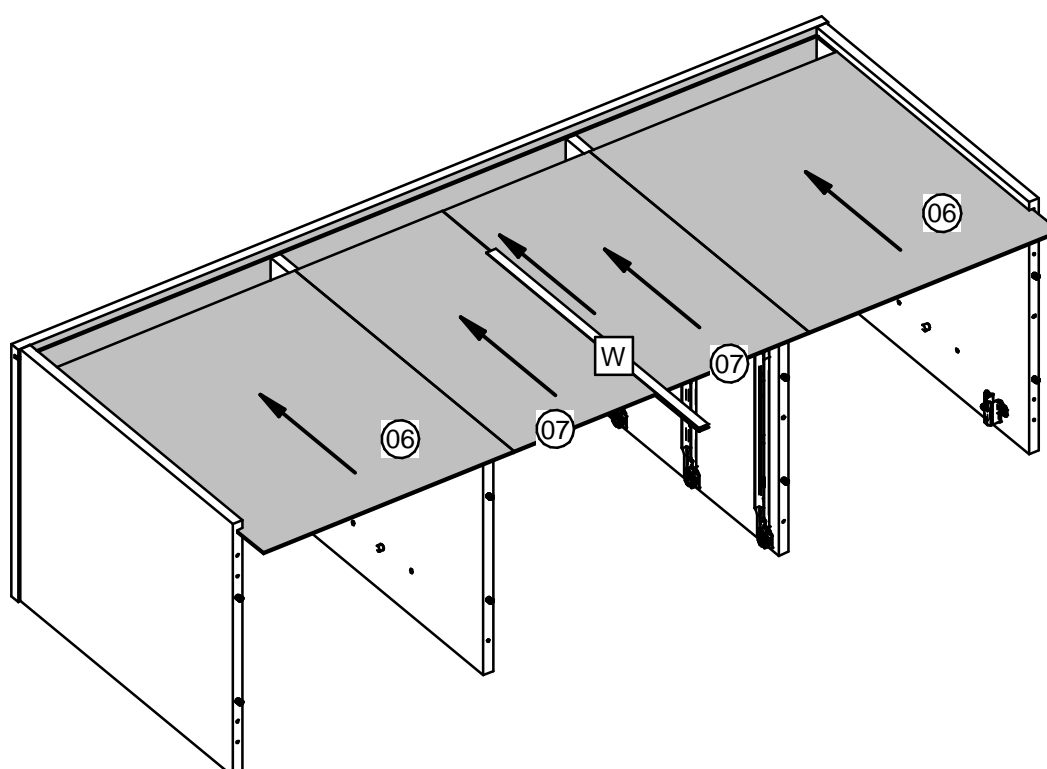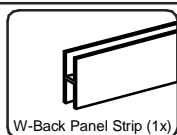




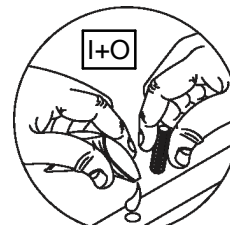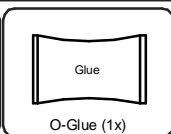


### Detail 11

 
4

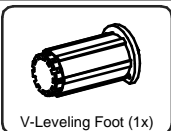

— Detail 13

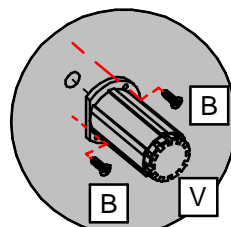 



### Detail 13

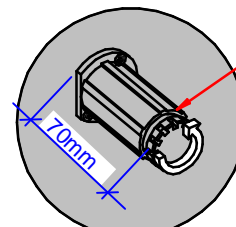 

5


E-Flat Head Screw  
Ø5,0 x 30mm (8x)

  Z-Allen Key 3mm (1x)

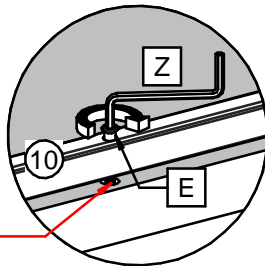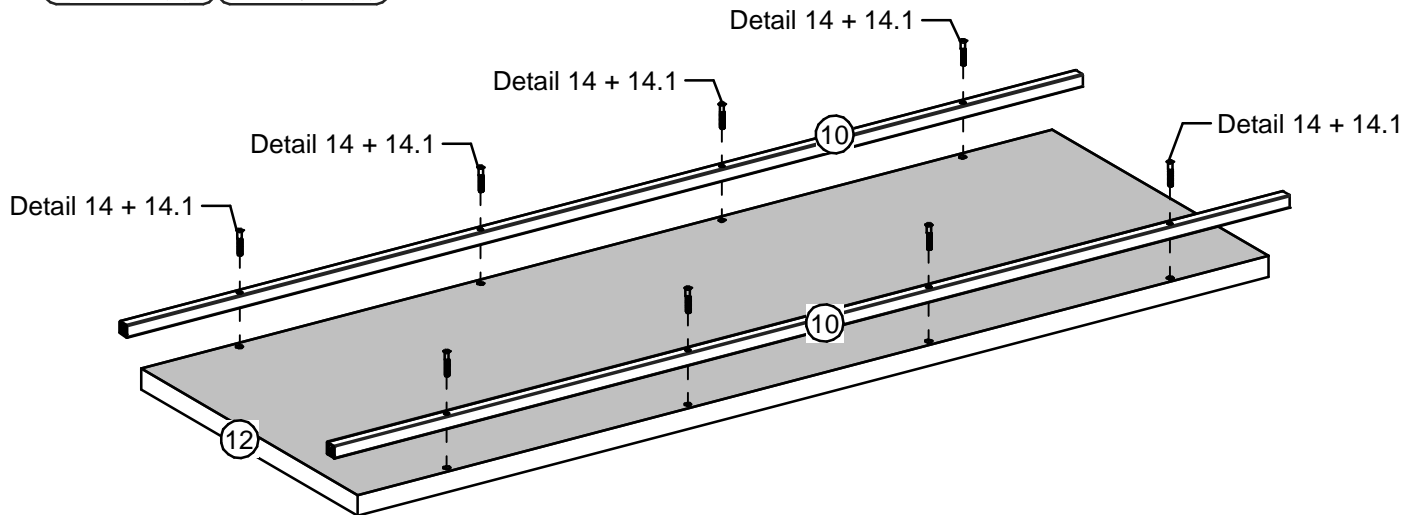

LOOSELY TIGHTEN THE BOLTS

 Detail 14

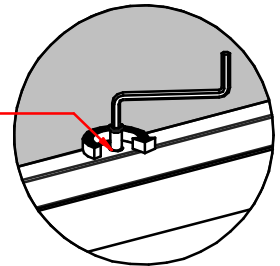



FULLY TIGHTEN

Detail 14.1


6

H-Flat Head Screw  
Ø6,35 x 30mm (2x)

  A1-Allen Key 4mm (1x)

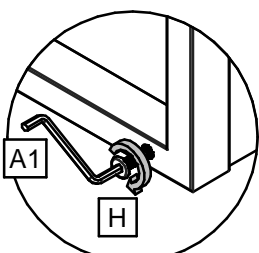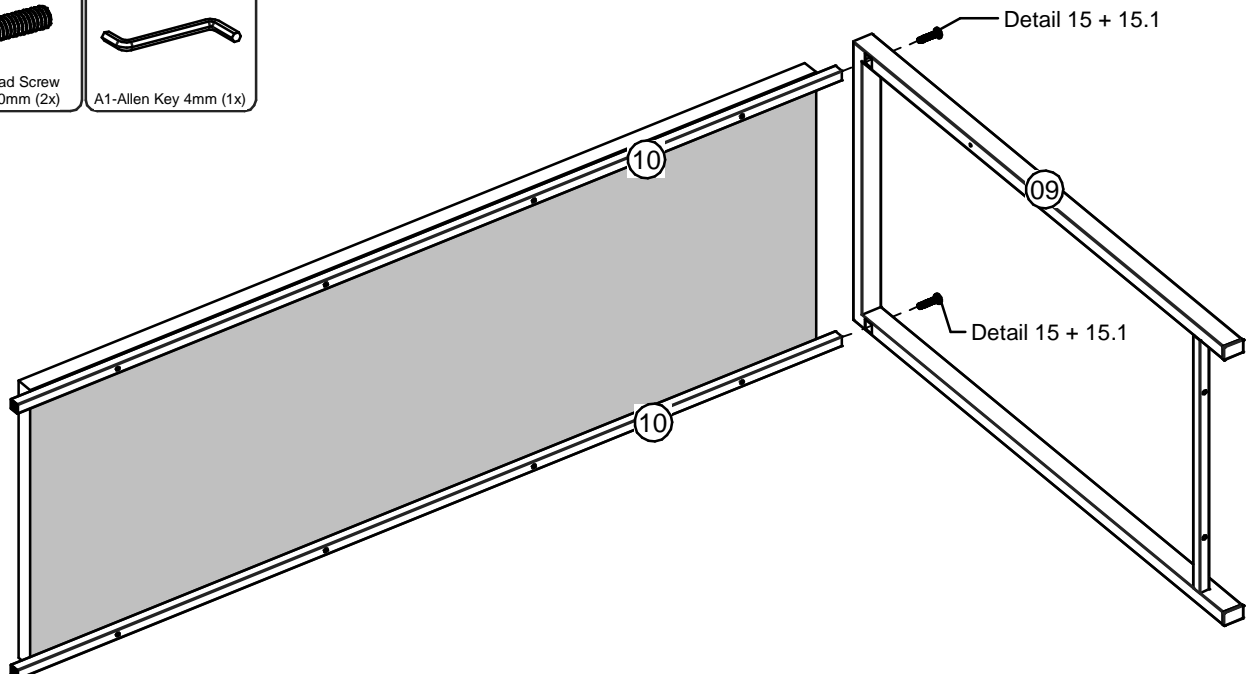

Detail 15

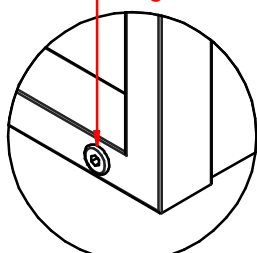 


Detail 15.1

Tighten until Flush



 7

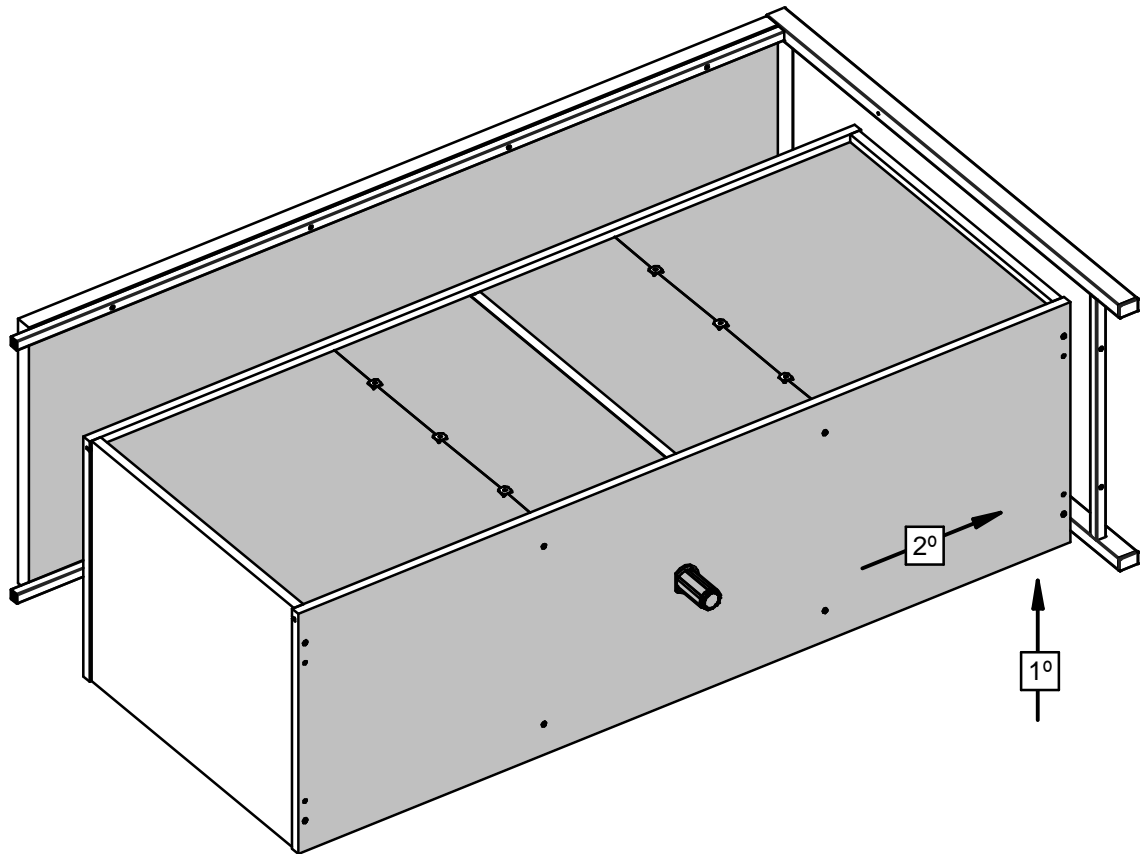



8




H-Flat Head Screw  
Ø6,35 x 30mm (2x)



  A1-Allen Key 4mm (1x)


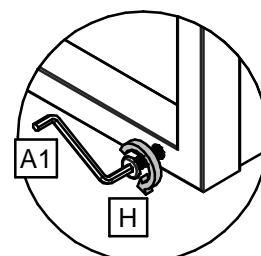
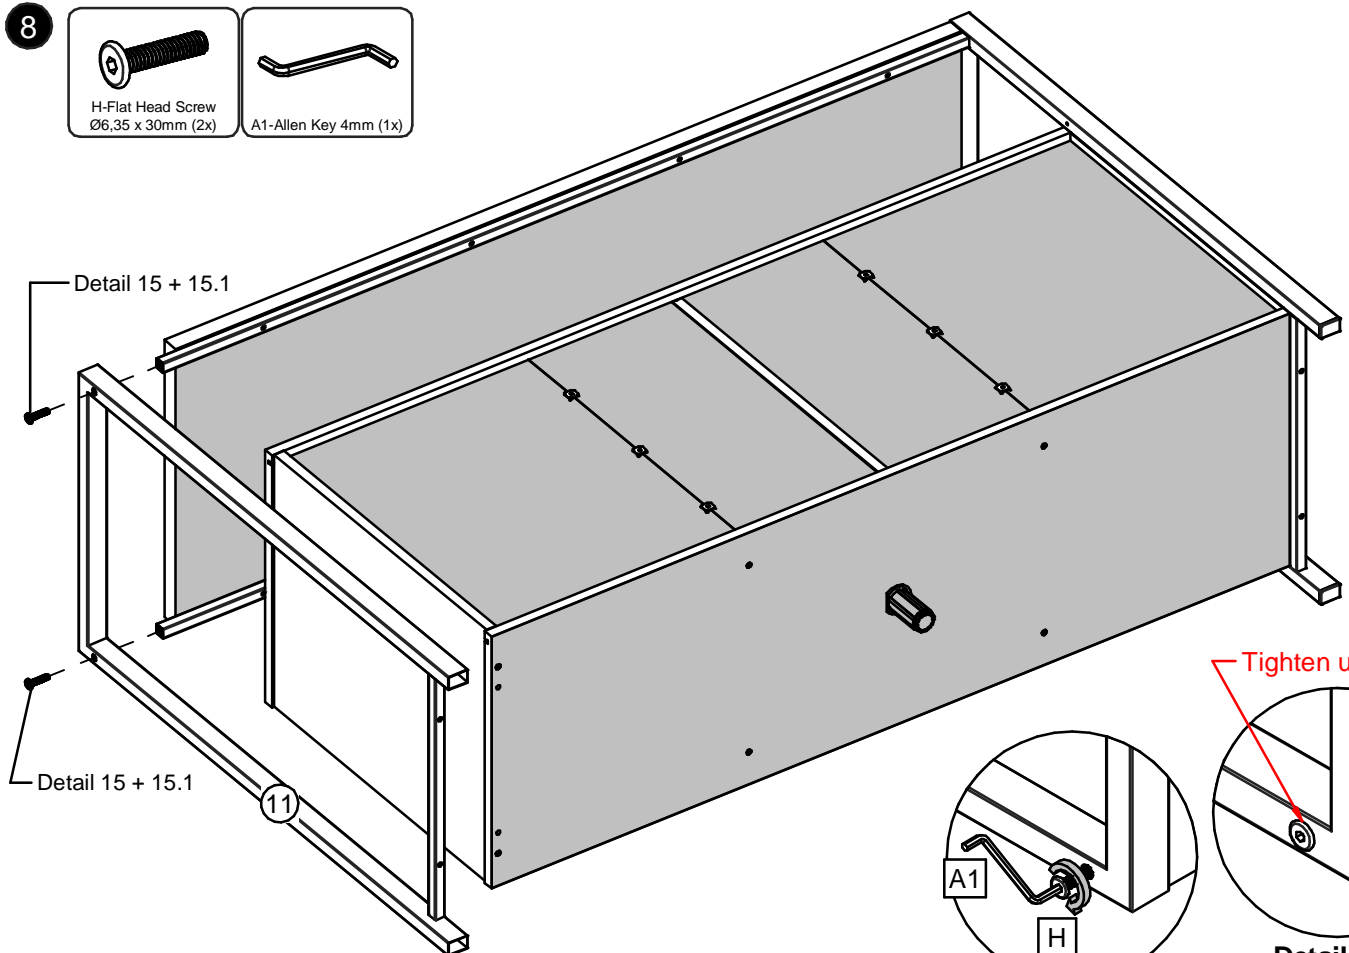


Detail 15

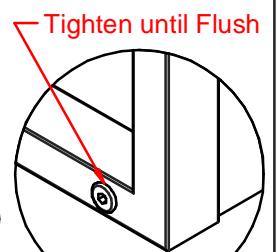 

Detail 15.1

   9

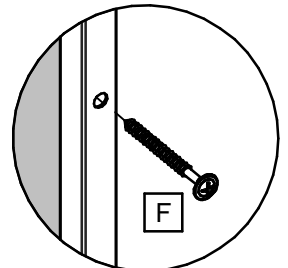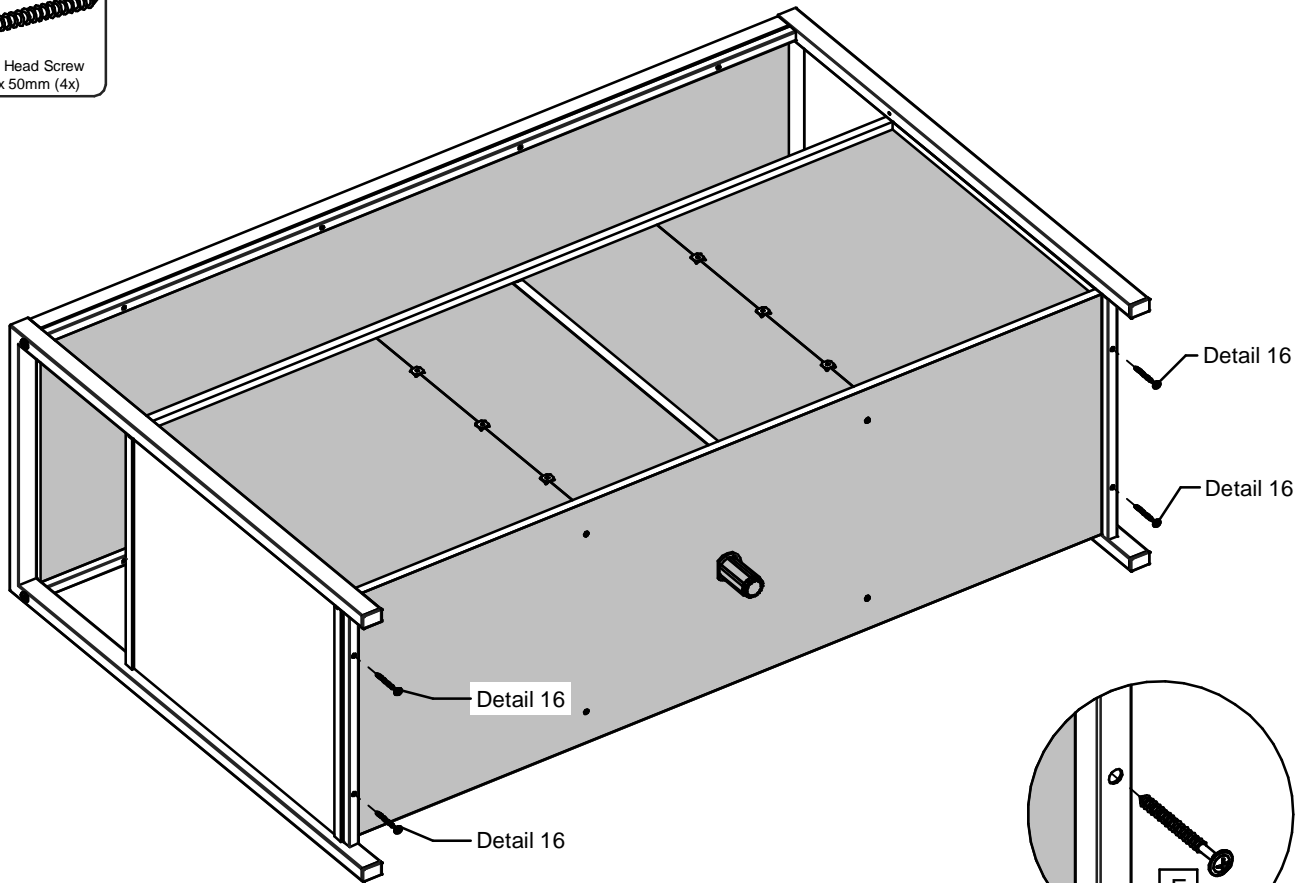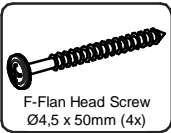

Detail 16

10



 
 
 
G-Flat Head Screw  
Ø4,2 x 13mm (2x)



L-'L' Bracket (2x)




C1-Flat Head Screw  
Ø3,5 x 20mm (2x)

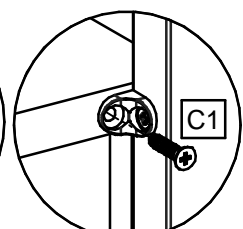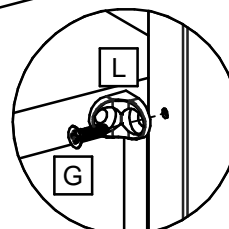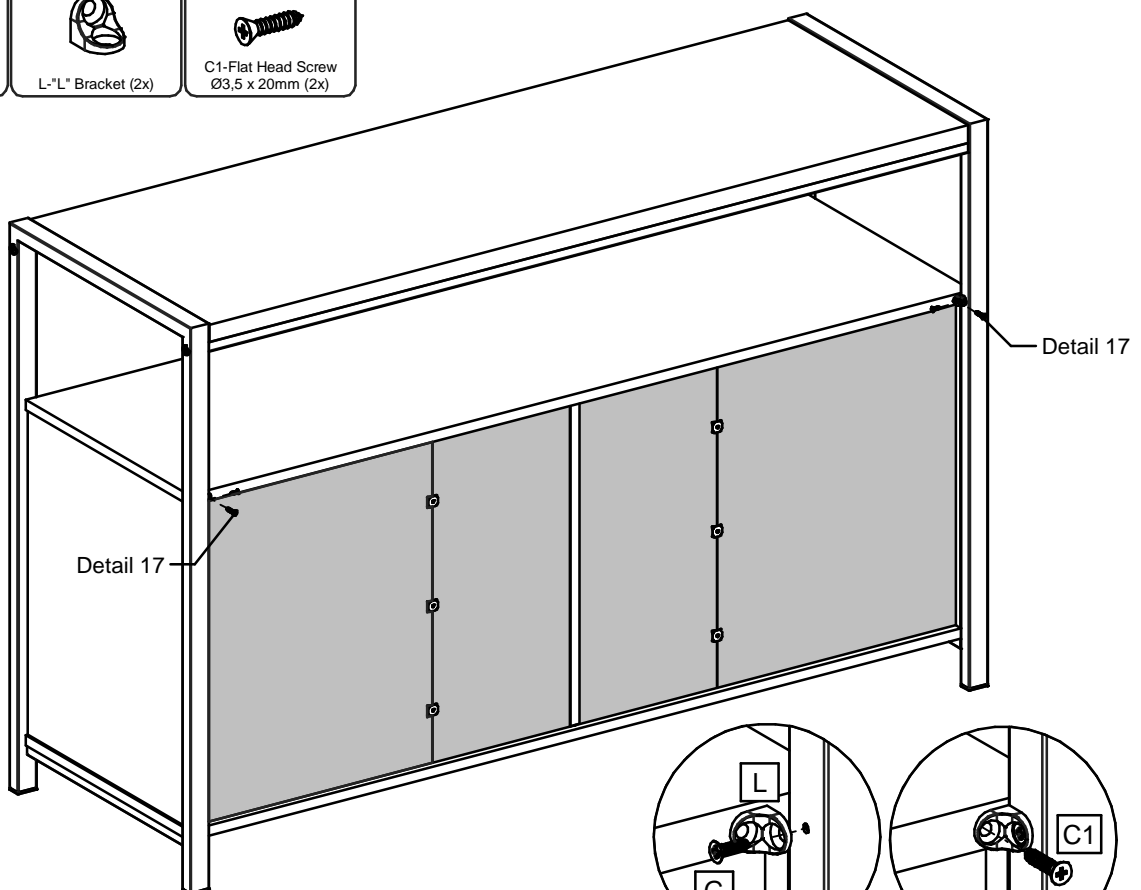


Detail 17

 
11

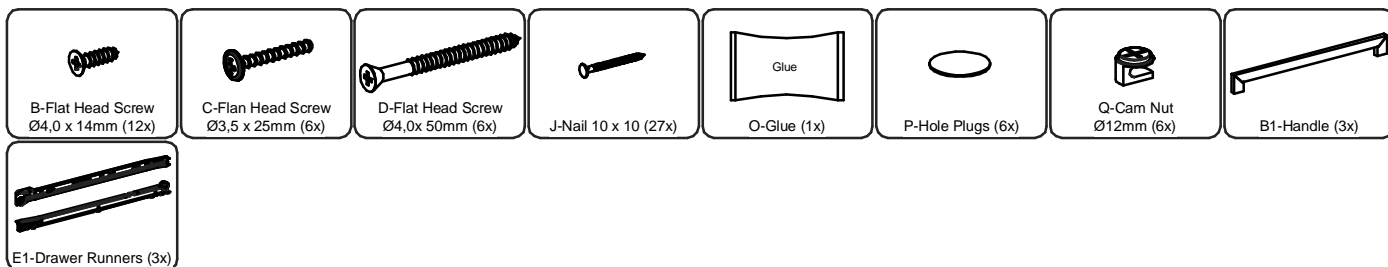


1° 3X

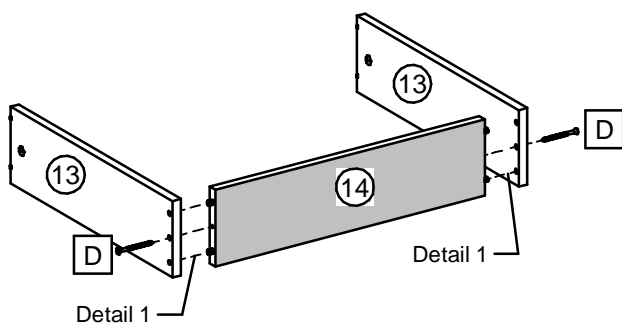 


2° 3X

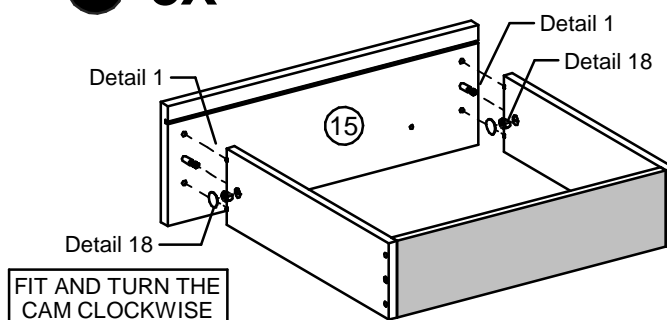 



3° 3X

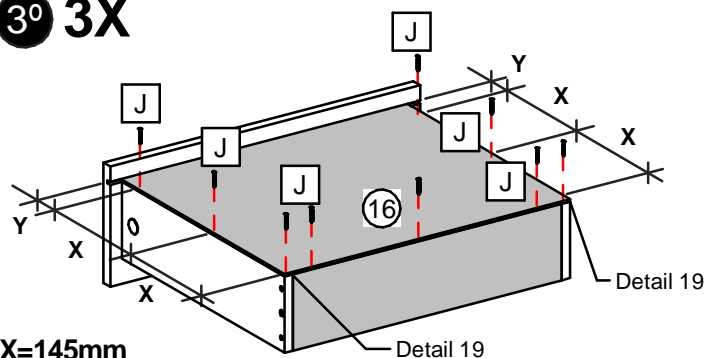 


4° 3X

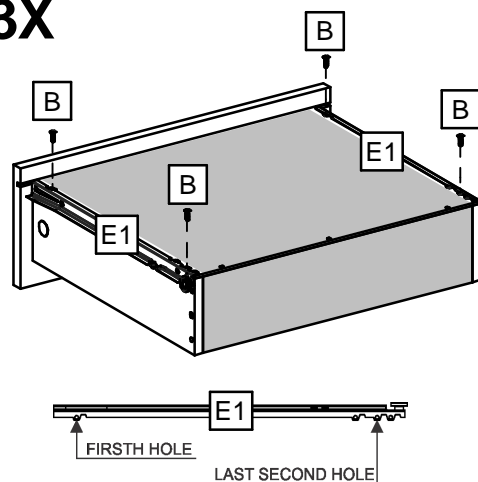 


5° 3X

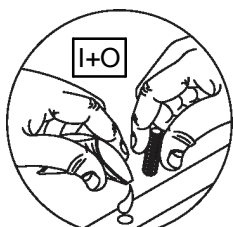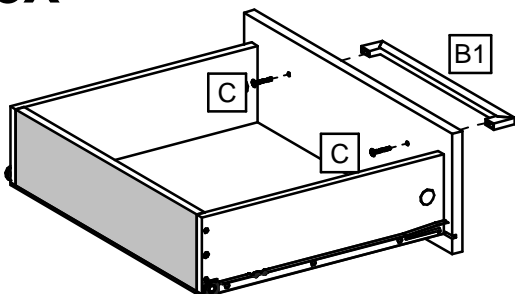  

Detail 1

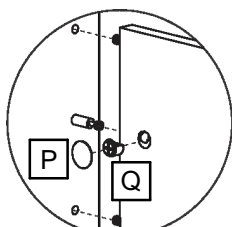 

Detail 18

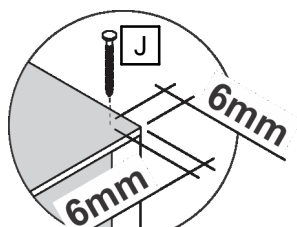 


Detail 19

12



 P-Hole Plugs (24x)

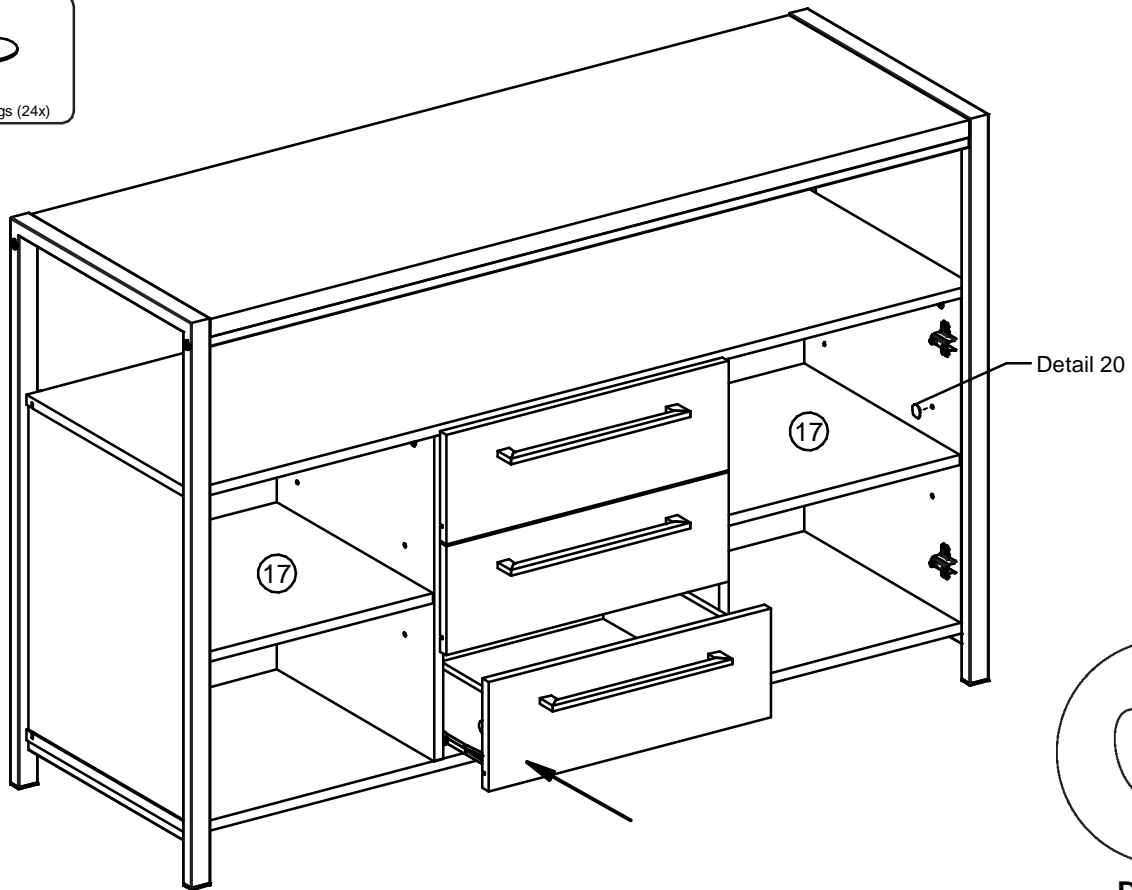


Detail 20

13

C-Flan Head Screw  
Ø3,5 x 25mm (4x)

 B1-Handle (2x)

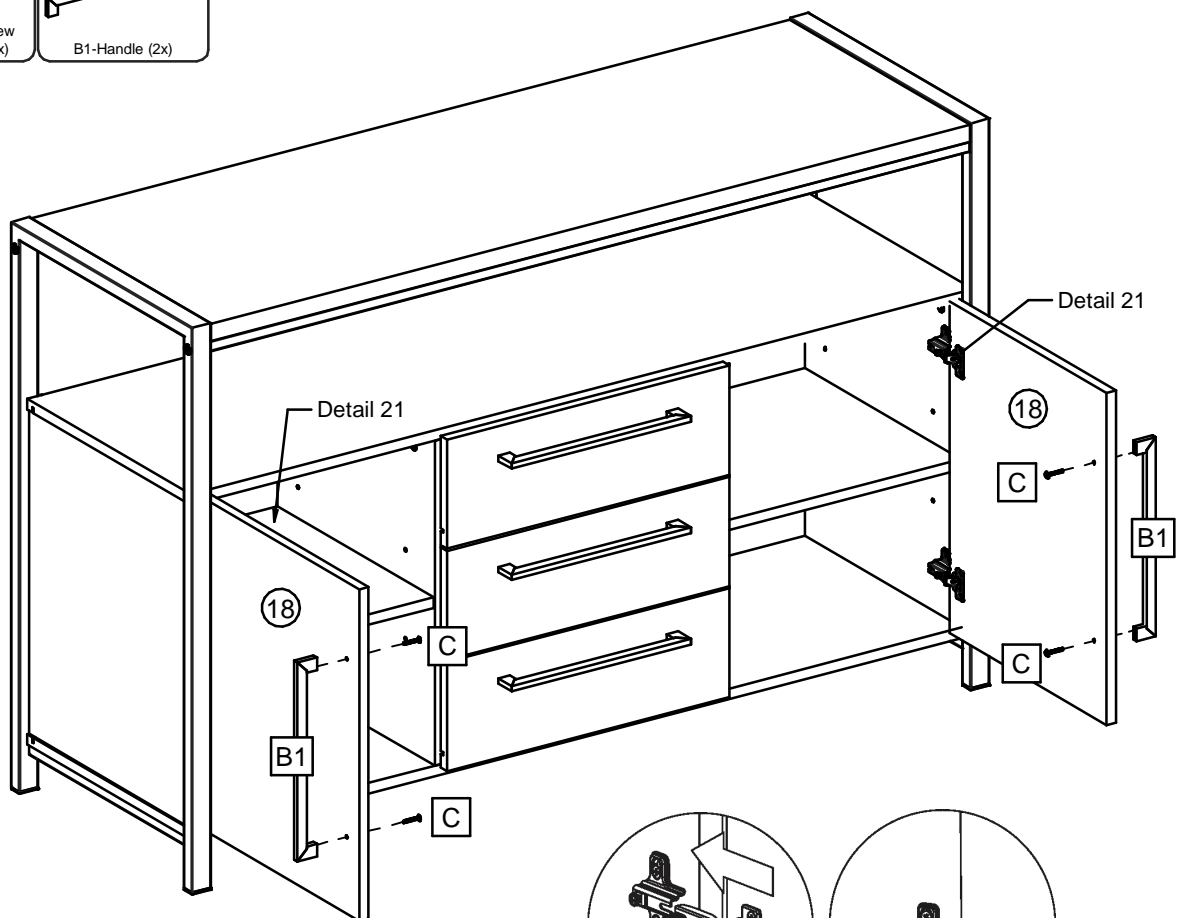

Detail 21

 
14




B-Flat Head Screw  
Ø4,0 x 14mm (6x)




See last page

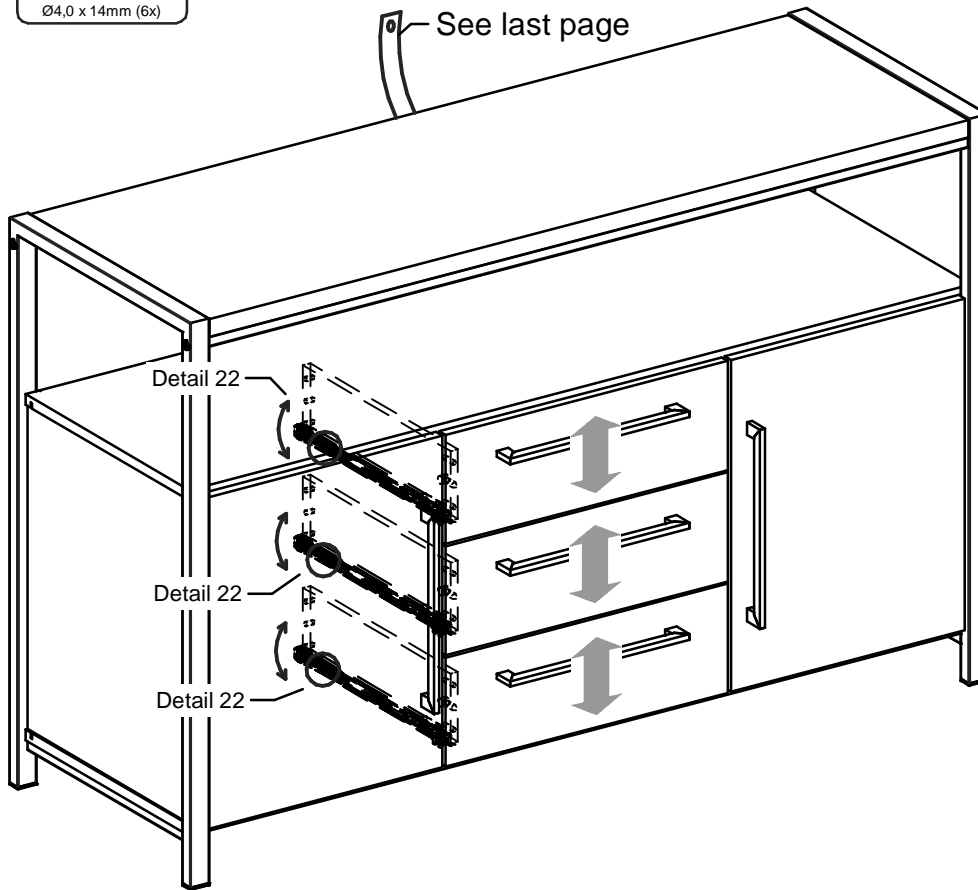

Detail 22

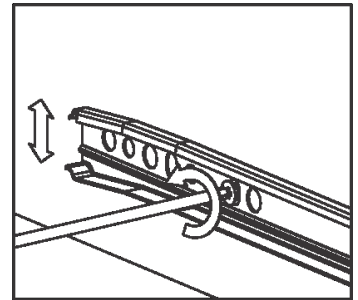 


Drawer Adjustment

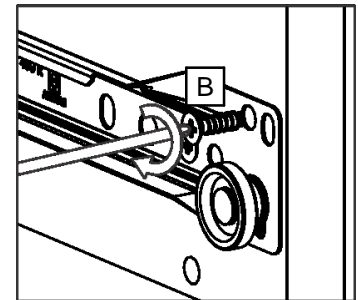 


Drawer Lock

 
15

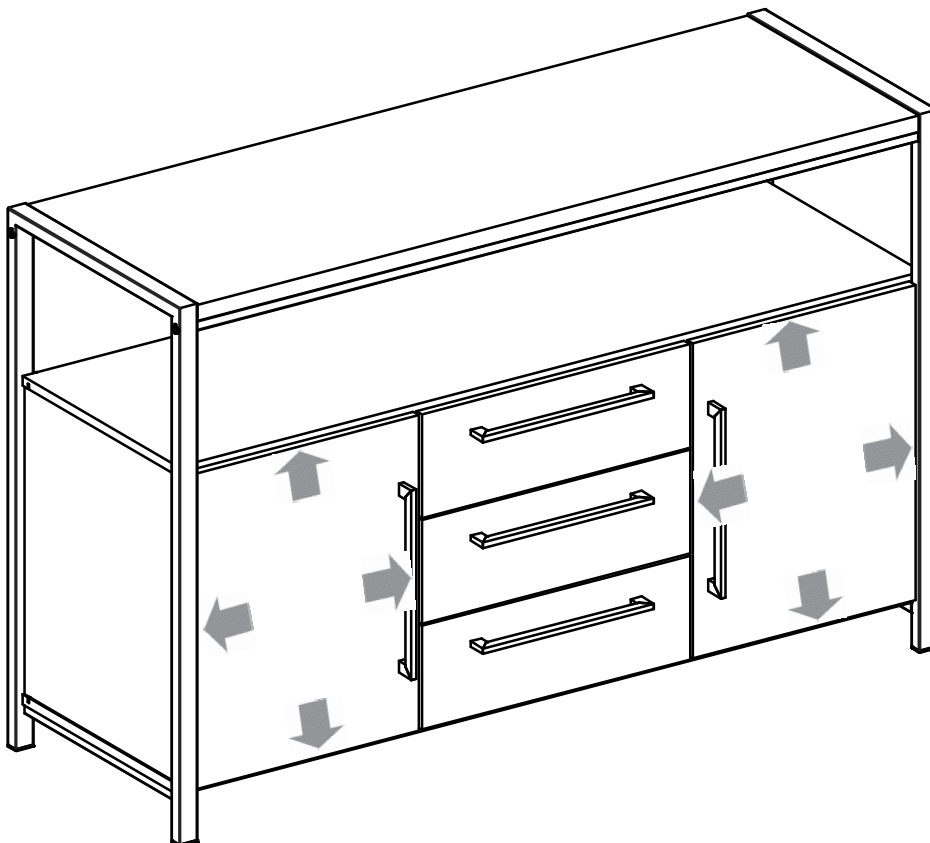


Doors Adjustments

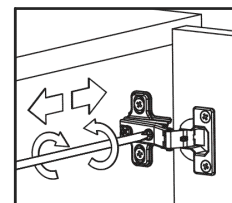 


Internal Adjustment

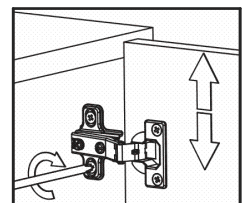 

Height Adjustment

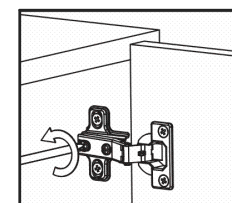 

Depth Adjustment

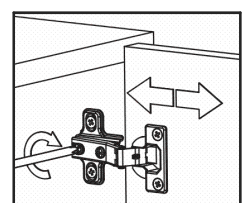 

## WARNING

**Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.**

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

