






ASSEMBLY INSTRUCTIONS

PENTRE 4' / 4'6 / 5' BEDFRAME


Hardware supplied for assembly

A	BOLT (5/16"x15mm)		8
B	BOLT (1/4"x35mm)		3
C	ALLEN KEY (4mm)		1
D	SCREW (4*30)		31

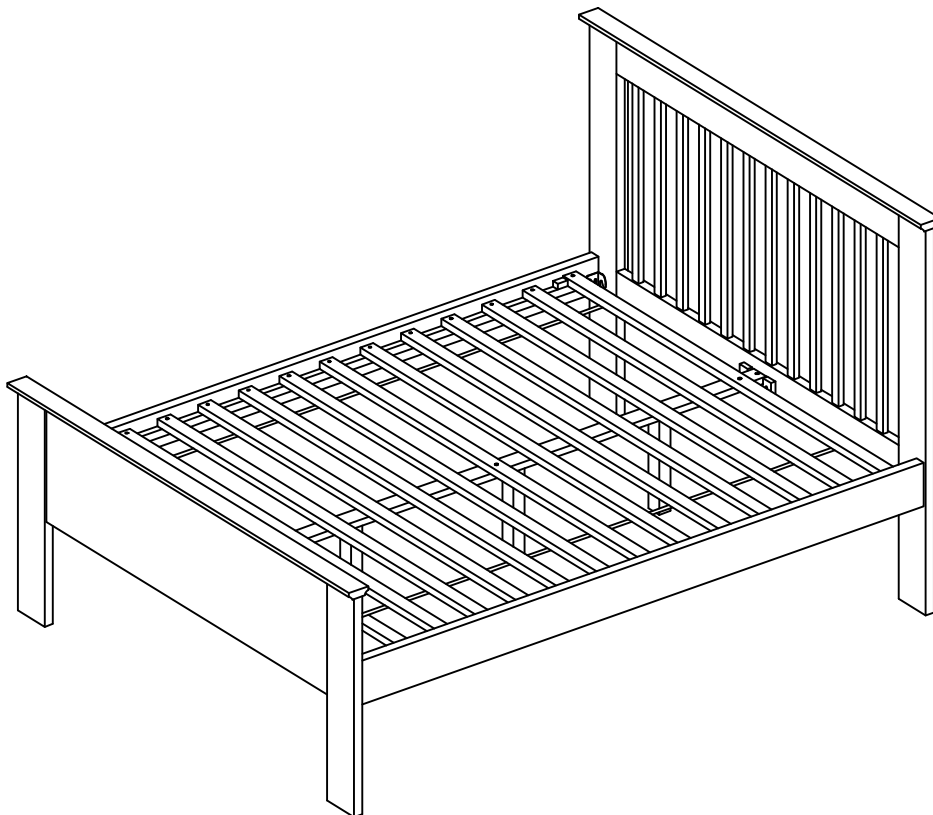


ASSEMBLY INSTRUCTIONS

PENTRE 4' / 4'6' / 5' BEDFRAME

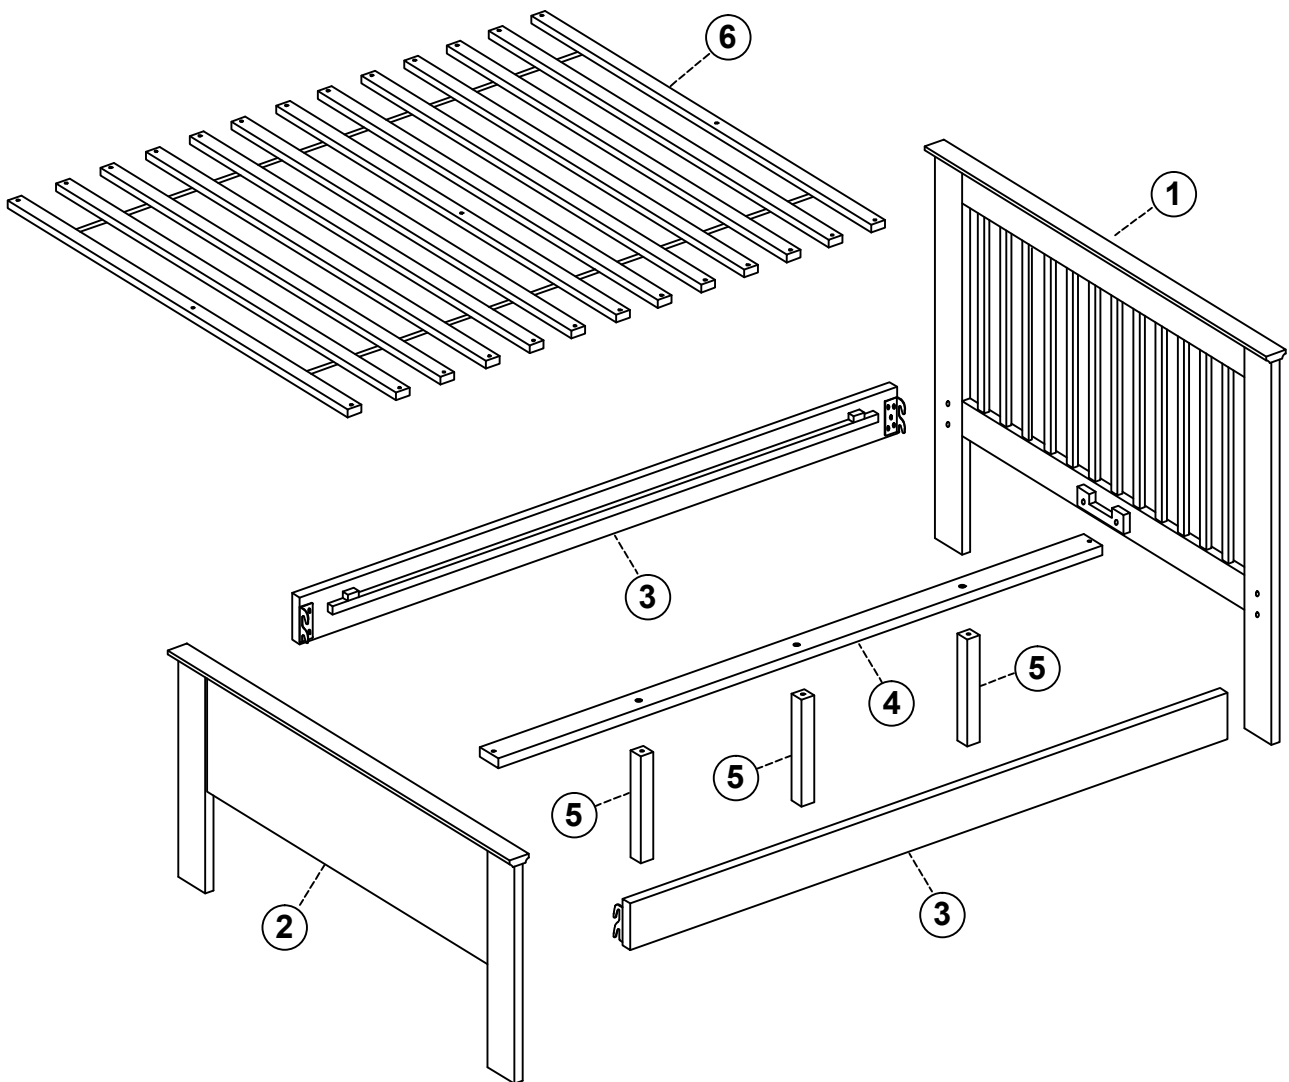

ASSEMBLY INSTRUCTIONS


PENTRE 4' / 4'6 / 5' BEDFRAME

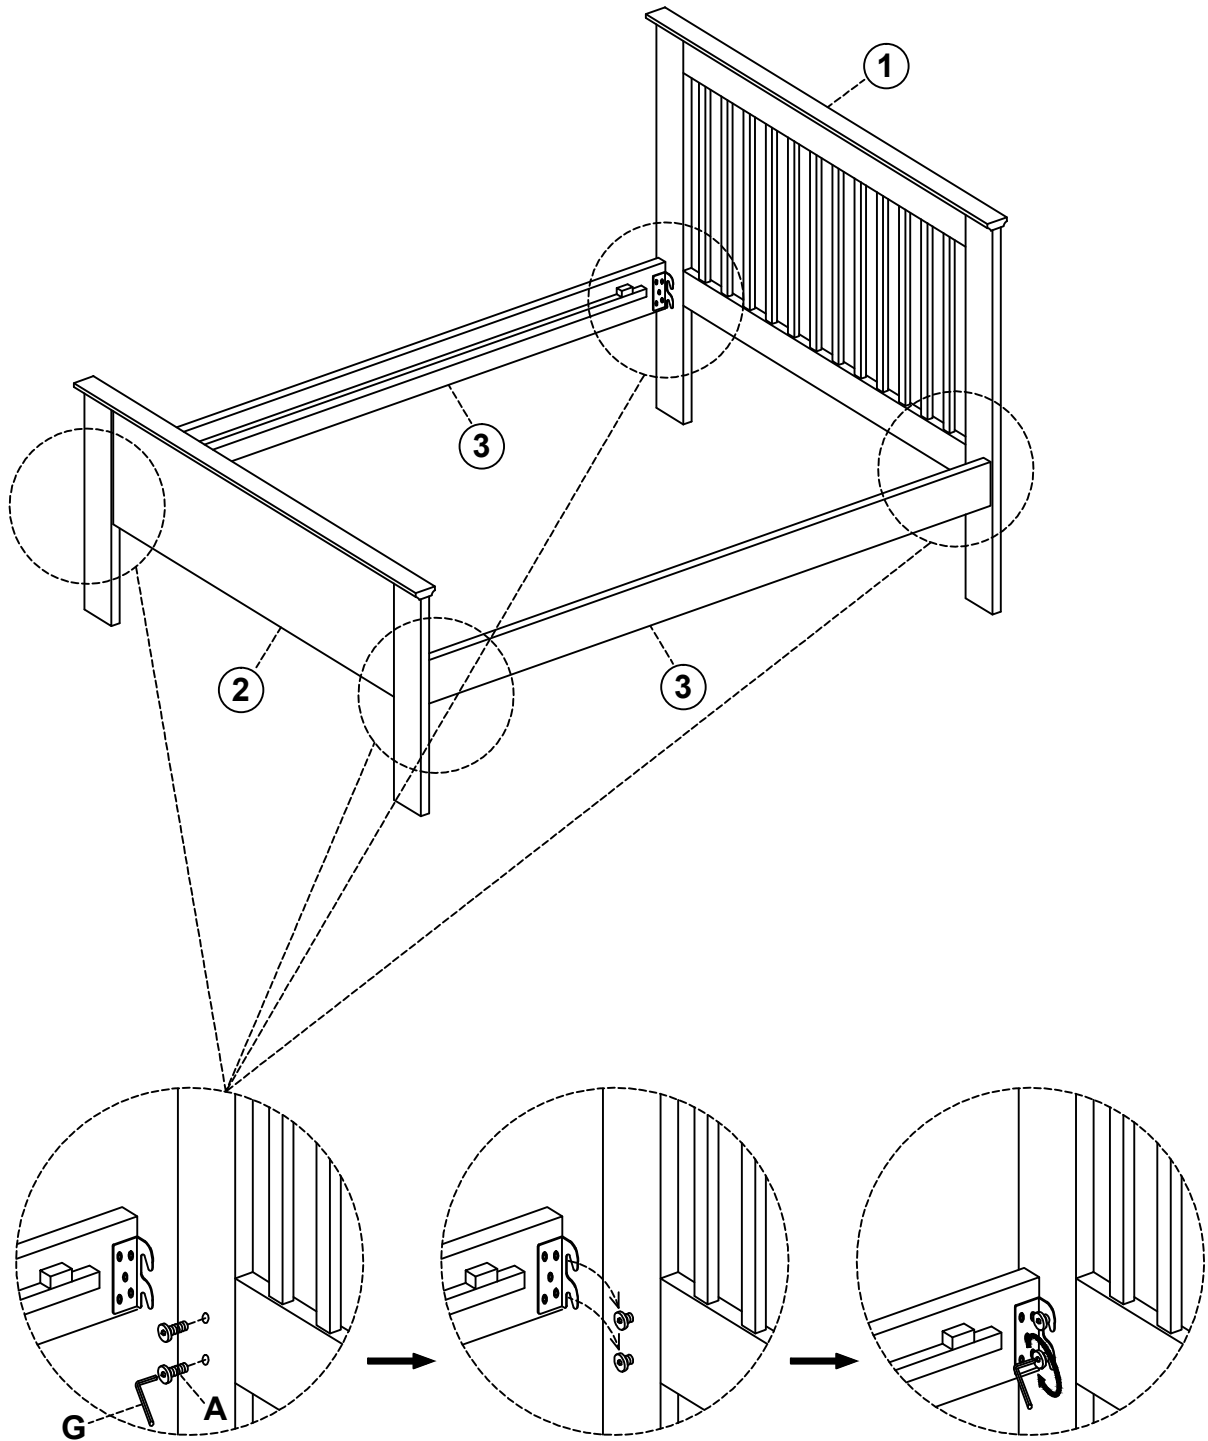


STEP 1

ASSEMBLY INSTRUCTIONS


PENTRE 4' / 4'6 / 5' BEDFRAME

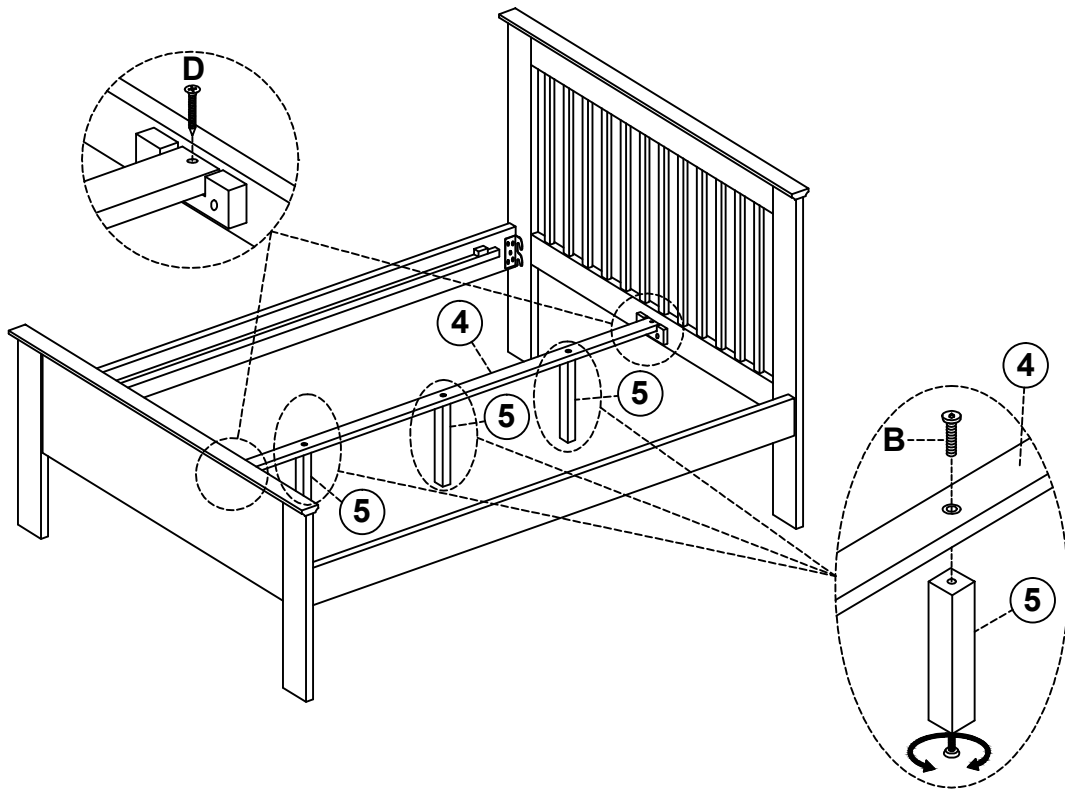

STEP 2

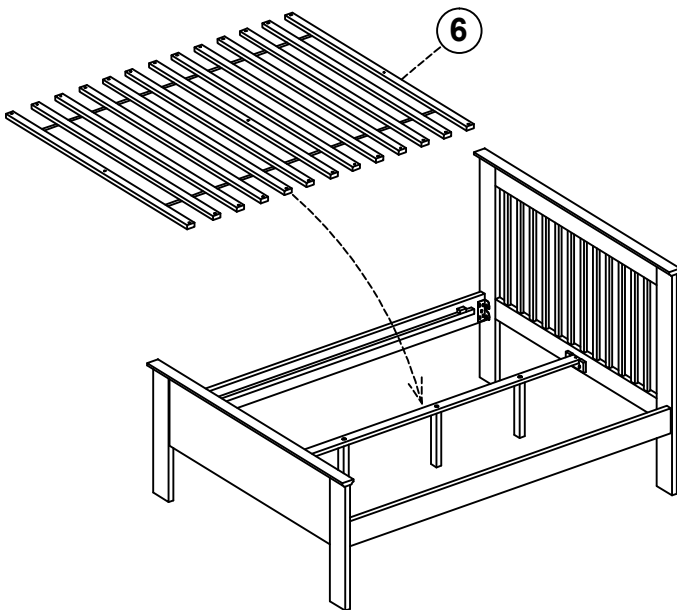

STEP 3

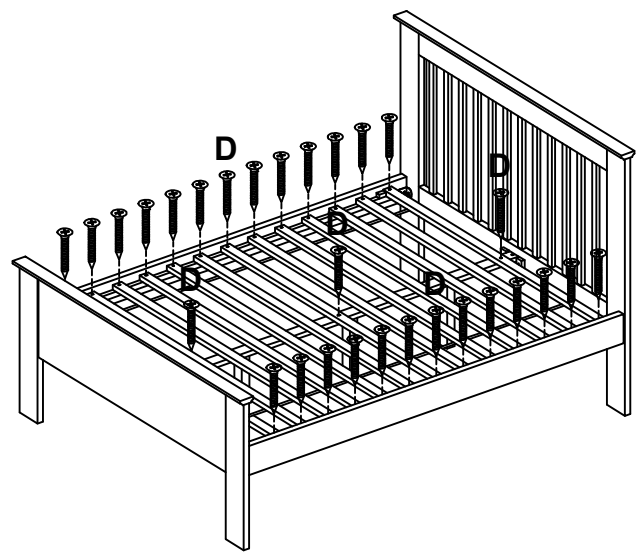

STEP 4