

AG706










Build your furniture on a soft clean cover to stop components from getting marked during assembly.

2

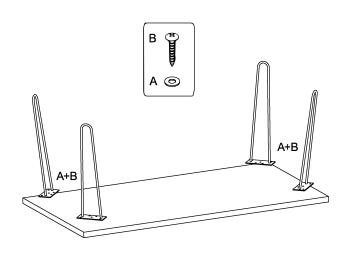


(x20)


(x)


x20 B

0

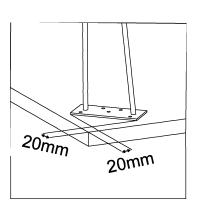

3

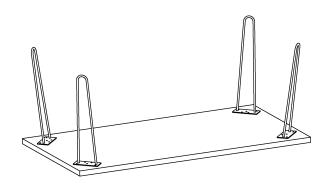

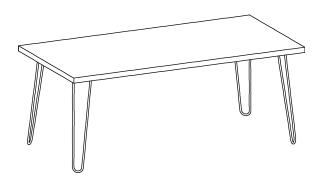

Lift furniture, do not drag across floor.