


NEVADA 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS BLACK WOOD GRAIN

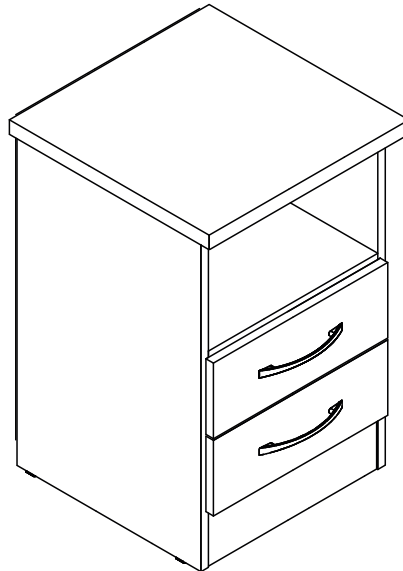



IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

- After unpacking this product please keep the original packaging in case it needs to be returned for any reason.
- Please ensure all fittings and parts are present before commencing with assembly.
 - Never drag or push products as this could cause damage to the joints making it inferior.
 - We strongly recommend that you keep children away from your work area.
 - We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
 - Assemble this product as close to its final position as possible.
 - Do not place this product next to a radiator or in direct sunlight.
 - Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
 - Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
 - Make sure any spillage is wiped off immediately.
 - Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
 - For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
 - From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
 - Do not place on a wet or damp floor as staining may occur to your floor.

TOOLS REQUIRED

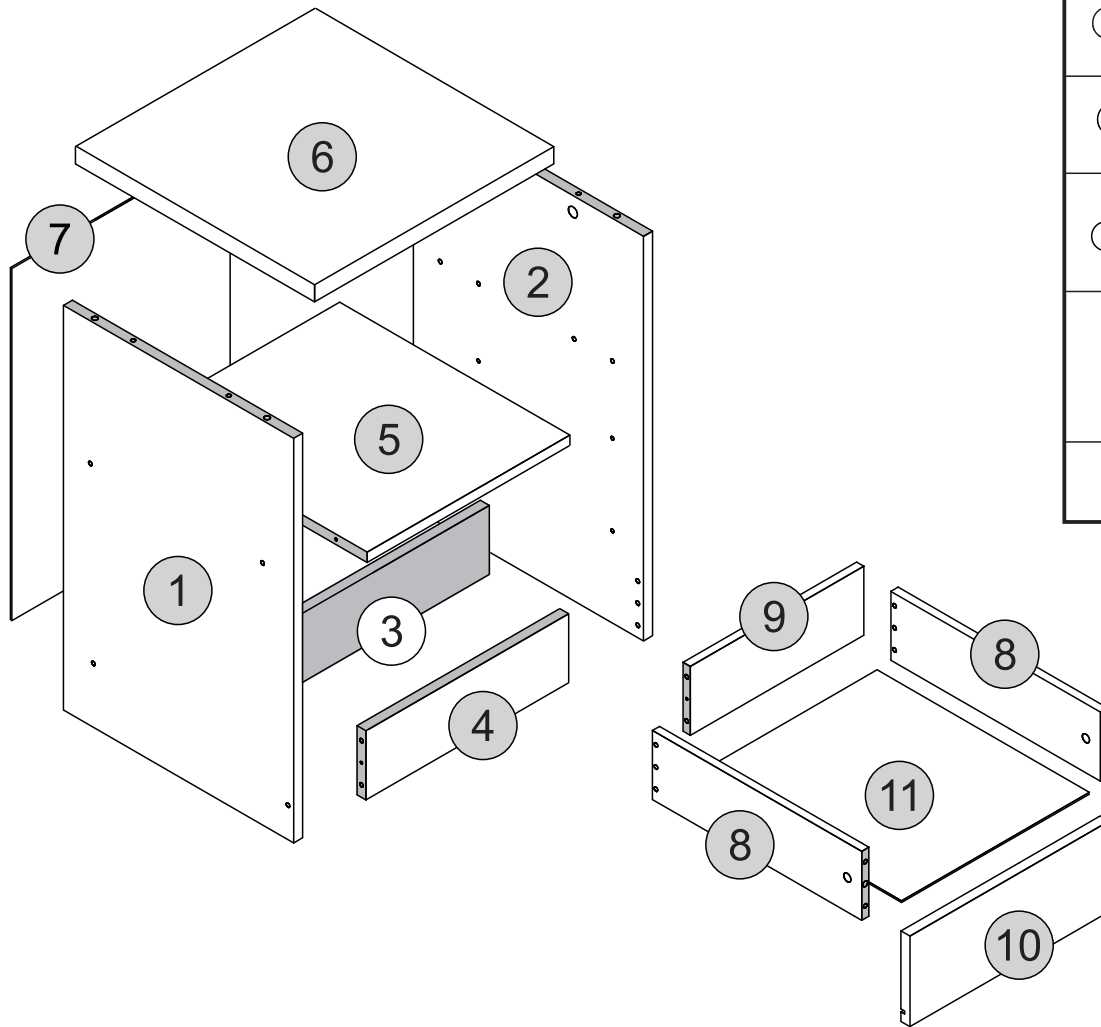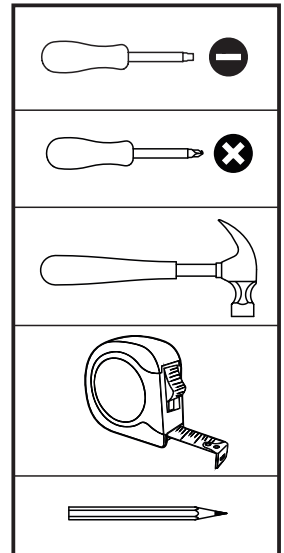
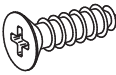
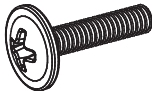



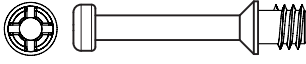





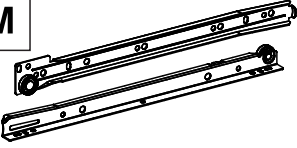



PARTS LIST

Please Note:
The below parts have all been stamped with the part number to help identify them during assembly.


Part Number	Part Code	Part Description	Quantity	Carton
1	S100-103-078-DM1-01	Left Side Panel	1	1/1
2	S100-103-078-DM1-02	Right Side Panel	1	1/1
3	S100-103-078-DM1-03	Back Baseboard	1	1/1
4	S100-103-078-DM1-04	Front Baseboard	1	1/1
5	S100-103-078-DM1-05	Shelf	1	1/1
6	S100-103-078-DM1-06	Top Panel	1	1/1
7	S100-103-078-DM1-07	Back Panel	1	1/1
8	S100-103-078-DM1-08	Drawer Side	4	1/1
9	S100-103-078-DM1-09	Drawer Back Panel	2	1/1
10	S100-103-078-DM1-10	Drawer Front	2	1/1
11	S100-103-078-DM1-11	Drawer Bottom	2	1/1

FITTINGS LIST


<p>A</p>  <p>Flat Head Screw Ø6,0 x 8mm (8x)</p> <p>2/+</p>	<p>B</p>  <p>Flat Head Screw Ø4,0 x 14mm (12x)</p> <p>2/+</p>	<p>C</p>  <p>Flan Head Screw Ø4,0 x 20mm (4x)</p> <p>1/+</p>	<p>D</p>  <p>Flat Head Screw Ø4,0 x 40mm (12x)</p> <p>2/+</p>
<p>E</p>  <p>Dowel Ø6,0 x 30mm (32x)</p> <p>2/+</p>	<p>F</p>  <p>Nail 10 x 10 (33x)</p> <p>5/+</p>	<p>G</p>  <p>Cam Bolt (8x)</p> <p>1/+</p>	<p>H</p>  <p>Cam Nut Ø12mm (8x)</p> <p>2/+</p>
<p>I</p>  <p>Plastic Foot (4x)</p> <p>1/+</p>	<p>J</p>  <p>Hole Plugs (20x)</p> <p>2/+</p>	<p>K</p>  <p>GLUE</p> <p>Glue (2x)</p>	<p>L</p>  <p>Handle (2x)</p>
<p>M</p>  <p>Drawer Runners (2x)</p>	<p>N</p>  <p>Flan Head Screw Ø3,5 x 12mm (2x)</p> <p>1/+</p>		

TIPS FOR FITTINGS CAM-LOCKS

WHEN FITTING CAM NUT, ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT CONNECTING CAM BOLT TURN CLOCKWISE UNTIL SECURE

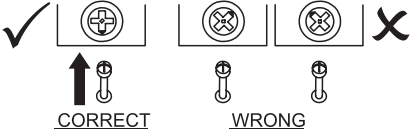




CORRECT **WRONG**

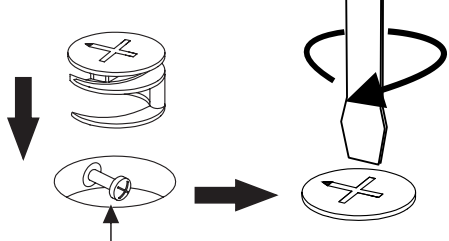

Cam bolt head needs to be in centre

CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)

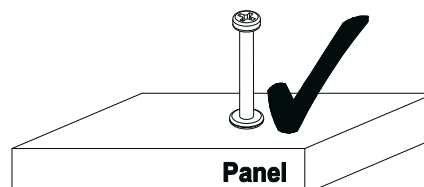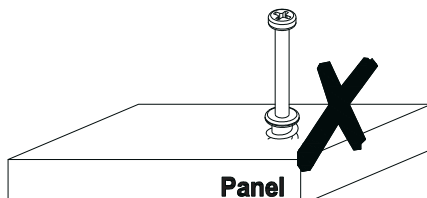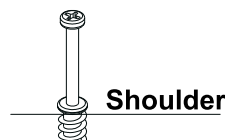



STEP 1

PARTS REQUIRED

1 - LEFT SIDE PANEL x1

HARDWARE REQUIRED




E  02
Ø6,0 x 30mm

F  02
10 x 10

I  02

K  01

TOOLS REQUIRED

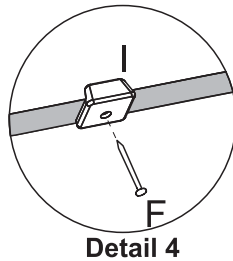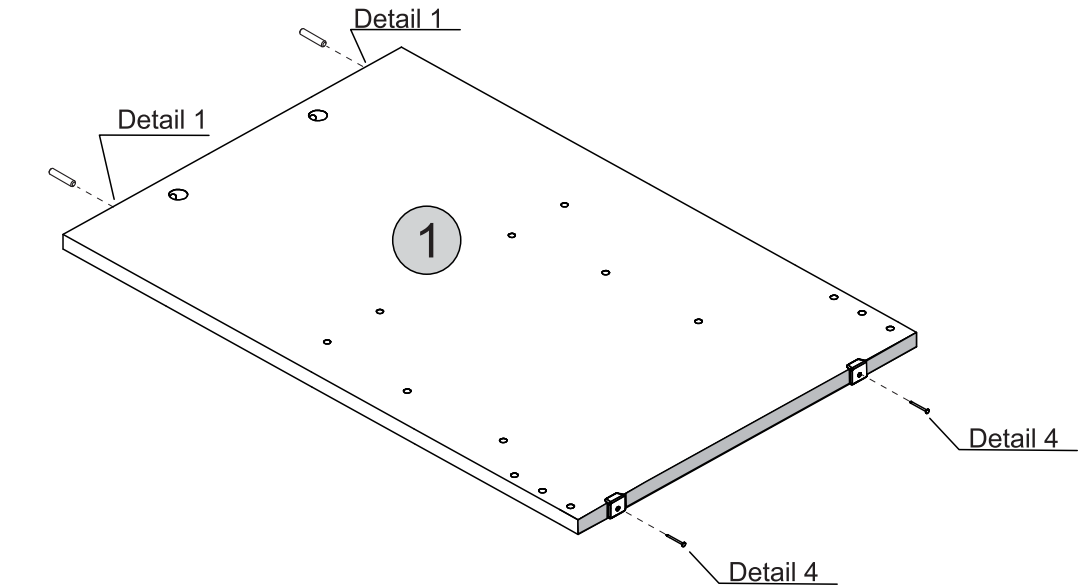



STEP 2

PARTS REQUIRED

2 - RIGHT SIDE PANEL x1

HARDWARE REQUIRED




E  02
Ø6,0 x 30mm

F  02
10 x 10

I  02

K  01

TOOLS REQUIRED

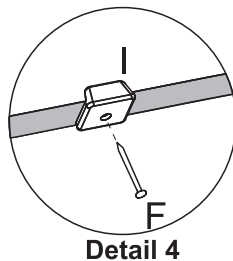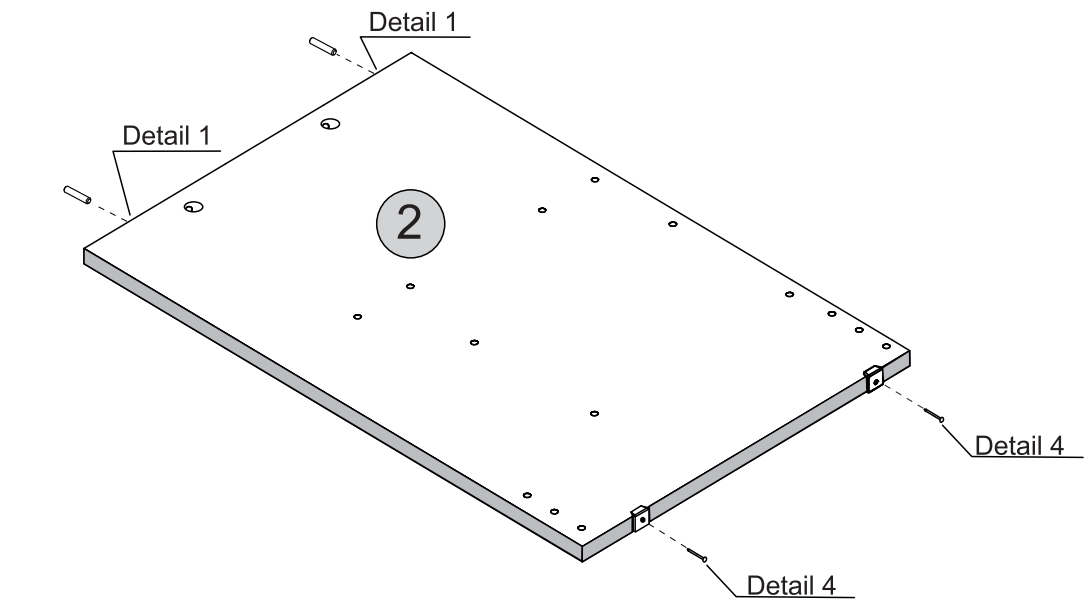



STEP 3

PARTS REQUIRED





2 - RIGHT SIDE PANEL x1

HARDWARE REQUIRED

A  04
Ø6,0 x 8mm

M  02
RIGHT

TOOLS REQUIRED

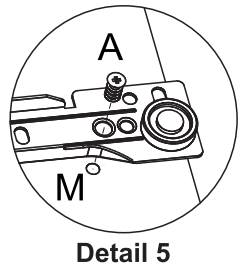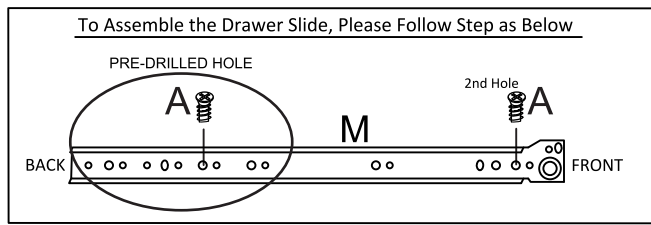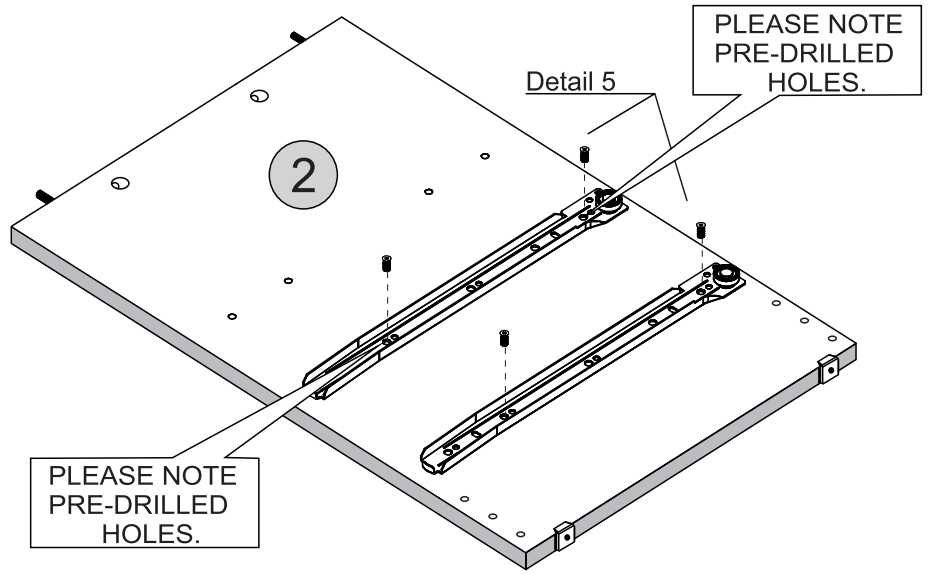


STEP 4

PARTS REQUIRED





1 - LEFT SIDE PANEL x1

HARDWARE REQUIRED

A  04
Ø6,0 x 8mm

M  02
LEFT

TOOLS REQUIRED

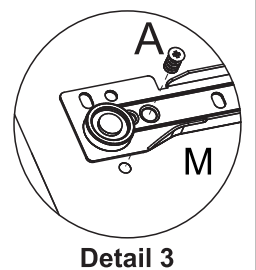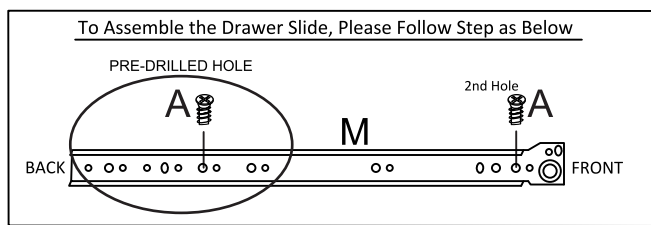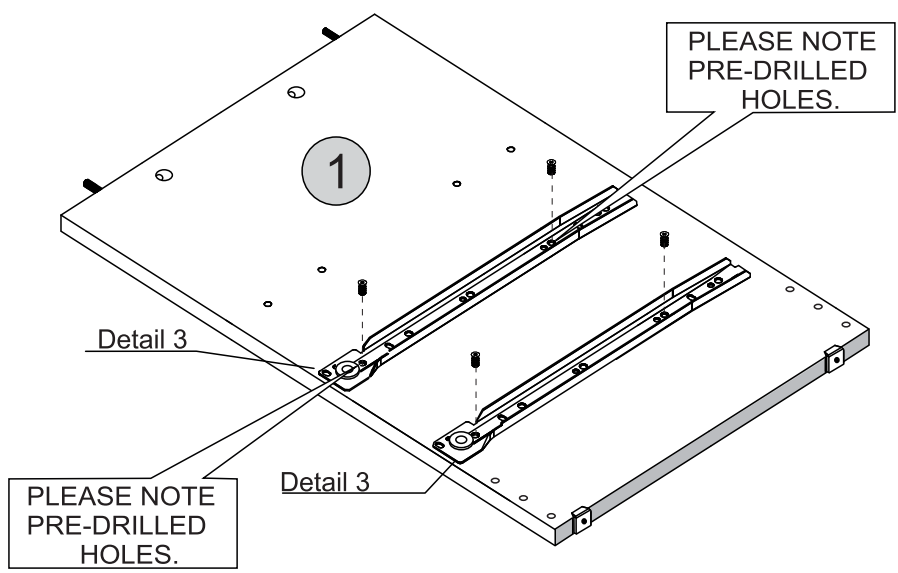



STEP 5


PARTS REQUIRED

- 3 - BACK BASEBOARD x1
- 4 - FRONT BASEBOARD x1
- 5 - SHELF x1

HARDWARE REQUIRED

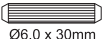- E  12
Ø6.0 x 30mm
- K  01
GLUE

TOOLS REQUIRED

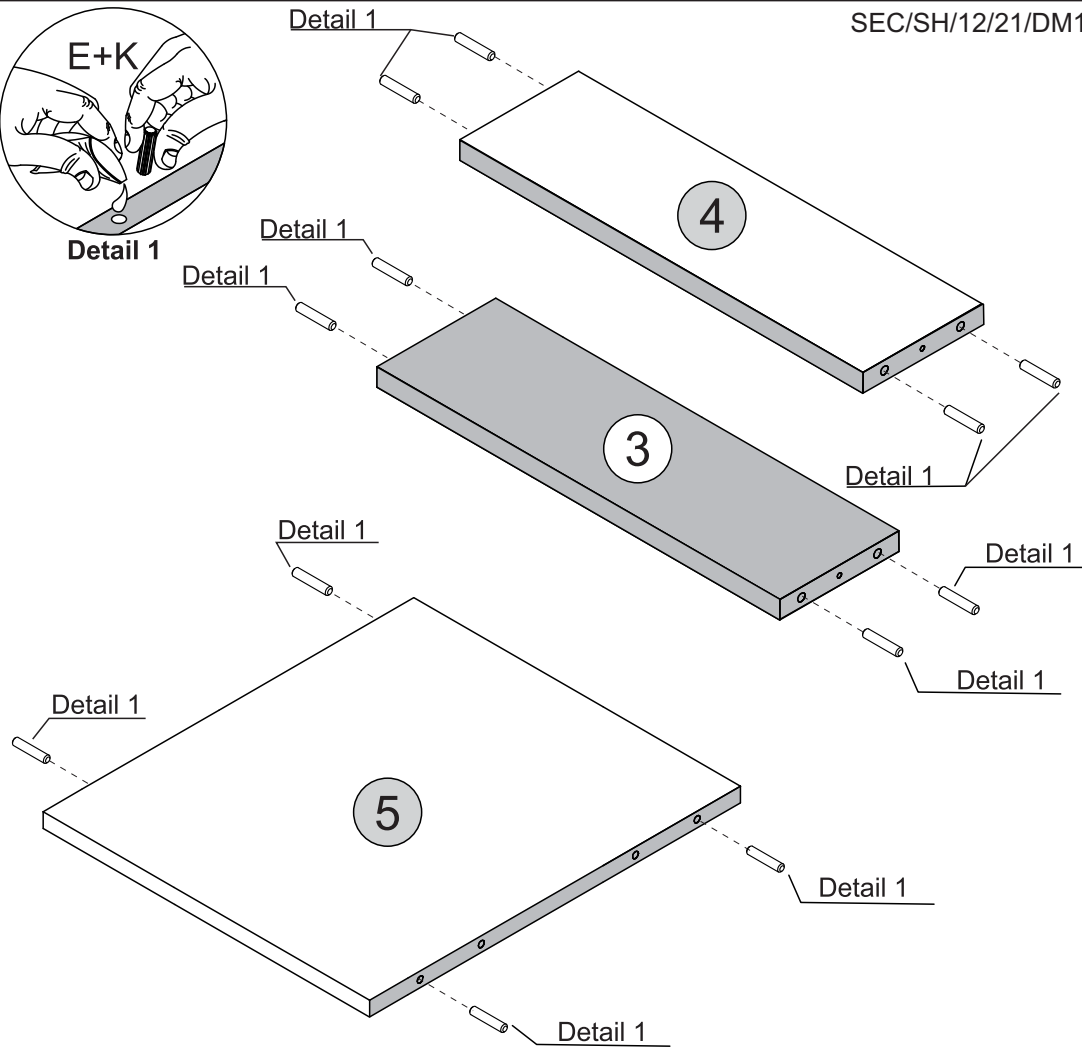


STEP 6





PARTS REQUIRED

- 2 - RIGHT SIDE PANEL x1
- 3 - BACK BASEBOARD x1
- 4 - FRONT BASEBOARD x1
- 5 - SHELF x1

HARDWARE REQUIRED

- D  04
Ø4.0 x 40mm
- K  01
GLUE


TOOLS REQUIRED

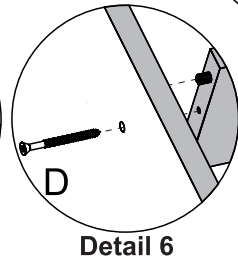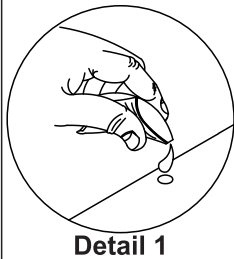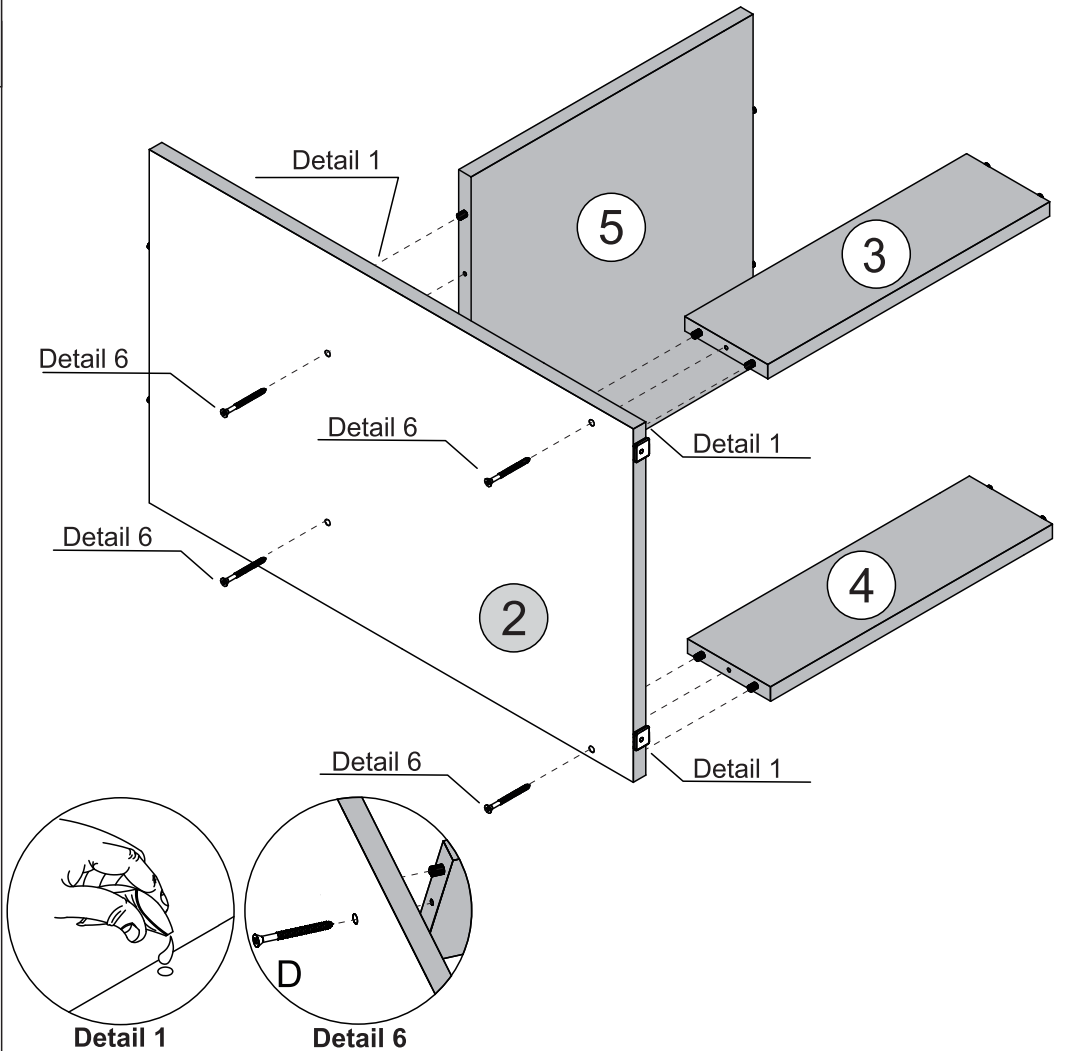

STEP 7

PARTS REQUIRED

1 - LEFT SIDE PANEL x1



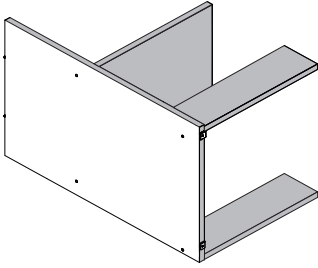


HARDWARE REQUIRED

D  04
Ø4.0 x 40mm

K  01
GLUE

TOOLS REQUIRED

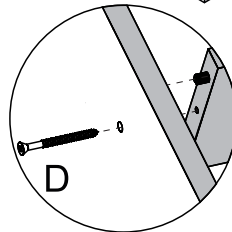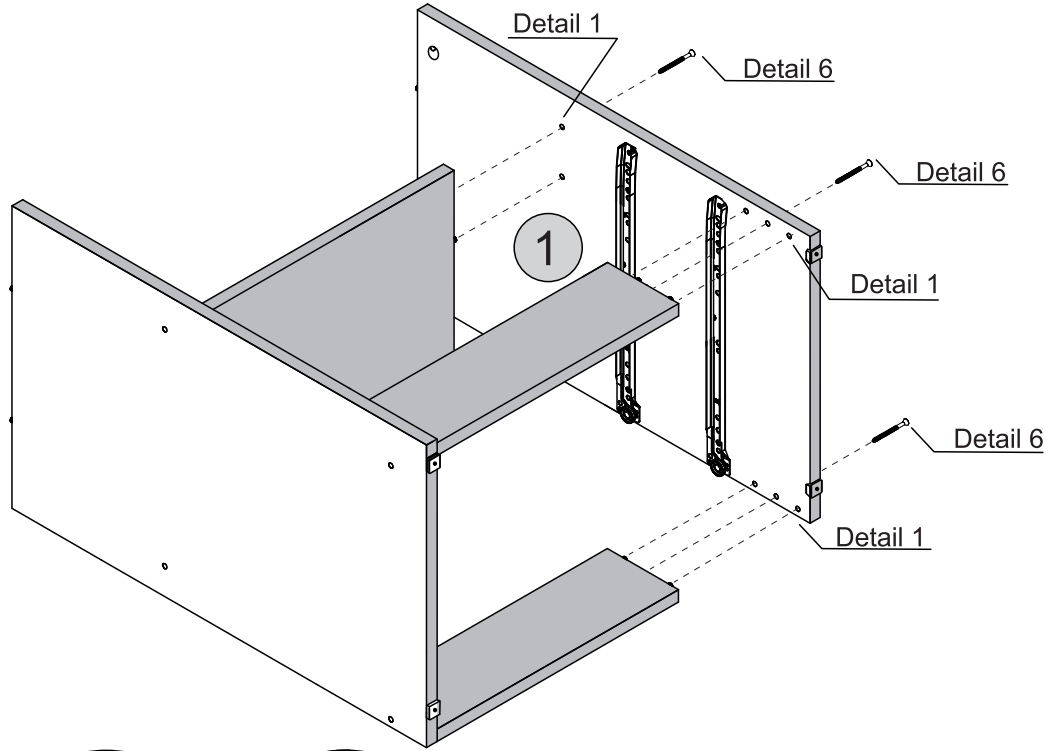

Detail 1

Detail 6

STEP 8





PARTS REQUIRED

6 - TOP PANEL x1

HARDWARE REQUIRED

G  04

TOOLS REQUIRED

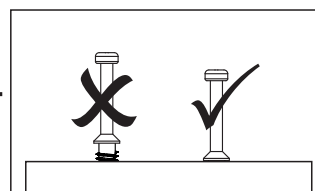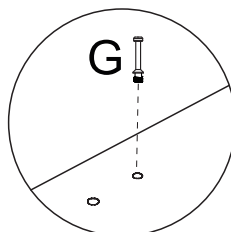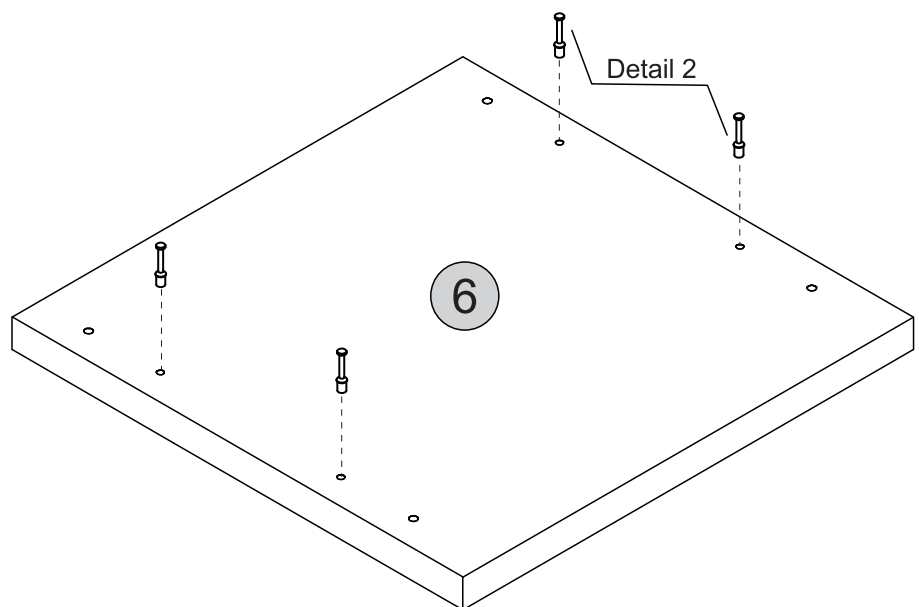


Detail 2

STEP 9

PARTS REQUIRED

6 - TOP PANEL x1





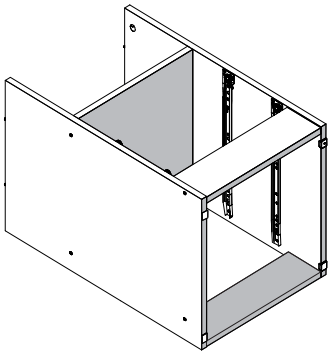


HARDWARE REQUIRED

H  04

K  01


TOOLS REQUIRED

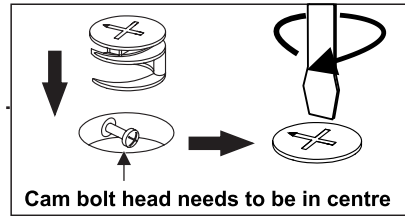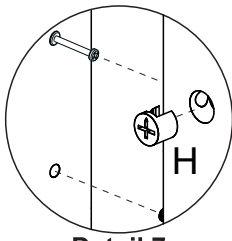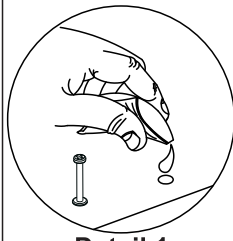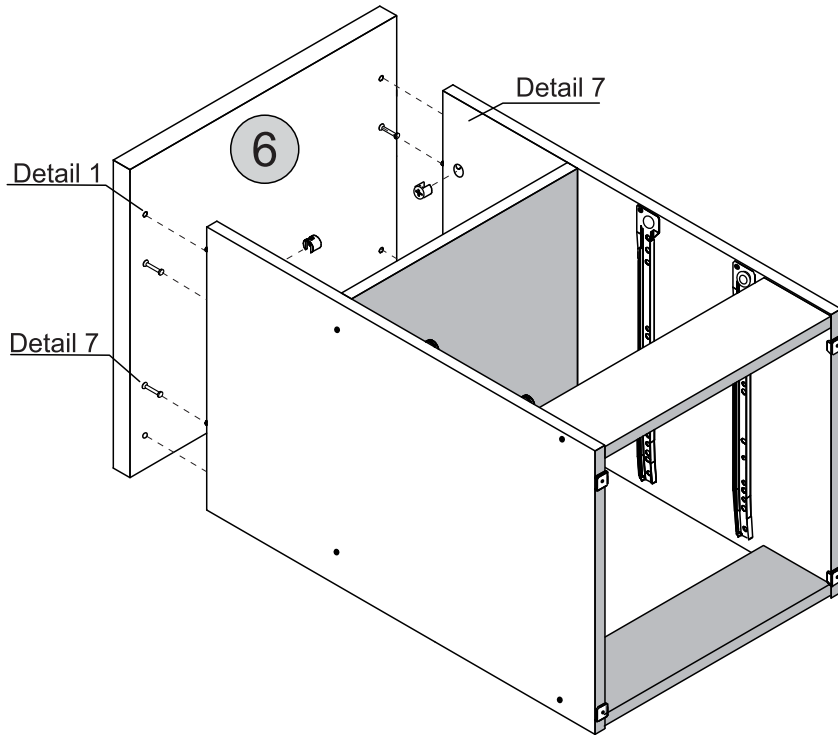


STEP 10

PARTS REQUIRED

7 - BACK PANEL x1



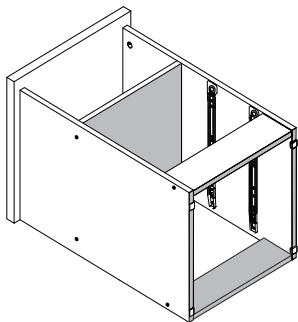


HARDWARE REQUIRED




F  13

N  02

TOOLS REQUIRED

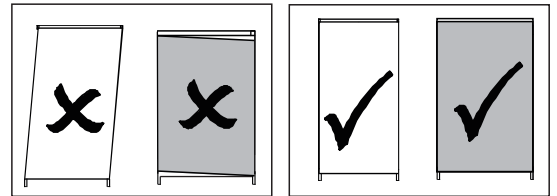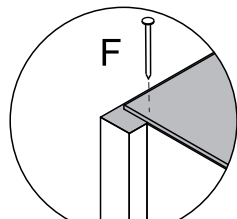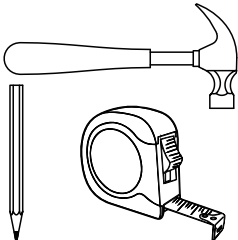

* For your future reference
Order Number should be here

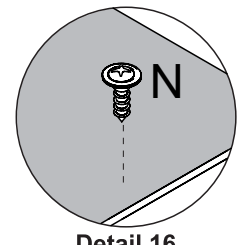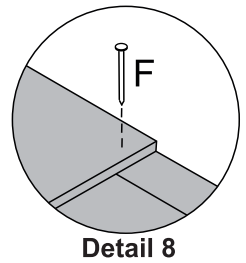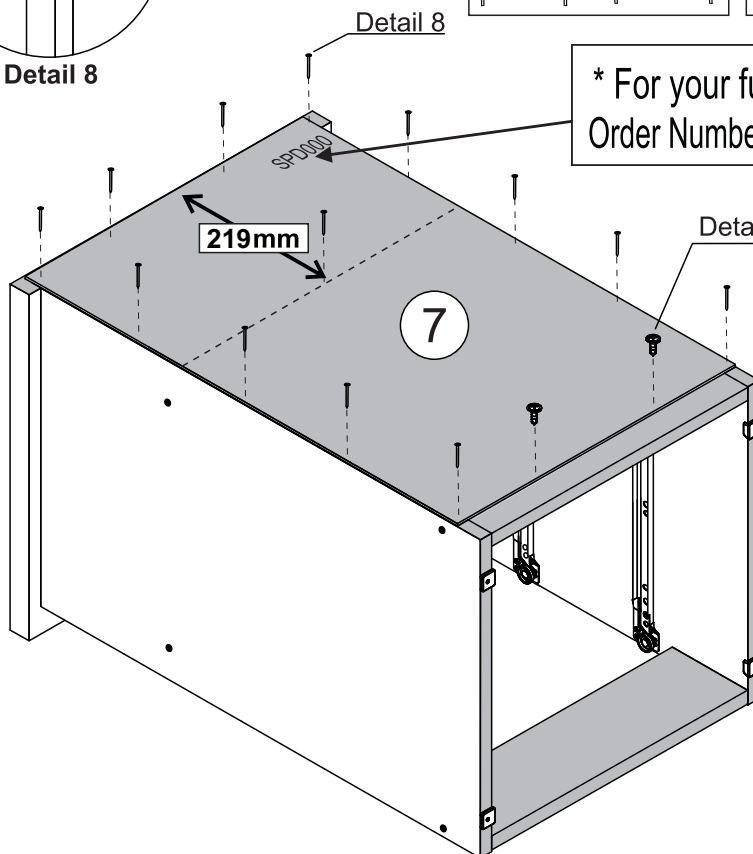

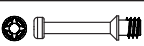


STEP 11



PARTS REQUIRED

- 8 - DRAWER SIDE x4
- 9 - DRAWER BACK PANEL x2
- 10 - DRAWER FRONT x2

HARDWARE REQUIRED

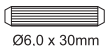- E  16
Ø6,0 x 30mm
- K  01
- G  04

TOOLS REQUIRED

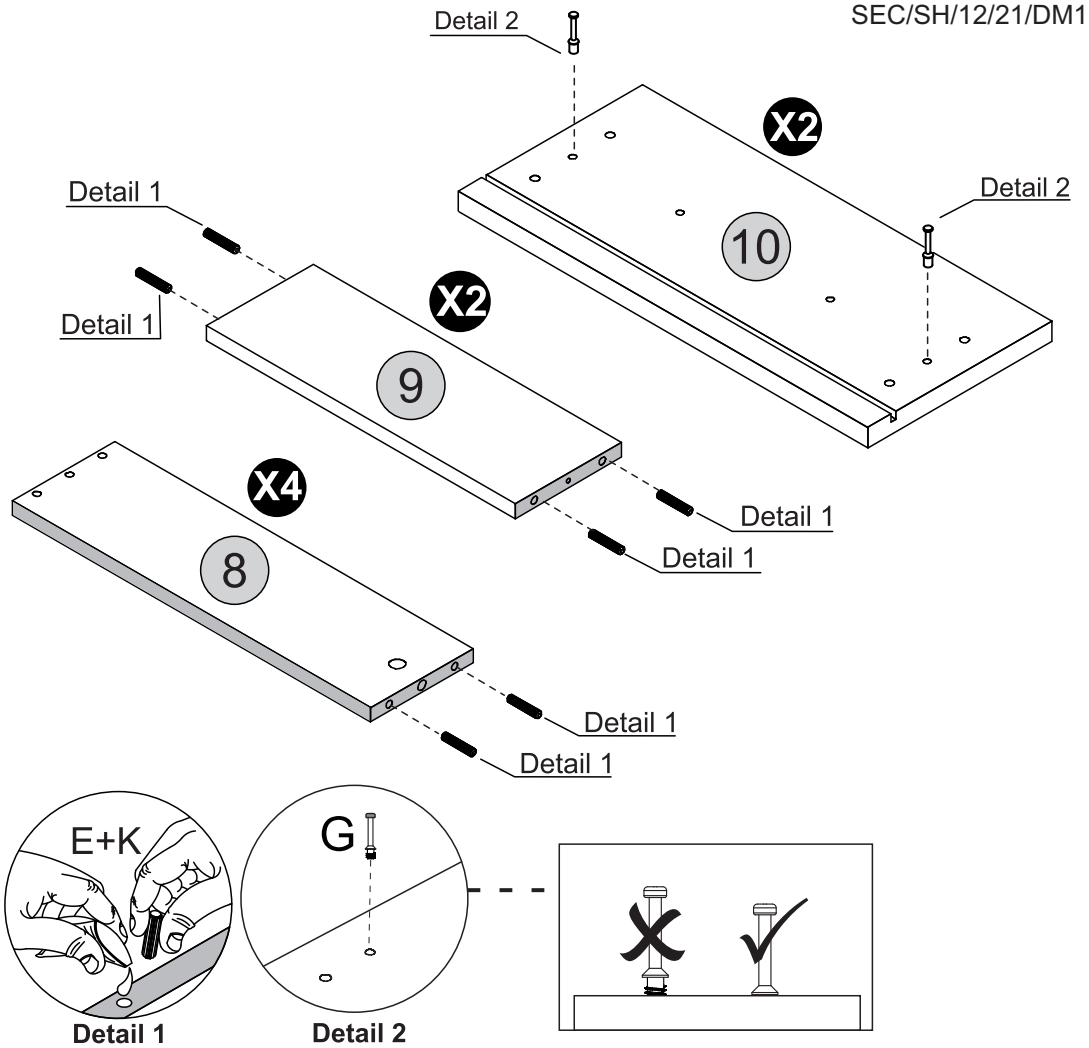


STEP 12



PARTS REQUIRED

- 8 - DRAWER SIDE x4
- 9 - DRAWER BACK PANEL x2

HARDWARE REQUIRED

- D  04
Ø4,0 x 40mm


TOOLS REQUIRED

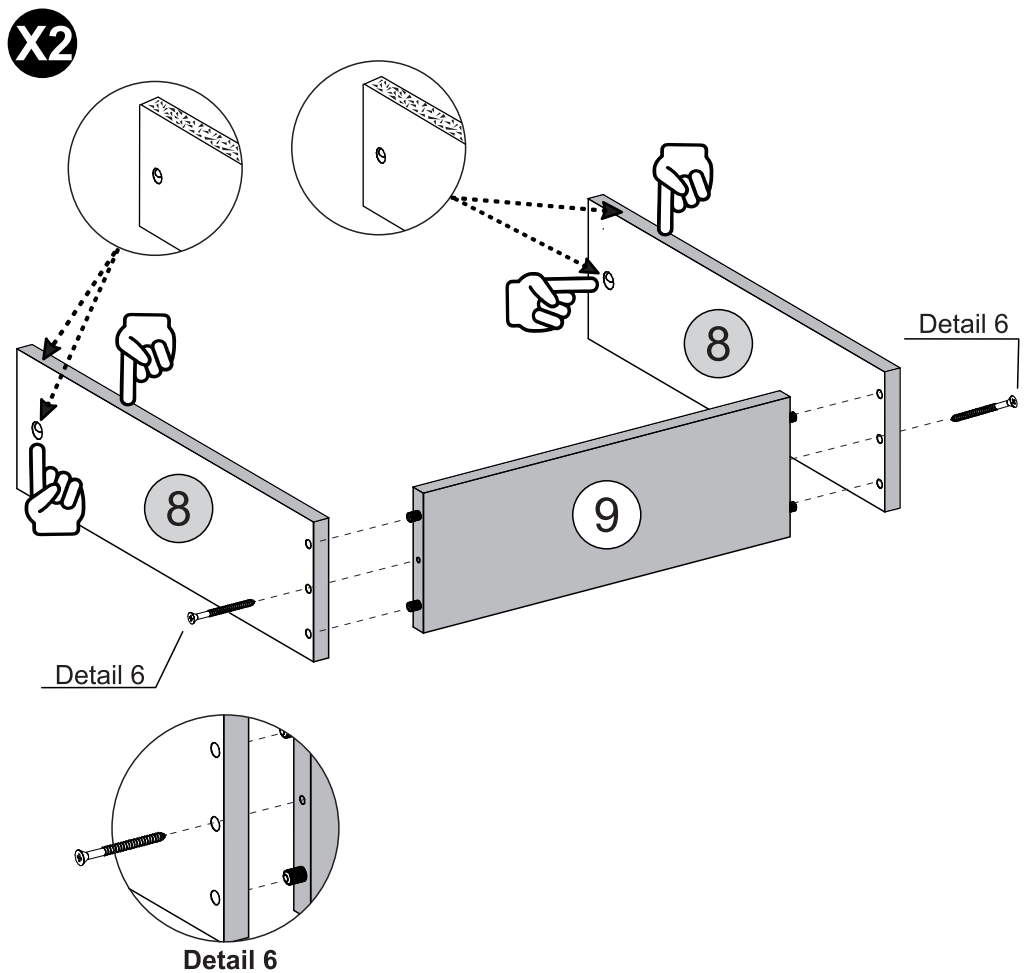

STEP 13

PARTS REQUIRED


10 -DRAWER FRONT x2

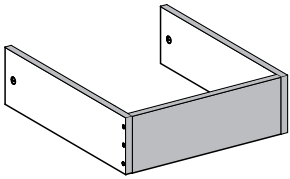


HARDWARE REQUIRED

K  01

TOOLS REQUIRED

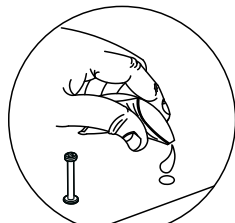


Detail 1

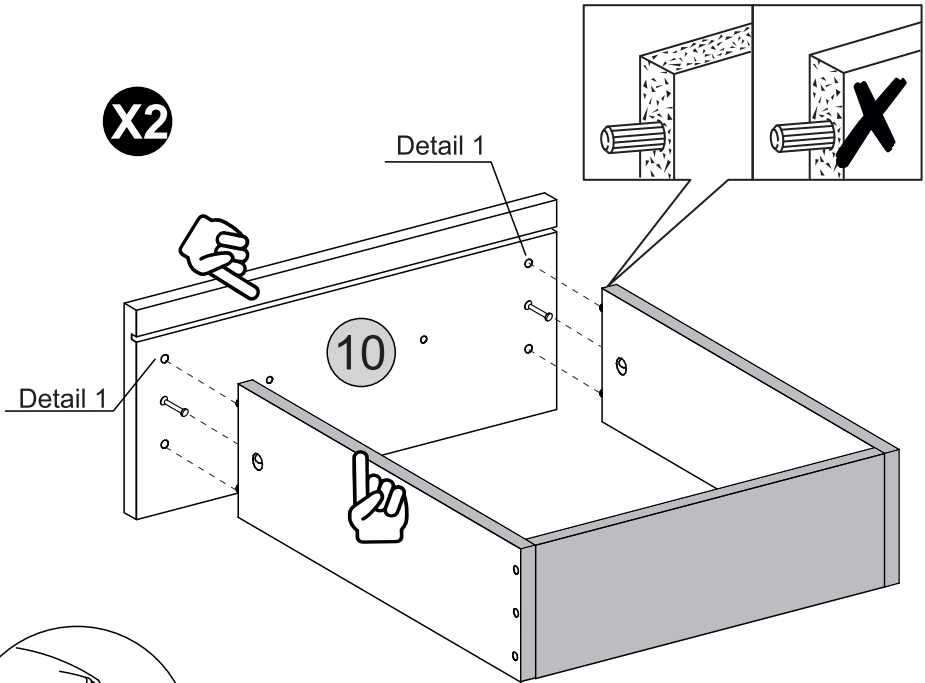

STEP 14

PARTS REQUIRED


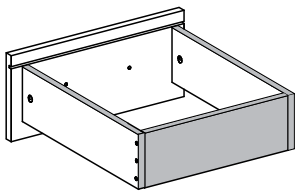


HARDWARE REQUIRED

H  04



J  08

TOOLS REQUIRED

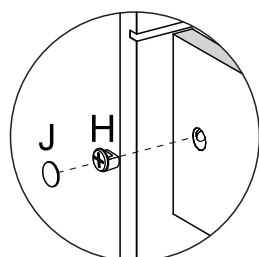

Detail 9


X2

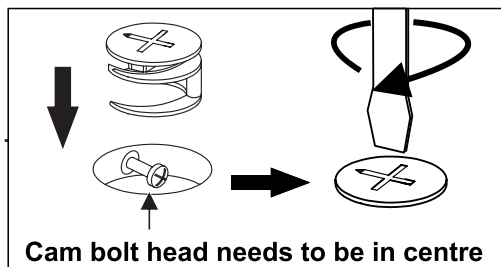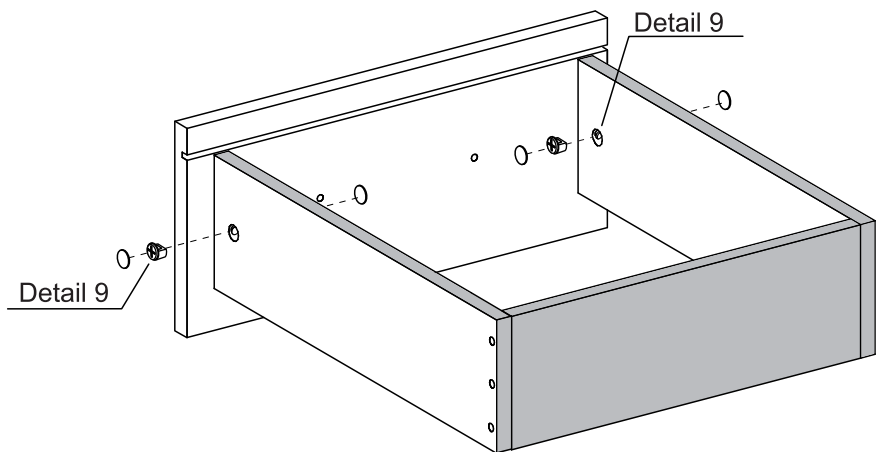


STEP 15

PARTS REQUIRED




11 - DRAWER BOTTOM x2

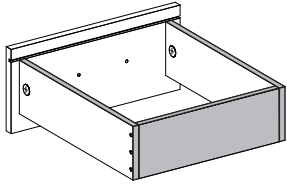

HARDWARE REQUIRED




TOOLS REQUIRED

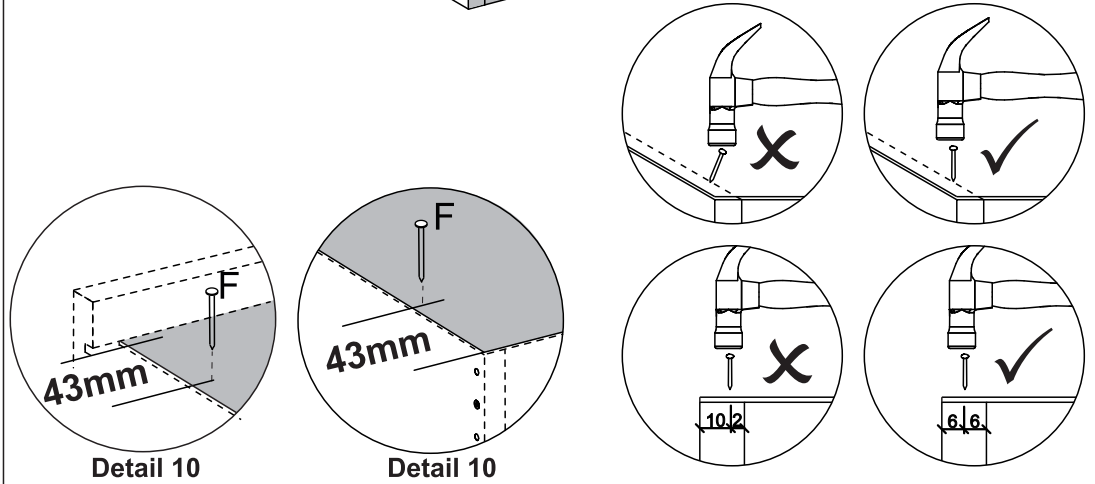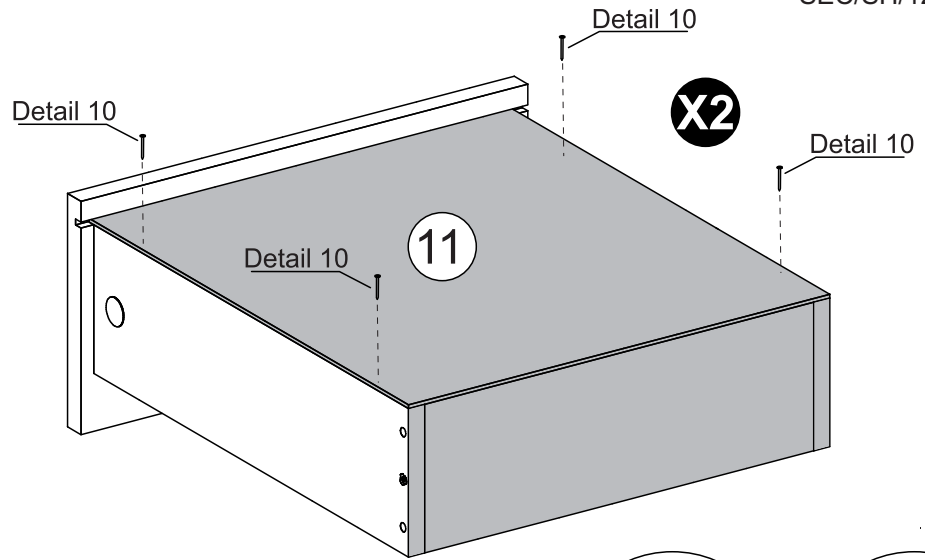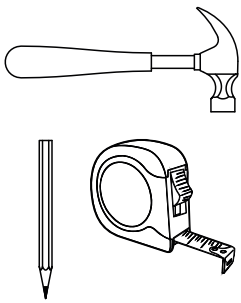


STEP 16




PARTS REQUIRED

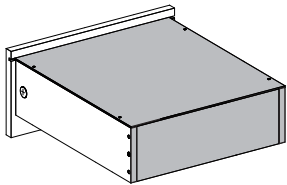

HARDWARE REQUIRED




TOOLS REQUIRED

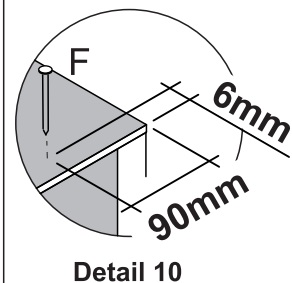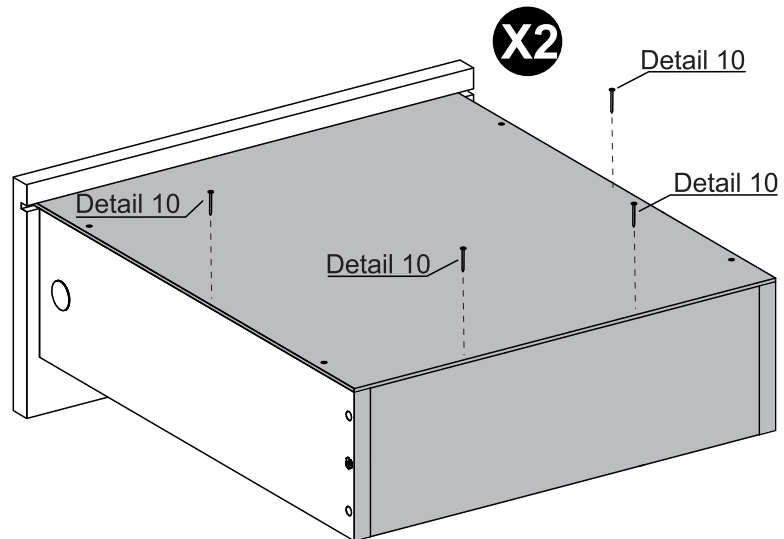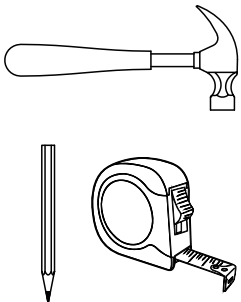


STEP 17





PARTS REQUIRED

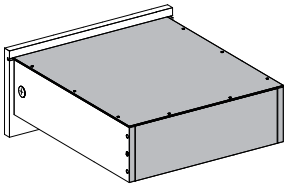

HARDWARE REQUIRED




TOOLS REQUIRED

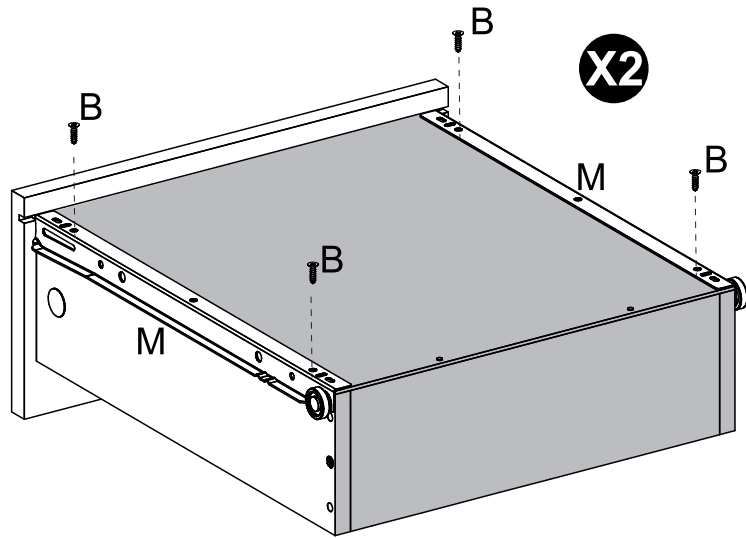


STEP 18




PARTS REQUIRED

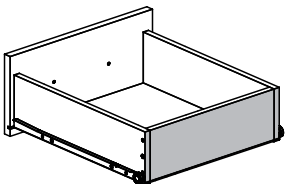

HARDWARE REQUIRED





TOOLS REQUIRED

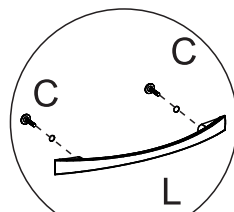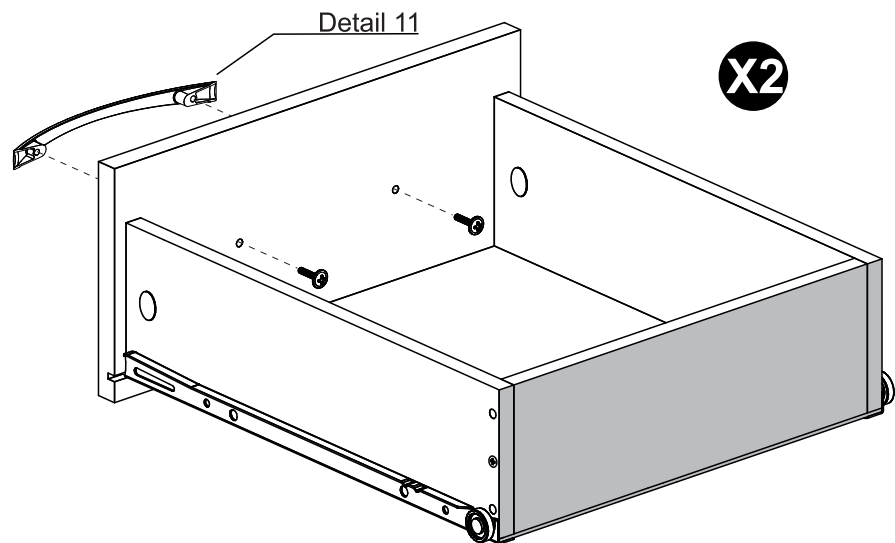


Detail 11

STEP 19

PARTS REQUIRED

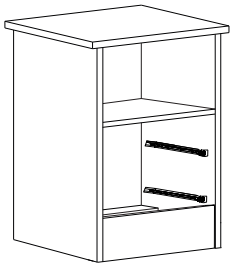




HARDWARE REQUIRED



TOOLS REQUIRED




If desired, after assembly use an alcohol cleaner to erase the number printed on the parts.

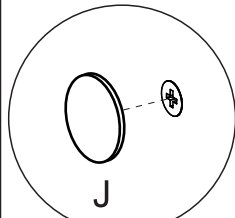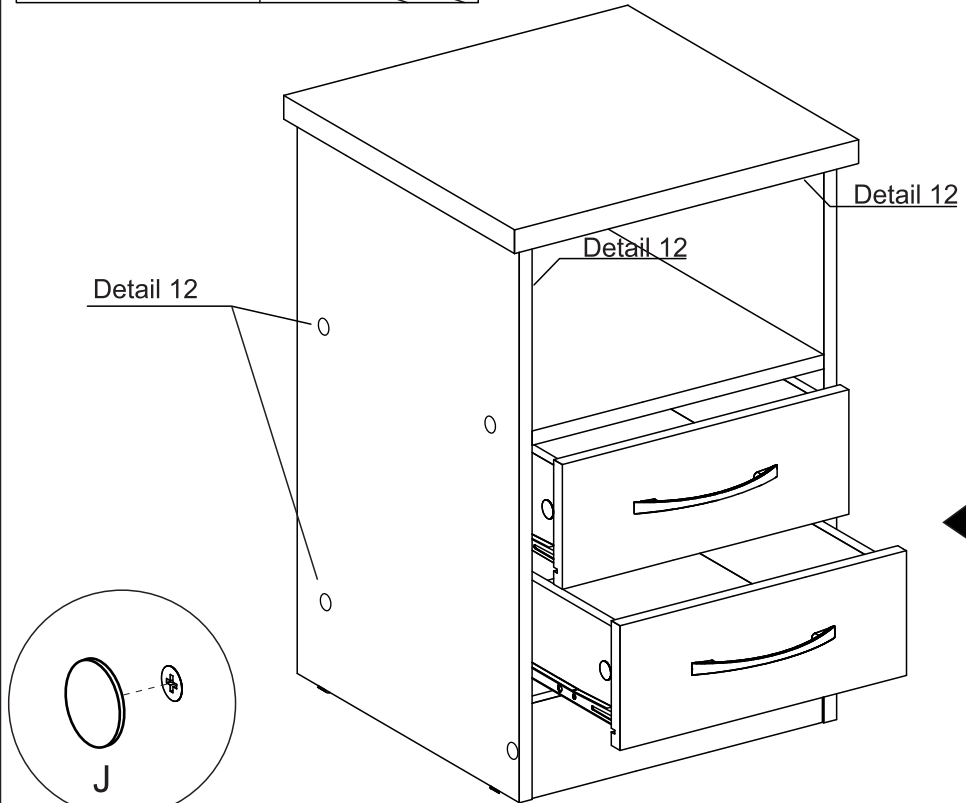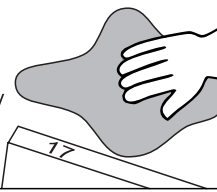


Detail 12

STEP 20



PARTS REQUIRED

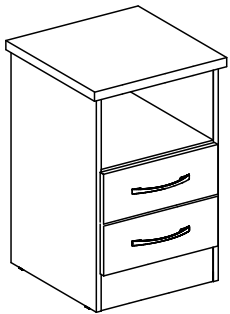


HARDWARE REQUIRED




TOOLS REQUIRED

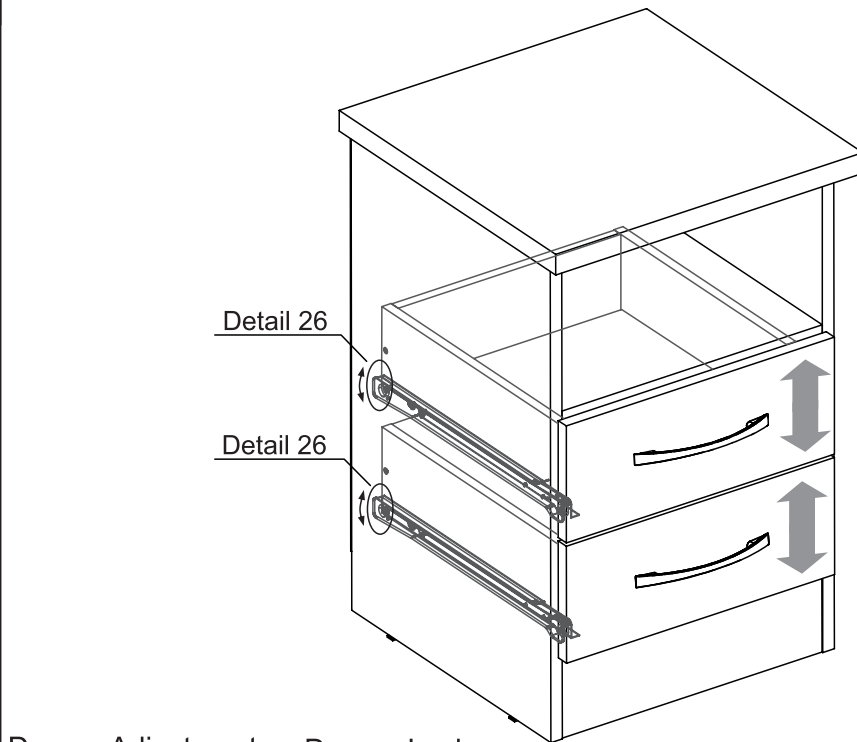

Drawer Adjustment

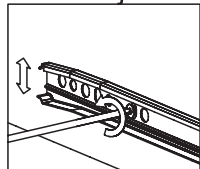

Drawer Lock

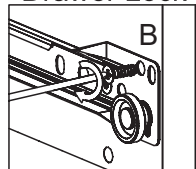

Detail 26