

NEVADA VANITY 1 DOOR WARDROBE ASSEMBLY INSTRUCTIONS BLACK WOOD GRAIN



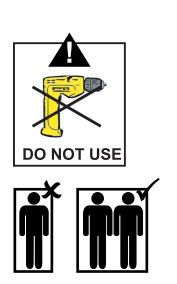

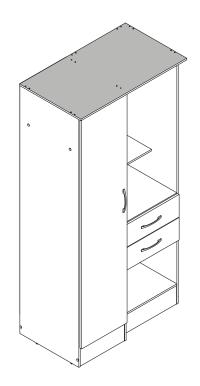

* You should assemble this product in two peolple


IMPORTANT FOR DOMESTIC USE ONLY


PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

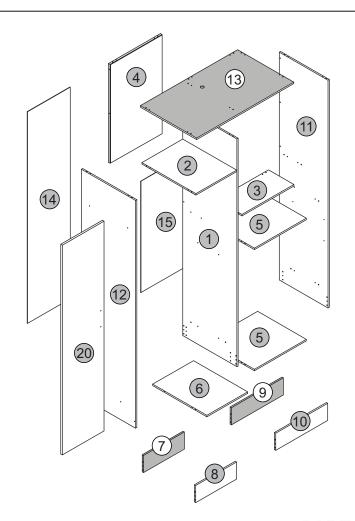

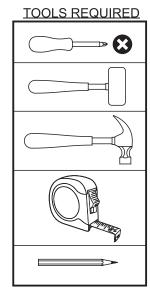





19

Please Note:


The below parts have all been stamped with the part number to help identify them during assembly

Part Number	Part Code	Part Description	Quantity	<u>Carton</u>
1	S100-101-154-DM1-01	Division Panel	1	1/2
2	S100-101-154-DM1-02	Small Shelf	1	2/2
3	S100-101-154-DM1-03	Mirror Shelf	1	2/2
4	S100-101-154-DM1-04	Mirror Panel	1	2/2
5	S100-101-154-DM1-05	Large Shelf	2	2/2
6	S100-101-154-DM1-06	Left Base	1	2/2
7	S100-101-154-DM1-07	Small Back Baseboard	1	2/2
8	S100-101-154-DM1-08	Small Front Baseboard	1	2/2
9	S100-101-154-DM1-09	Back Baseboard	1	2/2
10	S100-101-154-DM1-10	Front Baseboard	1	2/2
11	S100-101-154-DM1-11	Right Side Panel	1	1/2
12	S100-101-154-DM1-12	Left Sid Peanel	1	1/2
13	S100-101-154-DM1-13	Top Panel	1	2/2
14	S100-101-154-DM1-14	Large Back Panel	1	1/2
15	S100-101-154-DM1-15	Small Back Panel	1	2/2
16	S100-101-154-DM1-16	Drawer Front	2	2/2
17	S100-101-154-DM1-17	Drawer Side	4	2/2
18	S100-101-154-DM1-18	Drawer Back Panel	2	2/2
19	S100-101-154-DM1-19	Drawer Bottom	2	2/2
20	S100-101-154-DM1-20	Door	1	1/2

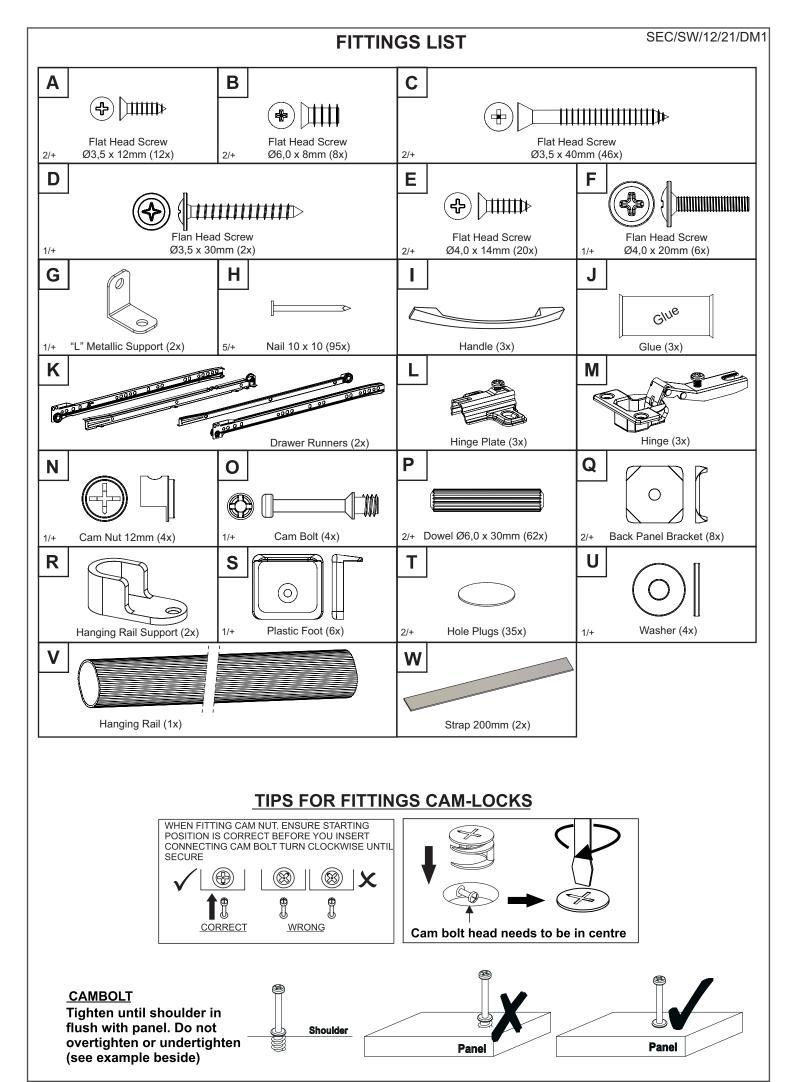

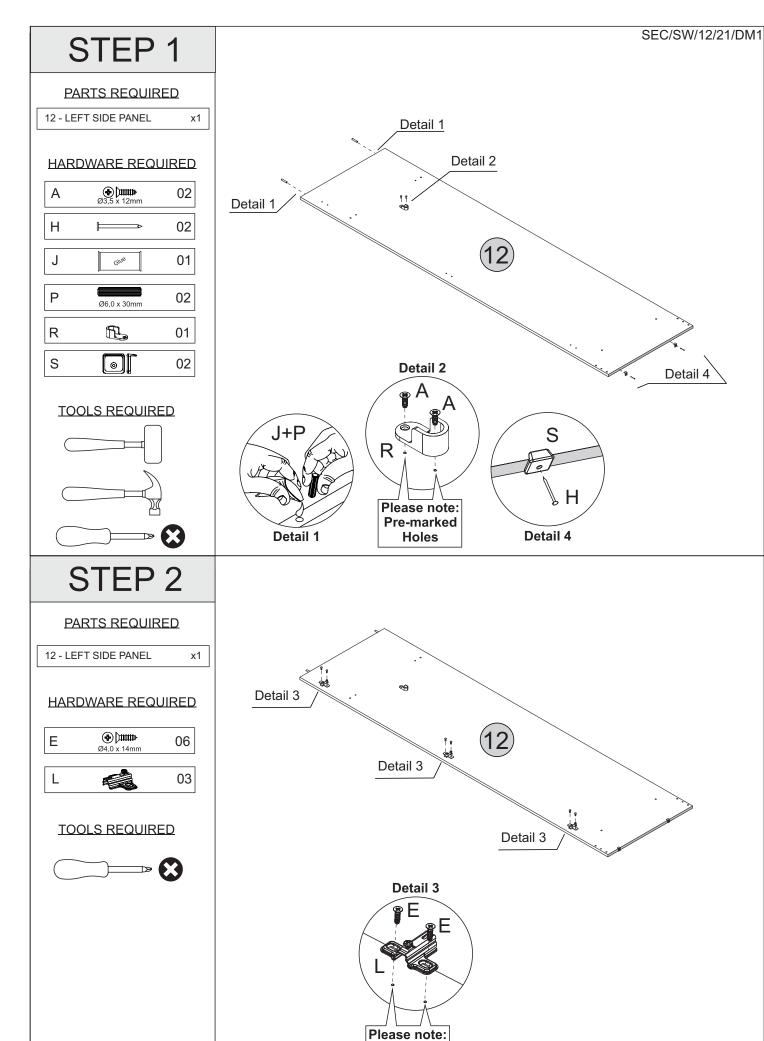

Pre-marked Holes

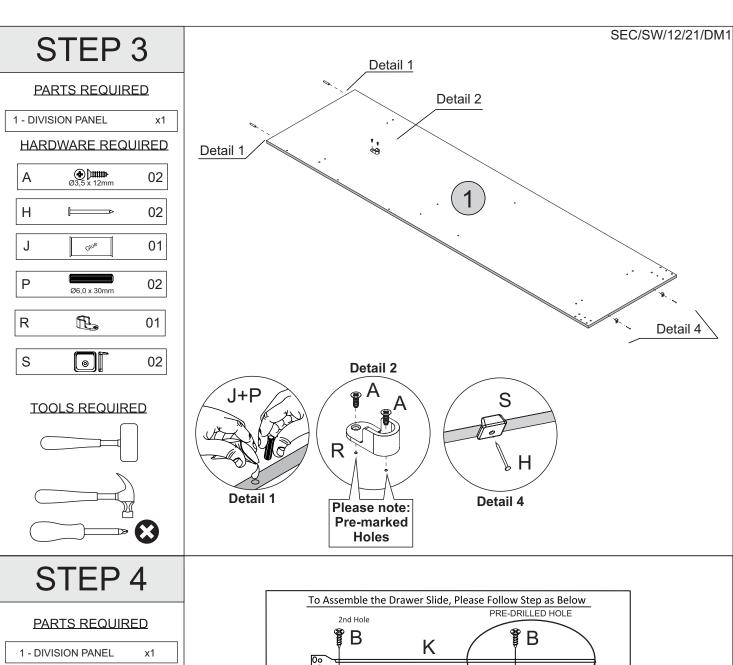



HARDWARE REQUIRED


⊕ ↓ ↓ ↓ ↓ Ø6,0 x 8mm В 04

Left 02 Κ


TOOLS REQUIRED




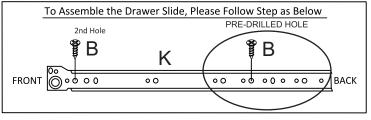

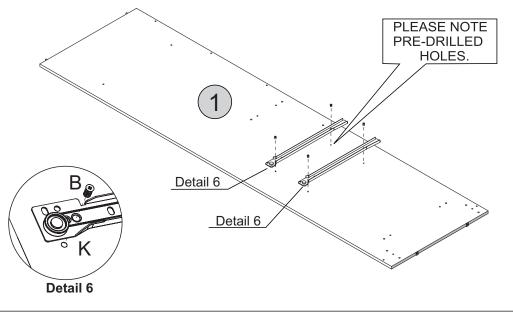


Detail 4

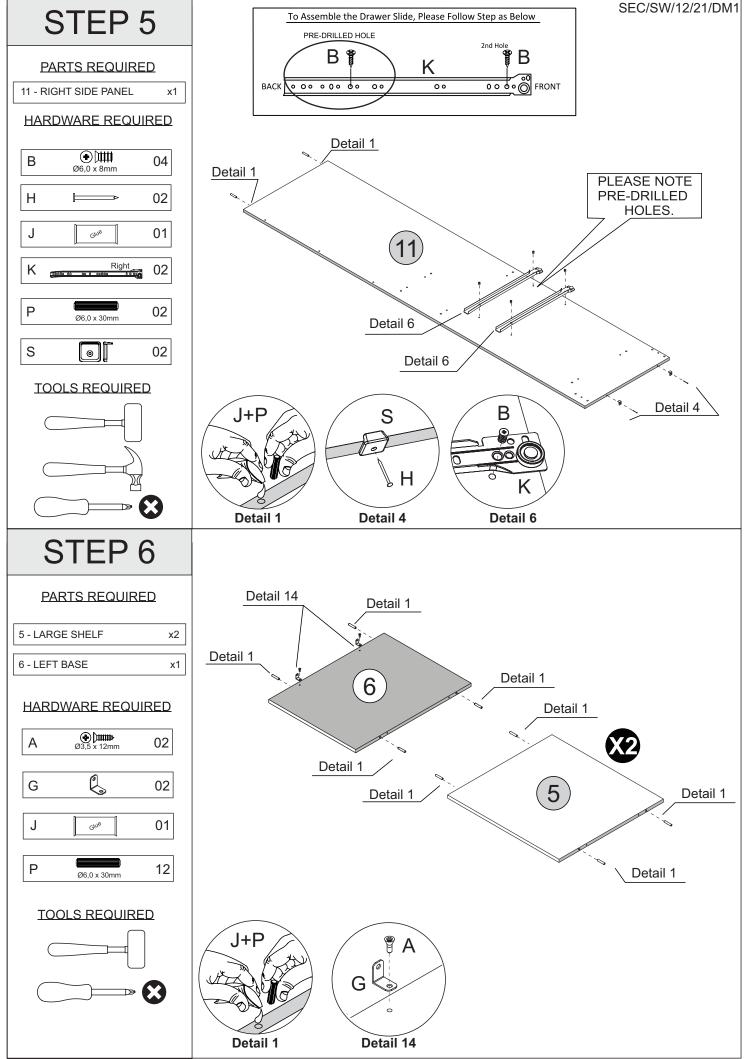


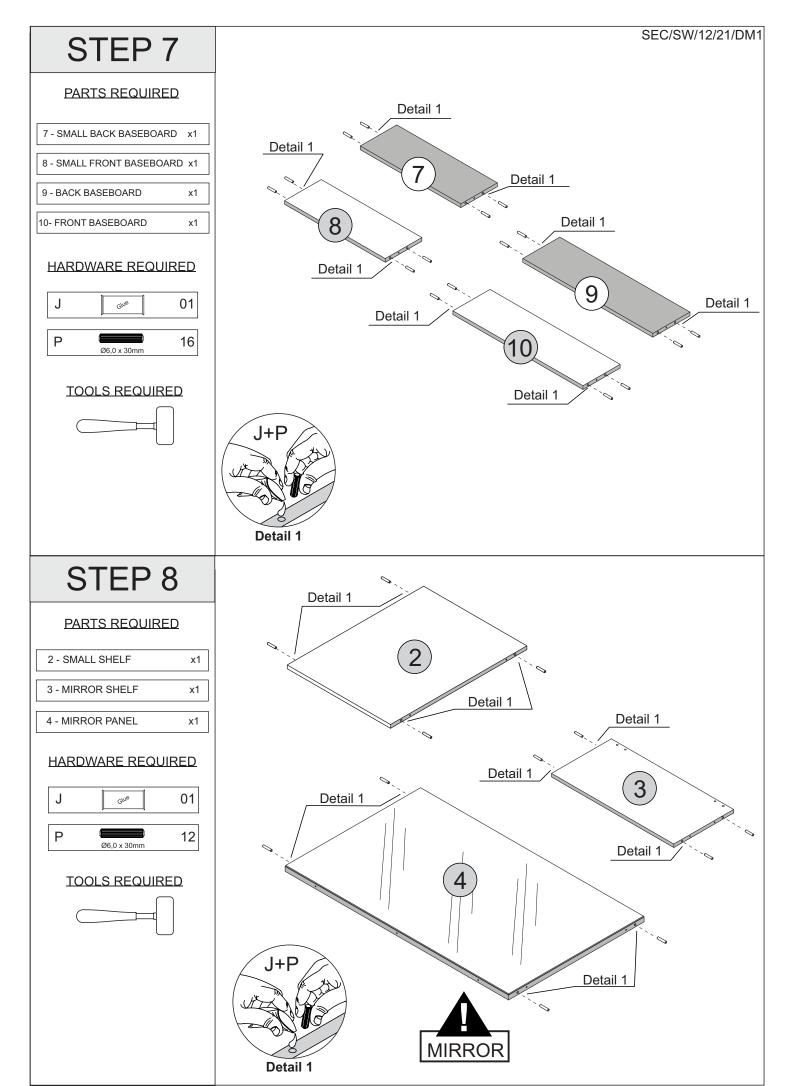



PARTS REQUIRED


HARDWARE REQUIRED







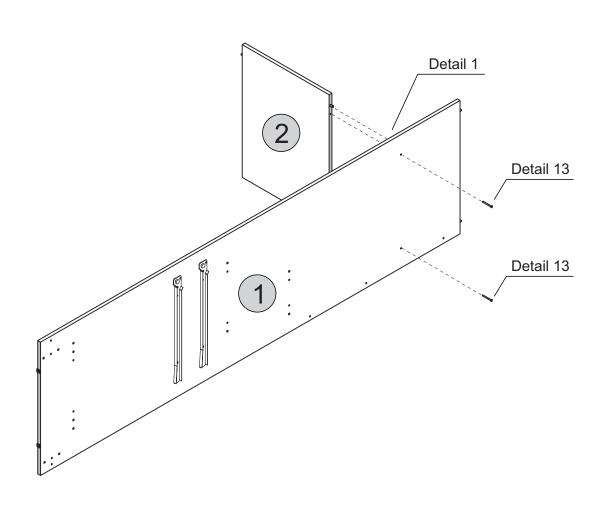


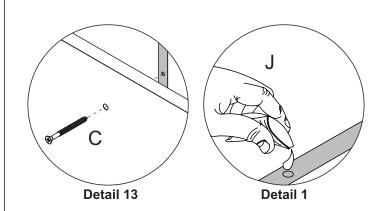



PARTS REQUIRED


HARDWARE REQUIRED








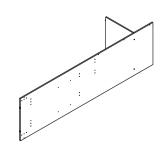

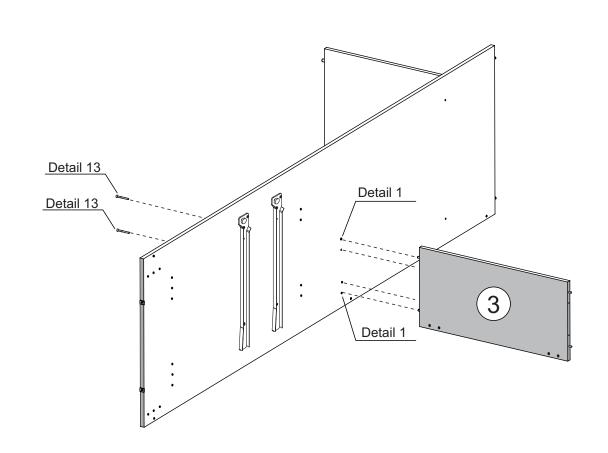


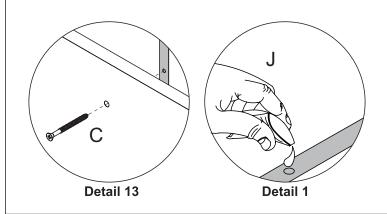



PARTS REQUIRED





TOOLS REQUIRED

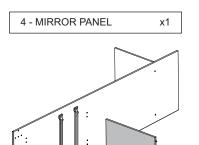





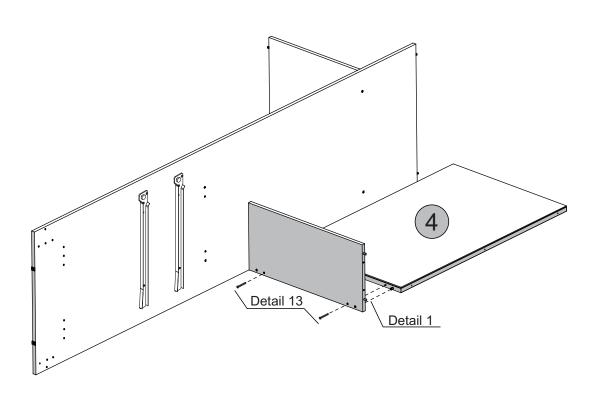

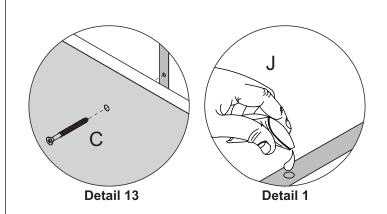


PARTS REQUIRED


HARDWARE REQUIRED


TOOLS REQUIRED




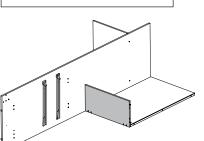

С	⊕ □ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■	04
	8	01



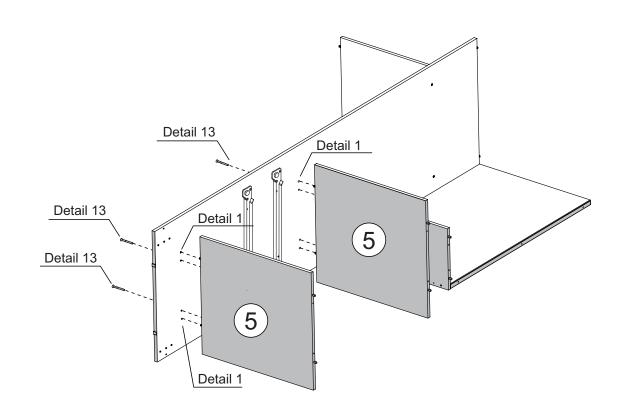


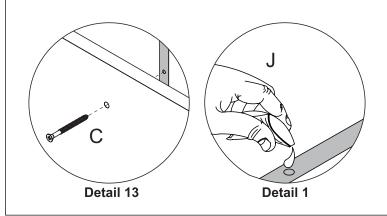

PARTS REQUIRED


HARDWARE REQUIRED


TOOLS REQUIRED



Α	Ø3,5 x 12mm	02
	one.	01



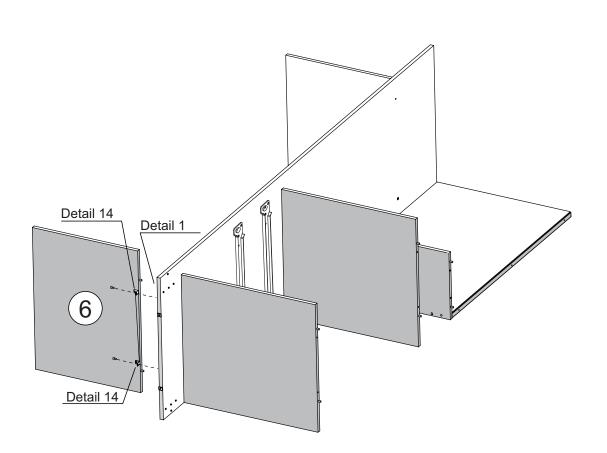


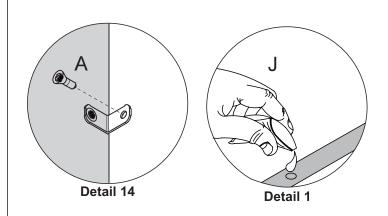


PARTS REQUIRED


7 - SMALL BACK BASEBOARD x1


8 - SMALL FRONT BASEBOARD x1

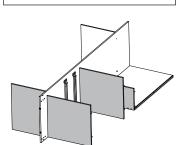

HARDWARE REQUIRED







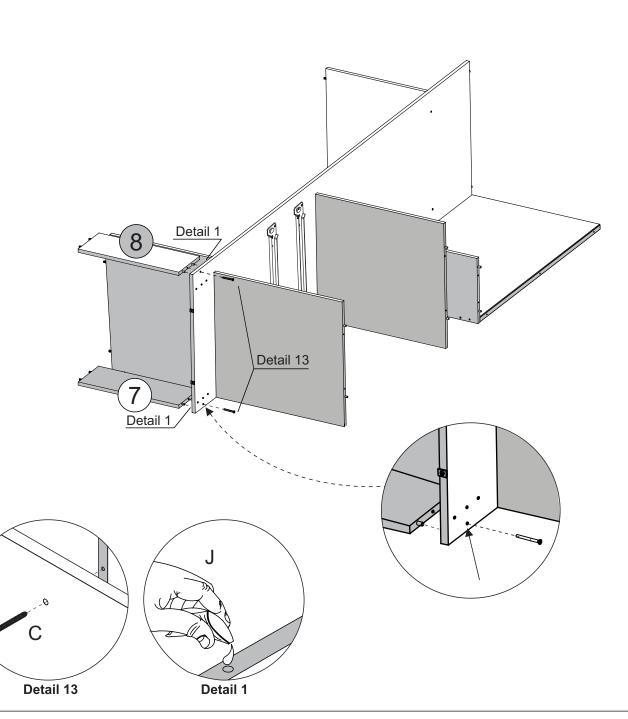

PARTS REQUIRED


HARDWARE REQUIRED




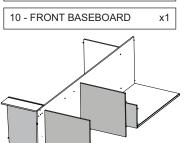

С	⊕ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	02
.1	GIVE	01



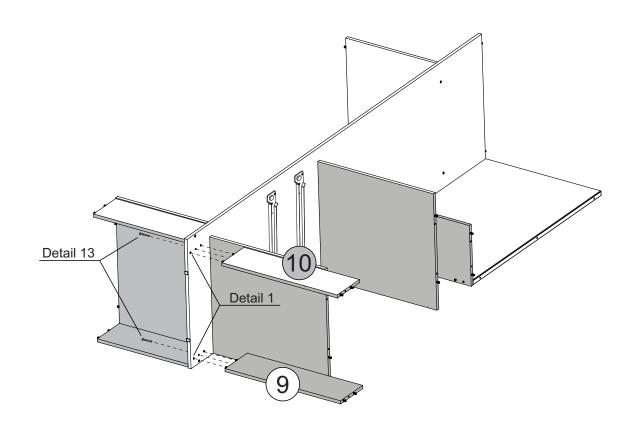

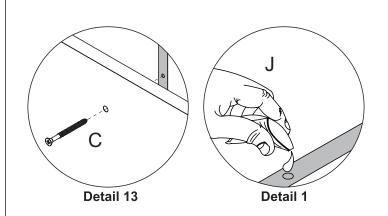



PARTS REQUIRED


HARDWARE REQUIRED


TOOLS REQUIRED








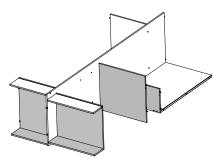

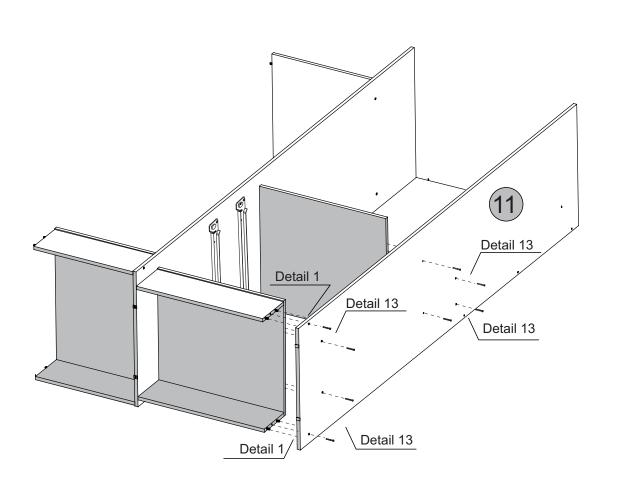

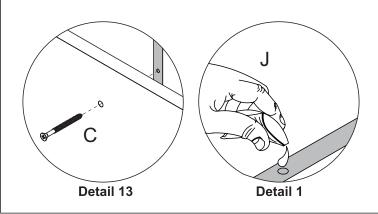



PARTS REQUIRED


HARDWARE REQUIRED


TOOLS REQUIRED







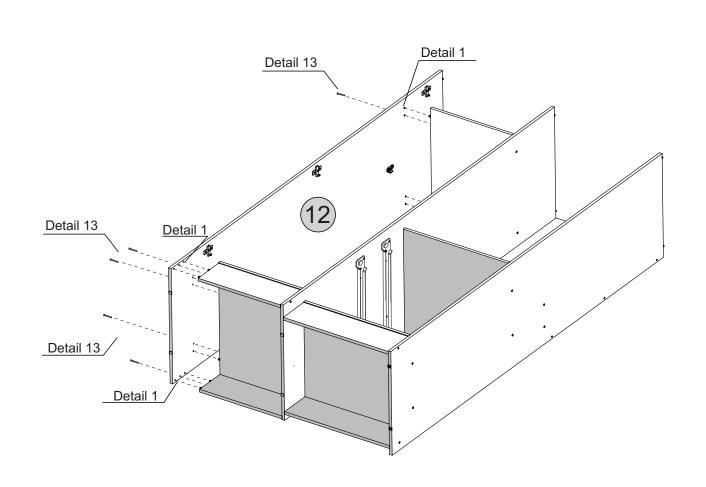

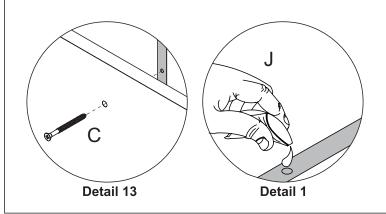


PARTS REQUIRED


HARDWARE REQUIRED


TOOLS REQUIRED




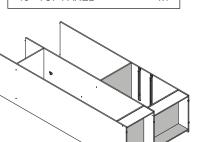

С	⊕	06
J	Clne	01



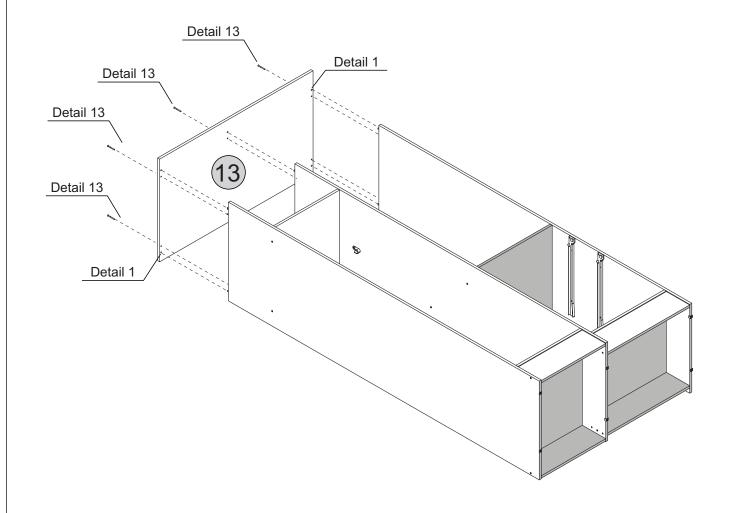


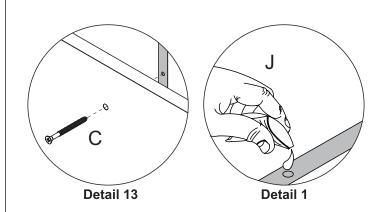

PARTS REQUIRED


HARDWARE REQUIRED


TOOLS REQUIRED

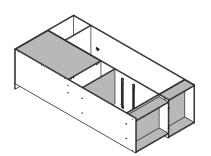

С	⊕	08
J	GIII ₆	01



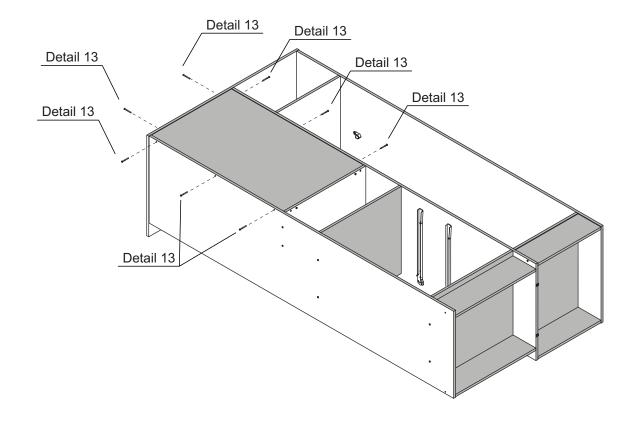


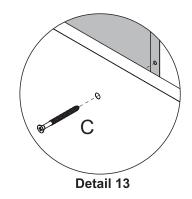


PARTS REQUIRED


14 - LARGE BACK PANEL x1 15 - SMALL BACK PANEL


x1

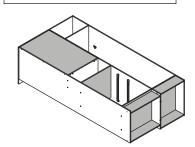



HARDWARE REQUIRED TOOLS REQUIRED










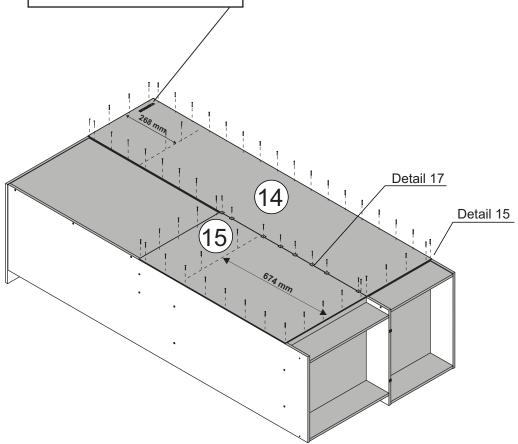


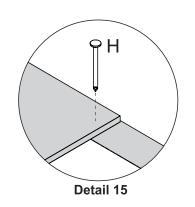

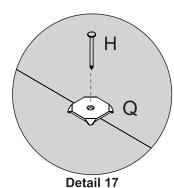


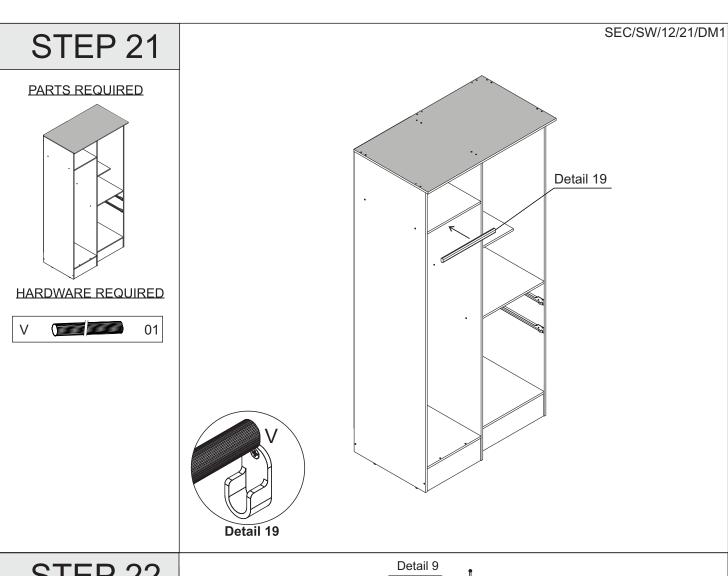

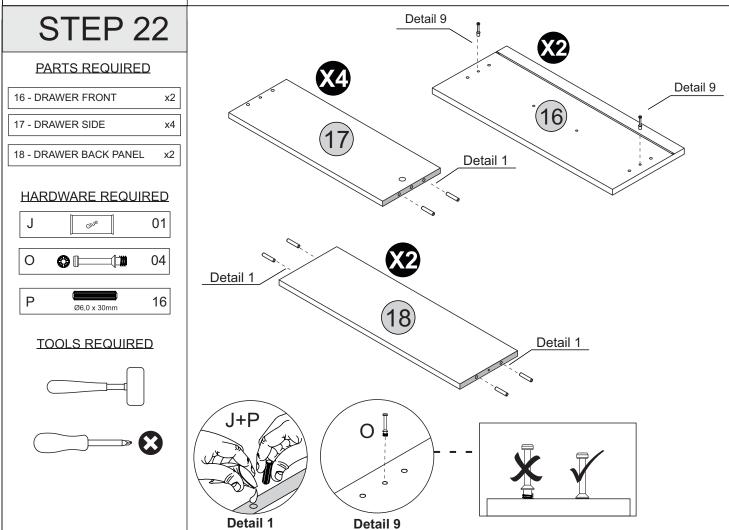

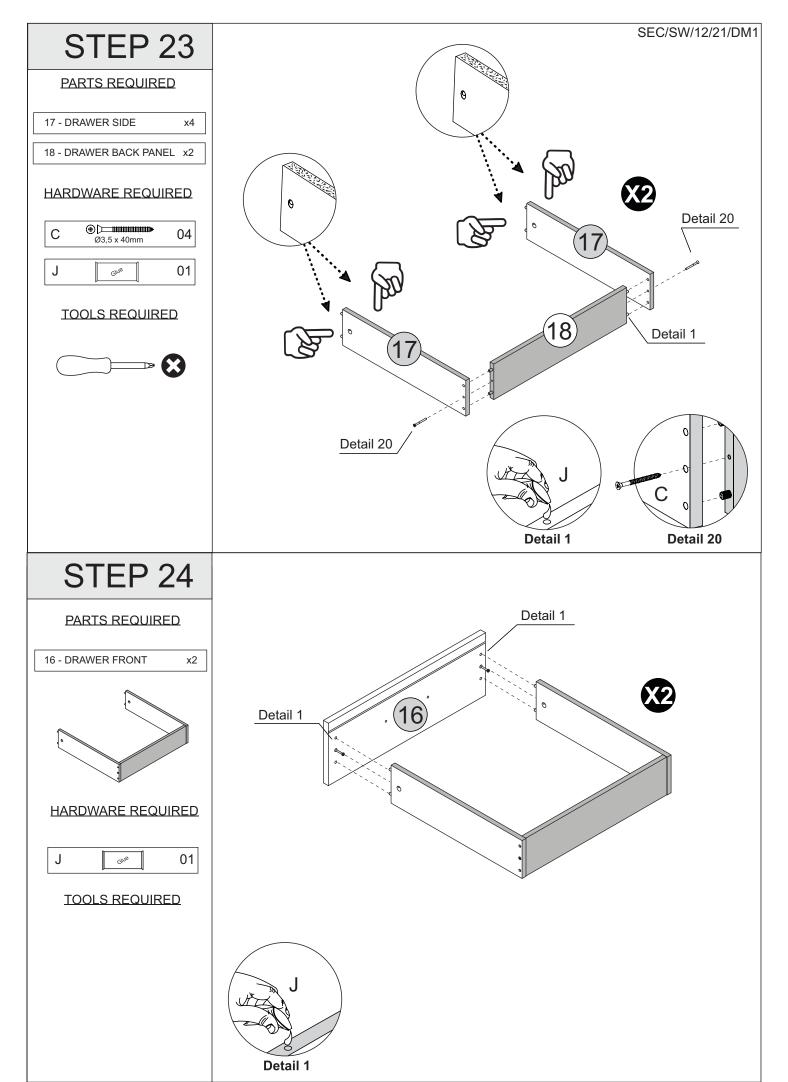


PARTS REQUIRED

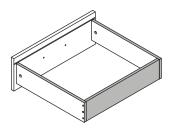



HARDWARE REQUIRED



TOOLS REQUIRED



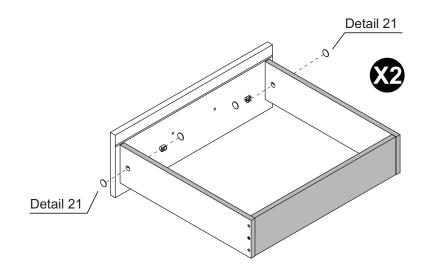


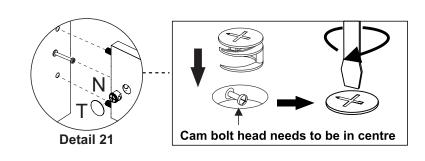

STEP 26

PARTS REQUIRED

19 - DRAWER BOTTOM x2

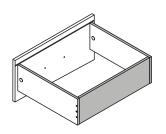



HARDWARE REQUIRED





TOOLS REQUIRED



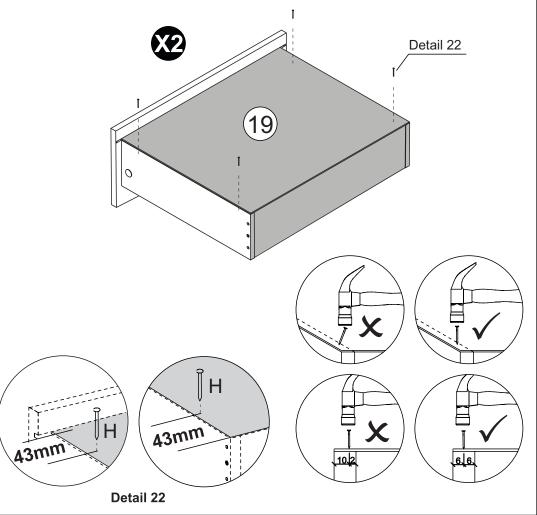

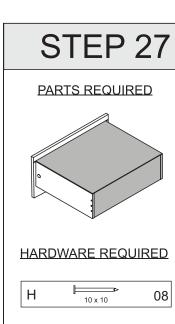


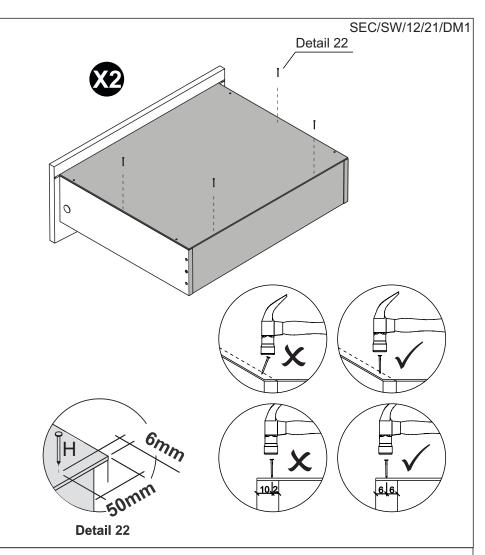










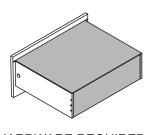


HARDWARE REQUIRED





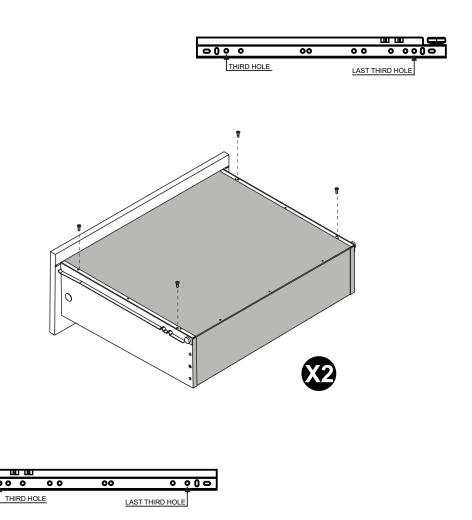

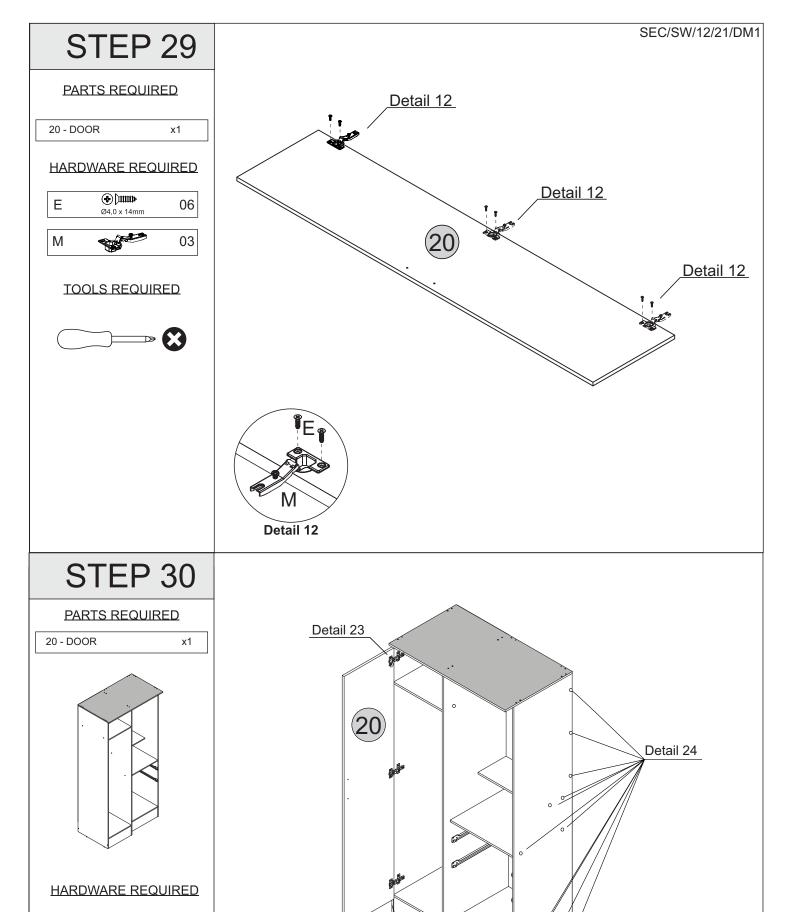

Detail 24


Т

27

Detail 24


TOOLS REQUIRED


Detail 23

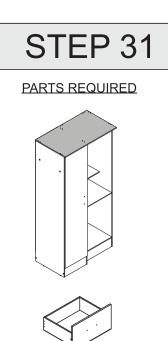




TOOLS REQUIRED



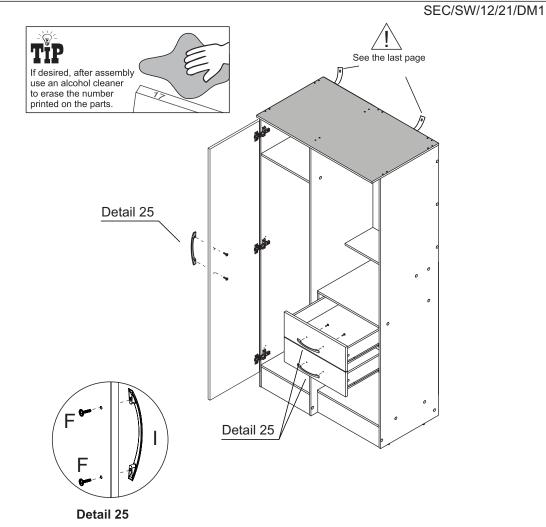


STEP 32


PARTS REQUIRED




HARDWARE REQUIRED







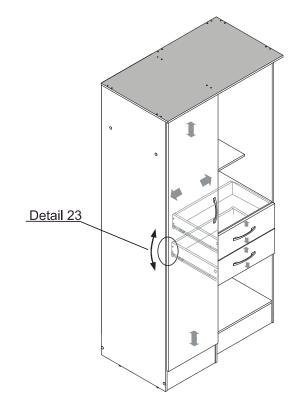

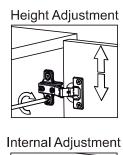


Internal Adjustment

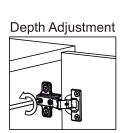



Drawer Adjustment Drawer Lock





Detail 23

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

