

Assembly Instructions

Thank you for purchasing a **Birlea** product.

For a chance to win a Love 2 Shop voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture and using the hashtag**#ShareYourStyle** and **#Birlea**. One winner will be selected at random each month.

To view our full terms and conditions please visit www.birlea.com

Are you happy with your purchase?

- **Yes**: That's great, we would love to hear more from you. Please leave us a review on our social media channels or Trustpilot. Your feedback will be greatly appreciated
- No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer you purchased the item from. We will work with the retailer to resolve your issue as quickly as possible.

() © C Y D Ø

LOTTIE Ottoman Bed - Double

Assembly Instructions

Before you begin...

- 1. Please check you have received the correct product.
- 2. Unpack all boxes and lay out each component on the floor.
- 3. Check your product for any damage that may be immediately obvious. If damage is identified, please contact your retailer.
- 4. Please read through these instructions thoroughly to ensure you have constructed your bed correctly.

For Care and Maintenance of your bed...

- Always assemble in your desired room of use.
- Always check all screws and fixings periodically to ensure they are still secure.
- Do not push or pull this bed as it will cause damage.
- Always lift this bed with a second person to prevent damage or injury.
- Keep any sharp objects away from this bed Frame.

For your Health and Safety...

- Please don't not jump on this Bed.
- Do not use this bed if you find missing, damaged or worn parts. Please contact your retailer.
- Please do not use this bed until you have fully secured all fixings.
- Please keep all small components away from children.
- Please ensure this bed is on an even, level surface.


Also...

If your desired room of choice has a non-carpeted surface please ensure that you use some form of anti-slip protection and do not place directly on the wooden floor. This will prevent the bed from moving and therefore collapsing which will void your guarantee..



() 🖸 C 🎽 🗅 🕅




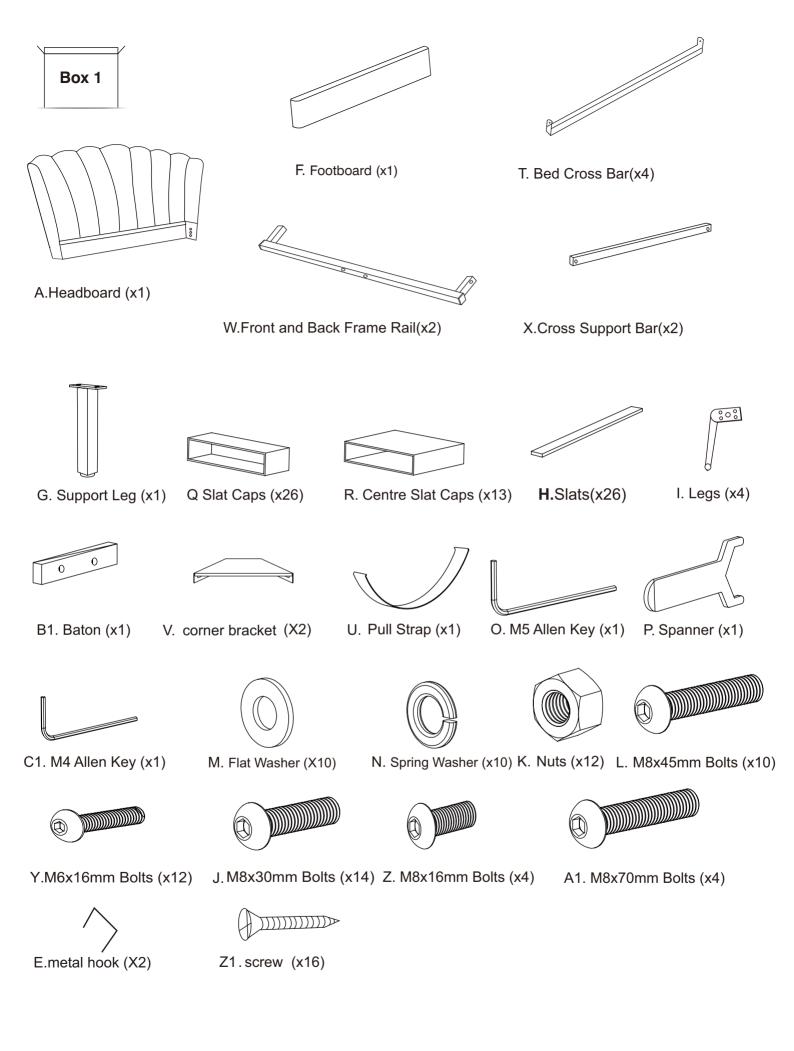

() 🖸 G 🄰 🗖 🖗


Birlea Suppliers of inspiration



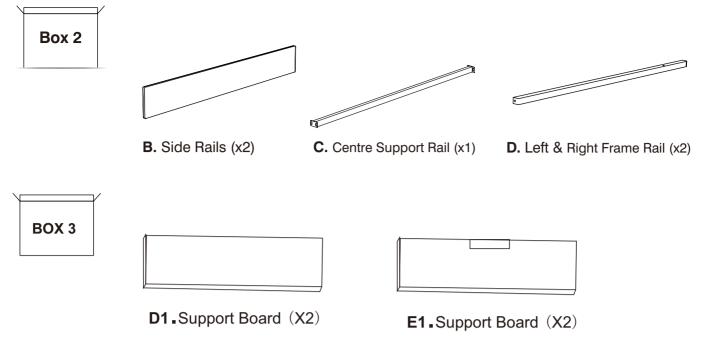

Suppliers of inspiration


Unpack all components from the boxes and check you are not missing anything. Please check these against the list on page 3 & 4. Should you identify any missing components, please contact the retailer you purchased the bed from.

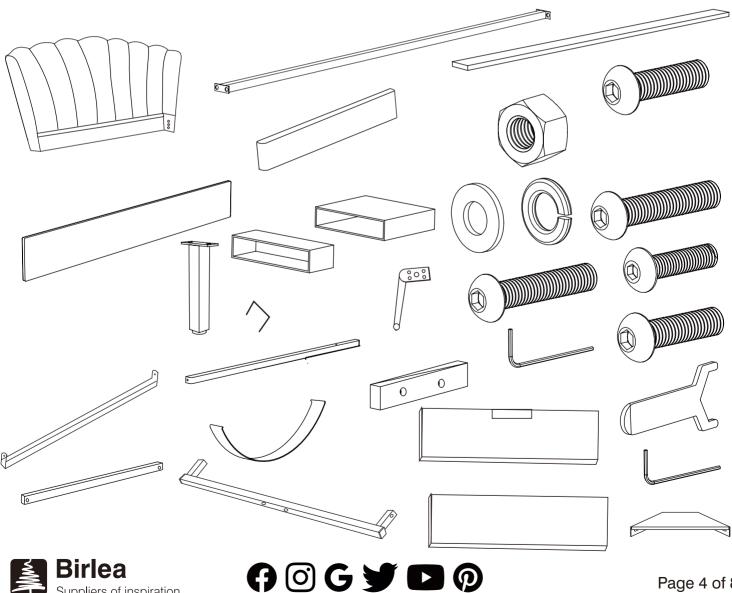

Page 4 of 8


Connect 2 legs (I) to 1 headboard (A) with 2 M8 both(J) and 8 screw(Z1), then connect 2 legs (I) to 1 footboard (F) with 2 M8 screws and 8 screw.

Please do not use any power tools for this assembly as it will void your guarantee.

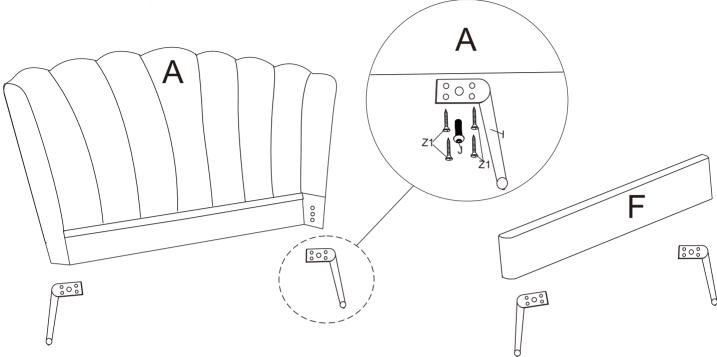

Step 3

Attach 2x Side Rails(B) to 1x Headboard(A) and 1x Footboard(F) using 10x M8x30mm Bolt (J),10x Spring Washer (N), 10x Flat Washer (M) and 1x M5 Allen Key(O).

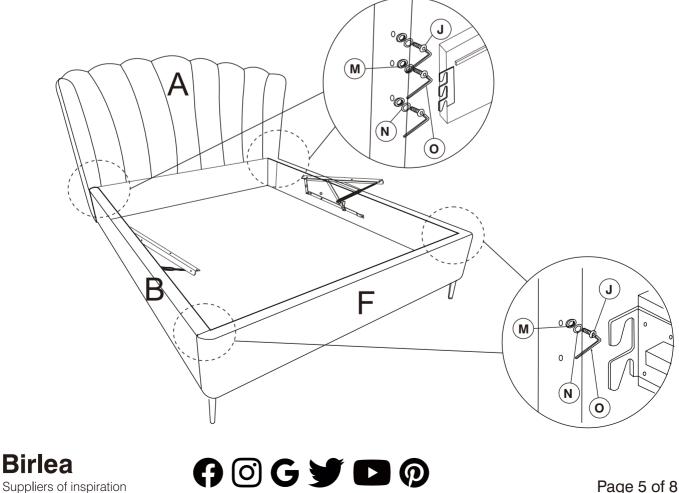


Step 4:

To attach the corner bracket (V)to the footboard(F) and side rails(B)you will need to use hardware parts 4X M6x16mm Bolts (Y) and the M4 allen key(C1).


To fix the 4 X bed cross bar(T) to the side rails ,you will need to use hardware 8X M6x16mm Bolts (Y) and the M4 allen key(C1).

DO NOT use any power tools as this may damage the bed frame and will invalidate any claims.

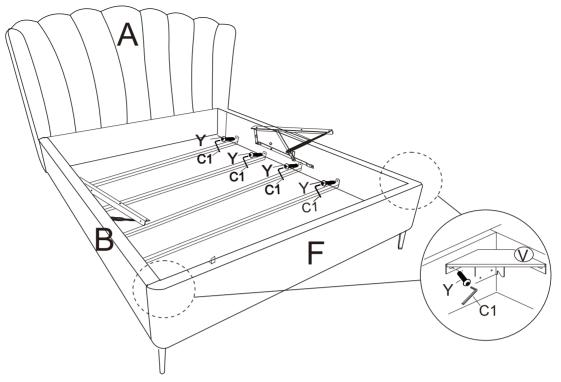

Step 5:

Fix Support Boards 2X(D1)and 2X(E1) to above the Bed Cross Bars (T)

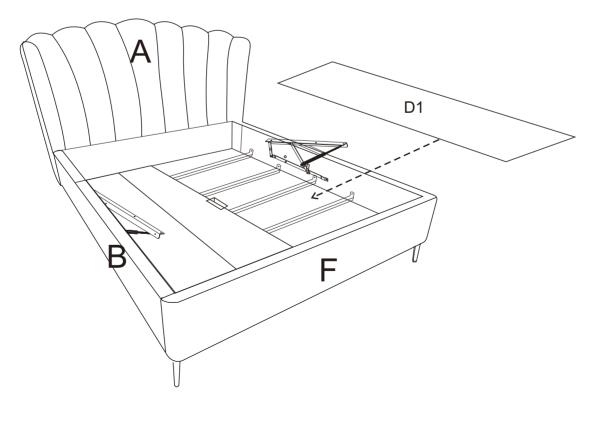

() 🖸 C 🎽 🗖 🖗



To attach the front frame rail(W)and back frame rail (W) to the left frame rail (D)and right frame rail(D),


you will need hardware parts 4 X M8x16mm Bolts (Z) with the M5 allen key(O).


To attach the centre support bar (C) to the front frame rail(W)and back frame rail(W),you will need hardware parts 4X M8x45mm Bolts(L) and 4X Nuts (K) with the M5 allen key(O) and the spanner(P).

To attach the support leg (G) to the centre support bar(C), you will need hardware parts 2X M8x45mm Bolts(L) and 2X Nuts (K) with the M5 allen key(O) and the spanner(P).

Insert the metal hook(E) to the front frame rail(W).

DO NOT use any power tools, this may damage the bed frame and will invalidate any claims.

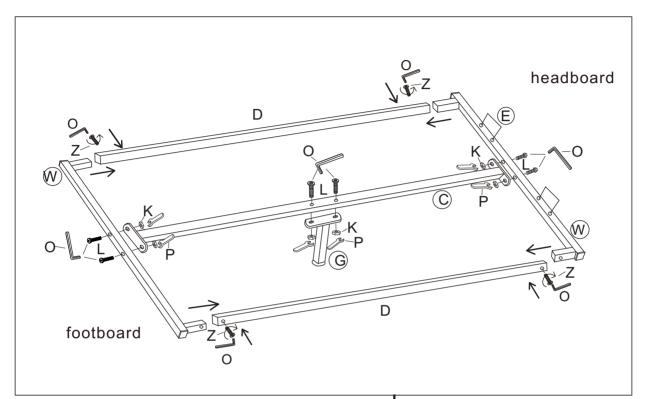

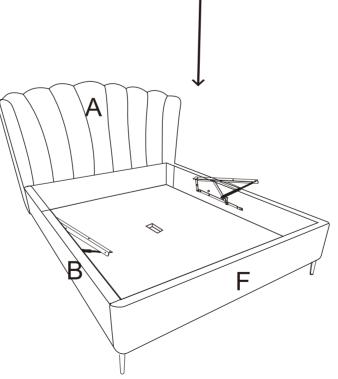


() 🖸 () 🖌 🗖 🧿



To attach the metal frame(W/C/D) and cross support bar(X)to the gas lift pre-fixed to the side rails, you will need to use hardware parts 4X M8x70mm Bolts(A1), 2 XM8x45mm Bolts(L) and 6x Nuts (K) with the M5 allen key(O) and the spanner(P).

To attach the Baton (B1)TO the footboard(F) you will need to use hardware parts 2xM8x45mm Bolts (L) with the M5 allen key(O) .

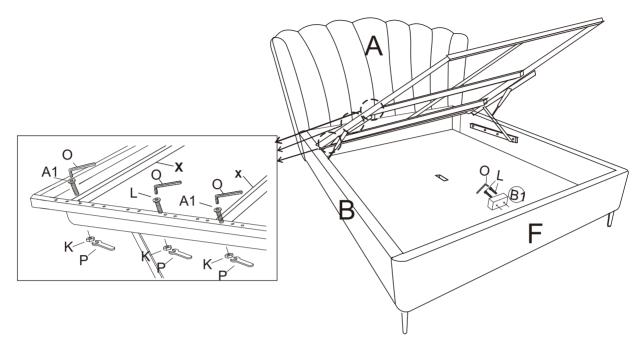

Step 8

Suppliers of inspiration

Slot each Slat Cap (Q) onto the end of each Slat (H), then slot each Slat (H) into each Centre Slat Cap (R). Press firmly into each slat rail located on the inside of the side rails (B) and then into the Centre Support Rail (C).

