



Ottoman Assembly Instructions for 4ft, 4ft6, 5ft and 6ft

Half, Side and Front Opening Divan Bases

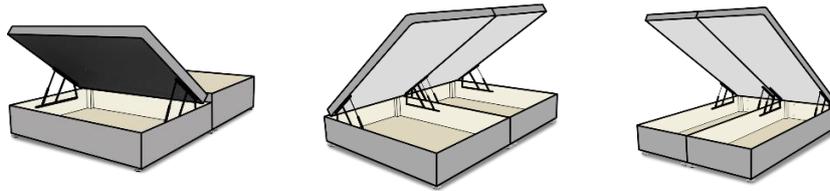



- Remove all polythene / cardboard corners from your new ottoman divan base and dispose of carefully for recycling.
- Turn both halves of the base onto their sides and insert the castors / glides into the corresponding holes on each corner of the base.
- Gently knock them into place using a rubber mallet. If you have difficulty doing this, insert a small screwdriver into the locator hole to clear the blockage.

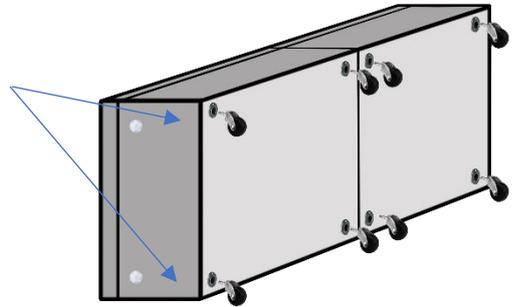

-  Once complete, carefully place the base onto its castors / glides for the piston arms to be attached. As a safety feature, the piston arms are only attached to one side when delivered.
Now, lift the ottoman lid, hold up each of the arms and slide the piston stems onto the threaded axles and fit the connecting nuts. Do not over tighten the connecting nuts as they only require to be finger tight.

- The base will come in 2 halves with u-clips provided to join them together.

With the half opening ottoman, stand both halves on their sides and place the u-clips over the wooden straps on the underside where 2 halves meet.

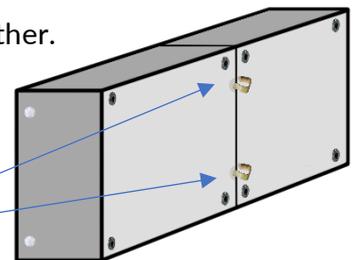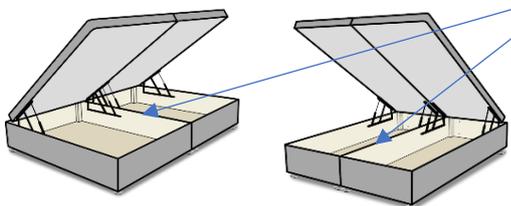

With the side and front opening divan bases, place the u-clips onto the top rails where the 2 halves meet.

- With both top lids fully open, use the bolt provided to hold the 2 lid risers together.



Insert the headboard bolts into the locator holes at the headend of the base by piercing the fabric where marked.

