


CORONA 3 DRAWER CHEST

ASSEMBLY INSTRUCTIONS

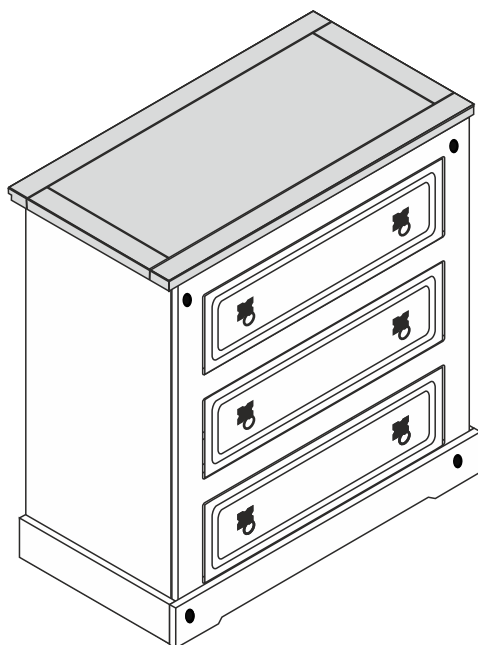

FOR DOMESTIC USE ONLY



IMPORTANT

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible.
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not place this product next to a radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a duster, and do not use detergents of any kind. However, the surface will need to be retreated from time to time. This can be done by using block wax (unperfumed) and rubbing it over the whole item.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

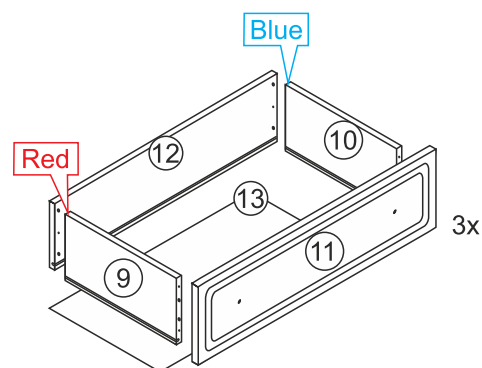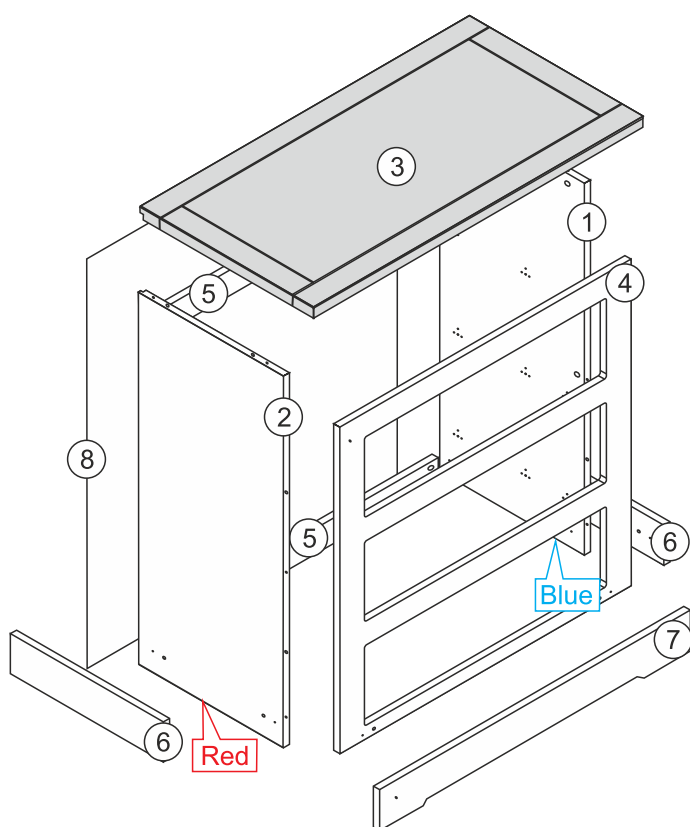

* Use of power tools to assemble this product will invalidate any claim and damage this product making it unsafe !!!
* Please assemble on a clean soft surface to avoid damage.
























* Please check contents and read the instructions before commencing assembly.
* Assemble this product following the enclosed instructions carefully.
* Please take care to avoid damaging panels during assembly.

PARTS LIST

1	Right Side Panel (Blue)	x1
2	Left Side Panel (Red)	x1
3	Top Panel	x1
4	Front Frame	x1
5	Back Crossbeam	x2
6	Side Plinth	x2
7	Front Plinth	x1



8	Back Panel	x1
9	Left Drawer Side (Red)	x3
10	Right Drawer Side (Blue)	x3
11	Drawer Front	x3
12	Drawer Back	x3
13	Drawer Base	x3

Fittings List

<div>A</div> <div></div> <div>A- Cam Bolt (22x)</div>	<div>B</div> <div></div> <div>B- Cam Nut (26x)</div>	<div>C</div> <div></div> <div>C- Dowel Ø8x30 (44x)</div>	<div>D</div> <div></div> <div>D- Hole Plugs White (12x)</div>
<div>E</div> <div></div> <div>E- Drawer Runner 400mm (3xSet)</div>	<div>F</div> <div></div> <div>F- Drawer Spacer (18x)</div>	<div>G</div> <div></div> <div>G- Plastic Foot (6x)</div>	<div>H</div> <div></div> <div>H- Blanking Plug Screw Ø6x12 (18x)</div>
<div>I</div> <div></div> <div>I- Flat Head Screw Ø3,5 x 30mm (7x)</div>	<div>J</div> <div></div> <div>J- Flat Head Screw 3 x 12 mm(69x)</div>	<div>K</div> <div></div> <div>K- Black Handle W/ Bolt (6x)</div>	<div>L</div> <div></div> <div>L- Nail 10 x 10mm (18x)</div>
<div>M</div> <div></div> <div>M- Superb Bolt (6x)</div>	<div>N</div> <div></div> <div>N - Black Stud (4x)</div>	<div>O</div> <div></div> <div>Glue (2x)</div>	<div>P</div> <div></div> <div>P - Allen Key 3mm (1x)</div>
<div>Q</div> <div></div> <div>Q- Cam Bolt To Fix The Top (4x)</div>	<div>R</div> <div></div> <div>Strap (Anti-Tip Kit) (1x)</div>	<div>S</div> <div></div> <div>Wood Screw (Anti-Tip Kit) 3,5 x 30 mm (1x)</div>	
<div>T</div> <div></div> <div>Washer (Anti-Tip Kit) (2x)</div>	<div></div> <div>USE</div>		

TIPS FOR FITTING CAM-LOCKS

WHEN FITTING CAM-LOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM BOLT
TURN CLOCKWISE UNTIL SECURE

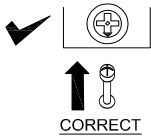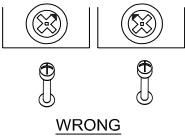 **CORRECT**
 **WRONG**

CAMBOLT
Tighten until shoulder is flush
with panel. Do not overtighten
or undertighten (see example
below)




Cam bolt head needs to be in centre

Shoulder

Panel

Panel



Pre-Assembly

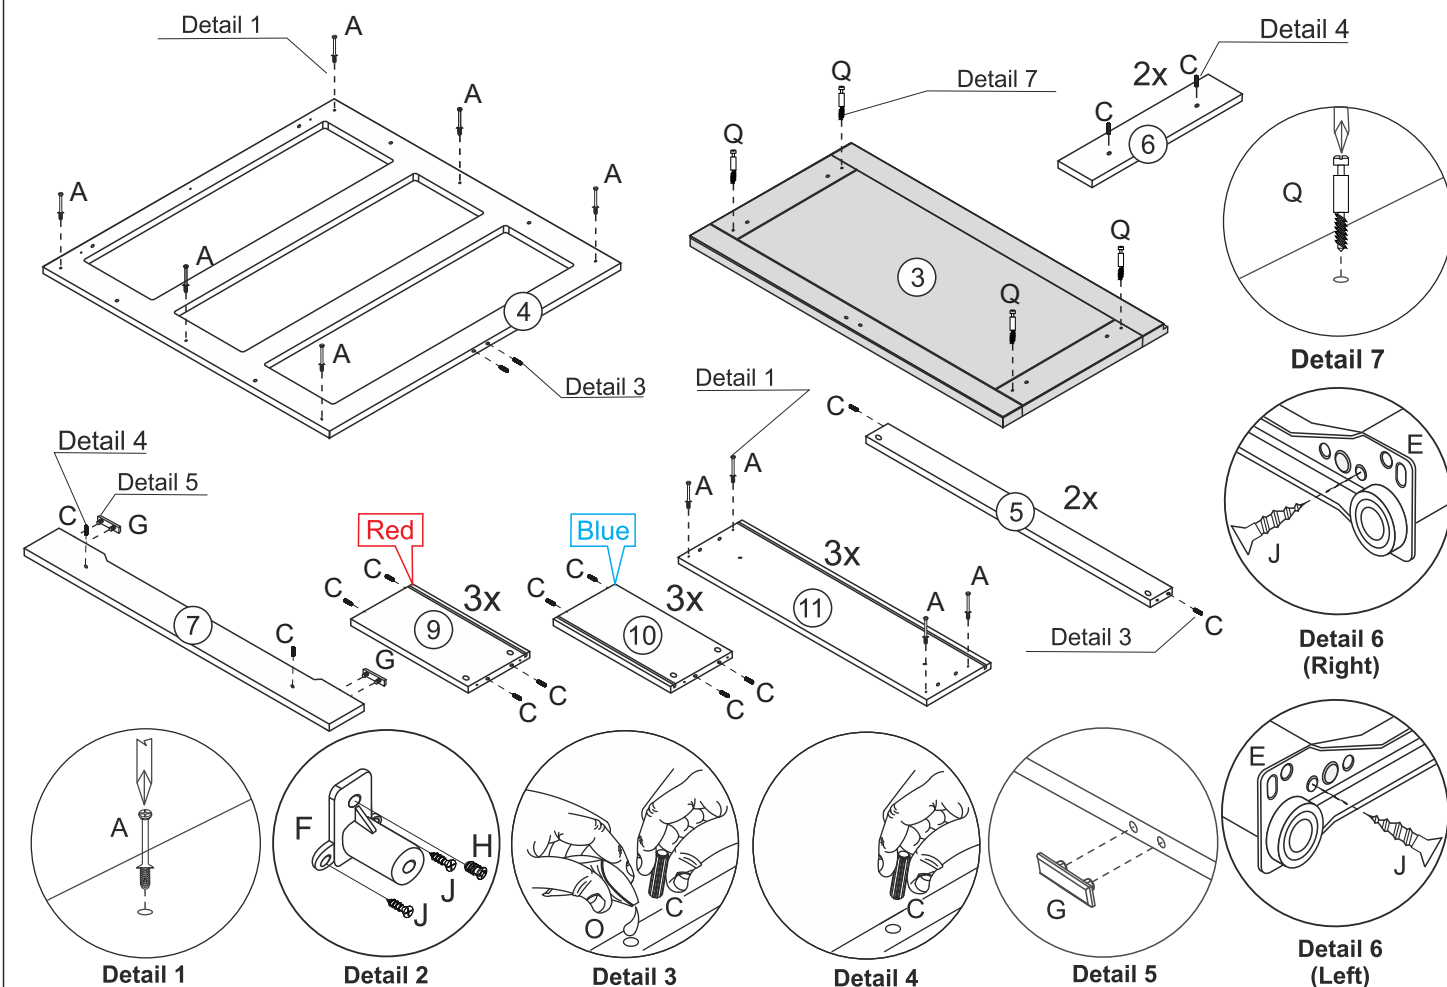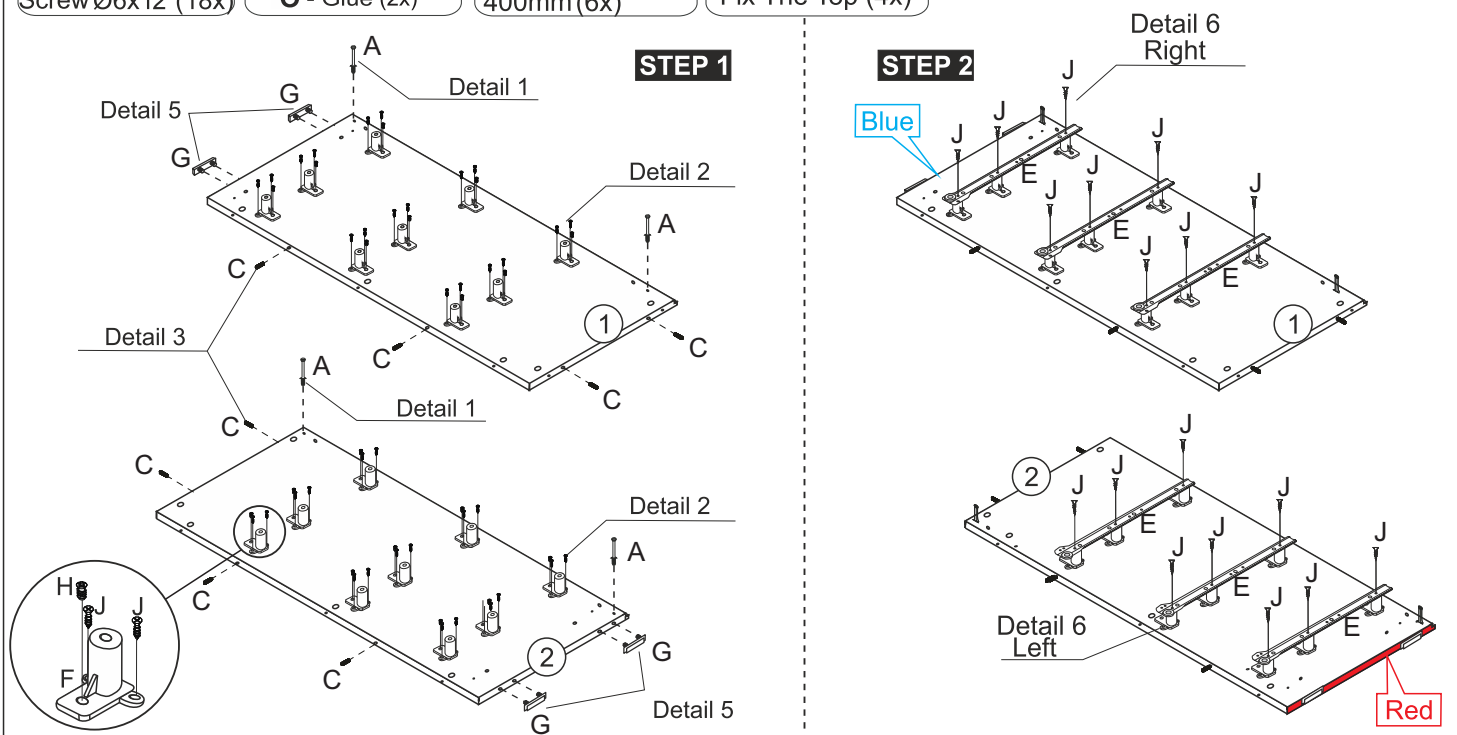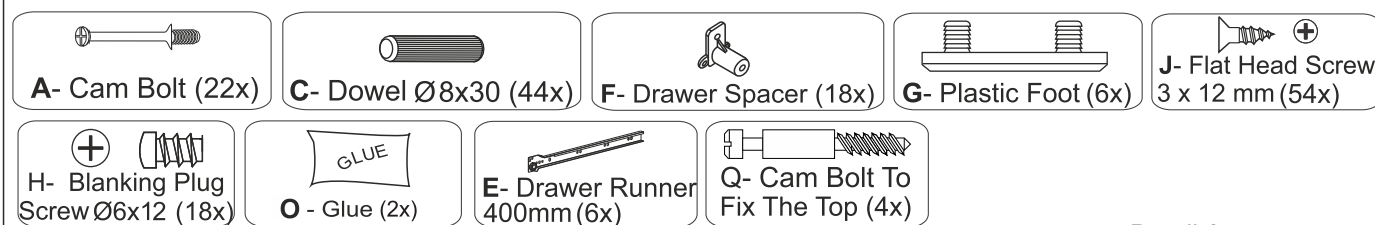

1



B- Cam Nut (6x)

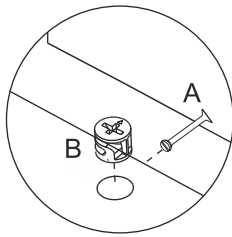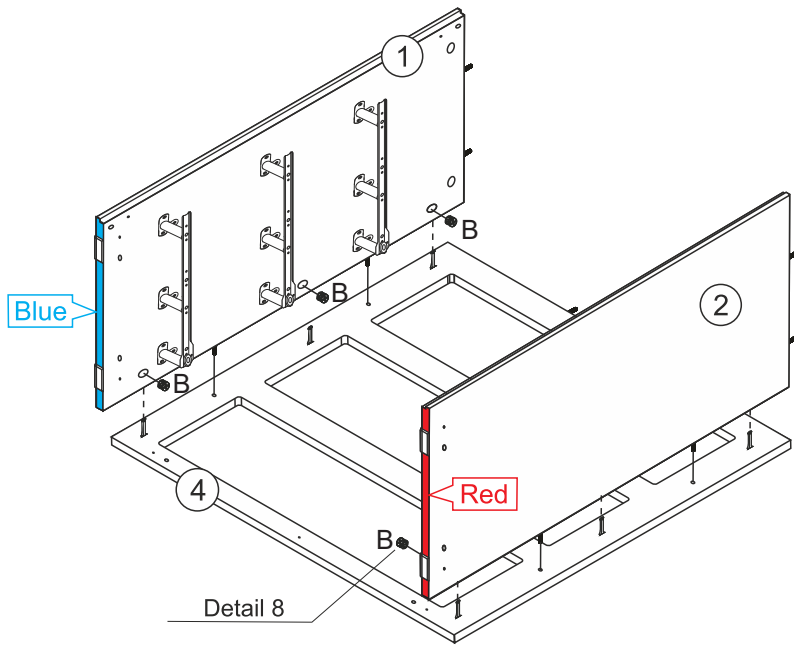

Detail 8



Fit and turn the cam clockwise

2



B- Cam Nut (4x)

Please pay attention to gently part the side panels when inserting and attaching parts '5'

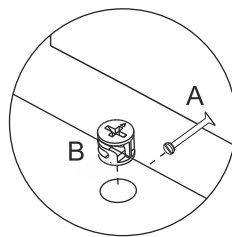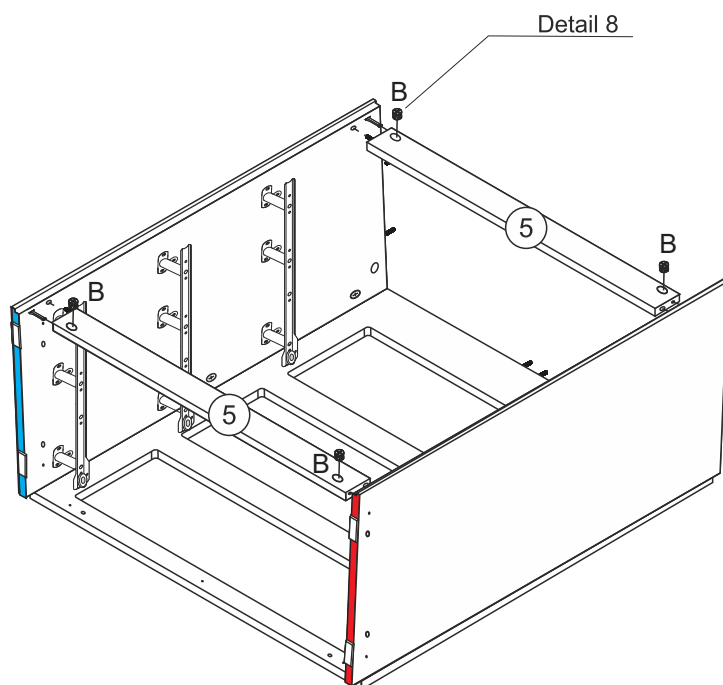



Detail 8

Fit and turn the cam clockwise

3



B- Cam Nut (4x)

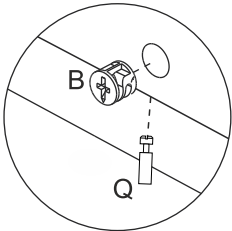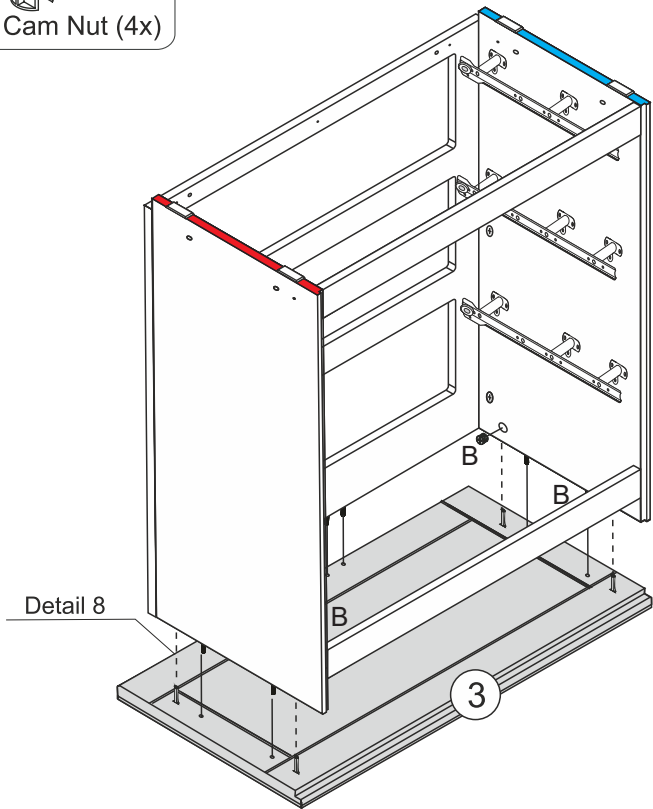

Detail 8

Fit and turn the
cam clockwise


4




L- Nail 10 x 10mm
(18x)



J- Flat Head Screw
3 x 12 mm(3x)

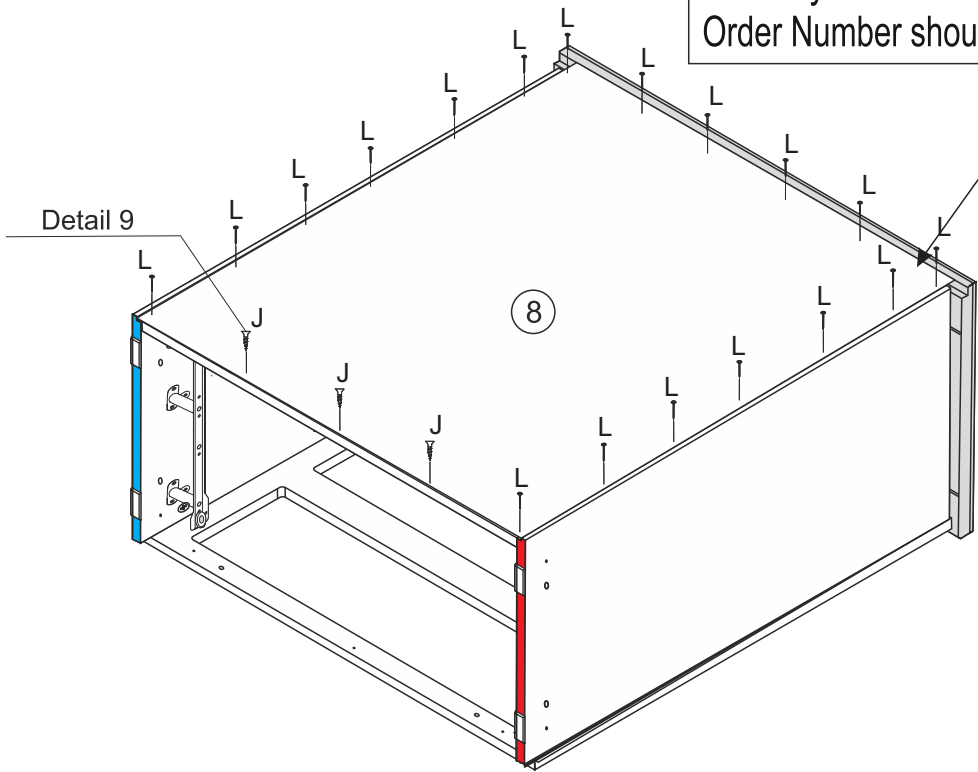


* For your future reference
Order Number should be here

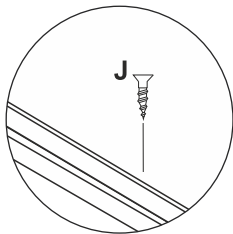


Detail 9




B- Cam Nut (12x)

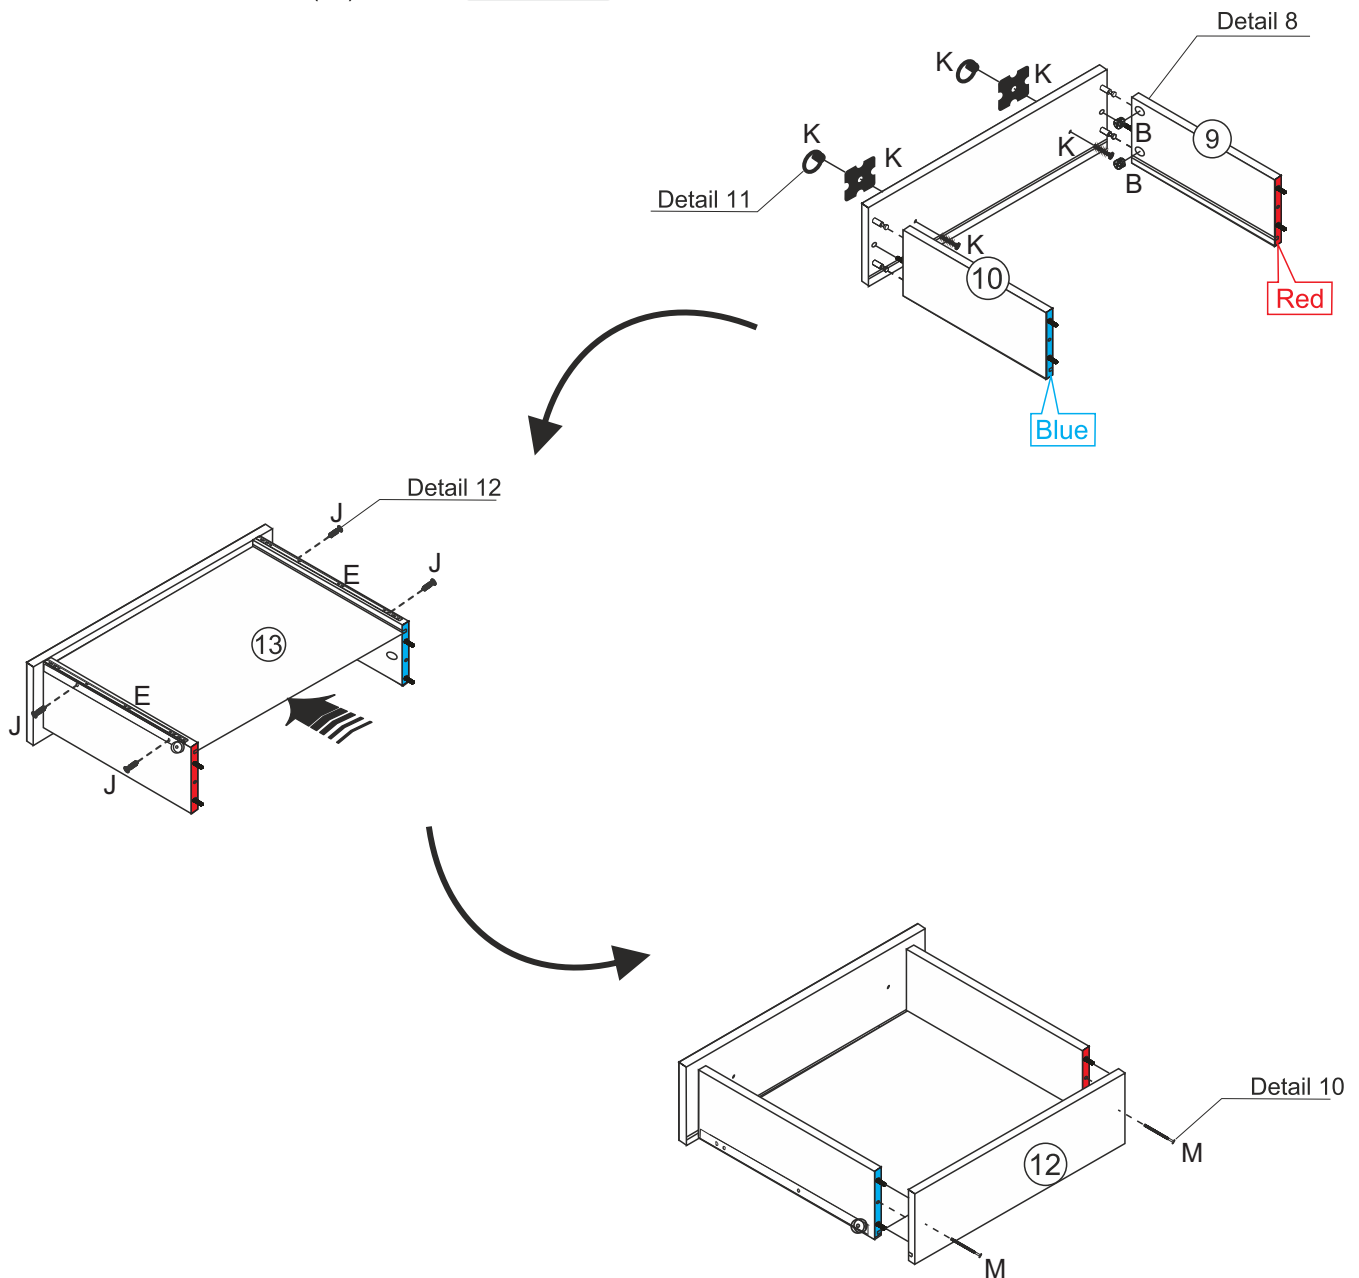D- Hole Plugs
White (12x)E- Drawer Runner
300mm (6x)M- Superb Bolt
(6x)J- Flat Head Screw
3 x 12mm (12x)K- Black Handle
W/ Bolt (6x)P- Allen Key
3mm (1x)


***REPEAT THE SAME STEPS FOR ALL DRAWERS**

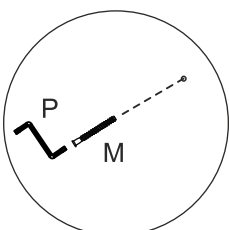


Detail 10

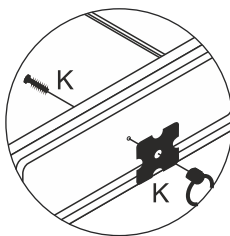

Detail 11

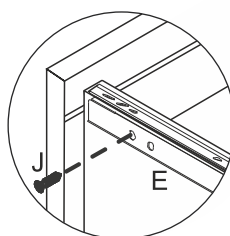

Detail 12



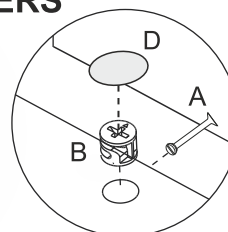


Detail 8


Fit and turn the
cam clockwise

6

 
I- Flat Head Screw
Ø3,5 x 30mm (7x)

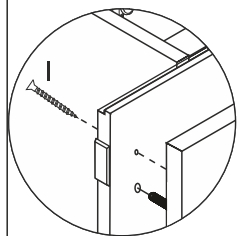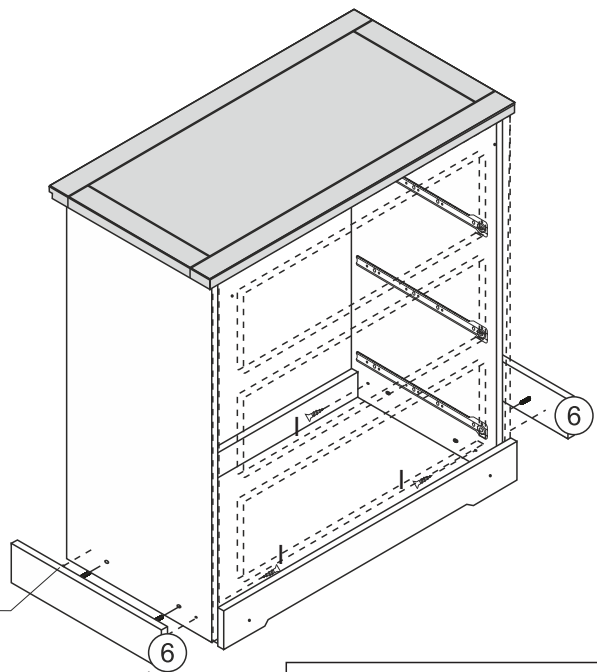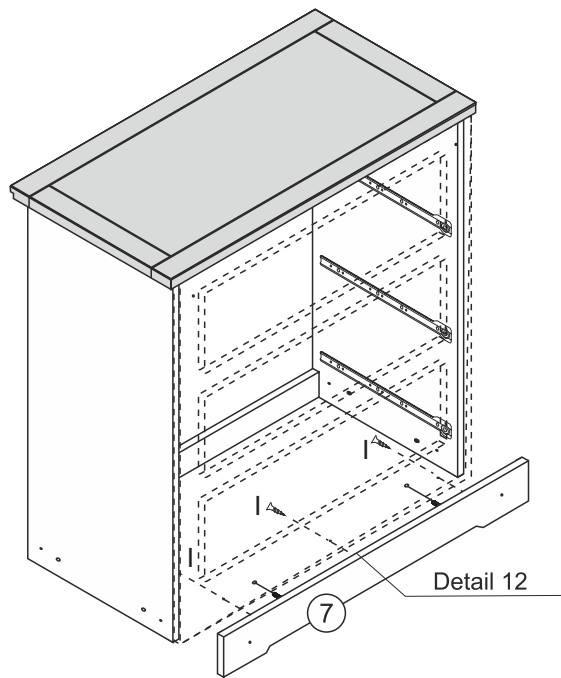


Detail 11


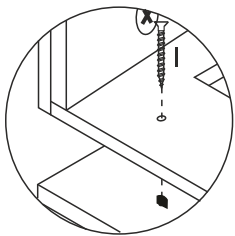


Detail 12

ATTENTION
Finished edge must
be facing up

7


N - Black Stud
(4x)

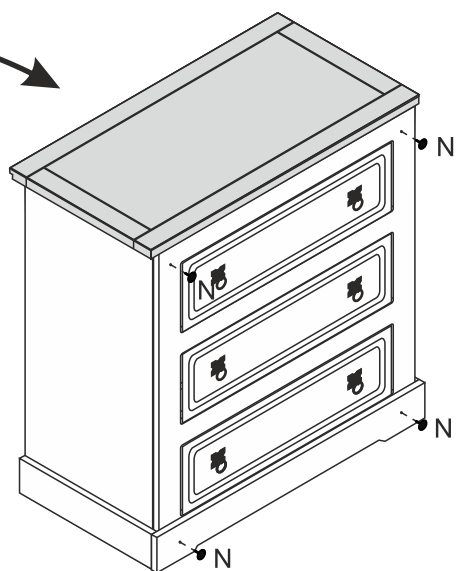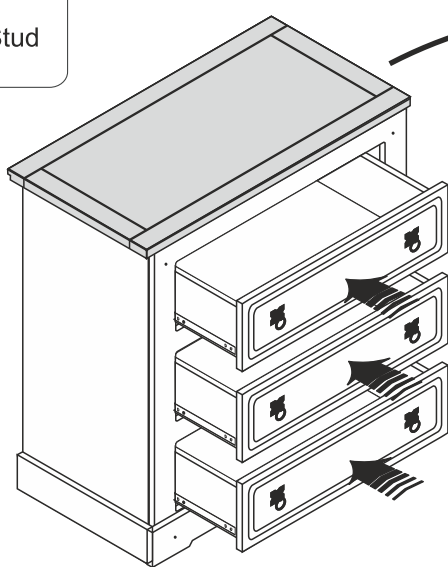


WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

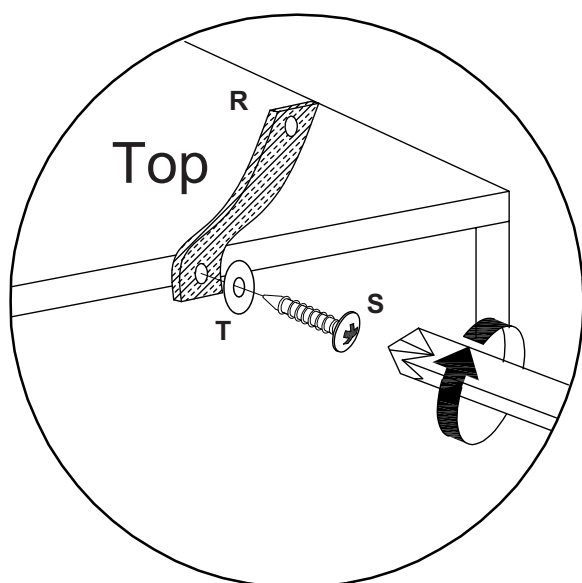

HARDWARE LIST



R - Strap (Anti-Tip Kit)
(1x)



S- Wood Screw (Anti-Tip Kit)
3,5 x 30mm (1x)



T-Washer (Anti-Tip Kit)
(2x)

