



Ottoman Assembly Instructions for 3ft Side And Front Opening Divan Bases

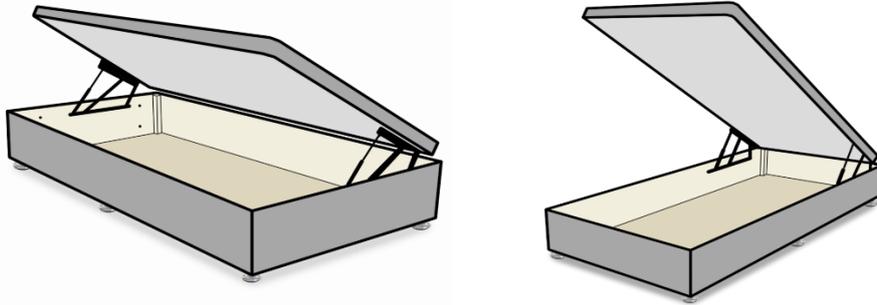


- Remove all polythene / cardboard corners from your new ottoman divan base and dispose of carefully for recycling.
- Turn the divan base on its side and insert the castors / glides into the corresponding holes on each corner and the middle of the base.
- Gently knock them into place using a rubber mallet. If you have difficulty doing this, insert a small screwdriver into the locator hole to clear the blockage.

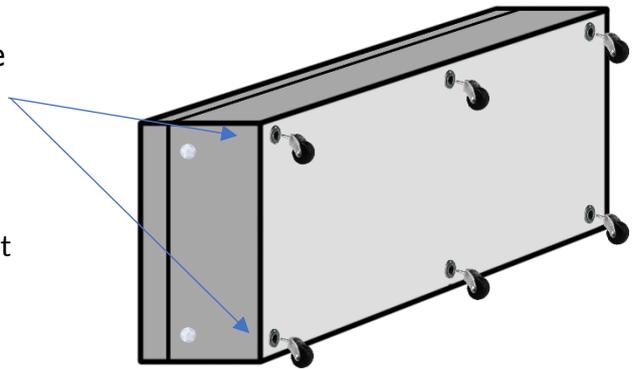

-  Once complete, carefully place the base onto its castors / glides for the piston arms to be attached. As a safety feature, the piston arms are only attached to one side when delivered.
Now, lift the ottoman lid, hold up each of the arms and slide the piston stems onto the threaded axles and fit the connecting nuts. Do not overtighten the connecting nuts as they only require to be finger tight.

- Insert the headboard bolts into the locator holes at the headend of the base by piercing the fabric where marked.

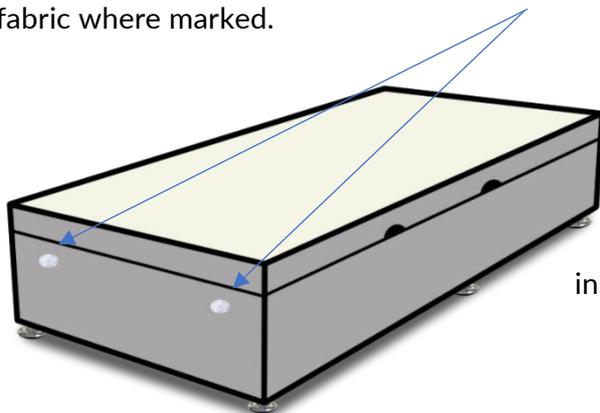

If the holes are not marked, simply lift the lid of the base and you can pierce the fabric from the inside.