


# SCANDI OAK TV UNIT WHITE DRAWERS ASSEMBLY INSTRUCTIONS

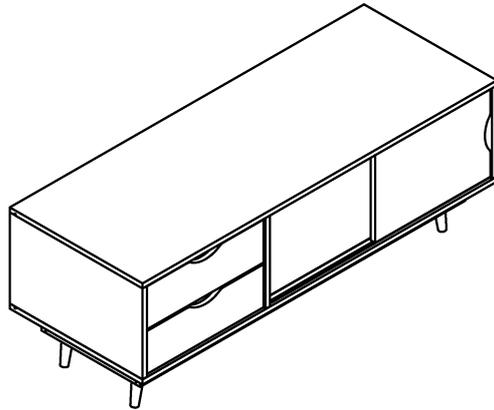


## IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER


### WARNING AND INSTRUCTIONS

#### GENERIC

- PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN PLACE. IN THE UNLIKELY EVENT THAT YOU NEED TO RETURN YOUR PRODUCT, IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE . FAILURE TO COMPLY TO THESE PROCEDURES, NO RETURN WILL BE ACCEPTED.
- IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- DUE TO THE SIZE OF THIS PRODUCT WE RECOMMEND THAT IT IS ASSEMBLED IN THE ROOM INTENDED FOR USE.
- WHEN YOU ARE READY TO START, MAKE SURE THAT YOU HAVE THE RIGHT TOOLS, PLENTY OF SPACE AND A CLEAN, DRY AREA FOR ASSEMBLY.
- UNWRAP ALL PACKAGING MATERIALS AND PLACE THE COMPONENTS ON TOP OF THE CARTON BOX OR ON A CLEAN FLOOR TO PREVENT IT FROM SCRATCHING.
- CHECK THE PACK AND MAKE SURE YOU HAVE ALL THE PARTS LISTED.
- ENSURE THAT THIS PRODUCT IS FULLY ASSEMBLED AS ILLUSTRATED BEFORE USE.
- TOOLS NOT INCLUDED.
- CHECK ALL SCREWS OR BOLTS ARE TIGHTENED AND INSPECT REGULARLY.
- THIS PRODUCT SHOULD ONLY BE USED ON FIRM LEVEL GROUND.
- KEEP SMALL PART OUT OF REACH OF CHILDREN.
- MAKE SURE THE LEGS REMAIN IN CONTACT WITH THE GROUND.
- DO NOT USE POWER TOOLS TO CONSTRUCT THIS PRODUCT.
- DO NOT TIGHTENED SCREWS UNTIL FULLY ASSEMBLED.
- DO NOT OVER TIGHTENED SCREWS OR BOLTS.
- DO NOT USE THIS PRODUCT IF PARTS ARE MISSING, DAMAGE OR WORN.
- DO NOT SIT AND STAND ON THE PRODUCT.
- TO CLEAN WIPE WITH A SPONGE AND WARM SOAPY WATER. DO NOT USE SOLVENT BASED CLEANERS OR DETERGENTS AS THEY CAN BLEACH OR DAMAGE THE PRODUCT.
- NEVER USE SCOURERS, ABRASIVES OR CHEMICAL CLEANERS.

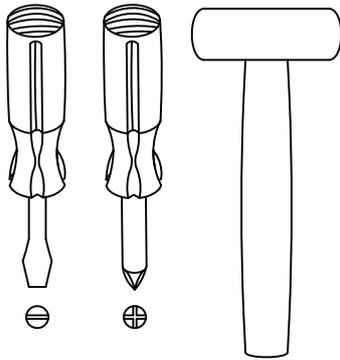


(Tools not provided)

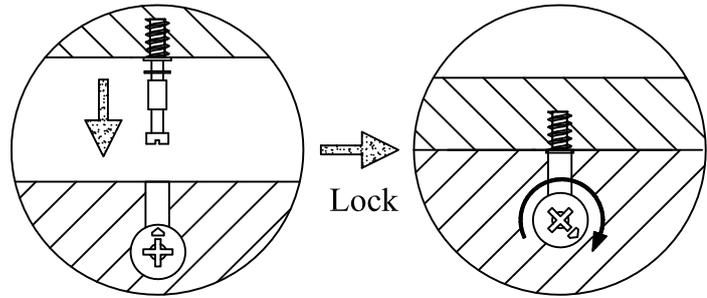

Use a flat blade screwdriver to tighten the cam nuts. A quarter turn clockwise is all that is needed.


## This is how a cam nut works.....

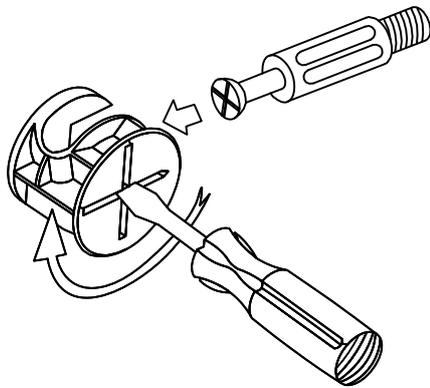

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

### TWO PERSONS REQUIRED TO ASSEMBLE THIS PRODUCT

1. Please check that you have all the parts listed before you start assembling. If you do find that something is missing, do not continue assembly. Please contact your supplier immediately.
2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
3. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

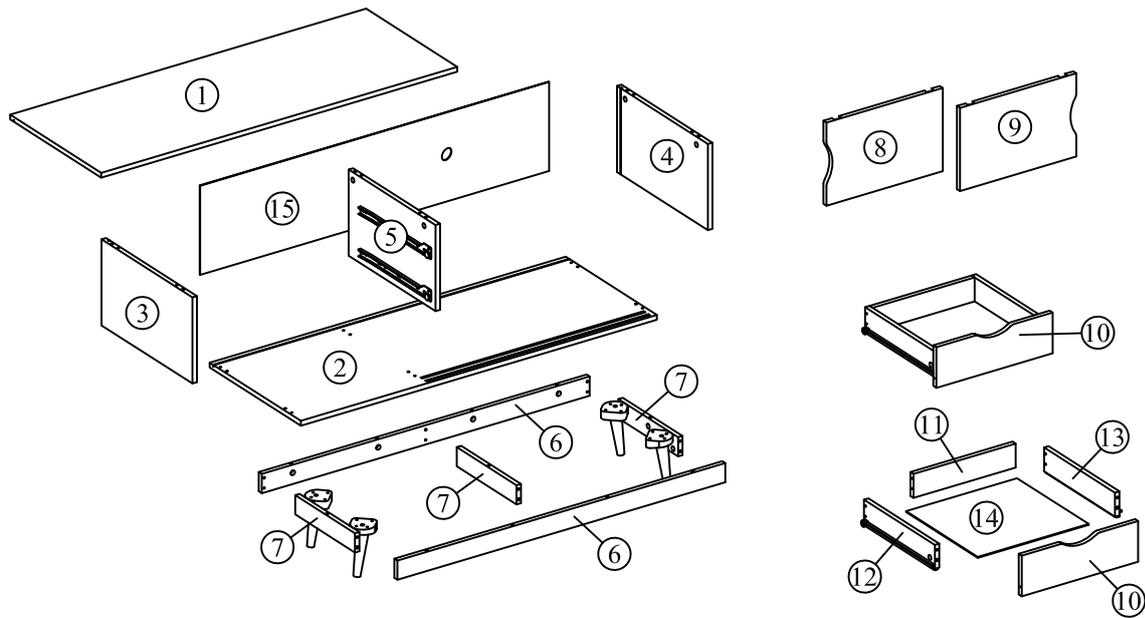

## PARTS LIST

NO	PARTS					QTY
1	1200	x	450	x	15	1 pc
2	1200	x	450	x	15	1 pc
3	269	x	449	x	15	1 pc
4	269	x	449	x	15	1 pc
5	269	x	428	x	15	1 pc
6	1100	x	60	x	15	2 pcs
7	304	x	60	x	15	3 pcs
8	390	x	260	x	15	1 pc
9	390	x	260	x	15	1 pc
10	394	x	127	x	15	2 pcs
11	344	x	75	x	15	2 pcs
12	350	x	75	x	15	2 pcs
13	350	x	75	x	15	2 pcs
14	374	x	354	x	3	2 pcs
15	1176	x	278	x	3	1 pc

## HARDWARE LIST


NO.	DESCRIPTION	QTY
A	 WOOD DOWEL M6 x 25mm	22
B	 M3.5 x 12mm CSK SCREW	40
C	 ALLEN KEY M6	1
D	 M4 x 25mm CSK SCREW	16
E	 M4 x 38mm CSK SCREW	16
F	 M6 x 50mm JCBCW SCREW	6
G	 MINI FIX - CAP	27
H	 CAM FITTING	27
I	 SCREW - IN DOWEL	27
J	 445 ROLLER GUIDE TOP	4
K	 445 ROLLER GUIDE BOTTOM	4
L	 PVC BACKER (BLK)	4
M	 NAIL	8
N	 STICKER	8
O	 METAL RUNNER 14" SJ 1.1 (SPECIAL)	2
P	 Rubber Wood Leg 134 x 60 x 60	4

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.








# STEP 1

A		WOOD DOWEL 6 x 25mm	10
H		CAM FITTING	13
I		SCREW - IN DOWEL	27

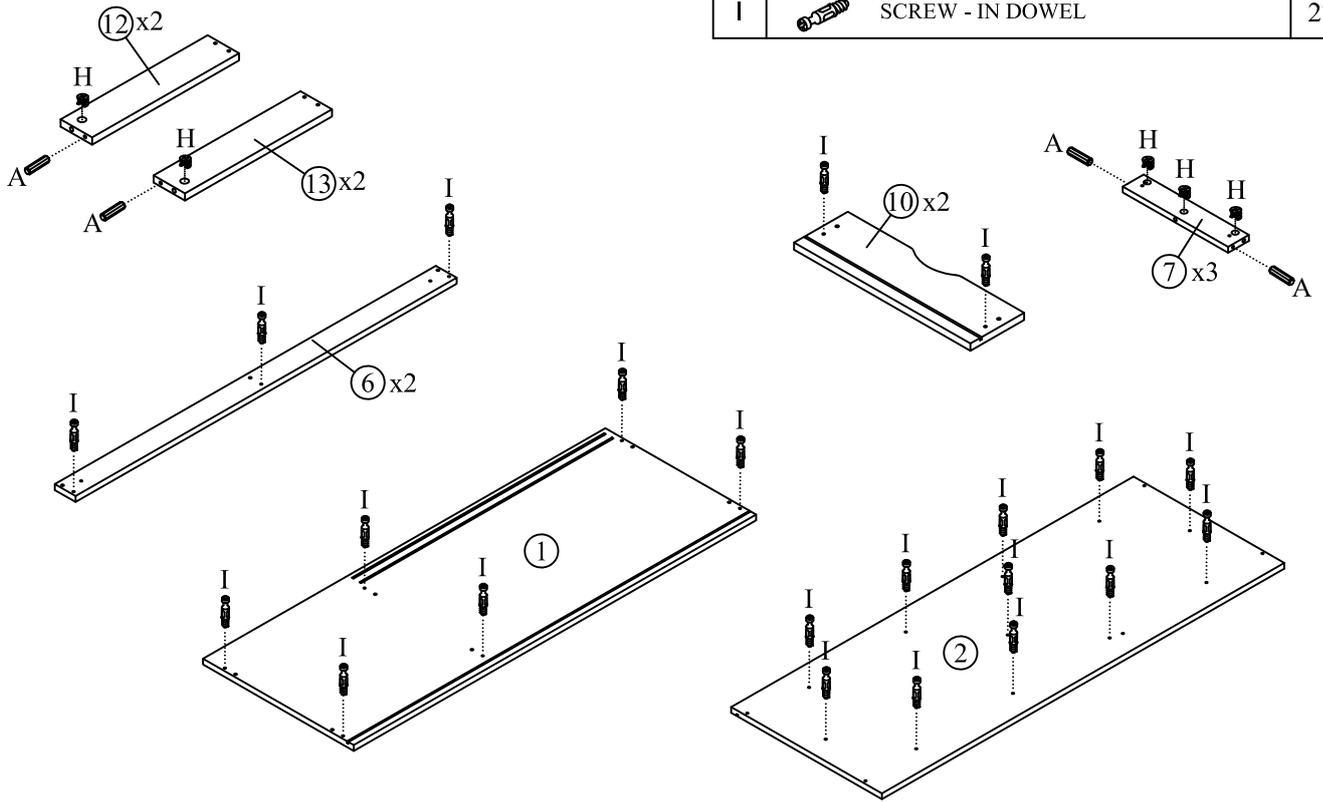

# STEP 2

B		M3.5 x 12mm CSK SCREW	12	M		NAIL	8
E		M4 x 38mm CSK SCREW	8	O		METAL RUNNER 14" SJ 1.1 (SPECIAL)	2
G		MINI FIX CAP	4				



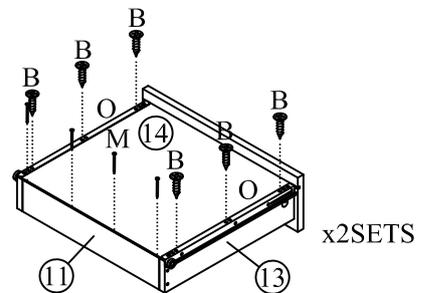
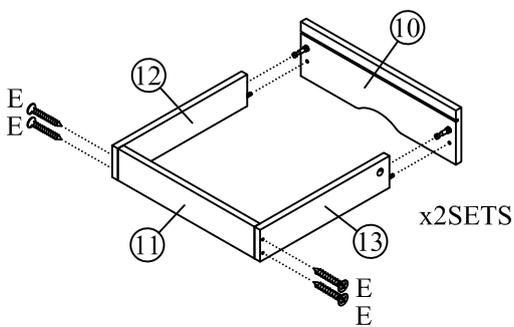
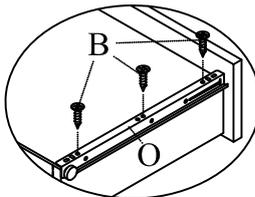
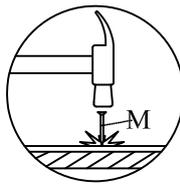
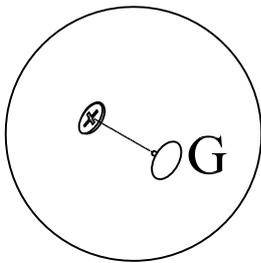


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.





### STEP 3

A	 WOOD DOWEL 6 x 25mm	12
B	 M3.5 x 12mm CSK SCREW	28
H	 CAM FITTING	6
J	 445 ROLLER GUIDE TOP	4
K	 445 ROLLER GUIDE BOTTOM	4
O	 METAL RUNNER 14" SJ 1.1 (SPECIAL)	2

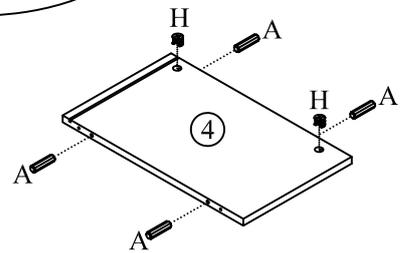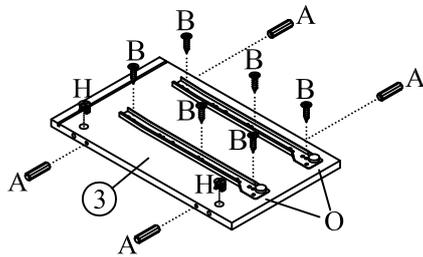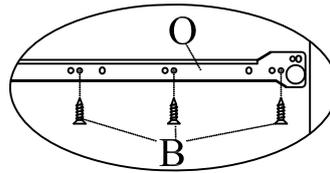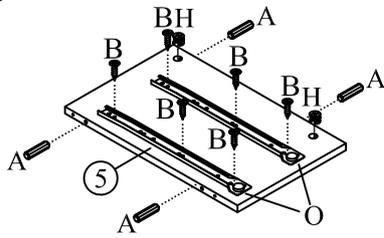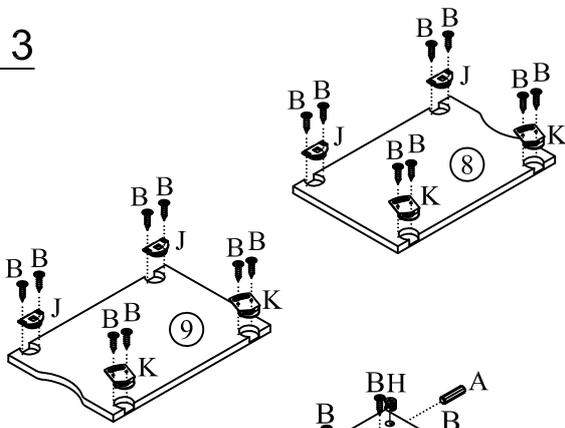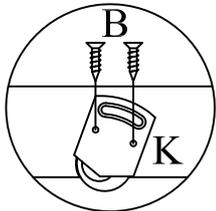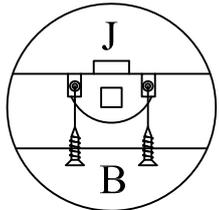

### STEP 4

G	 MINI FIX - CAP	6
---	---	---

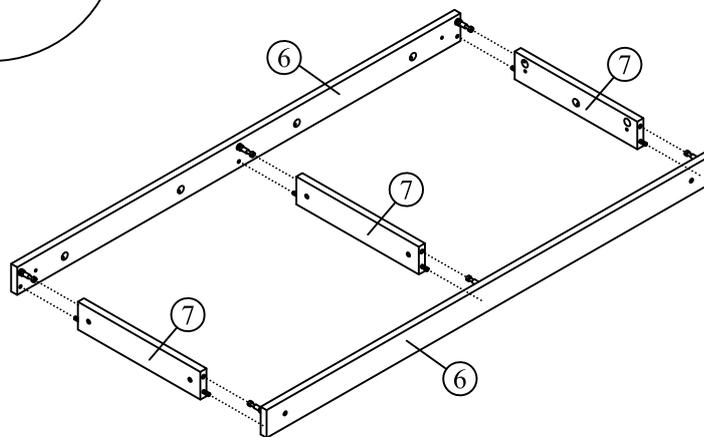
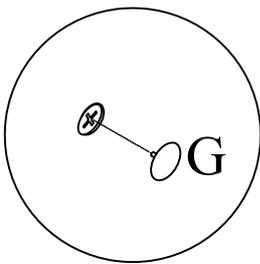


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




# STEP 5

G		MINI FIX - CAP	6
---	---	----------------	---

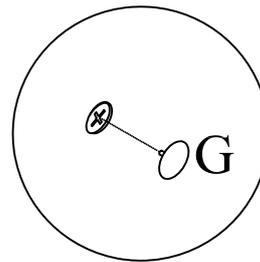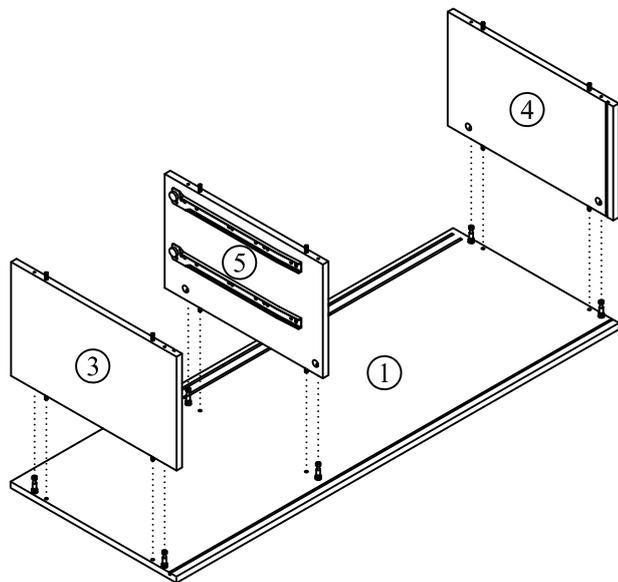

# STEP 6



C		ALLEN KEY M6	1
F		M6 x 50mm JCBCW SCREW	6

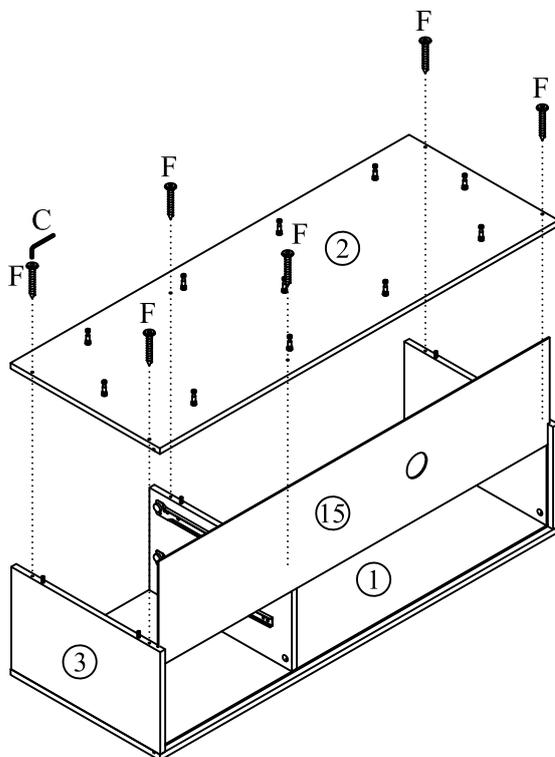

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.







# STEP 7

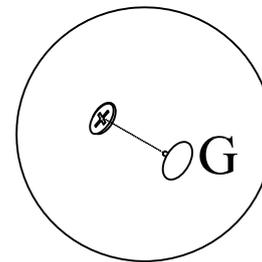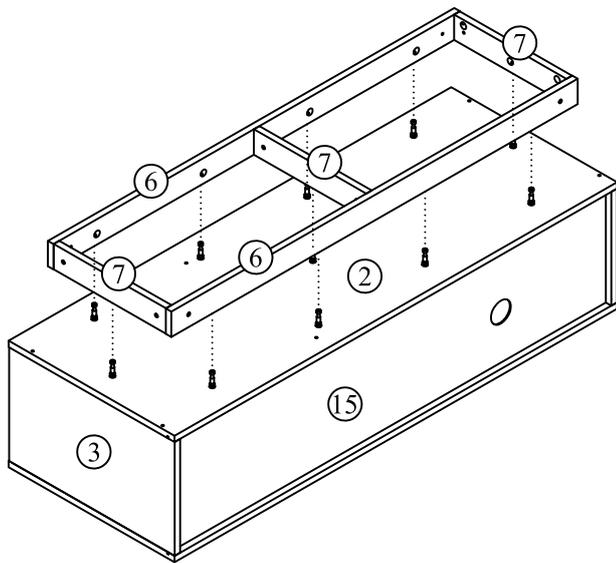

# STEP 8


D		M4 x 25mm CSK SCREW	16
E		M4 x 38mm CSK SCREW	8
L		PVC BACKER (BLK)	4
N		STICKER	8
P		Rubber Wood Leg 134 x 60 x 60	4

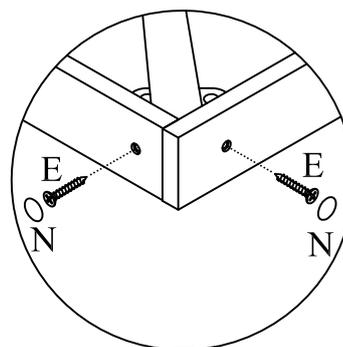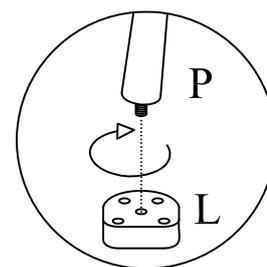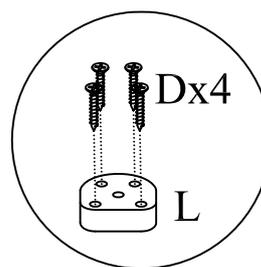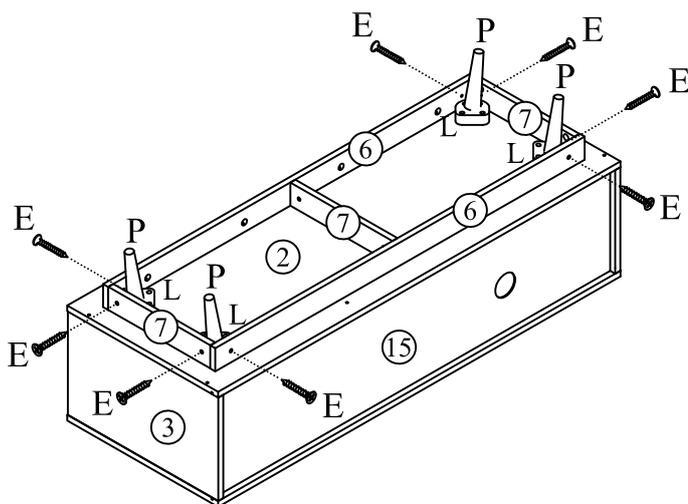


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



STEP 9

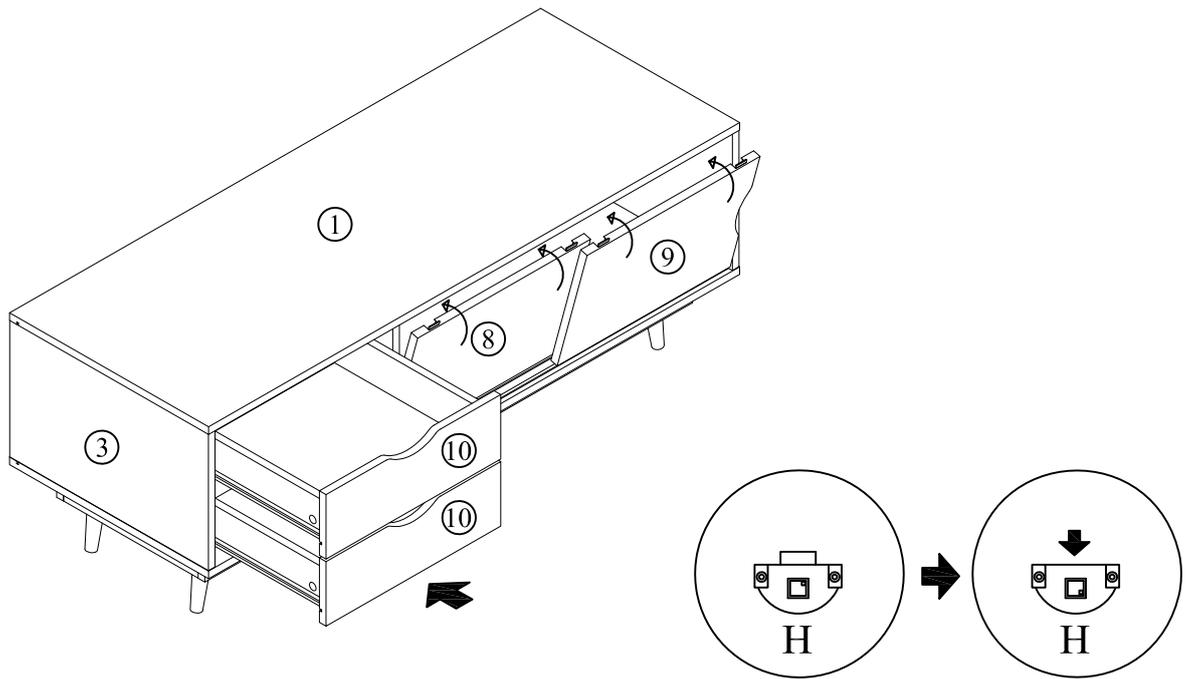

STEP 10

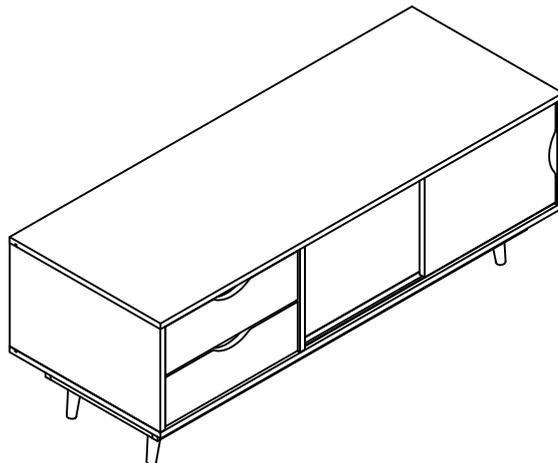

COMPLETED

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

