
HOXTON 4 DOORS WARDROBE ASSEMBLY INSTRUCTIONS





PLEASE READ BEFORE YOU CONTINUE FURTHER

WARNING AND INSTRUCTIONS

- PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN
 PLACE. IN THE UNLIKELY EVENT THAT YOU NEED TO RETURN YOUR PRODUCT, IT MUST BE
 RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE. FAILURE TO COMPLY
 TO THESE PROCEDURES, NO RETURN'S WILL BE ACCEPTED.
- IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- DUE TO THE SIZE OF THIS PRODUCT WE RECOMMEND THAT IT IS ASSEMBLED IN THE ROOM INTENDED FOR USE.
- WHEN YOU ARE READY TO START, MAKE SURE THAT YOU HAVE THE RIGHT TOOLS, PLENTY OF SPACE AND A CLEAN, DRY AREA FOR ASSEMBLY.
- UNWRAP ALL PACKAGING MATERIALS AND PLACE THE COMPONENTS ON TOP OF THE CARTON BOX OR
 ON A CLEAN FLOOR TO PREVENT IT FROM SCRATCHING.
- CHECK THE PACK AND MAKE SURE YOU HAVE ALL THE PARTS LISTED.
- ENSURE THAT THIS PRODUCT IS FULLY ASSEMBLED AS ILLUSTRATED BEFORE USE.
- TOOLS NOT INCLUDED.
- CHECK ALL SCREWS OR BOLTS ARE TIGHTENED AND INSPECT REGULARLY.
- THIS PRODUCT SHOULD ONLY BE USED ON FIRM LEVEL GROUND.
- KEEP SMALL PART OUT OF REACH OF CHILDREN.
- MAKE SURE THE LEGS REMAIN IN CONTACT WITH THE GROUND.
- DO NOT USE POWER TOOLS TO CONSTRUCT THIS PRODUCT.
- DO NOT TIGHTENED SCREWS UNTIL FULLY ASSEMBLED.
- DO NOT OVER TIGHTENED SCREWS OR BOLTS.
- DO NOT USE THIS PRODUCT IF PARTS ARE MISSING, DAMAGE OR WORN.
- DO NOT SIT AND STAND ON THE PRODUCT.
- TO CLEAN WIPE WITH A SPONGE AND WARM SOAPY WATER. DO NOT USE SOLVENT BASED CLEANERS
 OR DETERGENTS AS THEY CAN BLEACH OR DAMAGE THE PRODUCT.
- NEVER USE SCOURERS, ABRASIVES OR CHEMICAL CLEANERS.

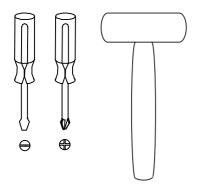




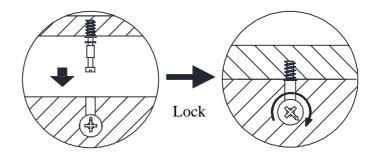

Use a flat blade screwdriver to tighten the cam nuts. A quarter turn clockwise is all that is needed.


This is how a cam nut works

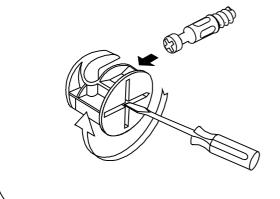

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

TWO PERSONS REQIURED TO ASSEMBLE THIS PRODUCT

- 1. Please check that you have all the parts listed before you start assembling. If you do find that something is missing, do not continue assembly. Please contact your supplier immediately.
- 2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
- 3. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

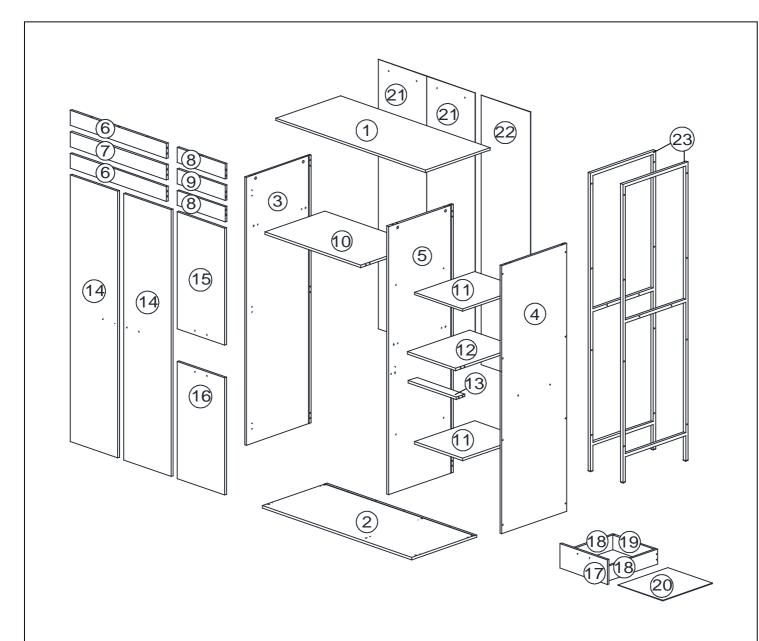


PARTS LIST

$\overline{}$						
NO			PARTS			QTY
1	1200	Х	520	Х	15	1 PC
2	1200	Х	520	Х	15	1 PC
3	1618	Х	519	Х	15	1 PC
4	1618	Х	519	Х	15	1 PC
5	1618	Х	519	Х	15	1 PC
6	768	Х	90	Х	15	2 PCS
7	768	Х	90	Х	15	1 PC
8	384	Х	90	Х	15	2 PCS
9	384	Х	90	Х	15	1 PC
10	769	Х	481	Х	15	1 PC
11	384	Х	481	Х	15	2 PCS

HARDWARE LIST

NO		DESCRIPTION	QTY
Α		WOOD DOWEL M8 x 25mm	22
В	<amm§< td=""><td>CB SCREW M3.5 x 16mm</td><td>60</td></amm§<>	CB SCREW M3.5 x 16mm	60
С		CB SCREW M4 x 38mm	8
D	√ 111111111100	CSK CAP WOOD M6 x 50mm	6
Е	(mmm ()	HANDLE SCREW M4 x 19mm & WASHER	10
F		HANDLE SCREW M4 x 30mm & WASHER	20
G		CAM NUT	48
Н	OT LEAD	CAM BOLT	48
1	Θ	CAM CAP	48
J		HANDLE	5
K	(L KEY	1
L	D	SHELF SUPPORT	8
М		HINGES 7/8	10
N		NAIL 5/8	10



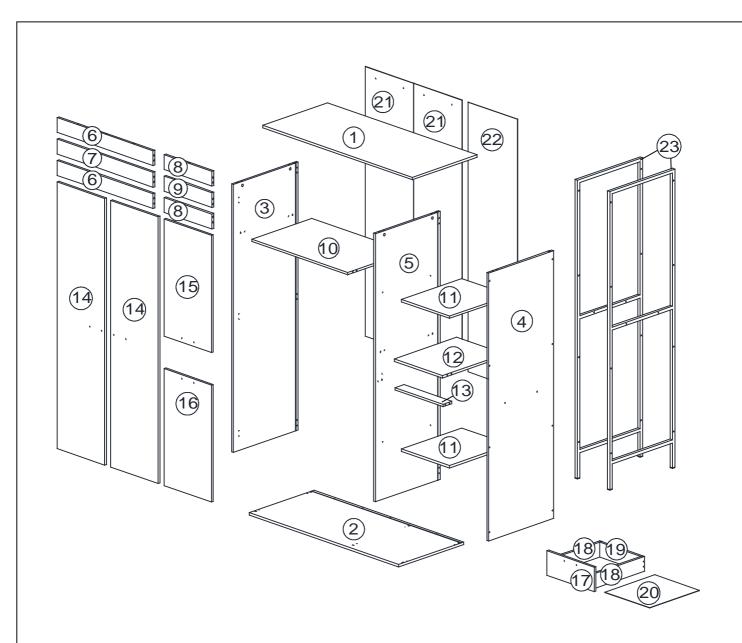

PARTS LIST


NO	PARTS			QTY		
12	385	Х	498	Х	15	1 PC
13	385	Х	70	Х	15	1 PC
14	1610	Х	380	Χ	15	2 PCS
15	707	Х	380	Х	15	1 PC
16	707	Х	380	Х	15	1 PC
17	380	Х	148	Х	30	1 PC
18	400	Х	90	Х	15	2 PCS
19	329	Х	90	Χ	15	1 PC
20	358	Х	400	Х	3	1 PC
21	1628	Х	388	Χ	3	2 PCS
22	1628	Х	394	Х	3	1 PC
23	1804	Х	522	Х	19	2 PCS

HARDWARE LIST


NO	DESCRIPTION	QTY
0	₩ V BRACKET	2
Р	CHROME PIPE	1
Q	METAL ADJUST LEG	1
R	L R DRAWER SLIDE 16"	1
S	L // R DRAWER SLIDE 16"	1
Т	3MM PVH	1
U	CB SCREW M3.5 x 12mm	8


			_
٧	STATE OF THE PERSON OF THE PER	CB SCREW M3.5 x 16mm	2
W	Same.	CB SCREW M4 x 38mm	2
Х		SAFETY STRAP	2
Υ	O. The second	PLASTIC WALL ANCHOR	2
Z	0	WASHER	4



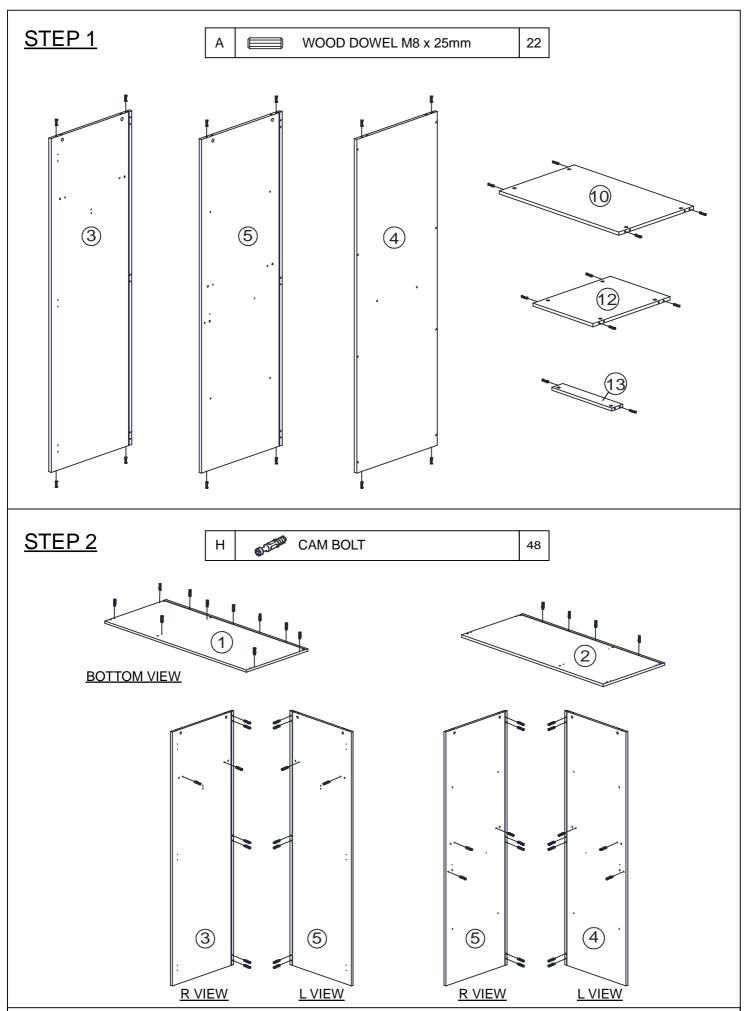



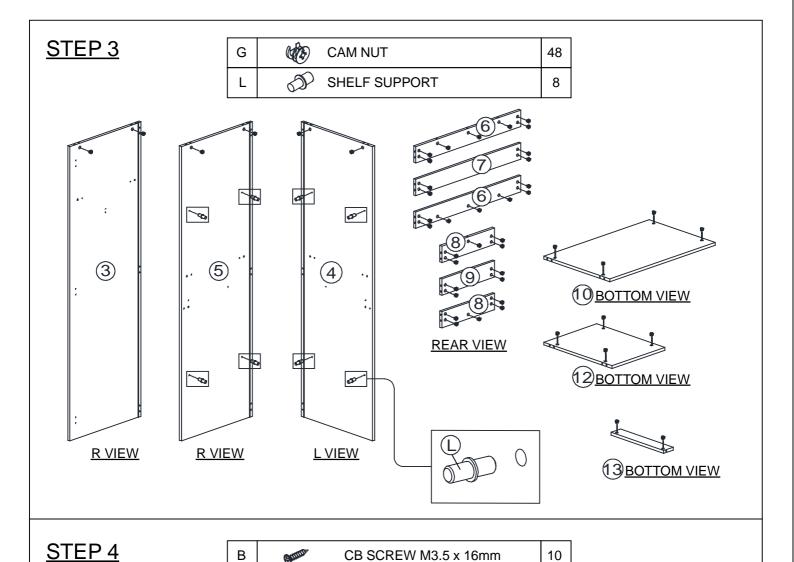

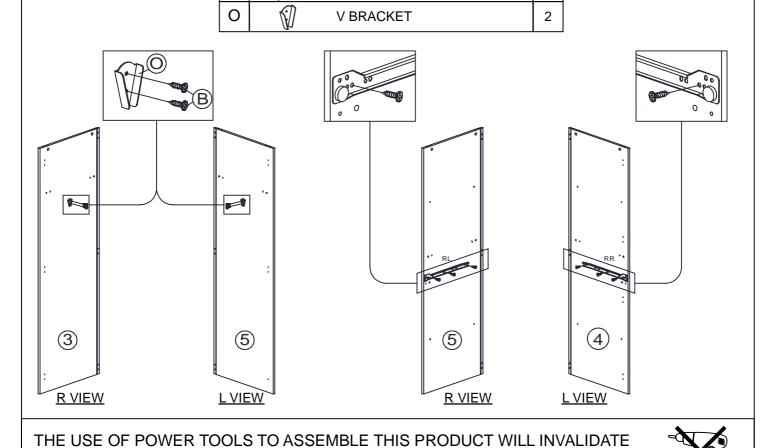


ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

DRAWER SLIDE 16"

1


R


8

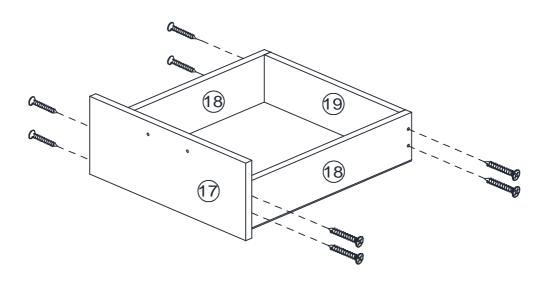

STEP 6


N NAIL 5/8

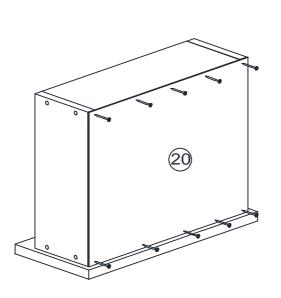

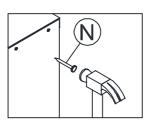





STEP 7 B CB SCREW M3.5 x 16mm 6 S DRAWER SLIDE 16" 1

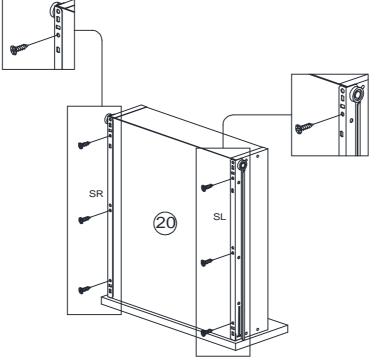




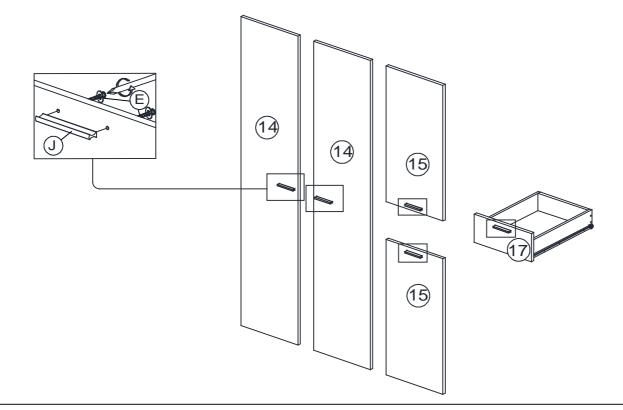



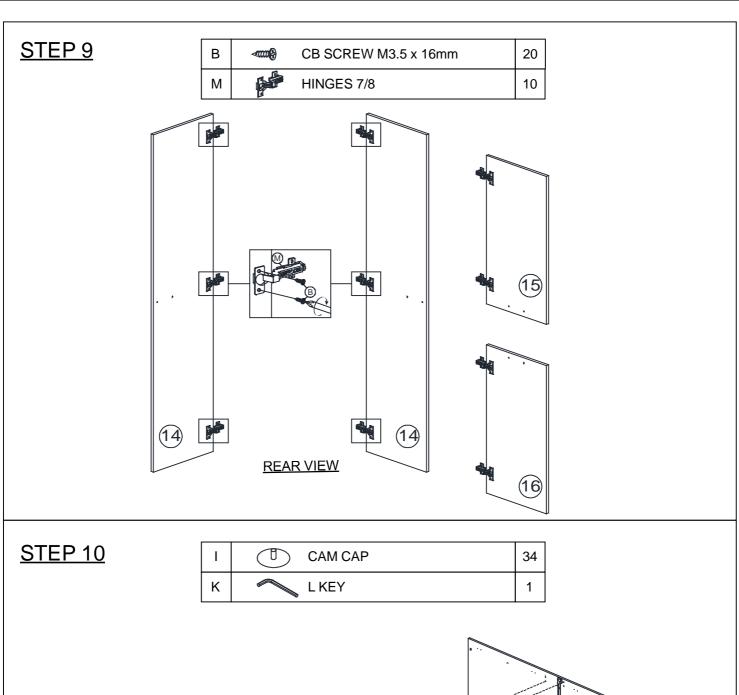


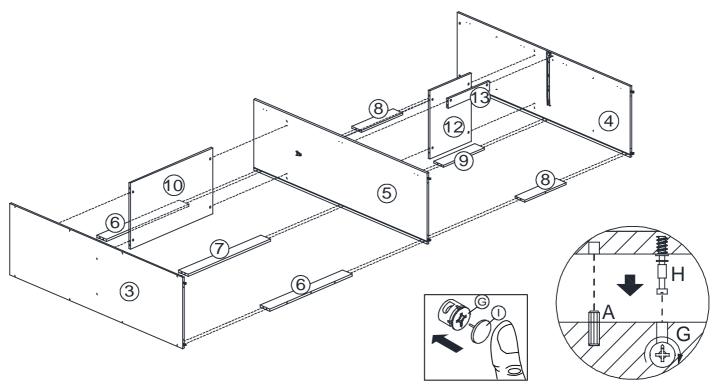




STEP 11

I	CAM CAP	4
K	LKEY	1
D	CSK CAP WOOD M6 x 50mm	6

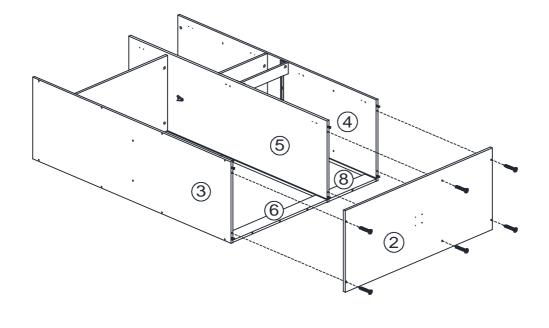




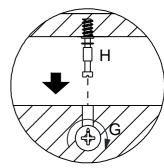

STEP 12


I	CAM CAP	10
К	LKEY	1
Т	3mm PVH	1

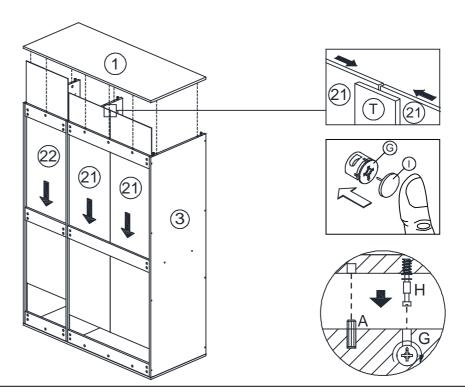



STEP 13

F	(mmm) (in	HANDLE SCREW M4 x 30mm & WASHER	20
В	√m@	CB SCREW M3.5 x 16mm	4
Q	Î	METAL ADJUST LEG	1

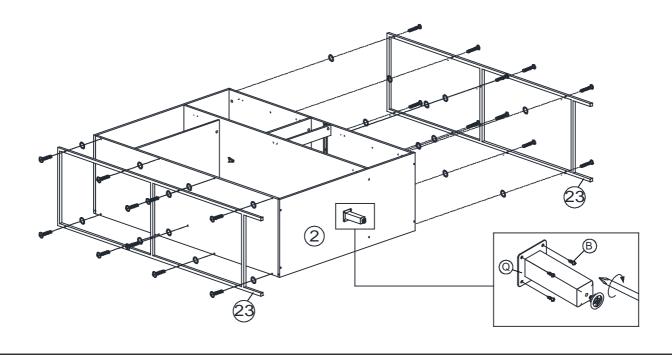

STEP 14

