


Divan Base Assembly Instructions for

3ft6, 4ft, 4ft6 and 5ft Shallow Bases


- Remove all polythene / cardboard corners from your new divan base and dispose of carefully for recycling.
- Turn the divan base on its side and insert the legs / feet into the corresponding holes on each corner and the middle of the base.

If you have chosen a base on legs, screw the legs into the locator holes on the underside of the base.


If you have chosen a shallow base on castors or glides, gently knock them into place using a rubber mallet. If you have difficulty doing this, insert a small screwdriver into the locator hole to clear the blockage.

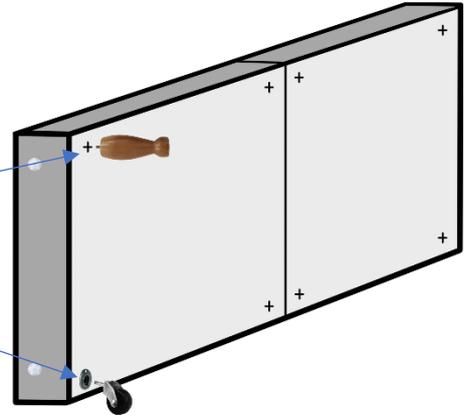

- Delivered in 2 halves, the divan will have one of the following
 - A. **U-Clips** - stand both halves on their side and place the u-clips over the wooden straps on the underside where the 2 halves meet.
 - B. **Side Linking Bars** - push the 2 halves together and join them using the linking bars and screws provided.
 - C. **Male and Female Joining Clips** - push the 2 halves together, raise one side slightly then lower its clip onto the clip on the other half. Repeat for the opposite side.

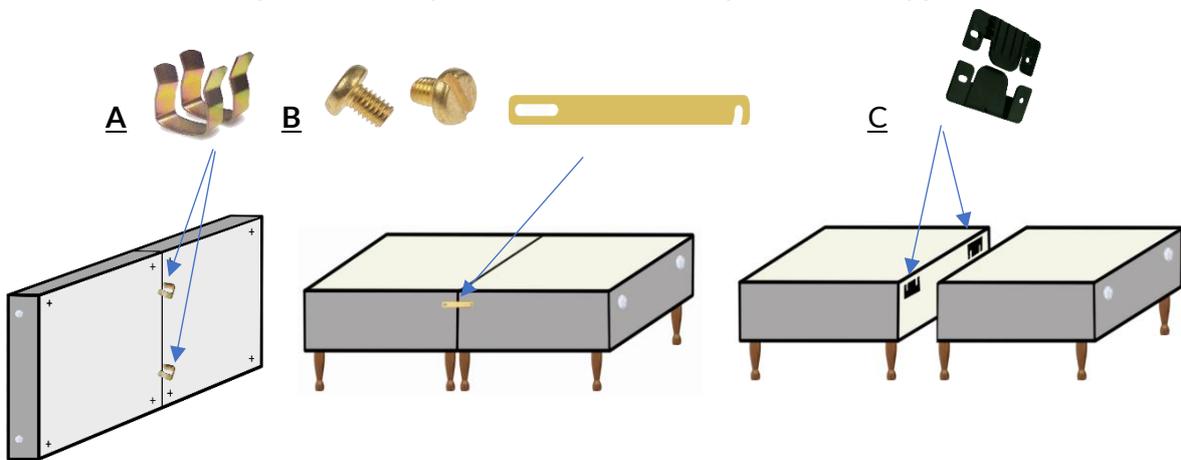

- Insert the 2 headboard bolts into the locator holes at the headend of the base by piercing the fabric where marked.

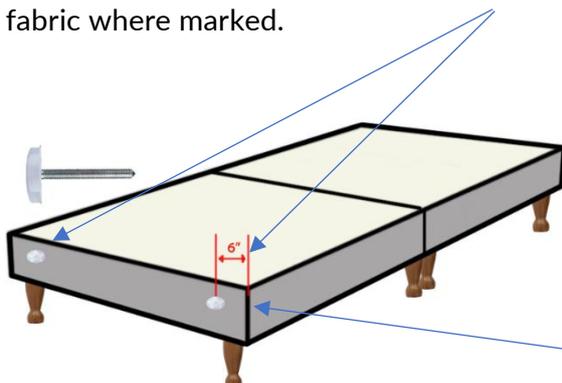

If the holes are not marked, they are located 6" from the edge of the base

