

## Assembly Instructions for Bedstead (5'0 & 6'0)

**Please read all instructions carefully to ensure safe assembly of the product**

2 People are required to lift and assemble all parts of this Bedframe in a safe manner. Keep children away from the assembly area until your bed is completed and all packaging is disposed of.

### Supplied Fittings




1 X SLATTED FRAME



1 x Centre Bar


**When unpacking your product, lay on a soft surface to ensure no damage is inflicted on the product.**

### Step 1

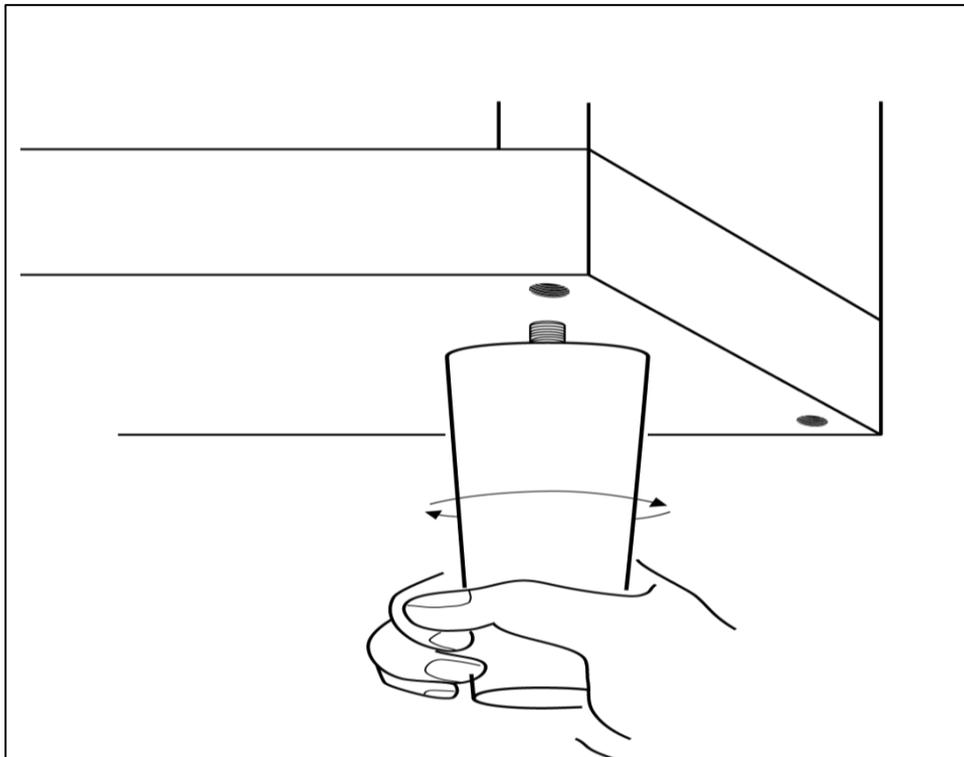

Screw in the legs provided.


## Step 2

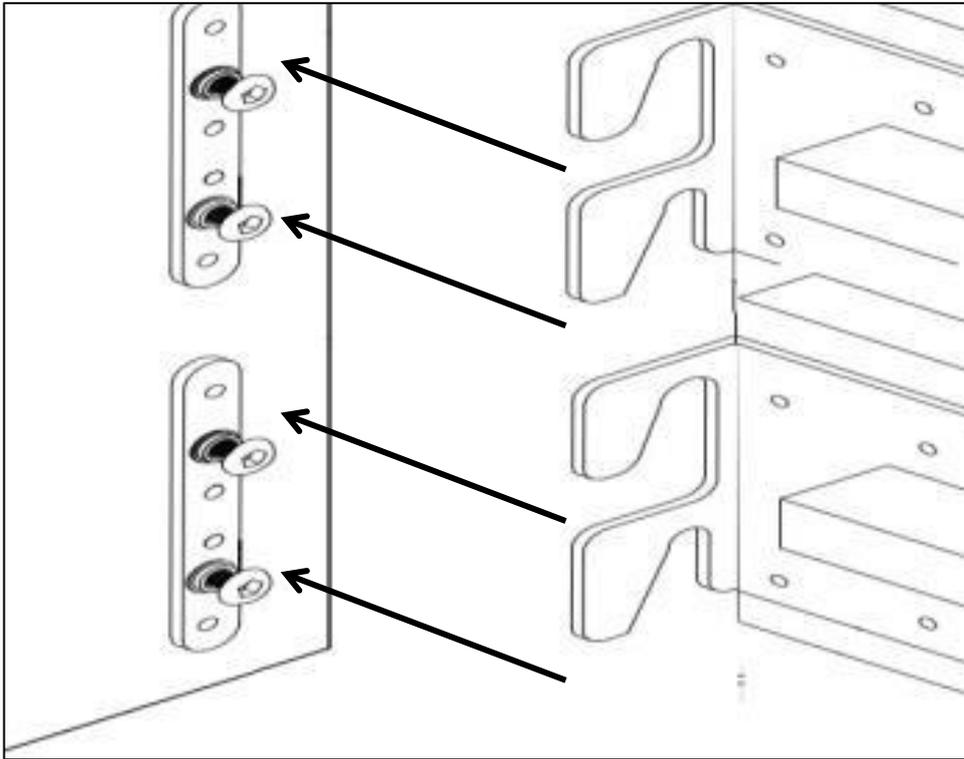

Slide the side rails onto the bolt of the Headend and use the Allan Key provided to tighten the bolts onto the brackets.


**QUICK TIP – It is easier to fit the side rails at a slight angle.**

Repeat this on the Foot-end and on the other side. Ensure all 4 corners are tightened securely. Place the Floor Panels on the inside of the Bedframe.

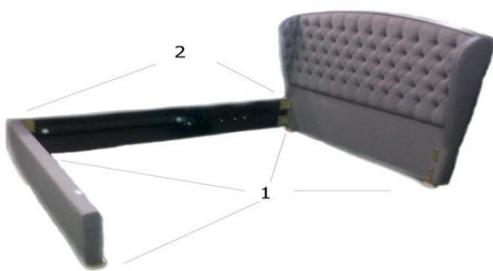

### Step 3

Place the Centre Bar across the Bedframe in the slots provided.

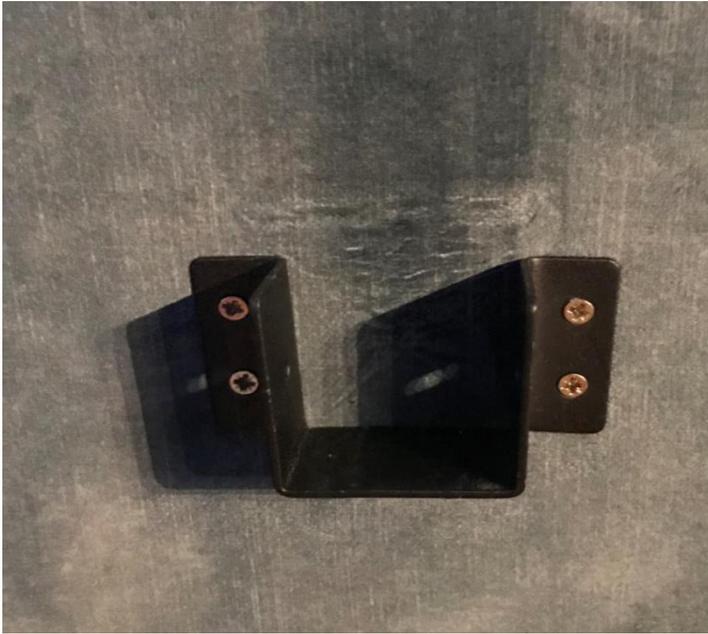

Slot provided at Headend and Foot-end of the bed




Centre Bar lying across the Bedframe

### STEP 4

**ENSURE YOUR BEDFRAME IS LINED UP STRAIGHT**

Lay the Slatted Framework in place on top of the bed.

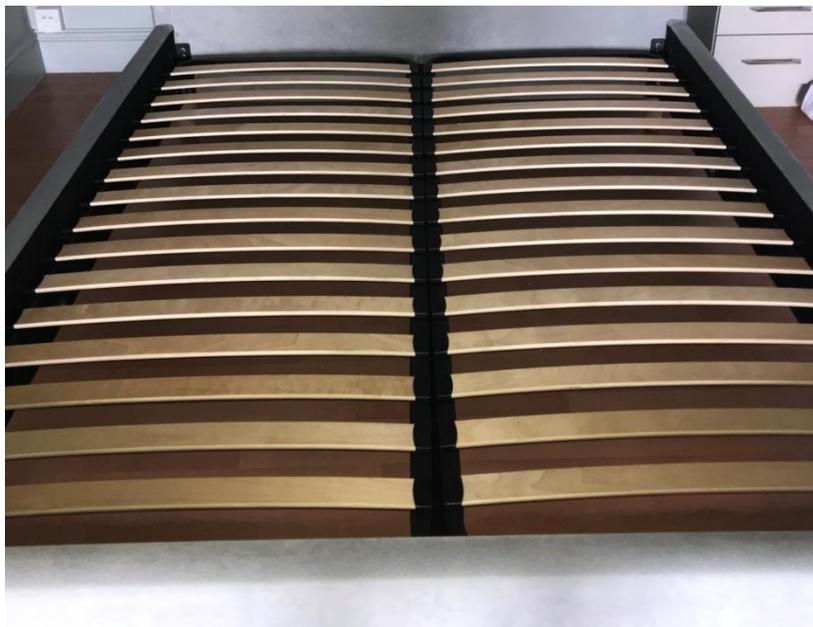

Then introduce your mattress

