


ASSEMBLY INSTRUCTION

Description : Triple Wardrobe
Code : CKP12

1 Bolt (M6x35)




24 PCS

2 Screw (M4x35)




11 PCS

3 Allen key




1 PC


Step 1

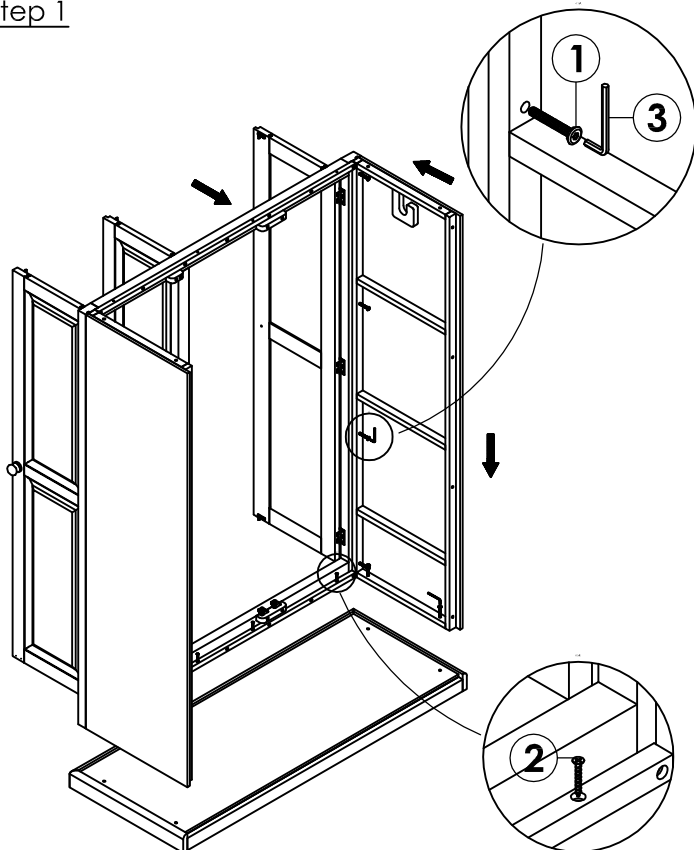

Step 2

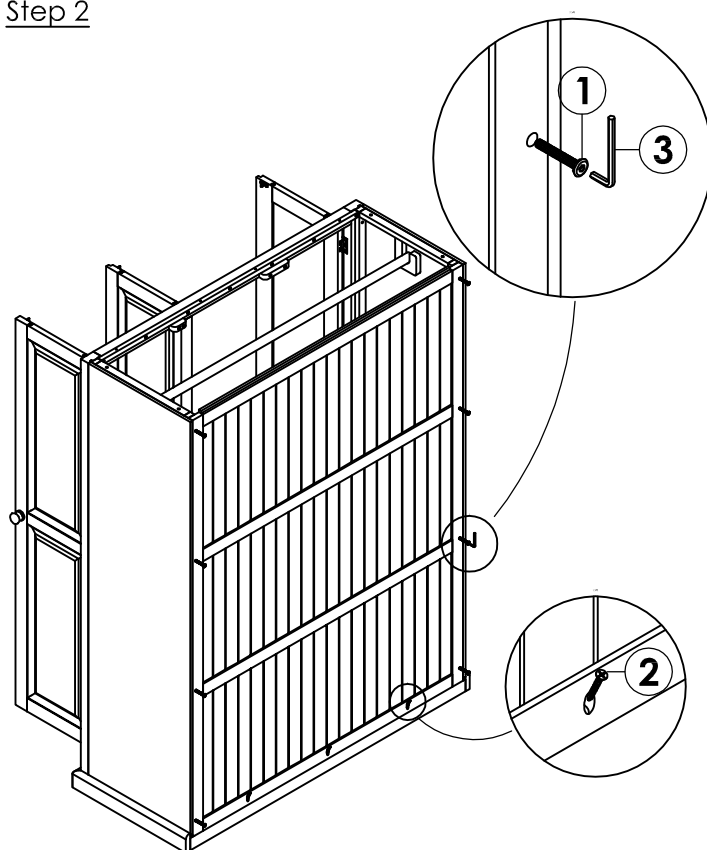

Step 3

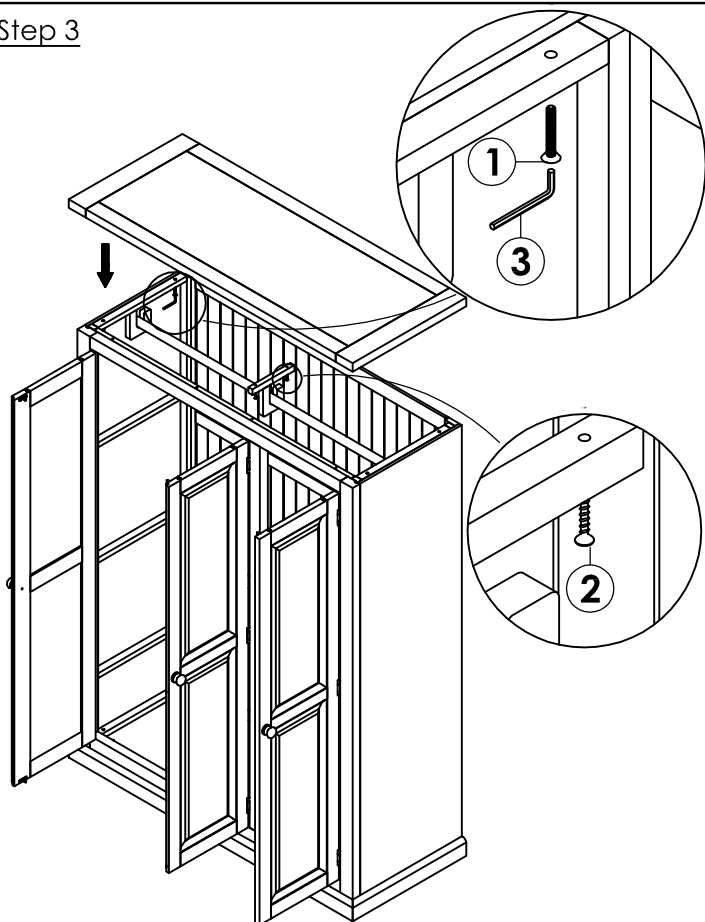

Step 4

