


ASSEMBLY INSTRUCTION

Description : **Small Double Wardrobe**
Code : **CKP09**

1 Bolt (M6x35)




24 PCS

2 Screw (M4x35)




10 PCS

3 Allen key




1 PC


Step 1

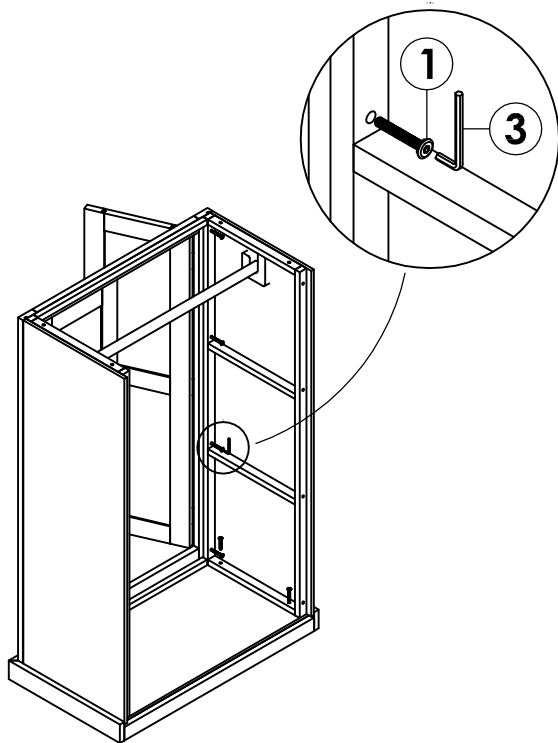

Step 2

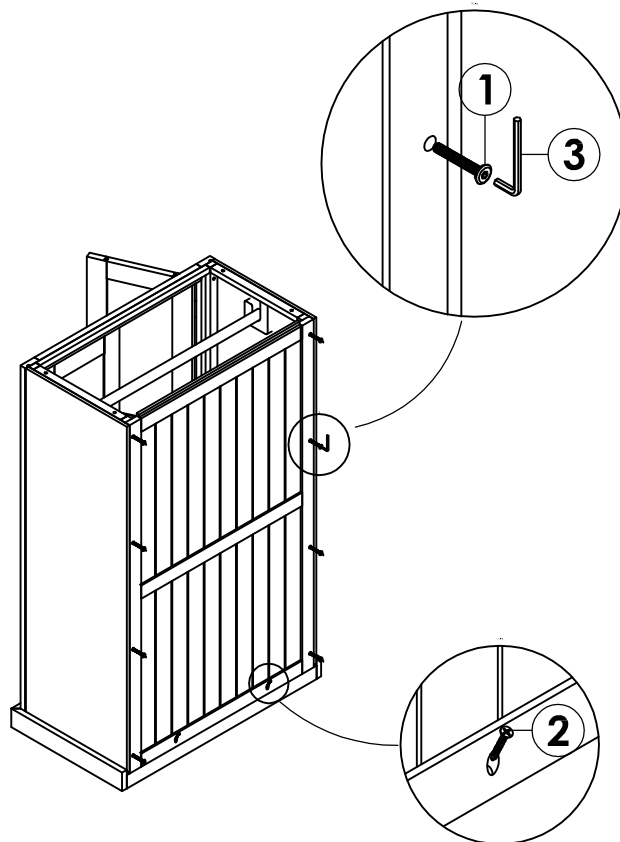

Step 3

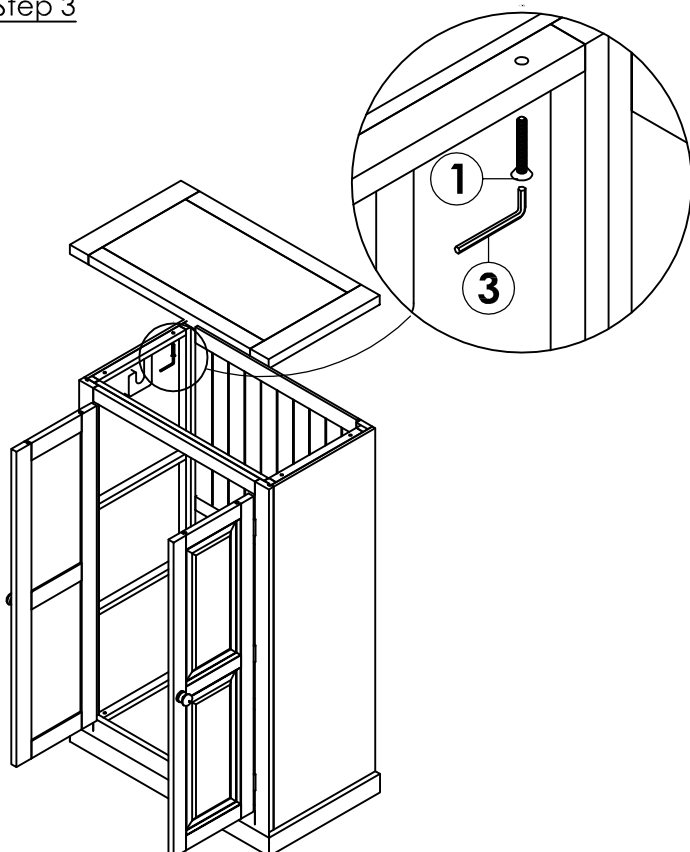

Step 4

