

AY218



70 min

Thank you for choosing this furniture.

BEFORE YOU START ASSEMBLY please store the carton for 48 hours or more so the contents can acclimatise.

PLEASE RETAIN ALL PACKING UNTIL YOU HAVE COMPLETED ASSEMBLY.

Information about your furniture.

This furniture range has been carefully crafted from solid wood, MDF and mirrored glass.

Each piece is hand crafted and has unique characteristics in its finish. These are part of the natural character of the furniture itself.

Caring for your furniture.

Extreme temperature can cause slight movements in the wood framework so please avoid placing your furniture close to radiators or other direct sources of heat. Please avoid exposing your furniture to continued bright sunlight as this can affect the colour.

Any fluid spills should be removed as quickly as possible.

Always lift your furniture when moving as dragging may cause damage to your furniture or flooring.

Always use place mats, coasters or tablecloths to help protect against scratches and accidentally dropped items.

Always use heat resistant mats when placing hot or cold items on to table surfaces.

Do not sit or stand on glass surfaces.


After care.

Wipe all surfaces with a dry cloth and the occasional use of a normal household furniture polish on wood surfaces and a household glass cleaner on glass surfaces. For furniture with drawers we also recommend you use household spray polish occasionally on the drawer side grooves and runners as this will aid use. Please do not use detergents or chemicals on your furniture.

Specialist care.

Glass can be marked with continual use by contact with rough surfaced objects or strong coloured fluids. For your safety each mirrored component is bonded to the base material, in the event of breakage the backing adhesive is designed to ensure the majority of shards remain in place but please take extreme care to ensure any small shards are cleared away and the affected part covered in adhesive tape to retain any further splinters. In the unlikely event that the glass is damaged it must be replaced without delay.

Please consult a specialist glass retailer for this.

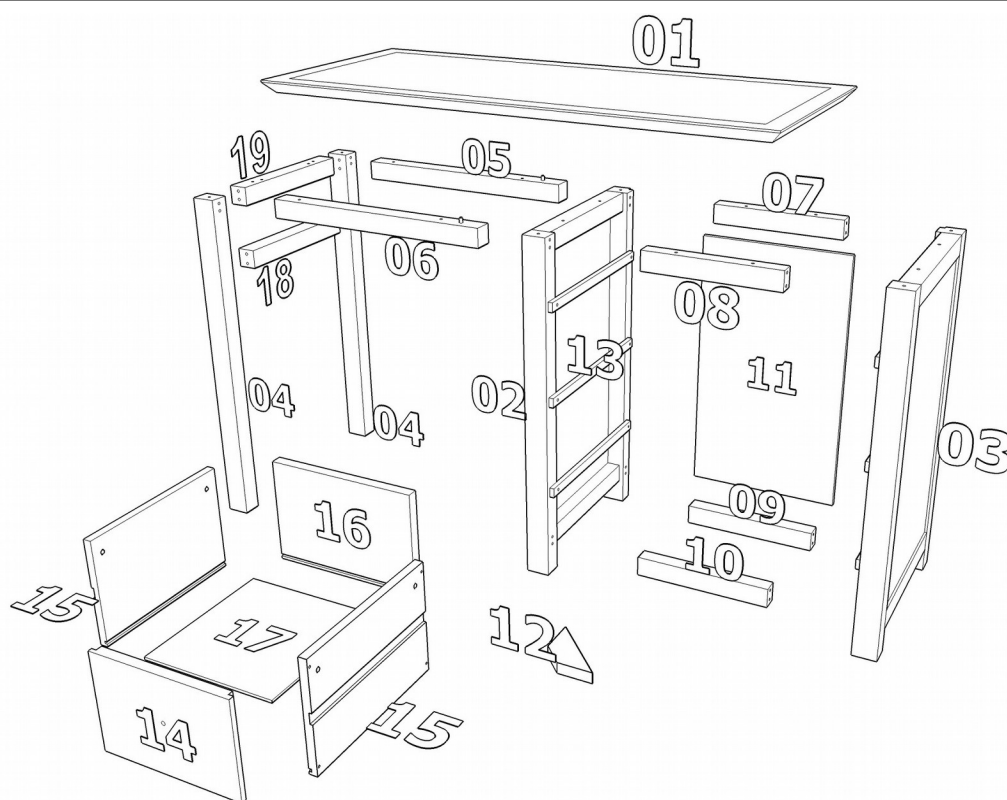

A = x42
Dowel



B = x30
40mm Screw



C = x48
25mm Screw



D = x16
Nail



E = x2
Large Screw



F or L = x3 each
Knob



H = x3
Rubber washer



G or M = x3 each
Bolt

BEFORE YOU START ASSEMBLY

Please check that you have all the correct parts and fittings as detailed on the assembly instructions.

FOR DAMAGED/REPLACEMENT PARTS

Please visit www.coreproducts.co.uk/parts

Batch Number:

PLEASE RETAIN THIS LEAFLET ALONG WITH YOUR DELIVERY NOTE/RECEIPT FOR FUTURE REFERENCE


1




A = x4
Dowel



C = x12
25mm Screw

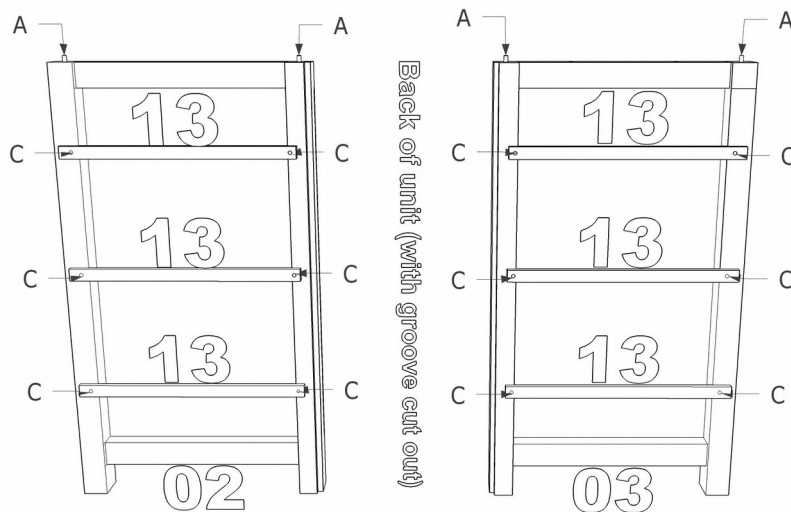


2

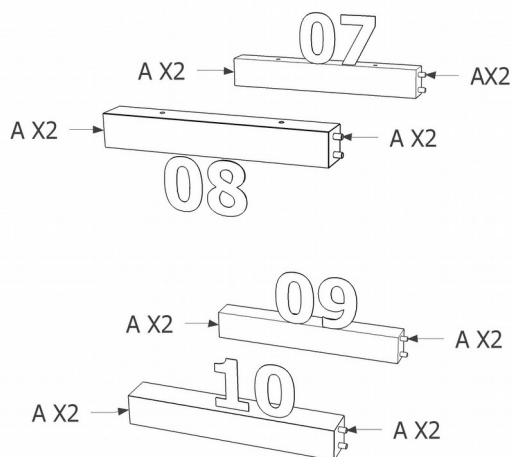


A = x16
Dowel

3

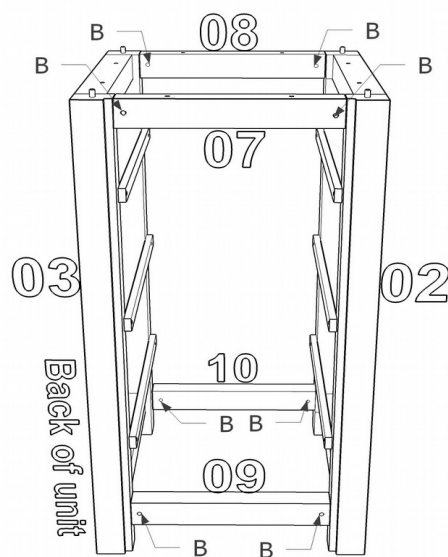

B = x8
40mm Screw



4

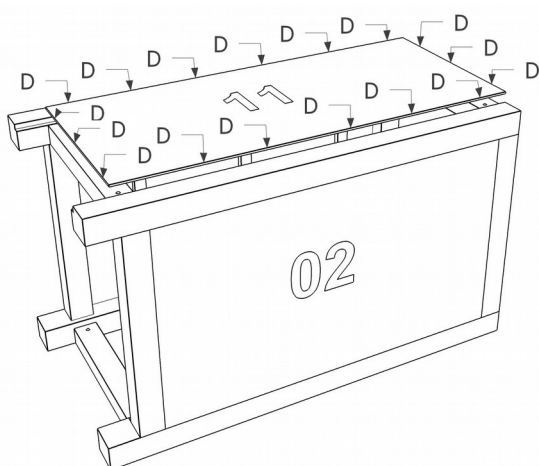

D = x16
Nail


Tip: during assembly
place unit onto a work
surface with a clean cover

5

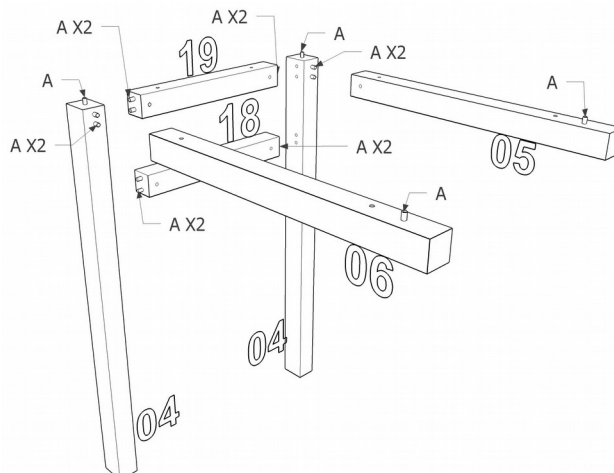


A = x16
Dowel

6

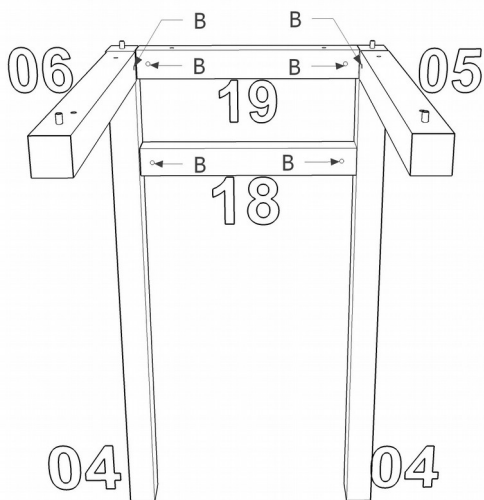

B = x6
40mm Screw

7

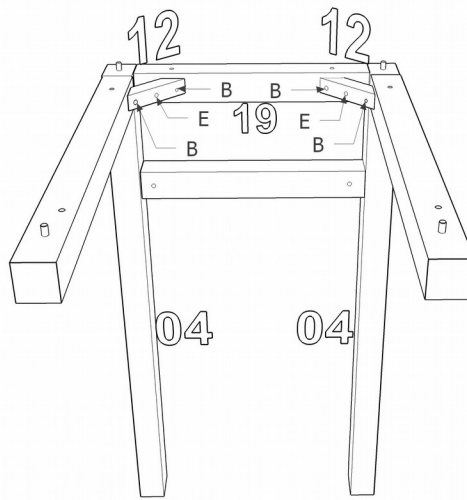

B = x4
40mm Screw



E = x2
Large Screw


8

Tip: during assembly
place unit onto a work
surface with a clean cover

Note: drawer pedestal can
be turned around
allowing it to be positioned
on the left or on the right of
assembled desk/dressing table



B = x12
40mm Screw

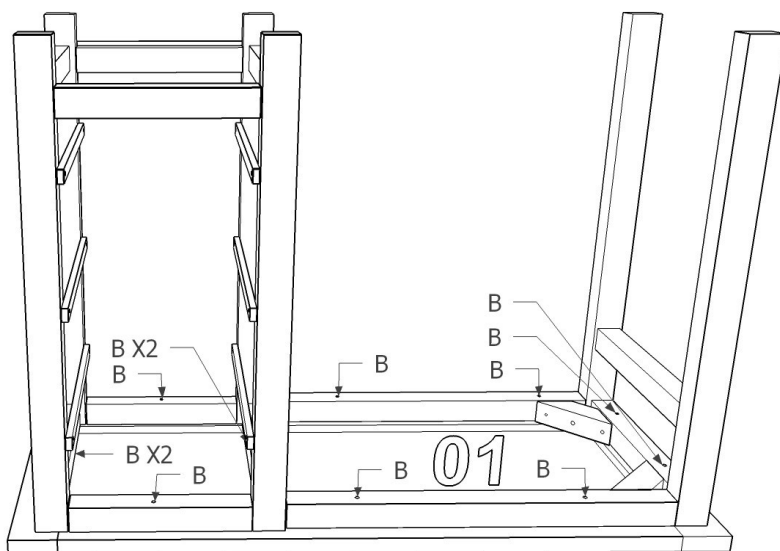

9



H = x3
Rubber washer




G or M = x3
Bolt



F or L = x3
Knob



C = x36
25mm Screw

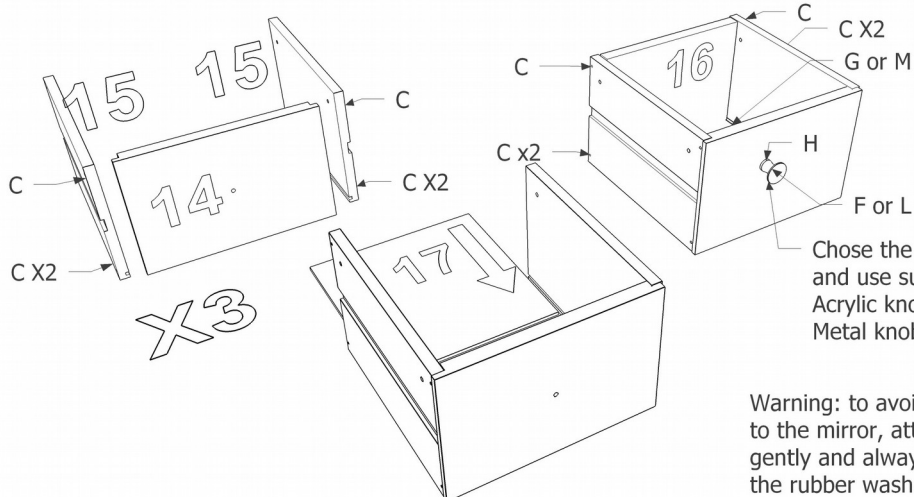

Chose the preferred handle
and use suitable bolt for it:
Acrylic knob (F) = 30mm bolt (G)
Metal knob (L) = 25mm bolt (M)


Warning: to avoid damages
to the mirror, attach the handle
gently and always use
the rubber washer provided
between the handle and
the mirrored drawer front

10

Tip: insert dowels from the inside of the drawers, pushing through so they sit level with the inside of the drawer side.
Repeat for all drawers



A = x6
Dowel

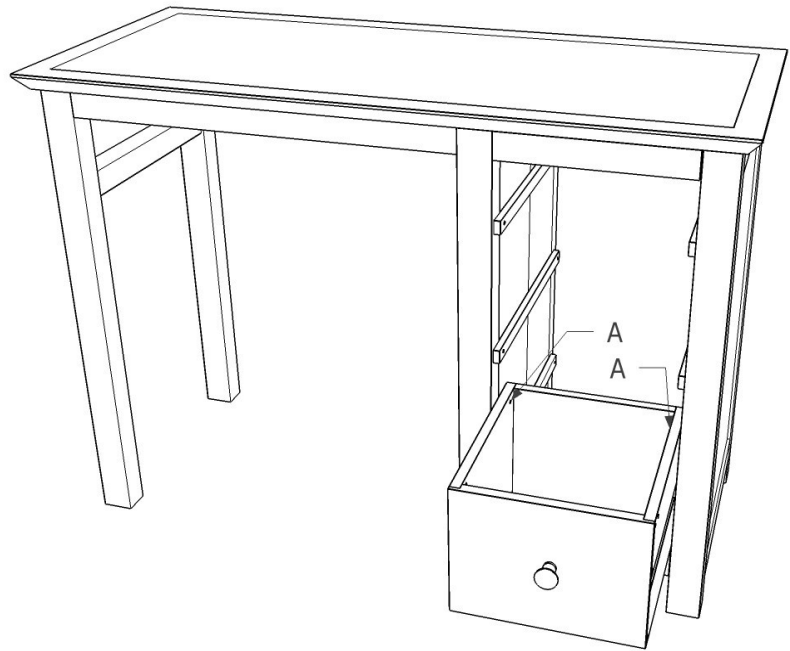

WARNING! TIPPING HAZARD – Unanchored furniture can tip over

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, YOU WILL REQUIRE SPECIALIST FITTINGS (NOT SUPPLIED)

- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten;
- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end of the fixing strip to the back edge of the furniture top using the 15mm screw + washer and securely tighten.
- Place fixing strip against the wall and mark position for drilling hole.
- Drill hole in your wall to a depth of 30mm using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.
- Insert plug into hole with end flush to the wall surface;

11

WALL



C = x1
25mm Screw




X = x1
15mm Screw



Z = x2
Washer



Y = x1
Wall Tie



W = x1
Wall Plug

