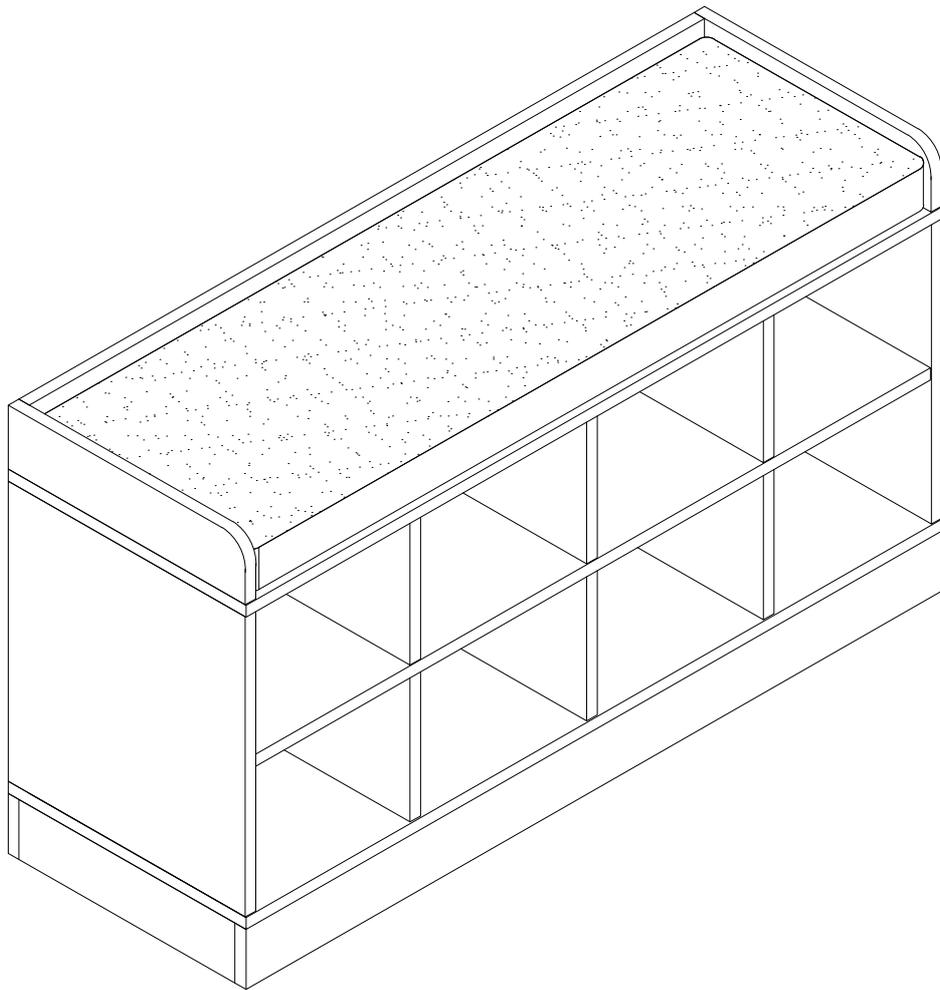


KEMPTON SHOE BENCH WITH CUSHION



KEMPTON SHOE BENCH WITH CUSHION

Important Information

GENERAL

- **IMPORTANT:** RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- Tools not included.

WARNINGS

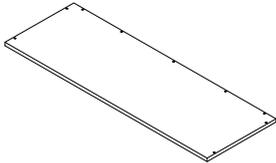
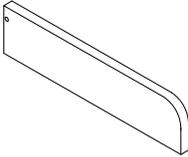
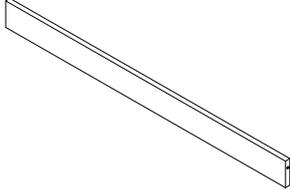
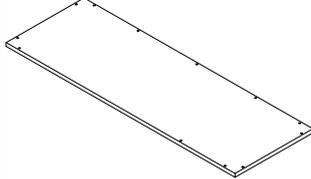
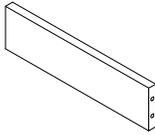
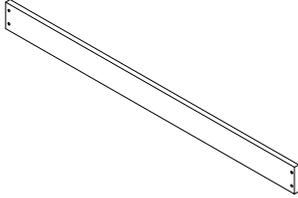
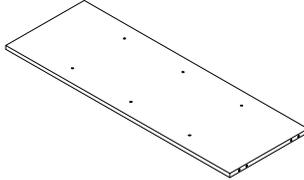
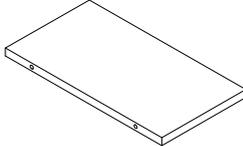
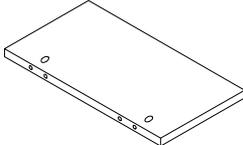
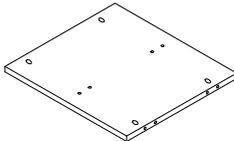
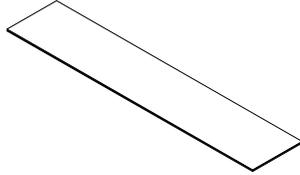
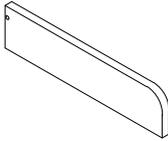
- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Do not use power tools to construct this product.
- Do not tighten screws until fully assembled.
- Do not over tighten screws or bolts.
- Do not use this product if parts are missing, damaged or worn.
- Do not sit or stand on the product.
- We recommend the use of the wall strap provided for safety reasons. N.B. Wall fixings are not included – please source suitable fixings for your wall type. If in doubt please consult a qualified tradesperson. Warning: Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

CARE INFORMATION


- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product

KEMPTON SHOE BENCH WITH CUSHION

PARTS



			
① X1	② X1	③ X1	④ X1
			
⑤ X2	⑥ X2	⑦ X1	⑧ X4
			
⑨ X2	⑩ X2	⑪ X1	⑫ X1

FIXINGS

 CAM LOCK	$\text{Ø}15 \times 12 \text{mm}$  CAM LOCK	$4 \times 40 \text{mm}$  SCREW	$6 \times 30 \text{mm}$  DOWEL	$6 \times 50 \text{mm}$  DOWEL
Ax12	Bx8	Cx23	Dx38	Ex6
 STICKER	 NAIL	 NAIL	$\text{Ø}12 \times 9 \text{mm}$  CAM LOCK	
Fx6	Gx30	Hx8	Ix4	

KEMPTON SHOE BENCH WITH CUSHION

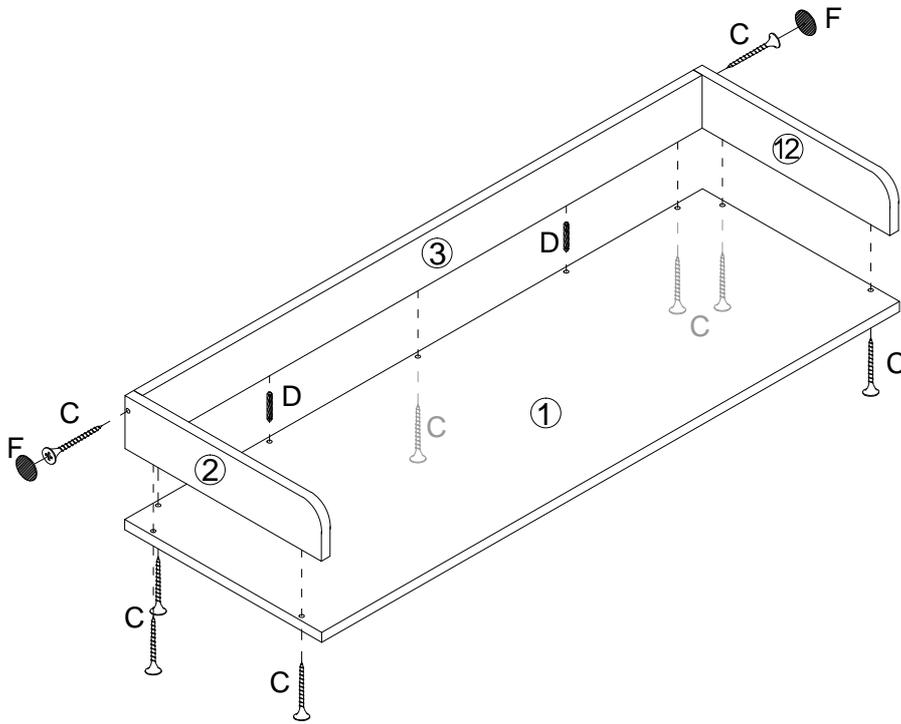STEP1



Cx9





Dx2



Fx2

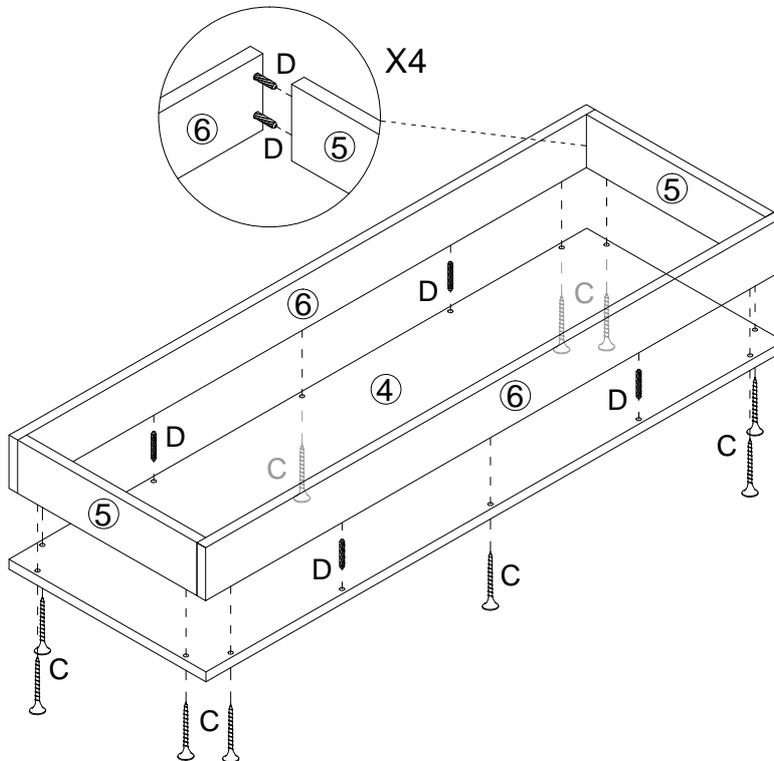STEP2




Cx10



Dx12



KEMPTON SHOE BENCH WITH CUSHION

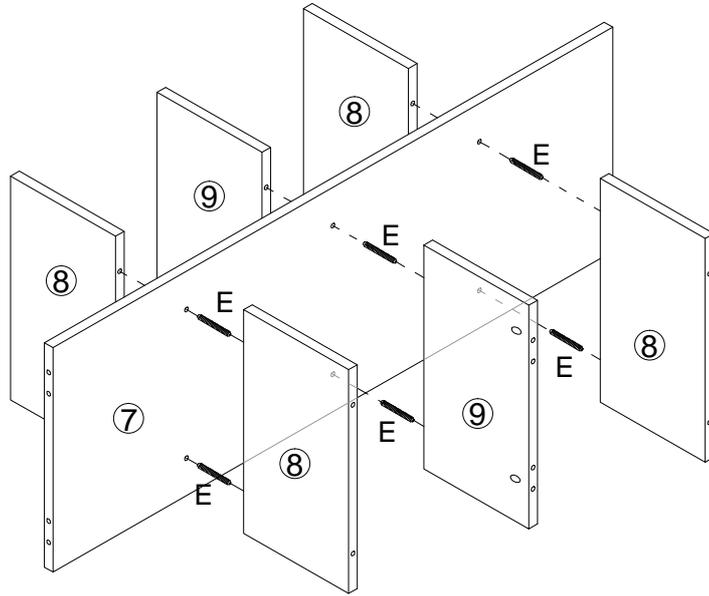STEP3



Ex6

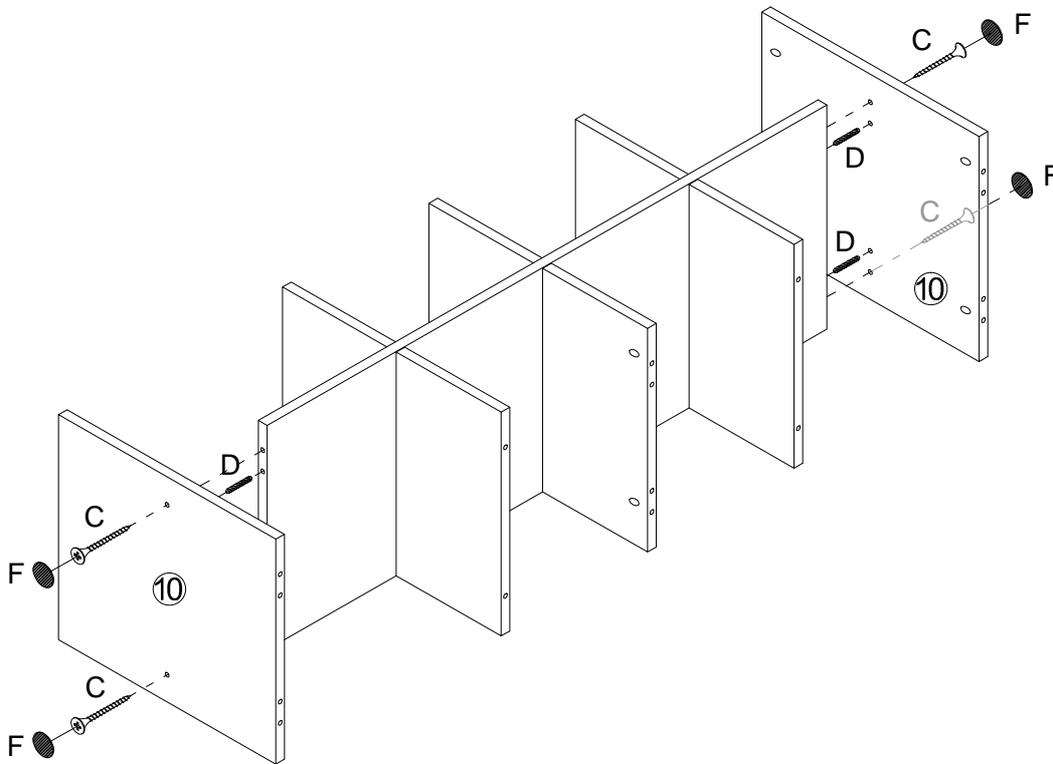STEP4



Cx4




Dx4



Fx4

KEMPTON SHOE BENCH WITH CUSHION

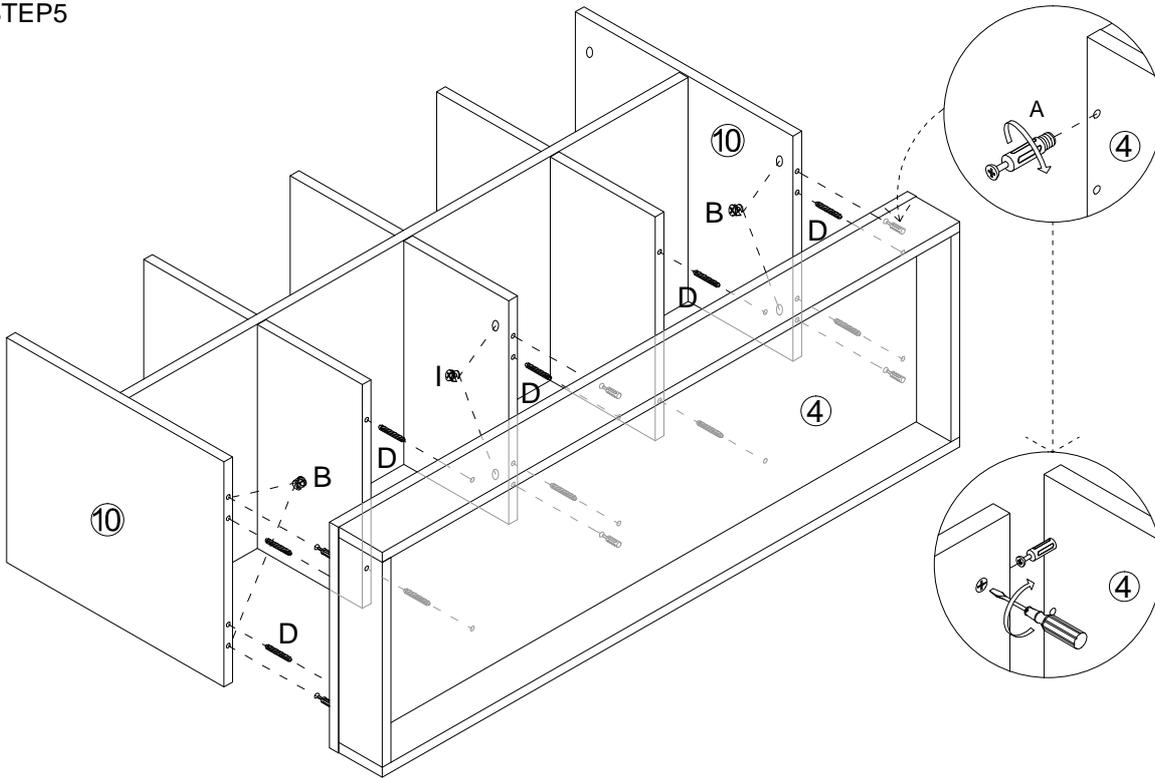STEP5



Ax6



Bx4




Dx10



Ix2

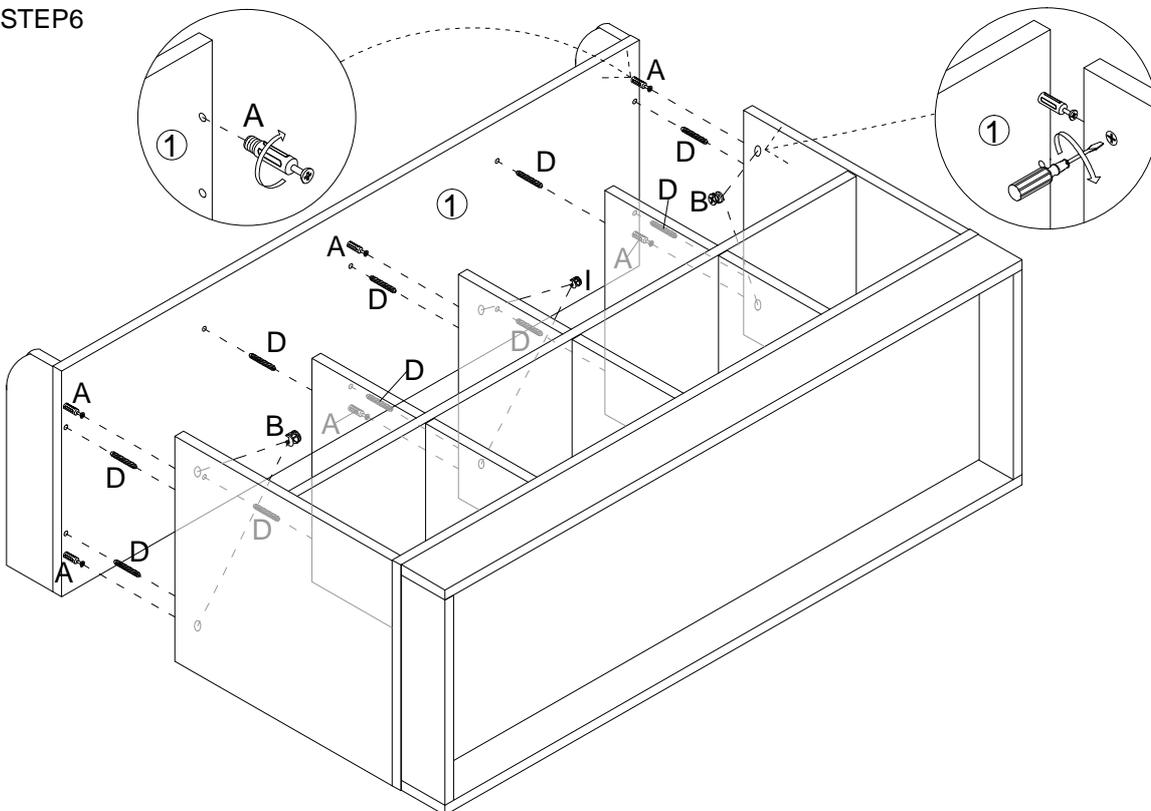STEP6



Ax6



Bx4




Dx10



Ix2

KEMPTON SHOE BENCH WITH CUSHION

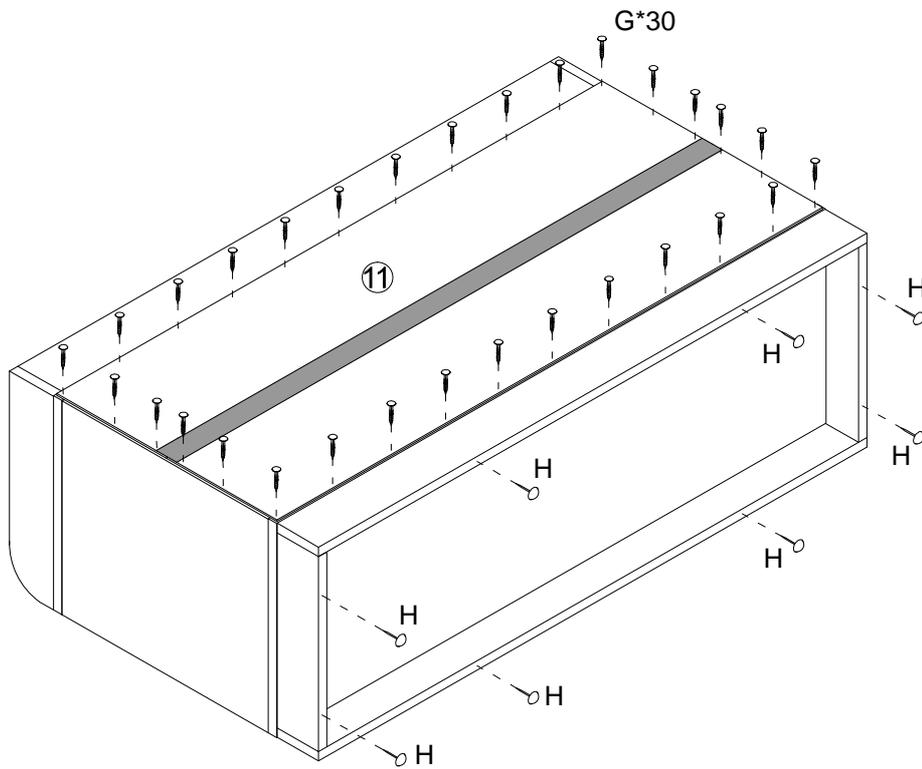STEP7



GX30



HX8

STEP8

