



HOXTON WINE CABINET ASSEMBLY INSTRUCTIONS

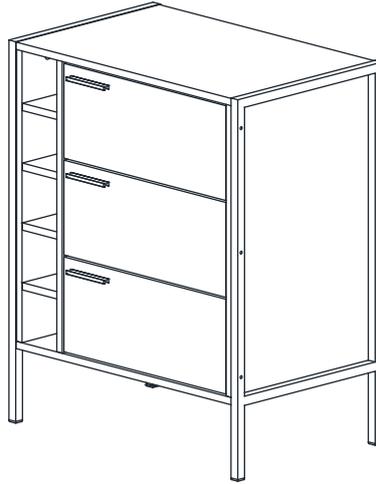


**IMPORTANT
PLEASE READ BEFORE YOU CONTINUE FURTHER**

WARNING AND INSTRUCTIONS

- **PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN PLACE. IN THE UNLIKELY EVENT THAT YOU NEED TO RETURN YOUR PRODUCT, IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE. FAILURE TO COMPLY TO THESE PROCEDURES, NO RETURN'S WILL BE ACCEPTED.**
- IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
- DUE TO THE SIZE OF THIS PRODUCT WE RECOMMEND THAT IT IS ASSEMBLED IN THE ROOM INTENDED FOR USE.
- WHEN YOU ARE READY TO START, MAKE SURE THAT YOU HAVE THE RIGHT TOOLS, PLENTY OF SPACE AND A CLEAN, DRY AREA FOR ASSEMBLY.
- UNWRAP ALL PACKAGING MATERIALS AND PLACE THE COMPONENTS ON TOP OF THE CARTON BOX OR ON A CLEAN FLOOR TO PREVENT IT FROM SCRATCHING.
- CHECK THE PACK AND MAKE SURE YOU HAVE ALL THE PARTS LISTED.
- ENSURE THAT THIS PRODUCT IS FULLY ASSEMBLED AS ILLUSTRATED BEFORE USE.
- TOOLS NOT INCLUDED.
- CHECK ALL SCREWS OR BOLTS ARE TIGHTENED AND INSPECT REGULARLY.
- THIS PRODUCT SHOULD ONLY BE USED ON FIRM LEVEL GROUND.
- KEEP SMALL PART OUT OF REACH OF CHILDREN.
- MAKE SURE THE LEGS REMAIN IN CONTACT WITH THE GROUND.
- DO NOT USE POWER TOOLS TO CONSTRUCT THIS PRODUCT.
- DO NOT TIGHTENED SCREWS UNTIL FULLY ASSEMBLED.
- DO NOT OVER TIGHTENED SCREWS OR BOLTS.
- DO NOT USE THIS PRODUCT IF PARTS ARE MISSING, DAMAGE OR WORN.
- DO NOT SIT AND STAND ON THE PRODUCT.
- TO CLEAN WIPE WITH A SPONGE AND WARM SOAPY WATER. DO NOT USE SOLVENT BASED CLEANERS OR DETERGENTS AS THEY CAN BLEACH OR DAMAGE THE PRODUCT.
- NEVER USE SCOURERS, ABRASIVES OR CHEMICAL CLEANERS.

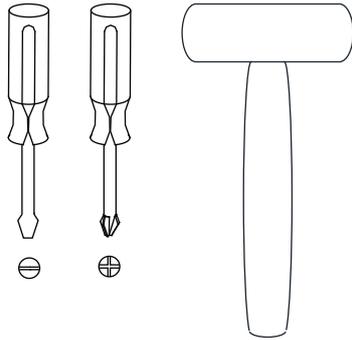


(Tools not provided)

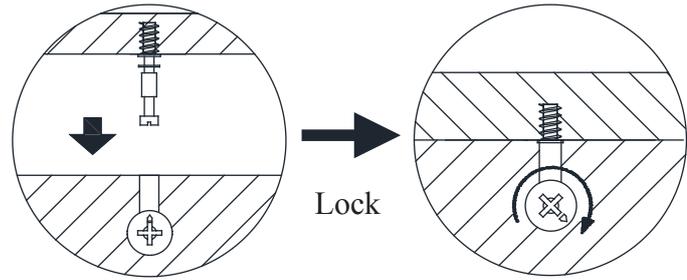

Use a flat blade screwdriver to tighten the cam nuts. A quarter turn clockwise is all that is needed.


This is how a cam nut works

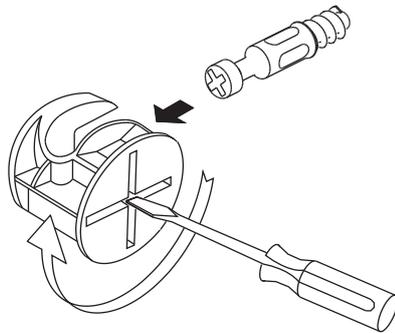

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

TWO PERSONS REQUIRED TO ASSEMBLE THIS PRODUCT

1. Please check that you have all the parts listed before you start assembling. If you do find that something is missing, do not continue assembly. Please contact your supplier immediately.
2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
3. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

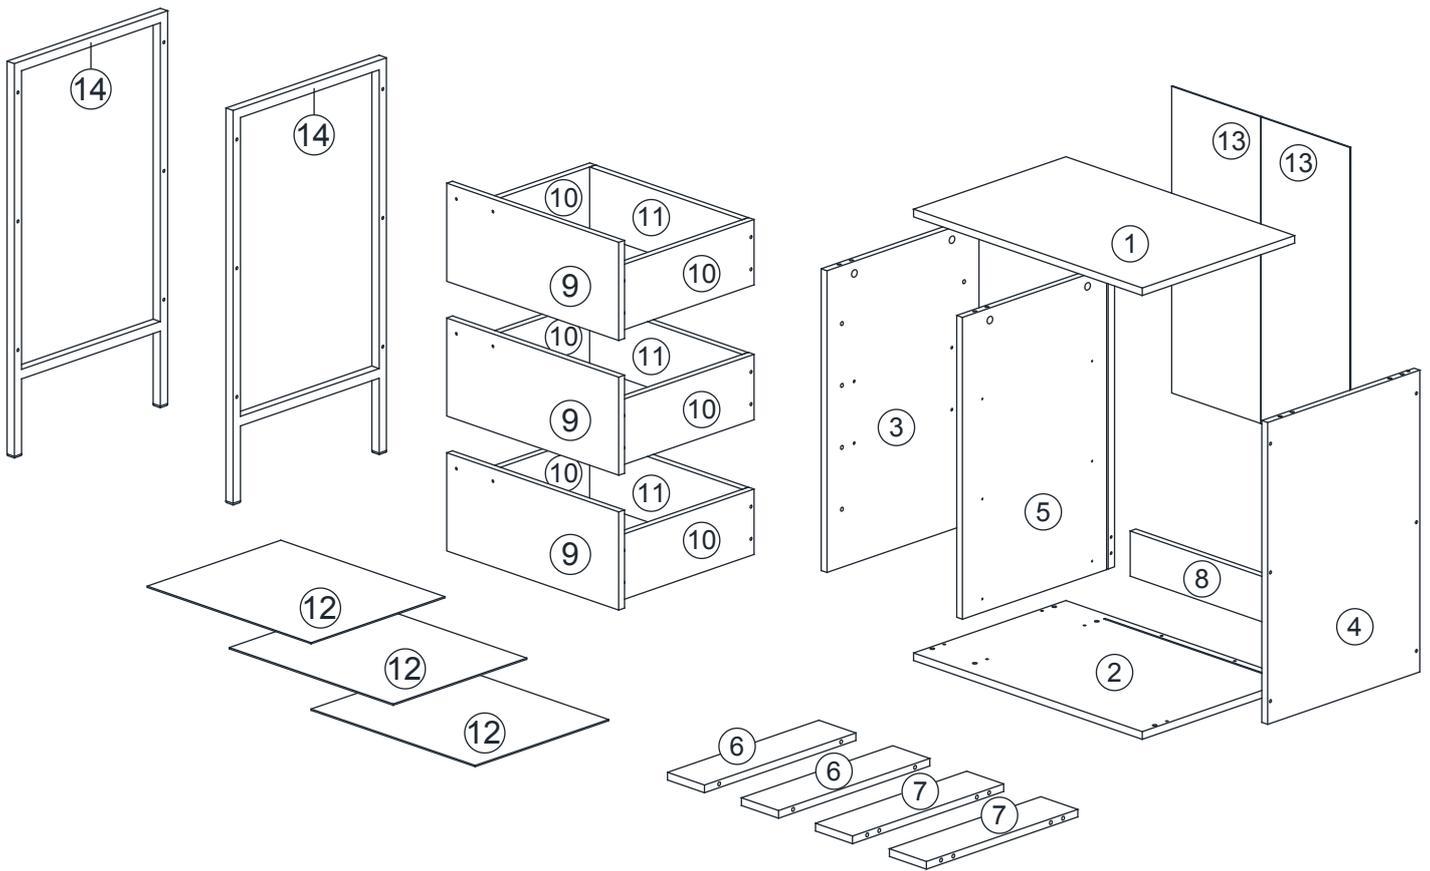

PARTS LIST

NO	PARTS					QTY
1	600	X	400	X	15	1 PC
2	600	X	400	X	15	1 PC
3	600	X	399	X	15	1 PC
4	600	X	399	X	15	1 PC
5	600	X	399	X	15	1 PC
6	97	X	397	X	15	2 PCS
7	97	X	397	X	15	2 PCS
8	456	X	90	X	15	1 PC
9	451	X	195	X	30	3 PCS
10	350	X	130	X	15	6 PCS
11	401	X	130	X	15	3 PCS
12	430	X	350	X	3	3 PCS
13	610	X	233	X	3	2 PCS
14	785	X	402	X	19	2 PCS

HARDWARE LIST


NO	DESCRIPTION		QTY
A		WOOD DOWEL M8 x 25mm	28
B		CB SCREW M3.5 x 16mm	36
C		CB SCREW M4 x 38mm	24
D		CSK CAP WOOD M6 x 50mm	6
E		HANDLE SCREW M4 x 19mm	6
F		HANDLE SCREW M4 x 30mm, WASHER	12
G		CAM NUT	20
H		CAM BOLT	20
I		CAM CAP	20
J		HANDLE	3
K		L KEY	1
L		NAIL 5/8	30
M		3mm PVH	1
N		DRAWER SLIDE 14"	3
O		DRAWER SLIDE 14"	3
V		CB SCREW M3.5 x 16mm	2
W		CB SCREW M4 x 38mm	2
X		SAFETY STRAP	2
Y		PLASTIC WALL ANCHOR	2
Z		WASHER	4

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 1

A		WOOD DOWEL M8 x 25mm	28
---	--	----------------------	----

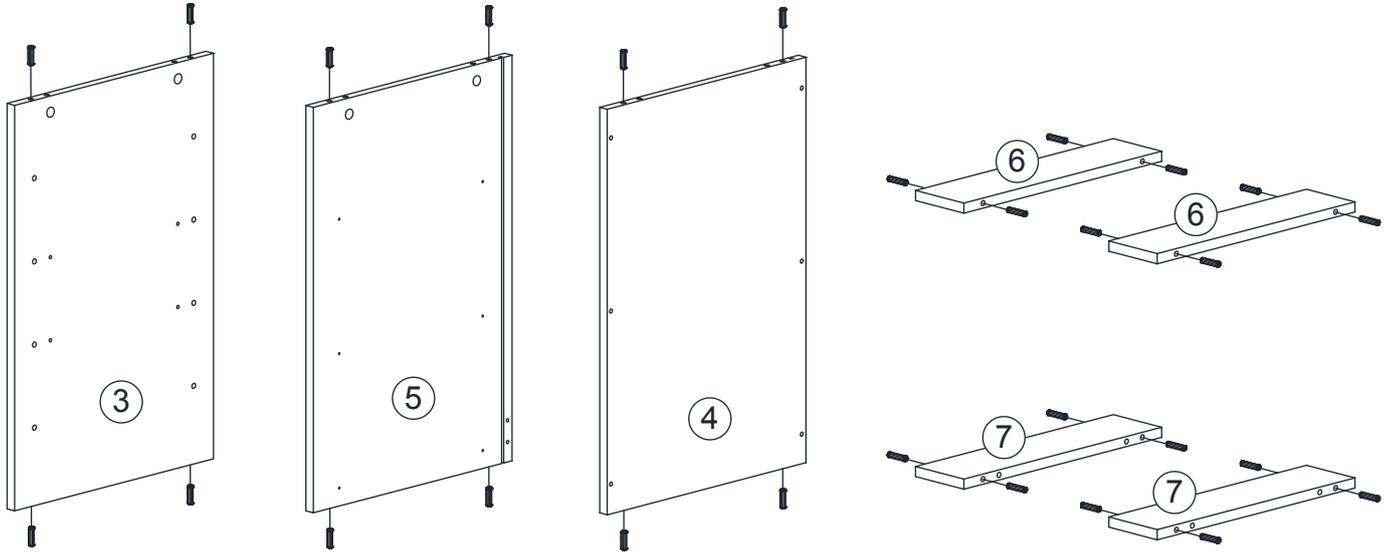

STEP 2

H		CAM BOLT	20
---	---	----------	----

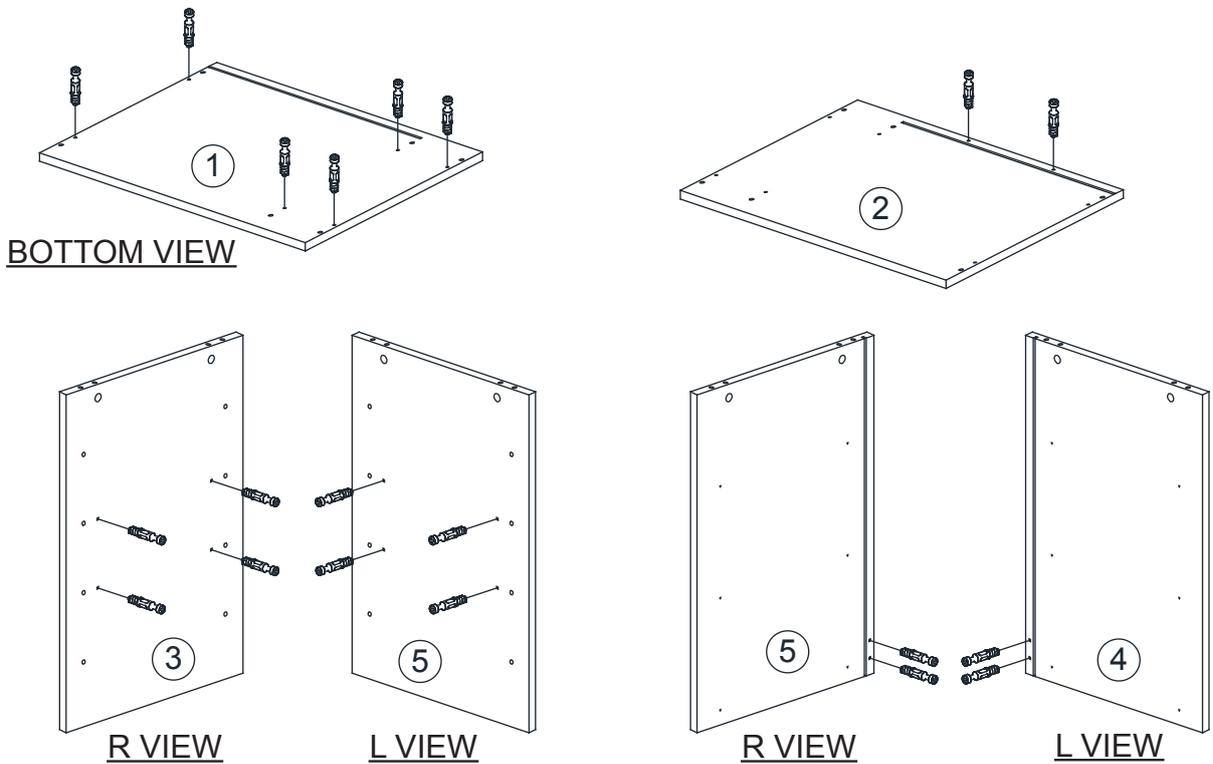


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 3


G	 CAM NUT	20
---	--	----

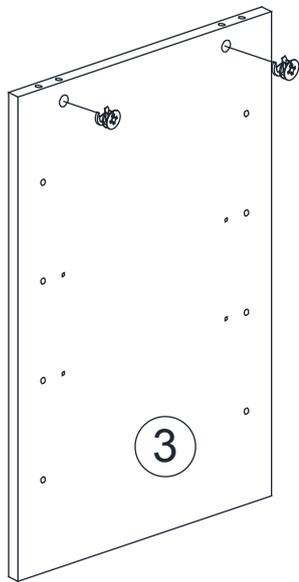


R VIEW

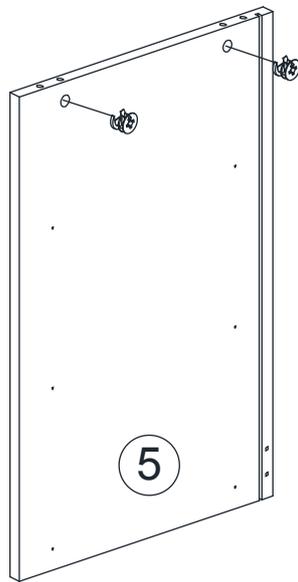


R VIEW

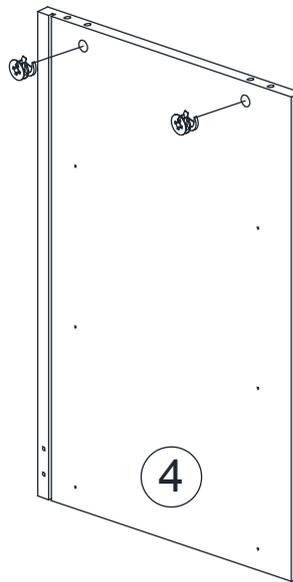


L VIEW

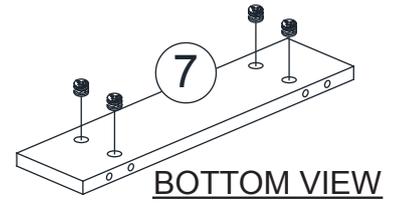

BOTTOM VIEW

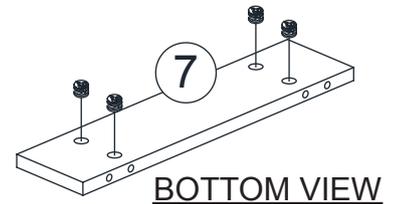




BOTTOM VIEW

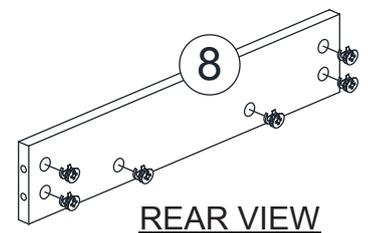

REAR VIEW

STEP 4

C	 CB SCREW M4 x 38mm	24
---	--	----

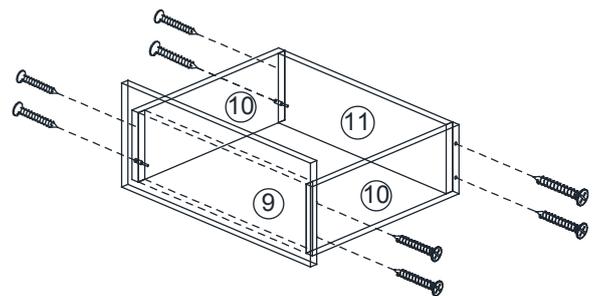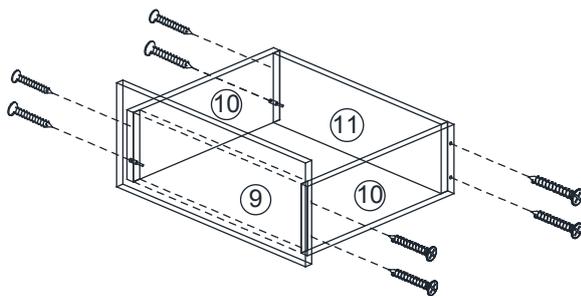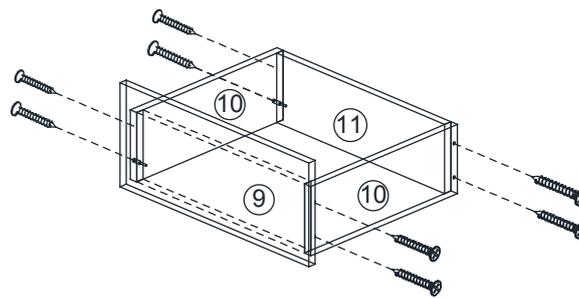


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 5

L		NAIL 5/8	30
---	--	----------	----

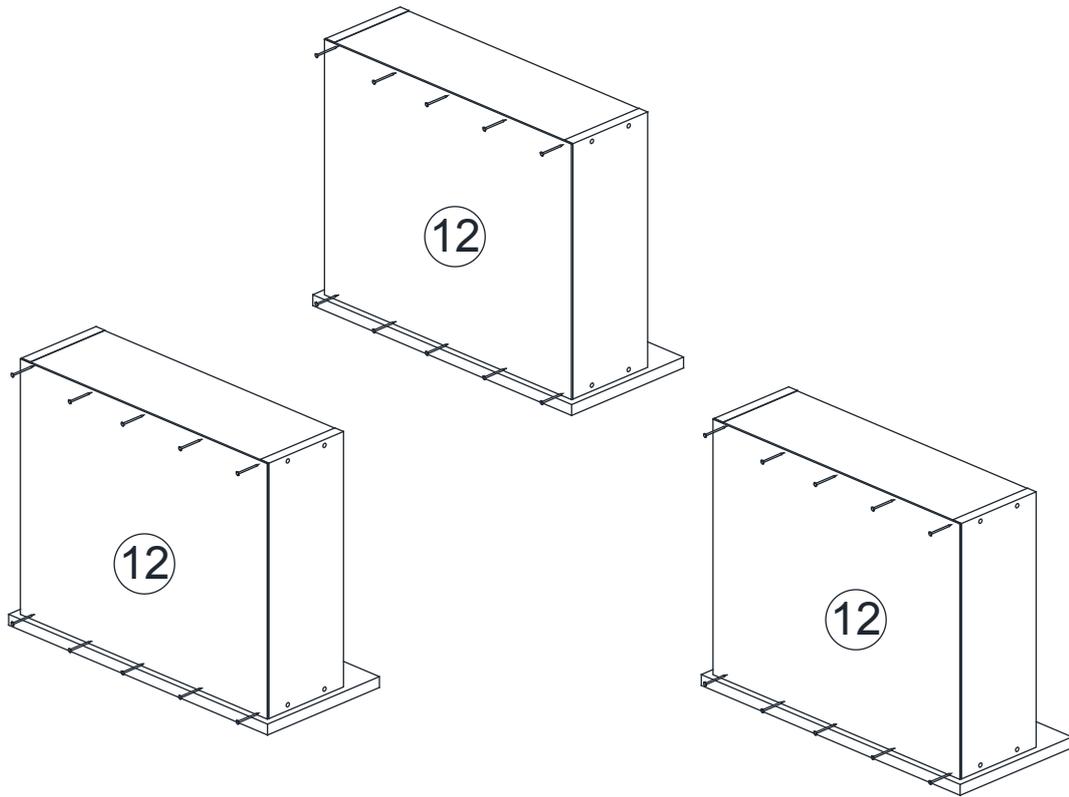

STEP 6

B		CB SCREW M3.5 x 16mm	36
N	 	DRAWER SLIDE 14"	3
O	 	DRAWER SLIDE 14"	3

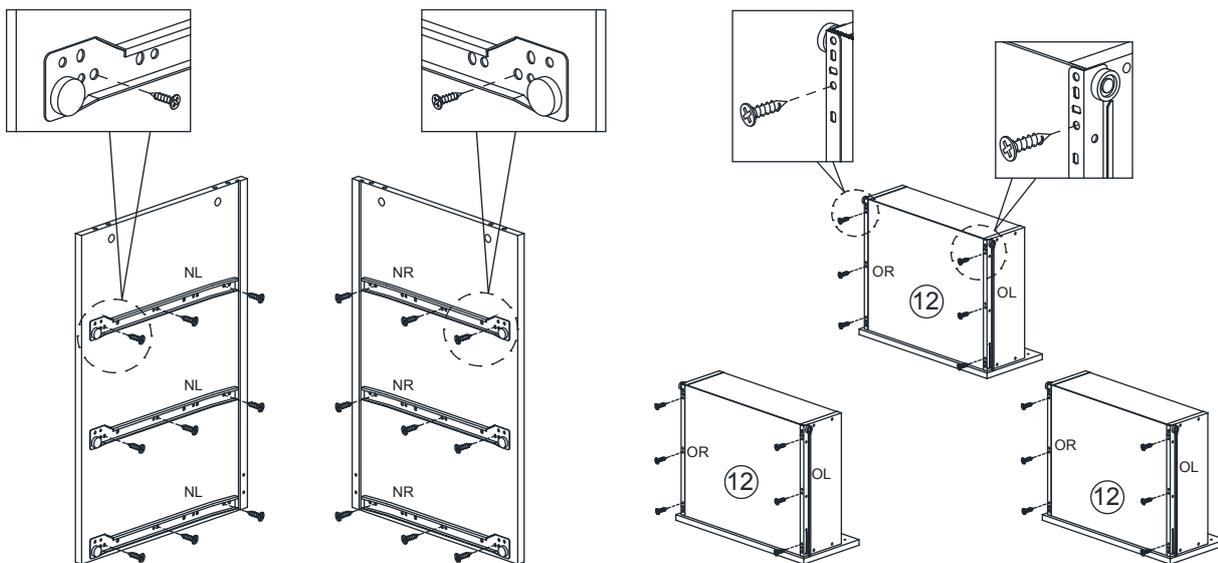





R VIEW ⑤ ④ **L VIEW**

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.






STEP 7

E	 HANDLE SCREW M4 x 19mm	6
J	 HANDLE	3

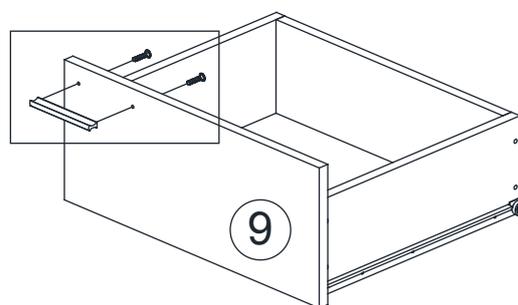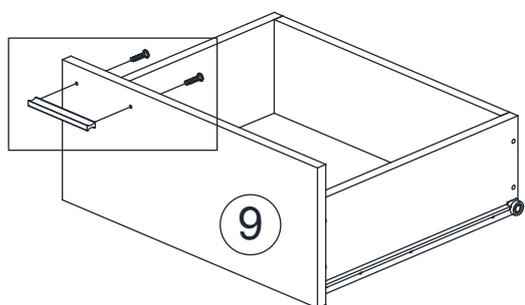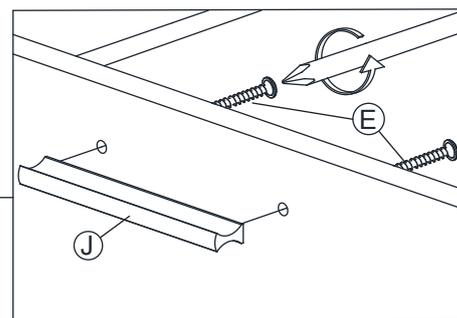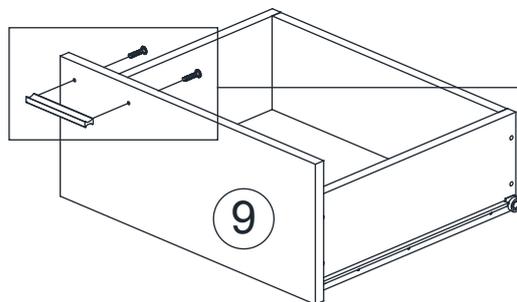

STEP 8

I	 CAM CAP	12
K	 L KEY	1

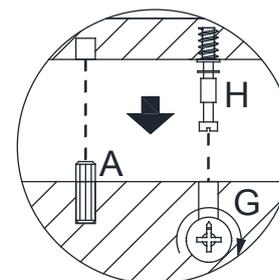
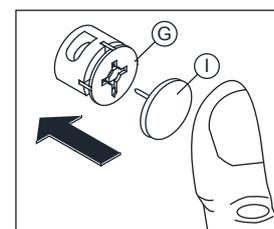
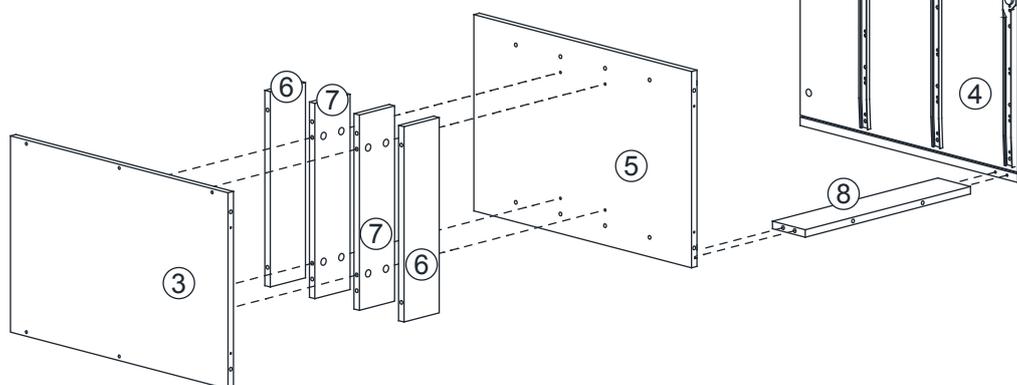


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.







STEP 9

D	 CSK CAP WOOD M6 x 50mm	6
I	 CAM CAP	2
K	 L KEY	1

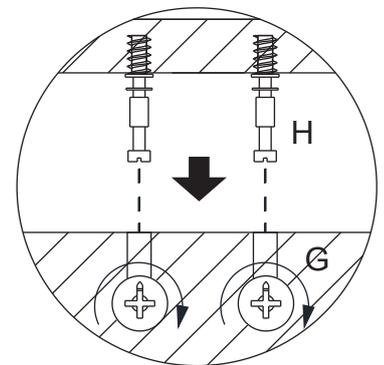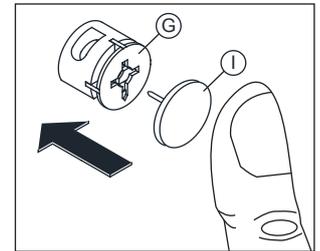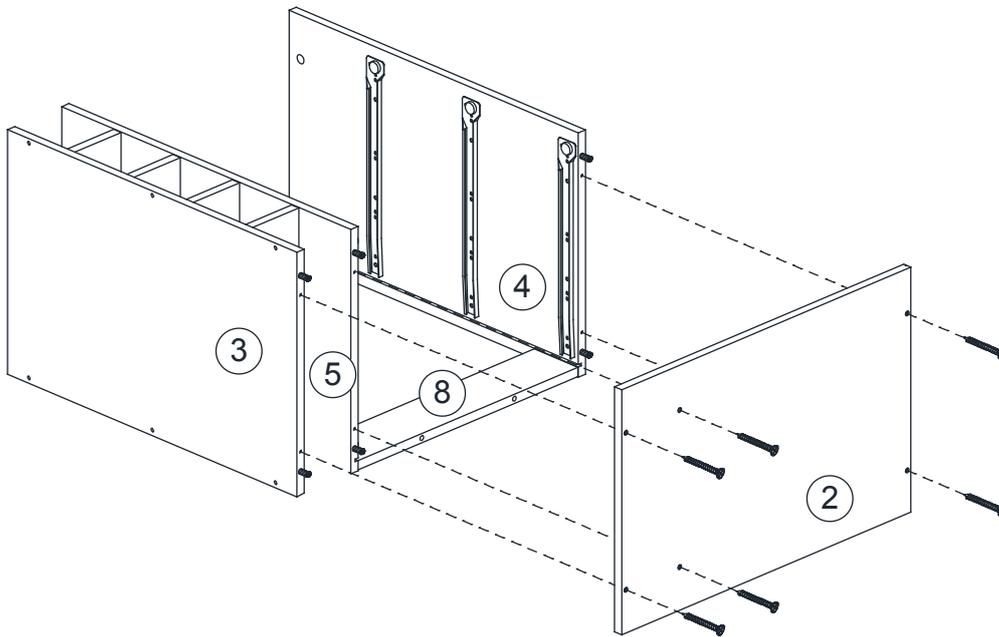

STEP 10

I	 CAM CAP	6
M	 3mm PVH	1

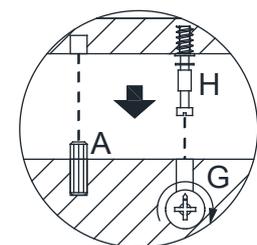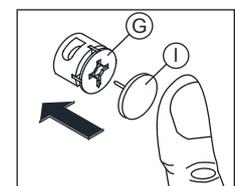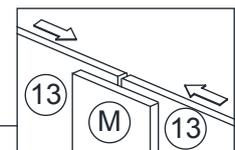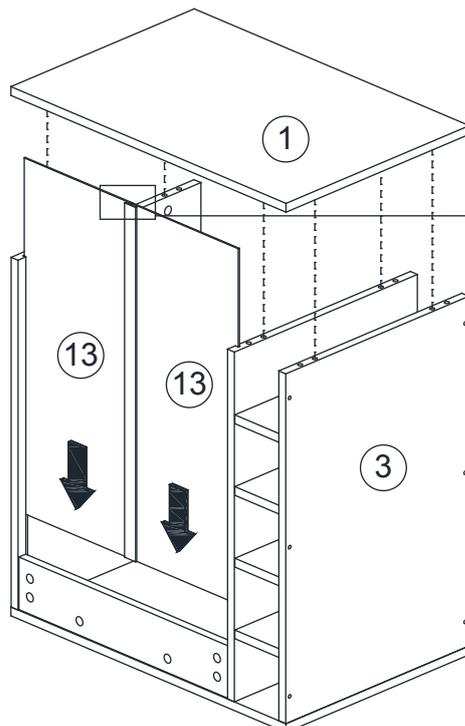

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 11

F




HANDLE SCREW M4 x 30mm & WASHER

12

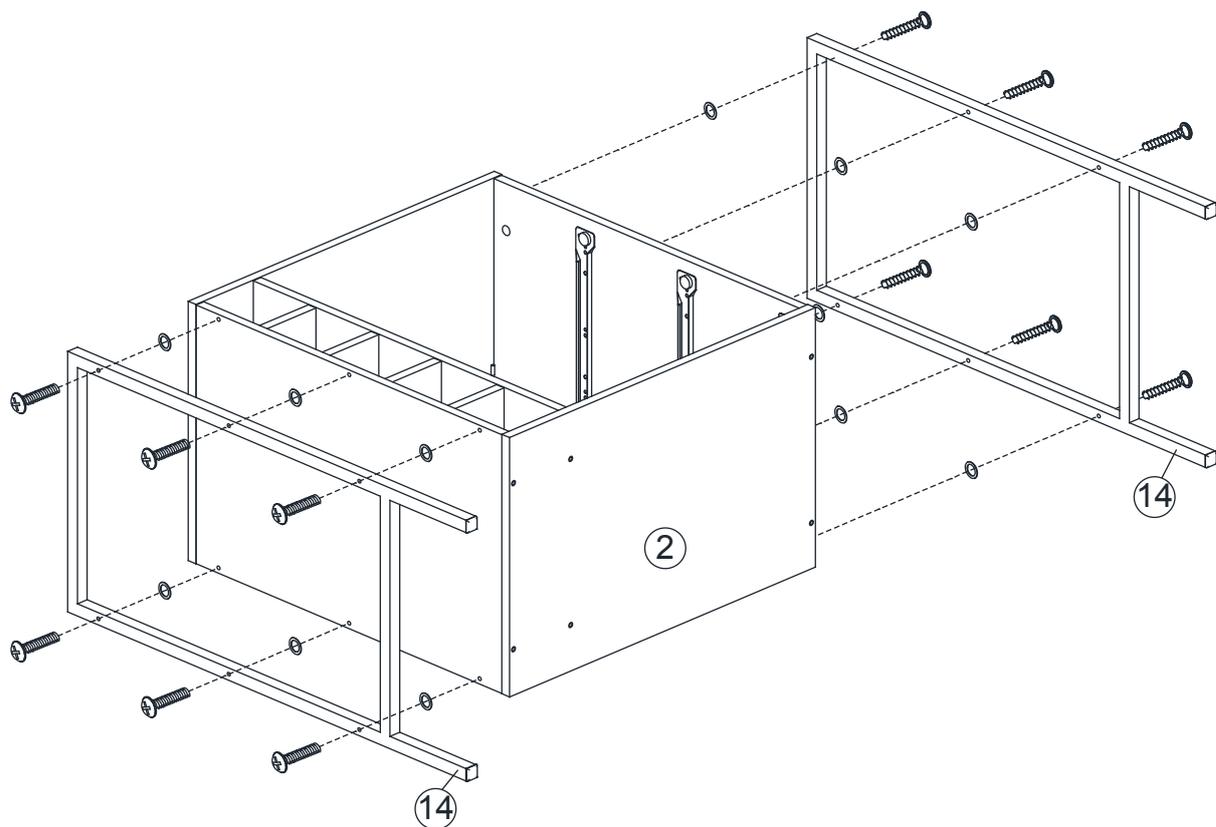


STEP 12

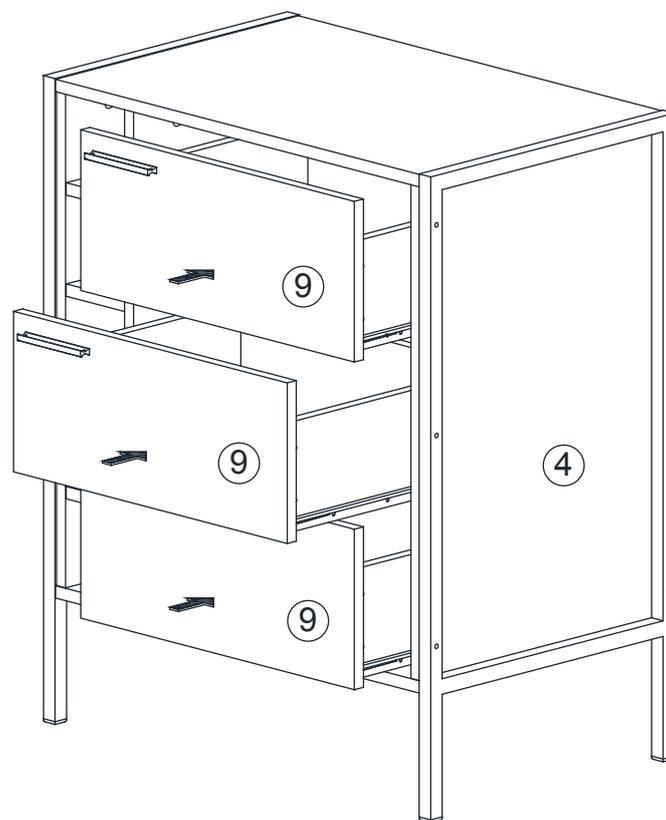

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



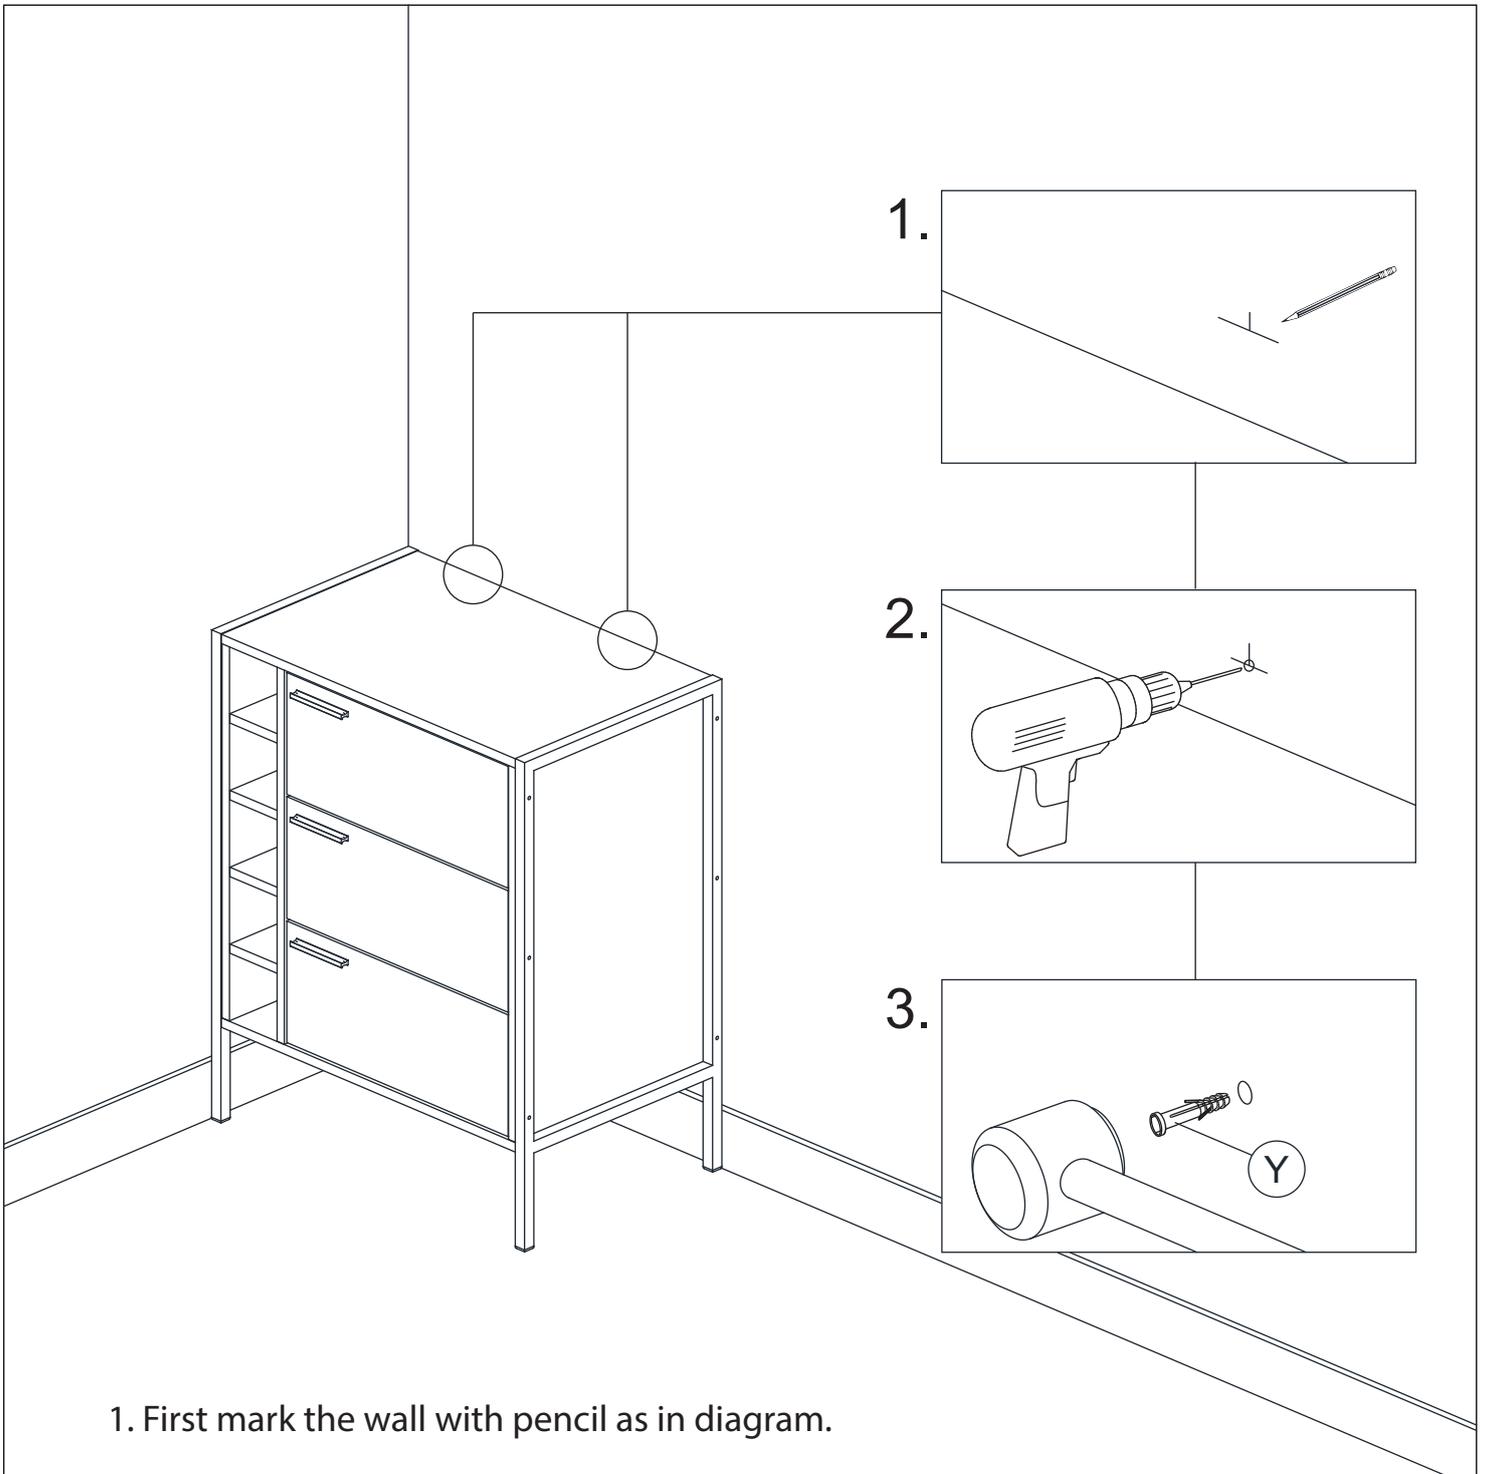

1. First mark the wall with pencil as in diagram.

2. Drill small hole at the pencil mark.

3. Insert plastic wall anchor (Y).

V




x 2

W



x 2

X



x 2

Y




x 2


Z



x 4

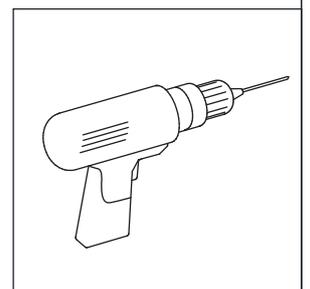

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

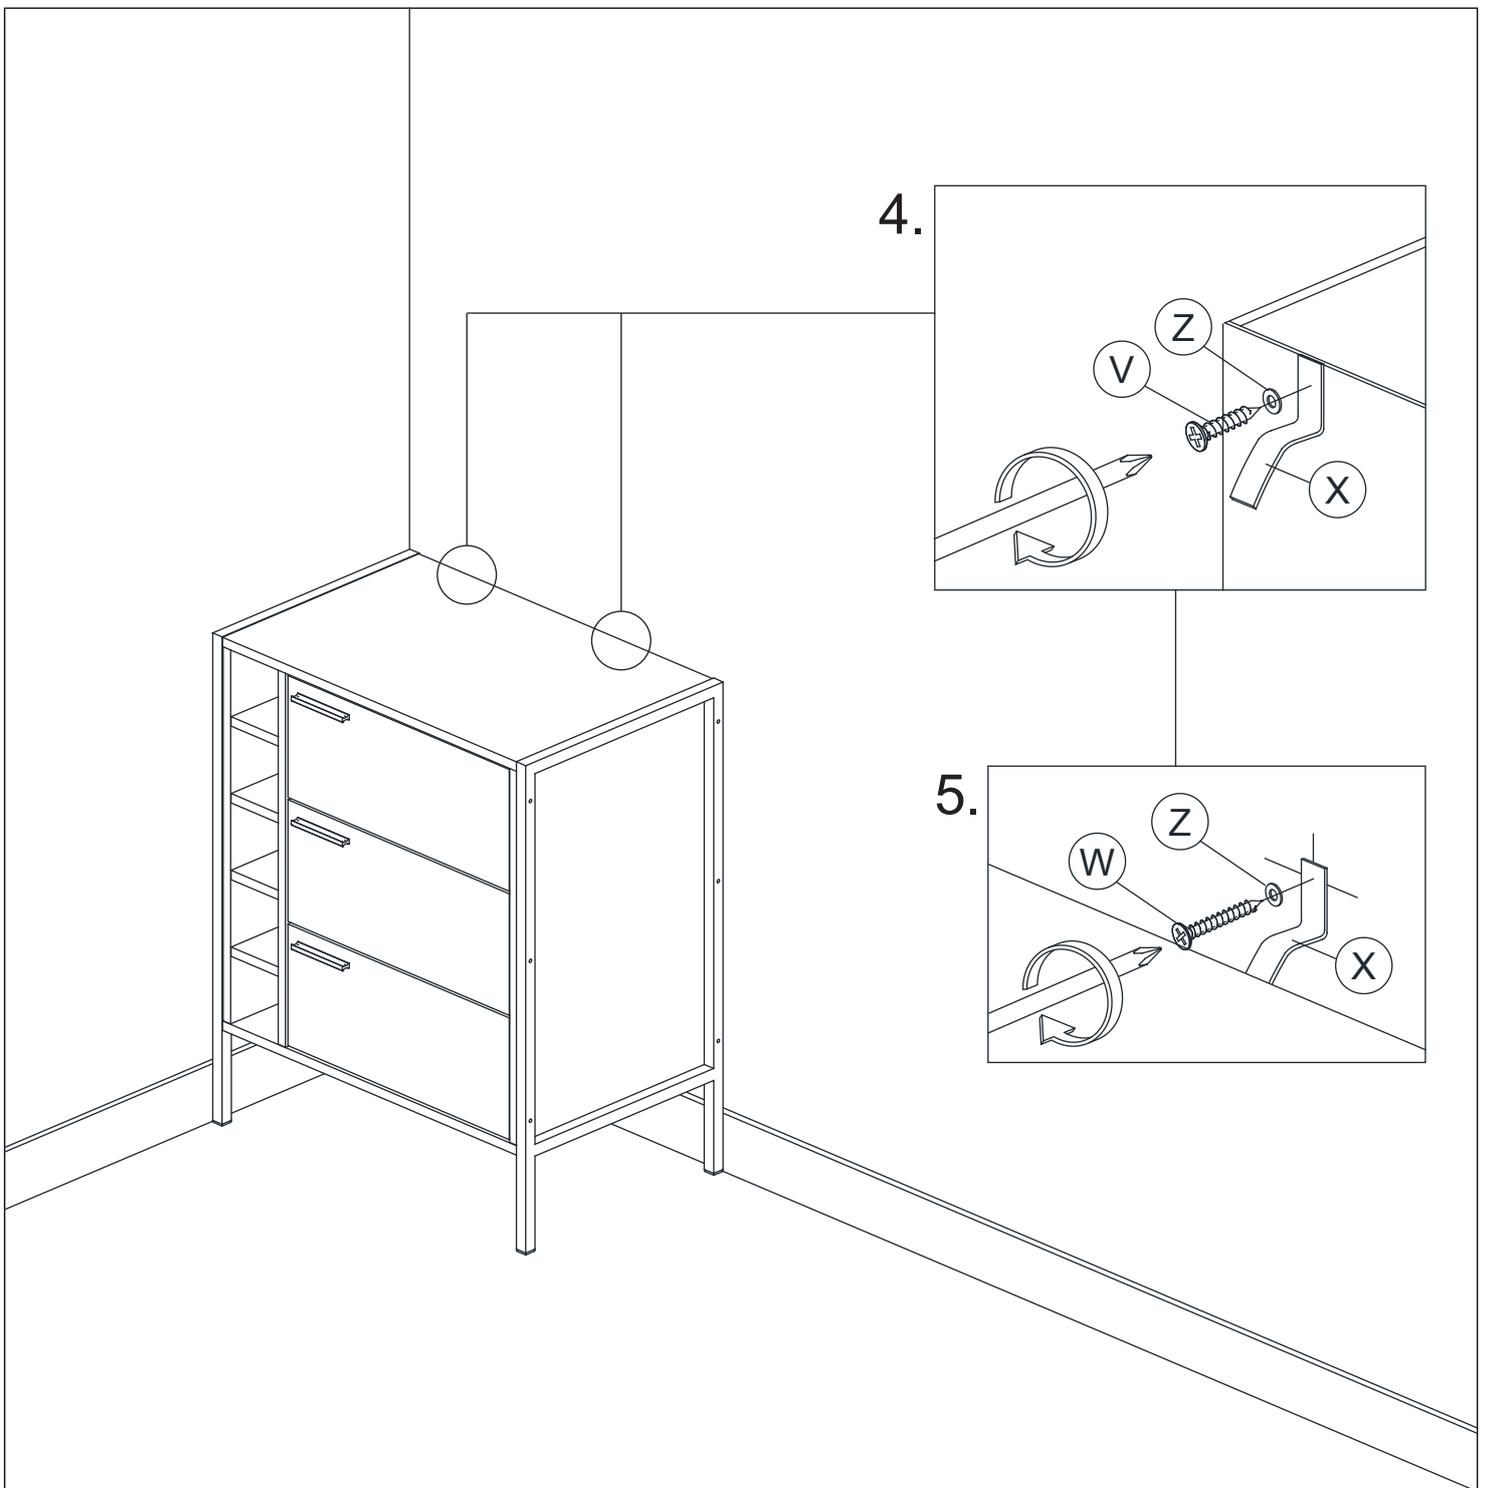

4. Add safety strap (X), washer (Z) using 3.5 x 16mm screw (V) to back of cabinet.

5. Finally, attach safety strap (X) and washer (Z) using 4 x 38mm screw (W) to the wall.

V




x 2

W



x 2

X



x 2

Y




x 2

Z



x 4

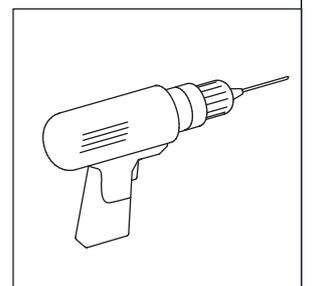

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.