


Divan Base Assembly Instructions for 2ft6 and 3ft Shallow Bases

- Remove all polythene / cardboard corners from your new divan base and dispose of carefully for recycling.


- Turn the divan base on its side and insert the legs / feet into the corresponding holes on each corner and the middle of the base.

If you have chosen a base on legs, screw the legs into the locator holes on the underside of the base.

If you have chosen a shallow base on castors or glides, gently knock them into place using a rubber mallet. If you have difficulty doing this, insert a small screwdriver into the locator hole to clear the blockage.

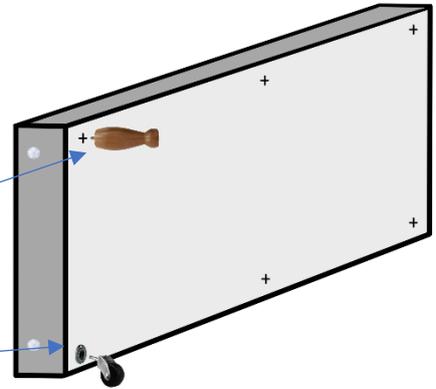

- Insert the 2 headboard bolts into the locator holes at the headend of the base by piercing the fabric where marked.

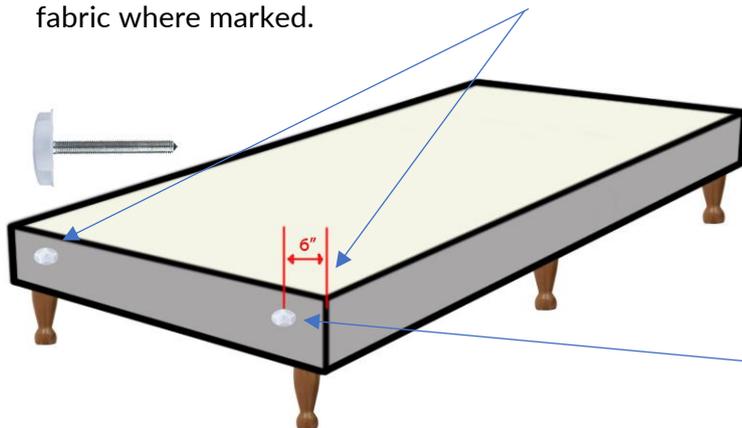

If the holes are not marked, they are located 6" from the edge of the base