

Assembly Instructions

Thank you for purchasing a Birlea product.

For a chance to win a *Love 2 Shop* voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture and using the hashtag **#ShareYourStyle** and **#Birlea**. One winner will be selected at random each month.

To view our full terms and conditions please visit our website. www.birlea.com

Are you happy with your purchase?

- Yes: That's great, we would love to hear more from you. Please leave us a review on our social media channels or Trustpilot. Your feedback will be greatly appreciated.
- **No:** If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer you purchased the item from. We will work with the retailer to resolve your issue as quickly as possible.



www.birlea.com

ASSEMBLY INSTRUCTIONS HOUSTON 2 DRAWER BEDSIDE

IMPORTANT : READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE YOUR HOUSTON 2 DRAWER BEDSIDE .

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY:

Assembly should be carried out with this item laying flat, not standing upright. Assemble on a soft, clean surface to prevent damages. To erase the numbers printed on the pieces, use the rubber inside the accessories pack.

HEALTH & SAFETY:

DO NOT use this product if any parts are missing, damaged or worn. DO NOT use this product unless all fixings are secured. Always use on a level, even surface.

CARE & MAINTENANCE:

Periodically check all screws & fixings to ensure they are secure. DO NOT push this product as this will cause damage. Always lift this product with two people to repositions. Keep any sharp objects away from this product.







Page 1 of 7


				Vendor: S000	350
01					
. 03			05		
<u> </u>					
08		1			l
					\wedge
		08	K		
06			07		08
Parts List	Hard	ware List			
Part Descripion	Qty	Part	Description		Qty
01 Top panel	1	A1	Cam lock	× P	4
02 Bottom panel	1	A2	Minifix screw		4
03 Side panel (Left)	1	A3	Plastic cap	U	4
04 Side panel (Right)	1	В	M8 x 30mm Wood Dowel		8
05 Back panel	1	C	M6 x 50mm CSK Cap Wood screw		4
06 Drawer front (Up)	1	D	Allen key M4		1
07 Drawer front (Down)	1	E	M3 x 12mm C.B Screw		2
08 Drawer side	4	F	M3.5 x 16mm C.B Screw		24
09 Drawer back	2	G	M4 x 38mm C.B Screw	€	16
10 Drawer bottom 11 Metal frame	2	H	JCBC screw M6 x 30mm		4
11 Metal frame 12 Metal bone	24	J1	JCBC screw M6 x 40mm Stud 192		8
** You will need a small mallet and a	4	J1 J2	Stud 192 Stud 192 screw		4
screwdriver for assembly.		JZ K	4020 L Bar 100mm		4
** Some screws and wooden dowel		L1	14" Drawer slide (Left / Right)		4
may remain.		L1 L2	14" Drawer slide (Left / Right)		4
Birlea					


Suppliers of inspiration

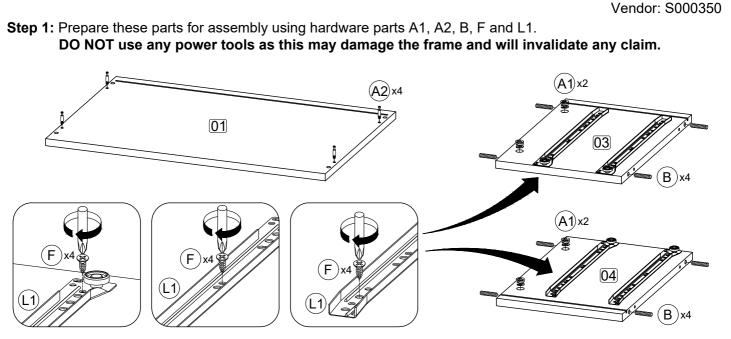


Step 2: Attach side panel (3) and (4) to top panel (1) using hardware A1 and A2 with a screwdriver (not provided). DO NOT use any power tools as this may damage the frame and will invalidate any claim.

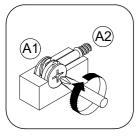


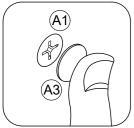

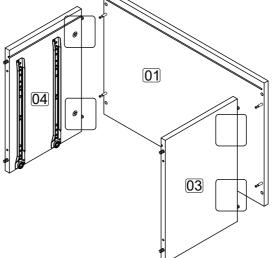






Step 3: Insert back panel (5) along the slot. DO NOT use any power tools as this may damage the frame and will invalidate any claim.

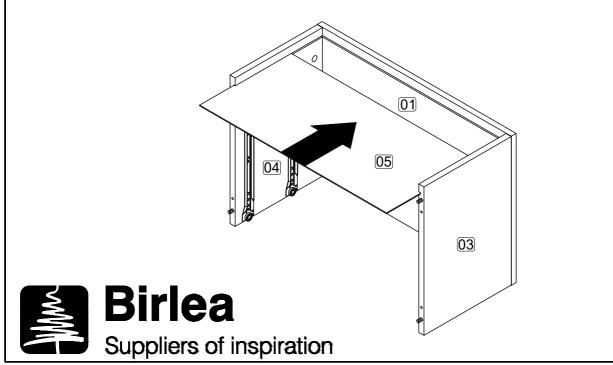


Page 3 of 7

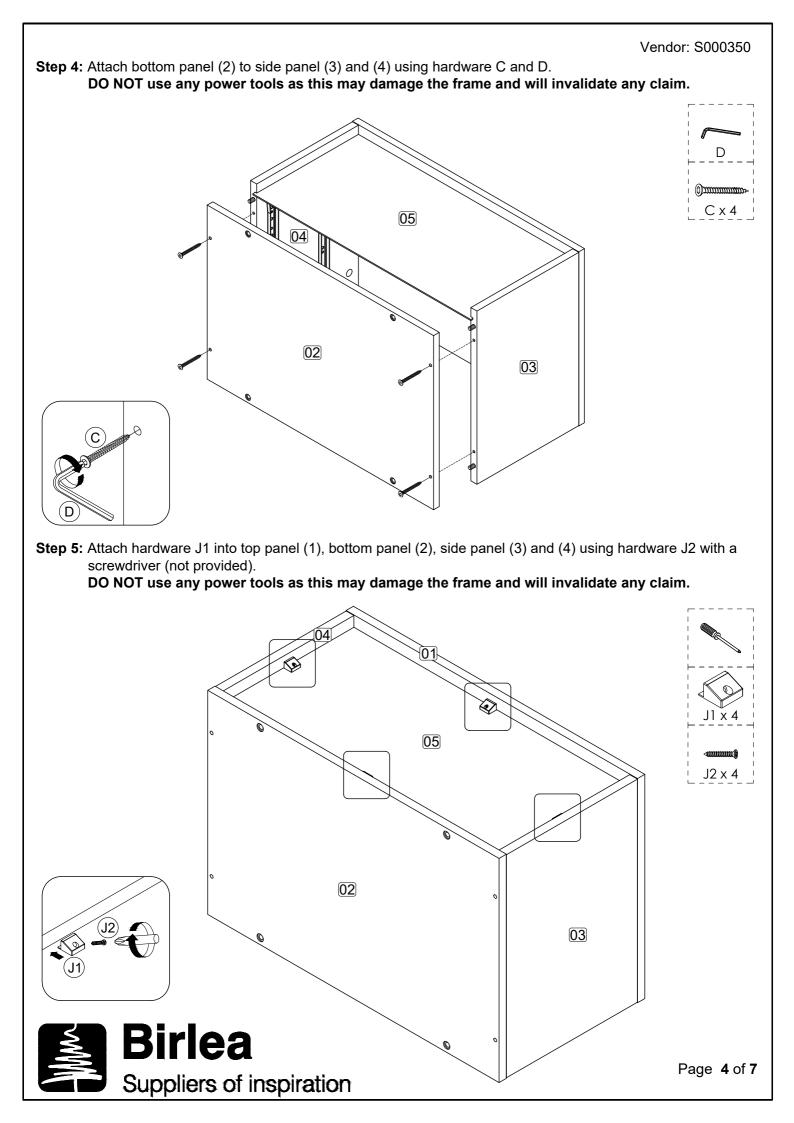

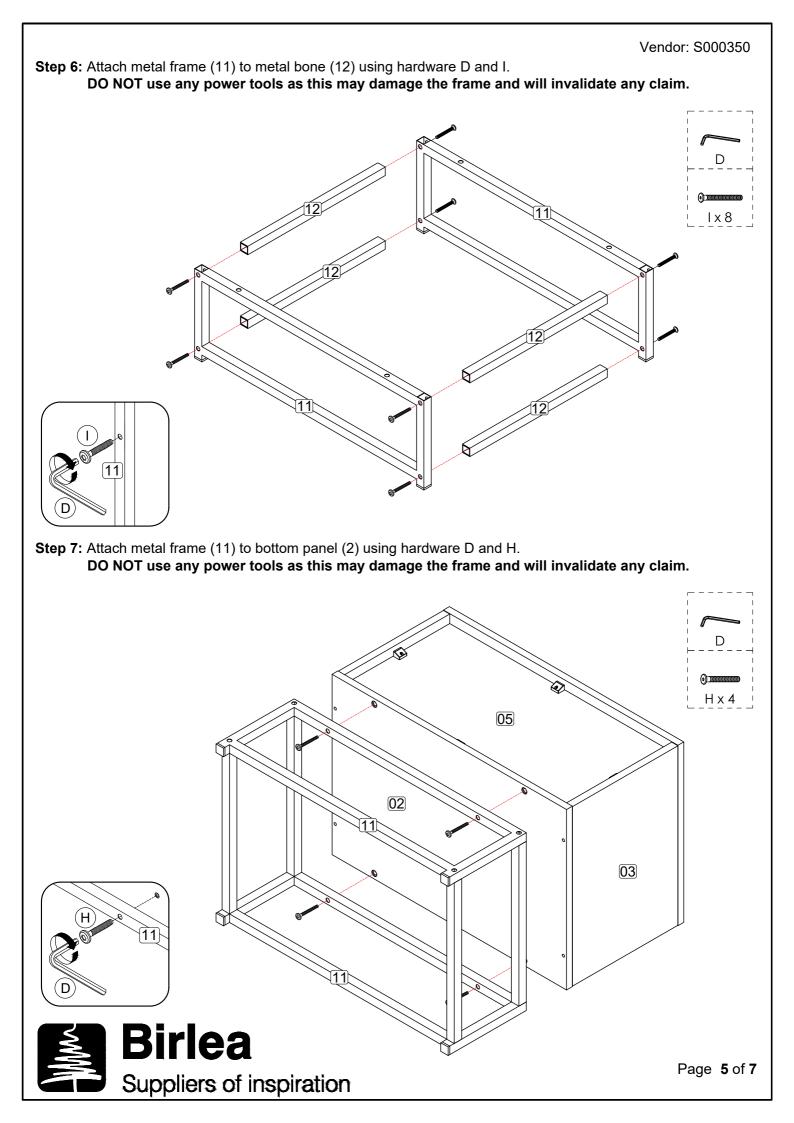

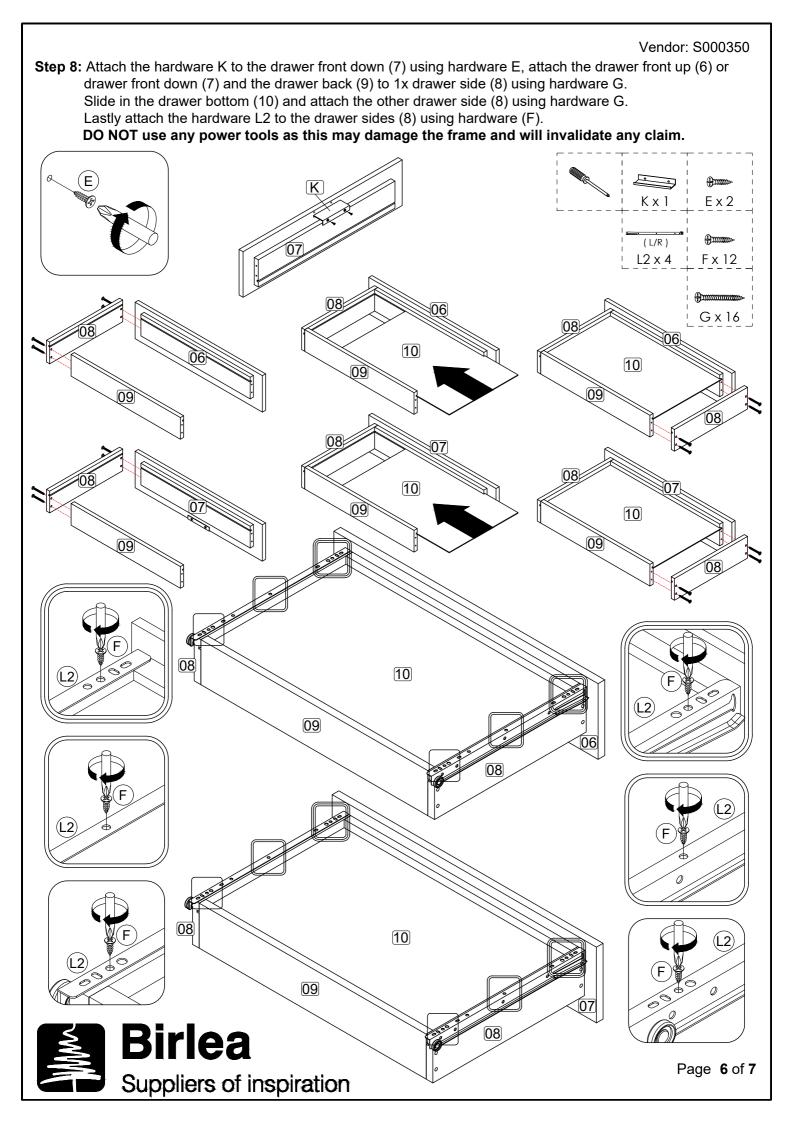

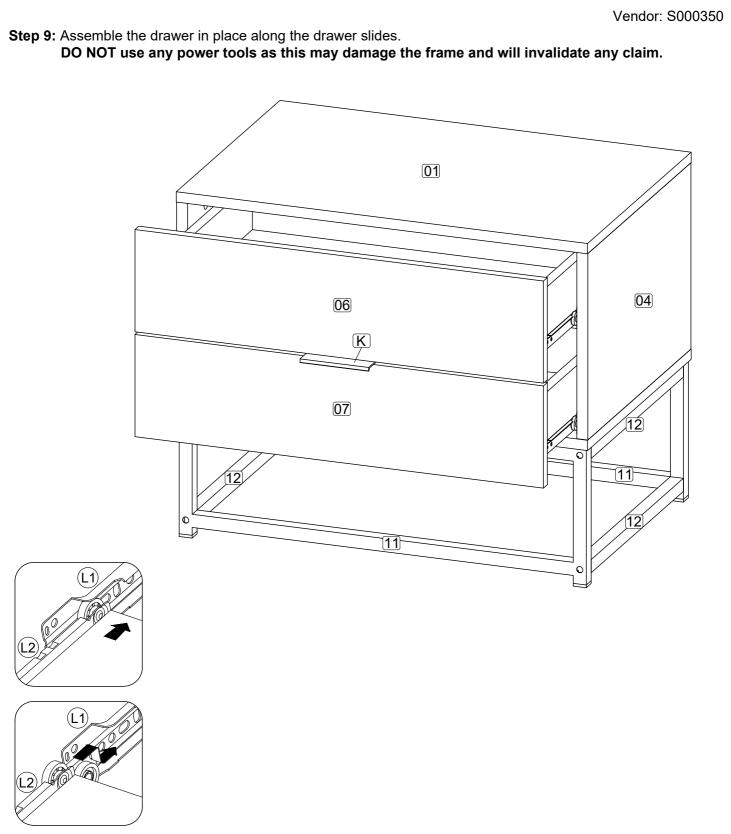

Additional Information:

- For complete product information, images and dimension diagrams please visit the website <u>www.birlea.com</u>
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to <u>info@birlea.com</u> to be shared in our #birleahome feature on instagram.

