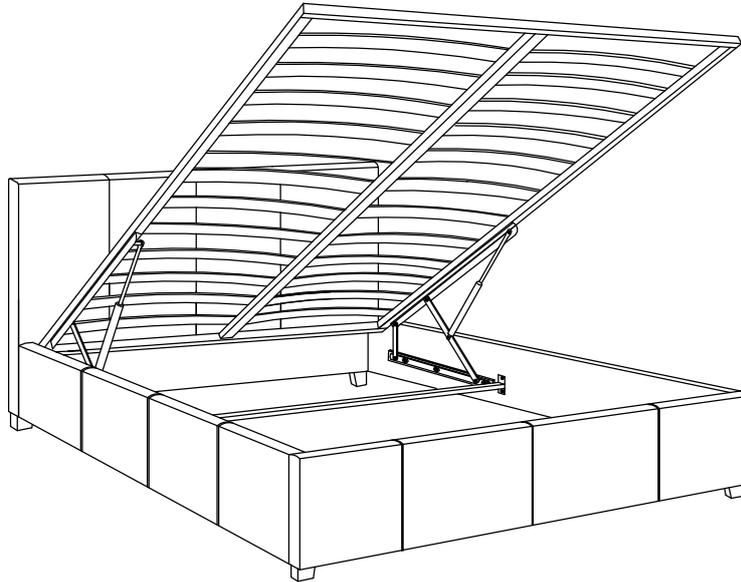


## WAVERLEY 4`6" STORAGE BED ASSEMBLY INSTRUCTIONS



### IMPORTANT

#### PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.

ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE.

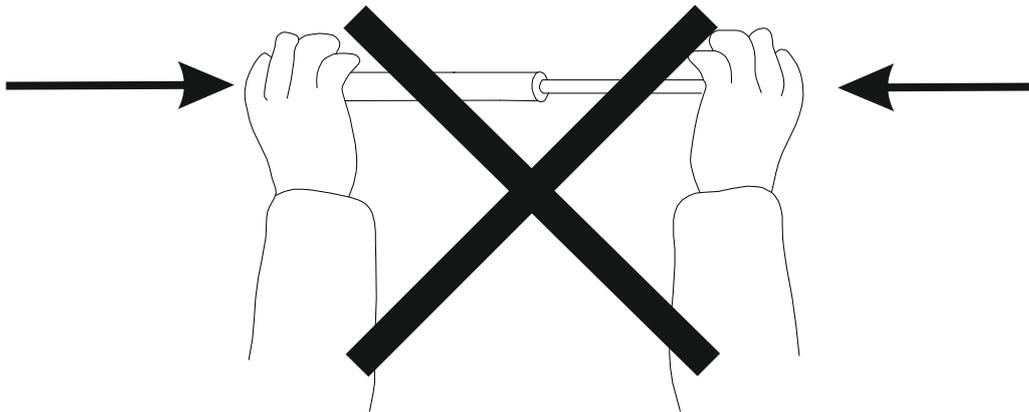
DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING YOU MAY USE A DAMP CLOTH (NOT WET).


THIS PRODUCT MAY STAIN OR MARK IF ALLOWED TO COME INTO CONTACT WITH WET OR DAMP OBJECTS AS MATERIALS USED HAVE NOT BEEN SCOTCH GUARDED.

# Important information!

The gas lifts used in the construction of this product are extremely strong and cannot be operated by hand when not fitted to the ottoman hinges. All gas lifts are tested in the factory for correct pressure and operation before use.











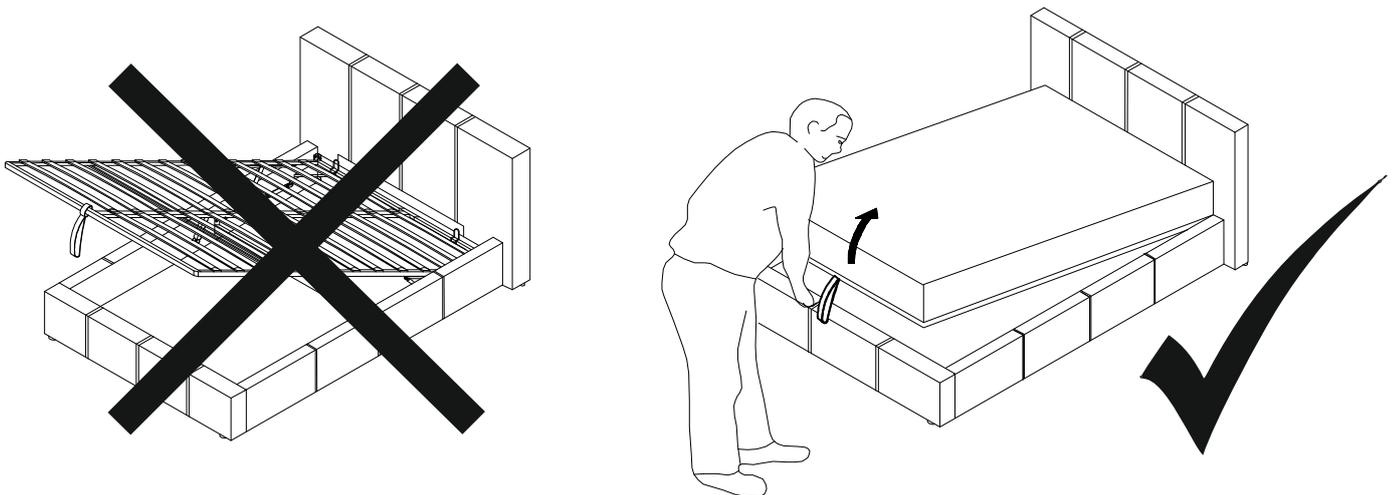
You must ensure the **MATTRESS** is on the bed frame before lifting the mechanism.  
**FAILURE TO DO SO MAY RESULT IN INJURY.**






Initially it might appear that the gas lifts are very stiff when opening and closing the ottoman frame, **THIS IS NORMAL.**

After operating the ottoman a few times, the movement of the gas lifts and the opening and closing of the ottoman will become easier.

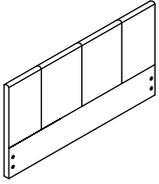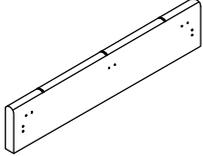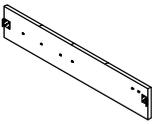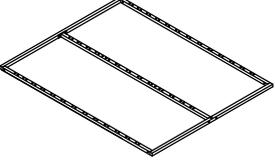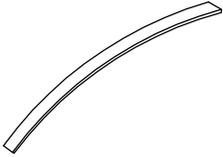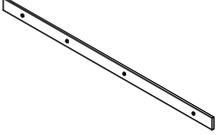Parts List

<p><b>A:HEADBOARD 1PC</b></p> 	<p><b>B:FOOTBOARD 1PC</b></p> 	<p><b>C:SIDE RAIL 2PCS LEFT AND RIGHT</b></p> 	<p><b>D: FRAME KD 1SETS</b></p> 
<p><b>E:SLAT 24PCS</b></p> 	<p><b>F:CORNER BRACKET 2PCS</b></p> 	<p><b>G:GAS LIFT 2PCS</b></p> 	<p><b>H:HINGES LEFT AND RIGHT 2PCS</b></p> 
<p><b>I:SUPPORT BLOCK 2PCS</b></p> 	<p><b>J : CROSS BAR 1PC</b></p> 	<p><b>K : LEG 4PCS</b></p> 	<p><b>L : SIDEBAR 2PCS</b></p> 
<p><b>M : NON-WOVEN BED BASE 1PC</b></p> 			

Hardware List

<p><b>1:BOLT 16PCS</b></p>  <p>M8X45mm</p>	<p><b>2:BOLT 8PCS</b></p>  <p>M8X30mm</p>	<p><b>3:BOLT 8PCS</b></p>  <p>M6X40mm</p>	<p><b>4:BOLT 12PCS</b></p>  <p>M6X20mm</p>	<p><b>5:FLANGE NUT 4PCS</b></p>  <p>M6X10mm</p>	<p><b>6:NUT 12PCS</b></p> 
<p><b>7:FLAT WASHER 28PCS</b></p>  <p>M8</p>	<p><b>8:SPRING WASHER 28PCS</b></p>  <p>M8</p>	<p><b>9:ALLEN KEY 1PC</b></p>  <p>M8</p>	<p><b>10:SPANNER 1PC</b></p> 	<p><b>11:SLAT CAP 24PCS</b></p> 	<p><b>12:DOUBLE PLASTIC CAP 12PCS</b></p> 
<p><b>13:METAL PLATE 1PC</b></p> 	<p><b>14:ALLEN KEY 1PC</b></p>  <p>M6</p>	<p><b>15:FLAT WASHER 20PCS</b></p>  <p>M6</p>	<p><b>16:SPRING WASHER 20PCS</b></p>  <p>M6</p>	<p><b>17 1PC</b></p> 	<p><b>18:BOLT 4PCS</b></p>  <p>M8X55mm</p>

**STEP 1**

1  4PCS

2  8PCS

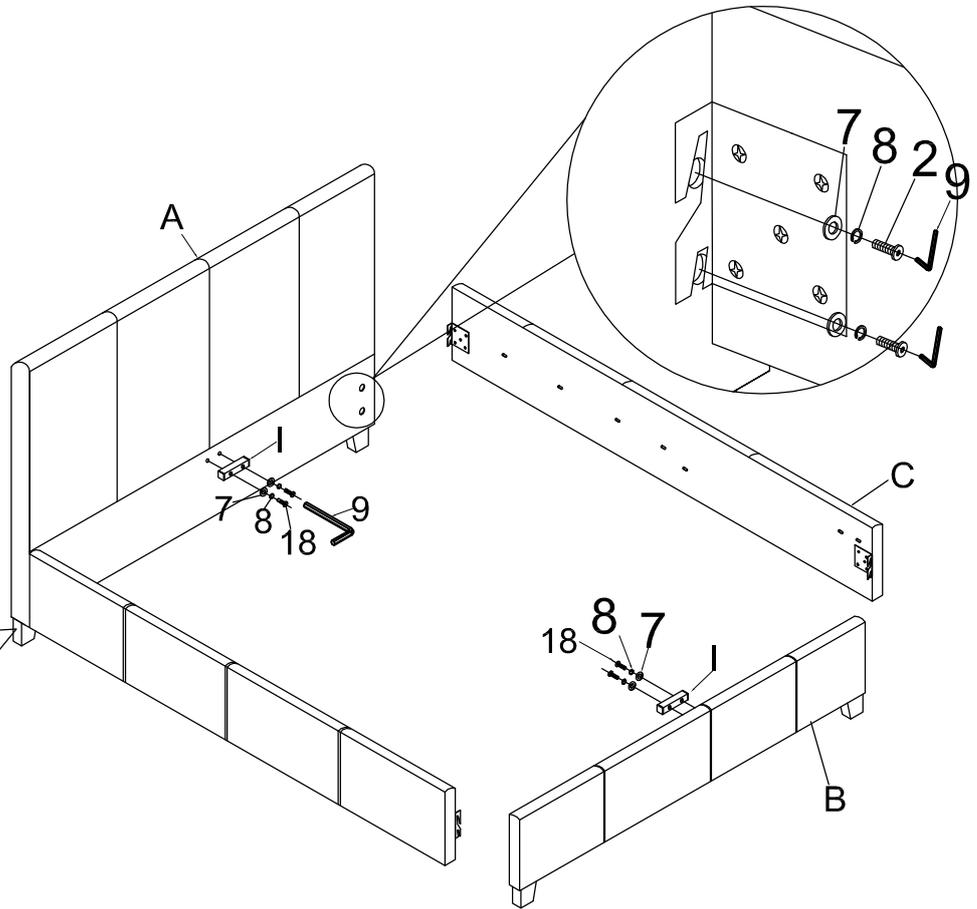
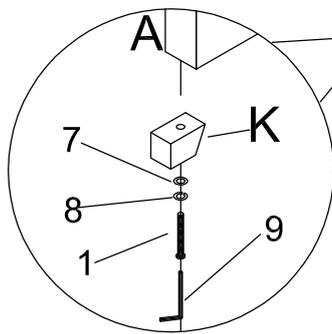
7  16PCS

8  16PCS

9  1PC

18  4PCS

I  2PC



**STEP 2**

3  8PCS

4  12PCS

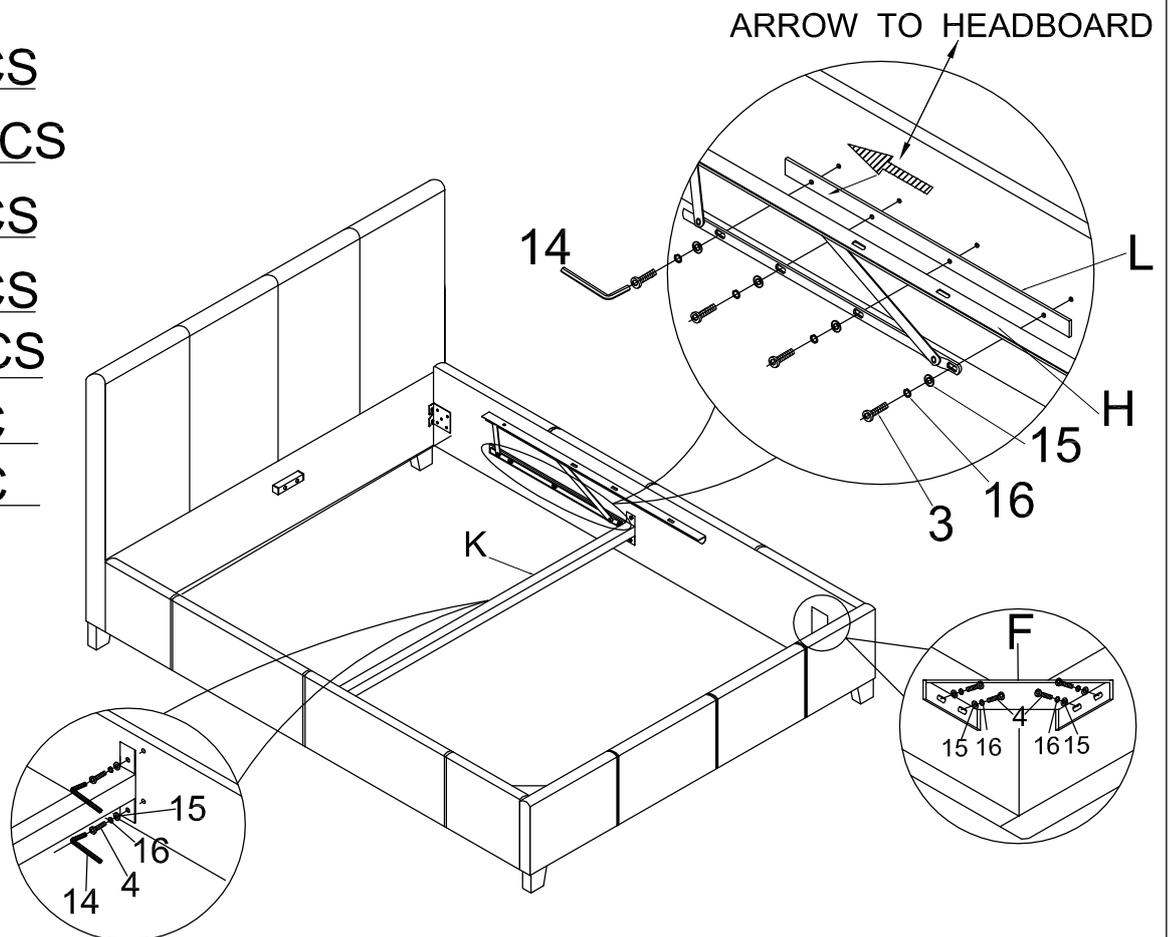
15  20PCS

16  20PCS

F  2PCS


14  1PC

9  1PC




**STEP 3**

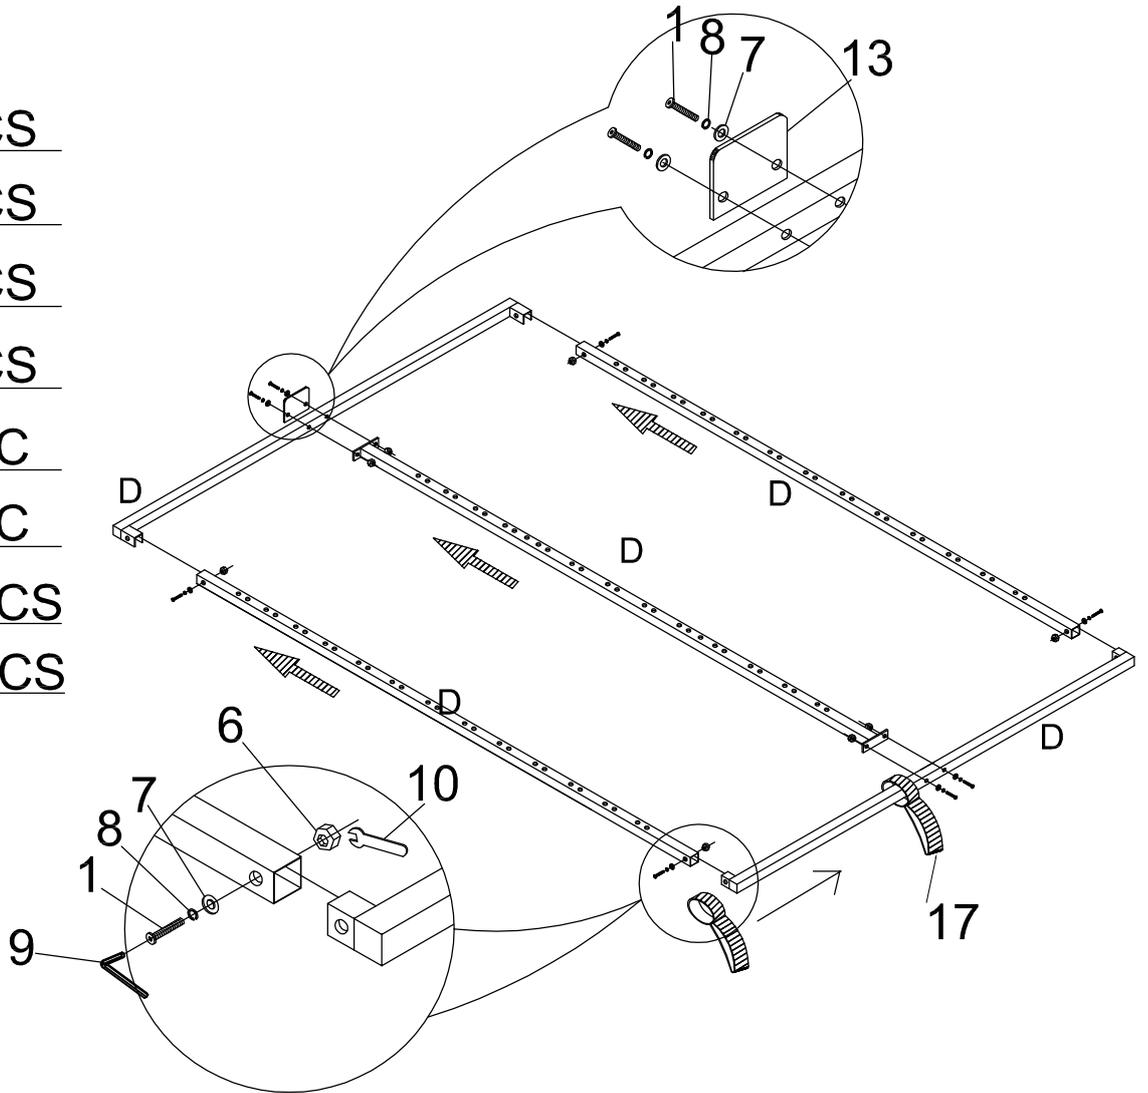- 1  8PCS
- 7  8PCS
- 8  8PCS
- 6  8PCS
- 9  1PC
- 10  1PC
- 13  1PCS
- 17  1PCS



**STEP 4**

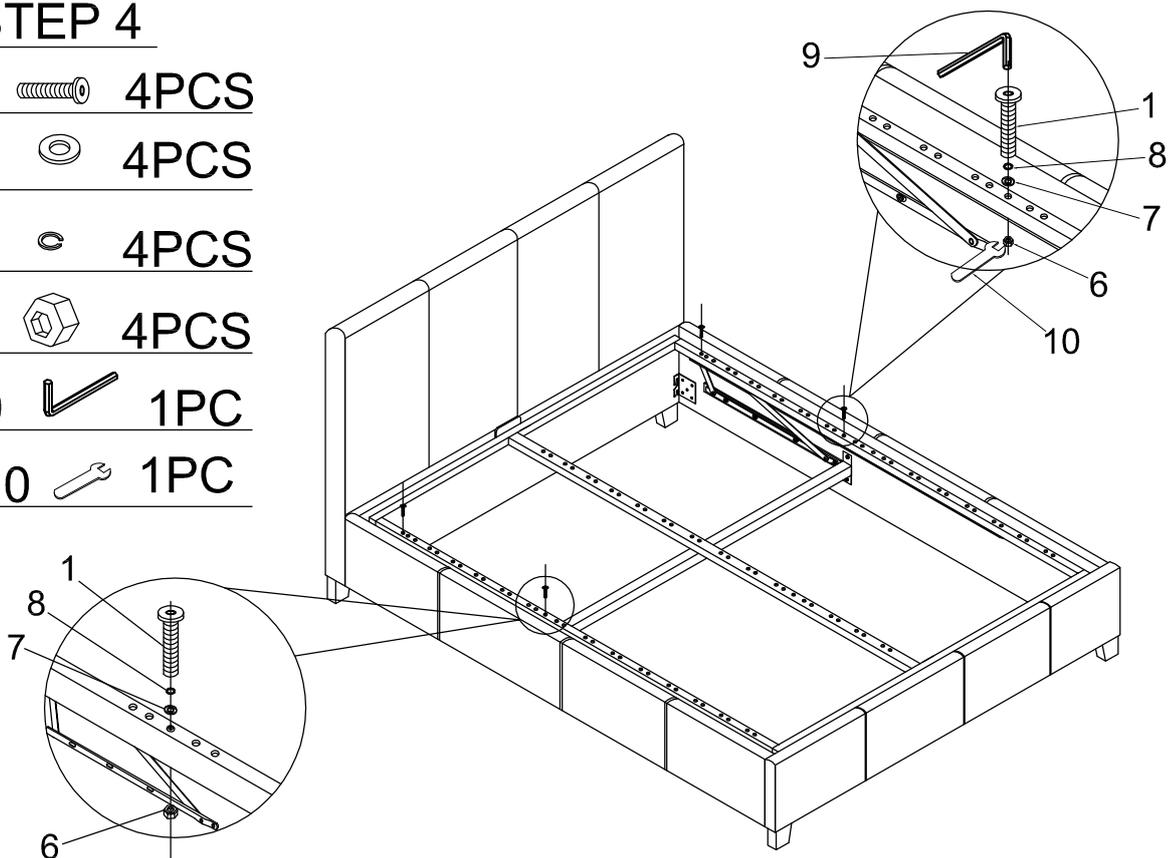
- 1  4PCS
- 7  4PCS
- 8  4PCS
- 6  4PCS
- 9  1PC
- 10  1PC



**STEP 5**


**11**  **24PCS**

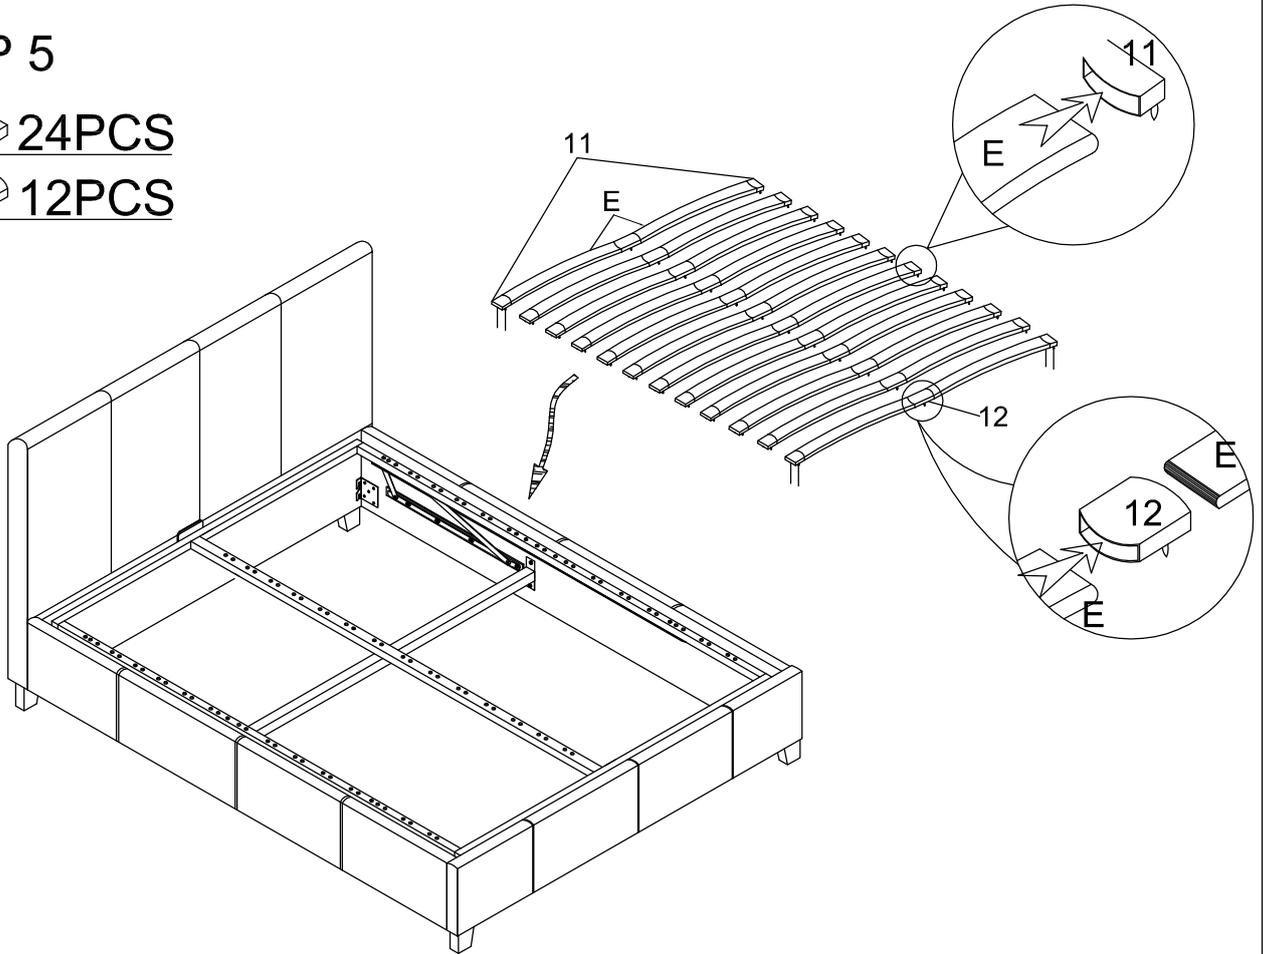**12**  **12PCS**



**STEP 6**

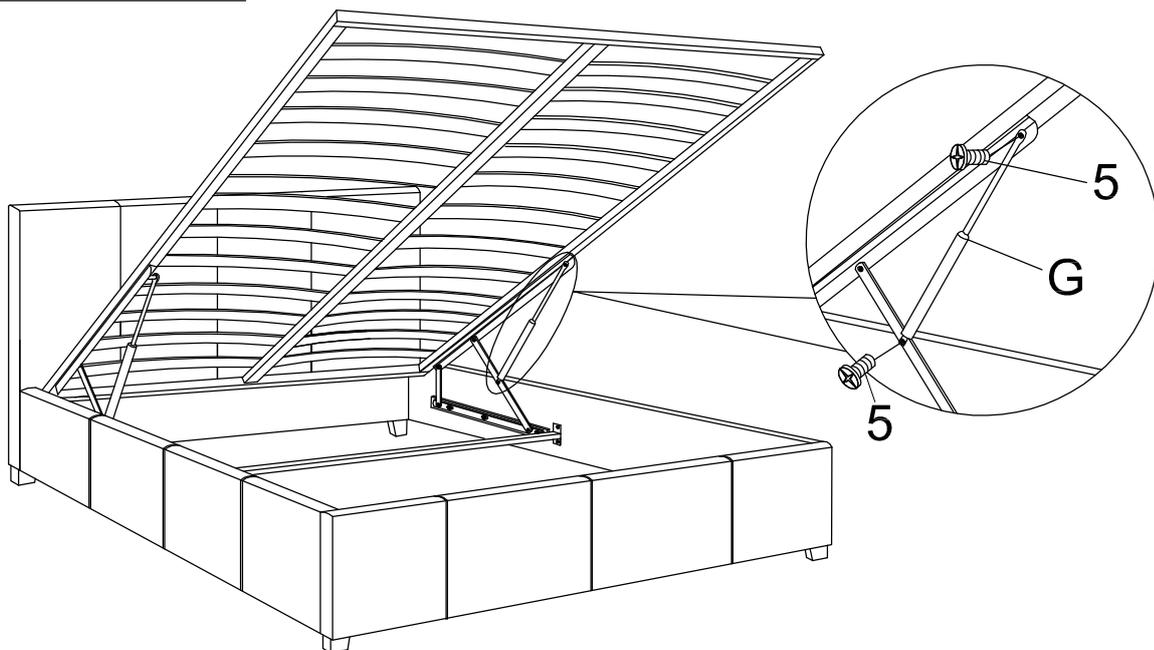**5**  **4PCS**



STEP 7

M  1PC

