


# NEVADA 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

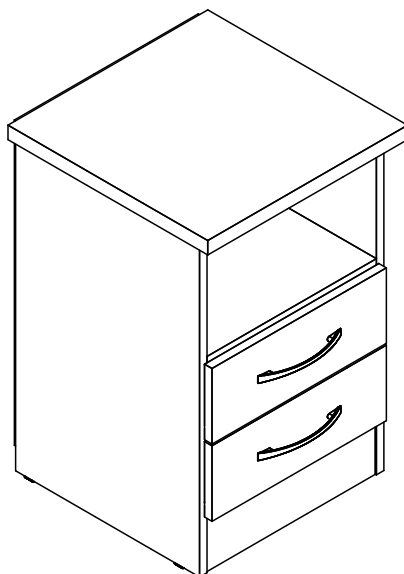


## **IMPORTANT FOR DOMESTIC USE ONLY**

**PLEASE READ BEFORE YOU CONTINUE FURTHER**



## **CARE AND MAINTENANCE**

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

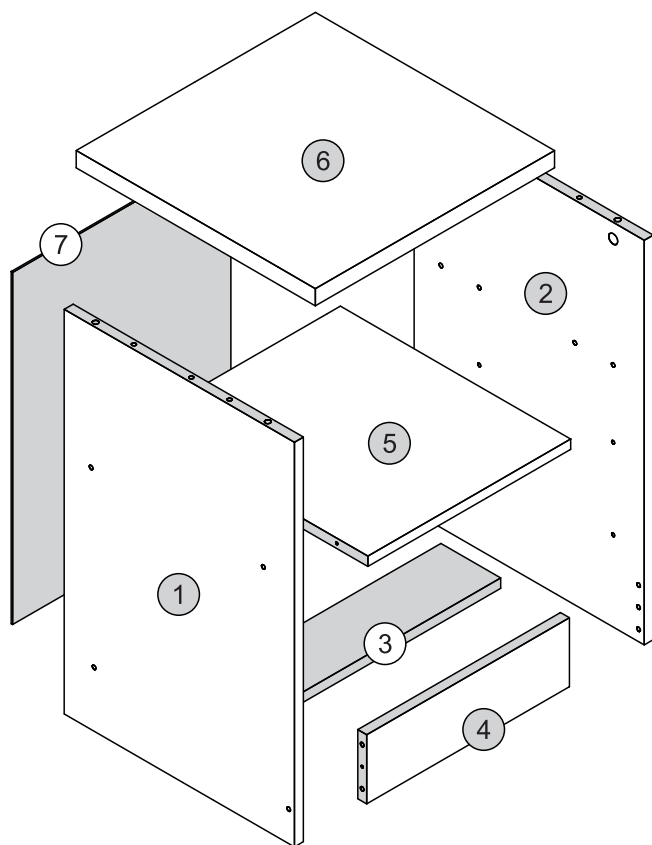

After assembly use an alcohol based product/cleaner to erase the numbers printed on the parts that are visual.

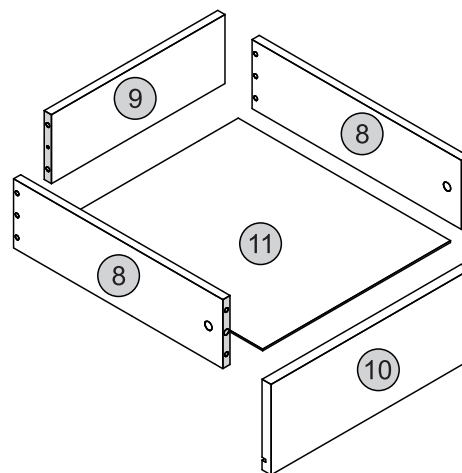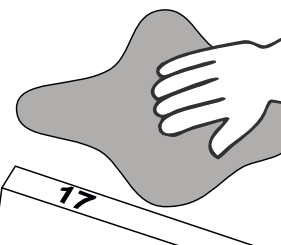


## PARTS LIST

**Please Note:**


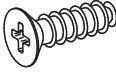




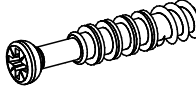
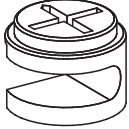


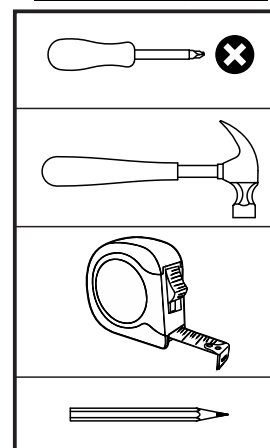




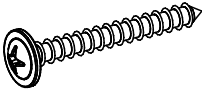

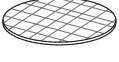
The below parts have all been stamped with the part number to help identify them during assembly.

Part Number	Part Description	Quantity	Carton
01	Left Side Panel	1	1/1
02	Right Side Panel	1	1/1
03	Back Baseboard	1	1/1
04	Front Baseboard	1	1/1
05	Shelf	1	1/1
06	Top Panel	1	1/1
07	Back Panel	1	1/1
08	Drawer Side	4	1/1
09	Drawer Back Panel	2	1/1
10	Drawer Front	2	1/1
11	Drawer Bottom	2	1/1



## TOOLS REQUIRED

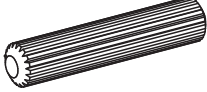

## FITTINGS LIST
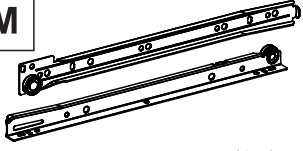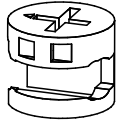
<b>A</b>  Flat Head Screw 2/+ Ø6,0 x 10mm (8x)	<b>B</b>  Flat Head Screw 2/+ Ø4,0 x 14mm (12x)	<b>C</b>  Flan Head Screw 1/+ Ø4,0 x 20mm (4x)	<b>D</b>  Flat Head Screw 2/+ Ø4,0 x 50mm (12x)
<b>E</b>  2/+ Dowel Ø6,0 x 30mm (32x)	<b>F</b>  2/+ Nail 10 x 10 (36x)	<b>G</b>  1/+ Cam Bolt (8x)	<b>H</b>  1/+ Cam Nut Ø12mm (4x)
<b>I</b>  1/+ Plastic Foot (4x)	<b>J</b>  2/+ Hole Plugs (12x)	<b>K</b>  Glue (1x)	<b>L</b>  Handle (2x)
<b>M</b>  Drawer Runners (2x)	<b>N</b>  1/+ Cam Nut Ø15mm (4x)	<b>O</b>  Strap (1x)	<b>P</b>  1/+ Flan Head Screw Ø3,5 x 30mm (1x)
<b>Q</b>  1/+ Washer (2x)	<b>R</b>  2/+ Hole Plugs (4x)		




## TIPS FOR FITTINGS CAM-LOCKS

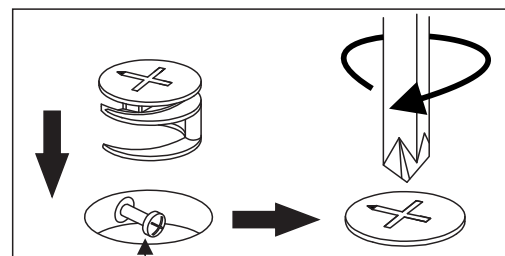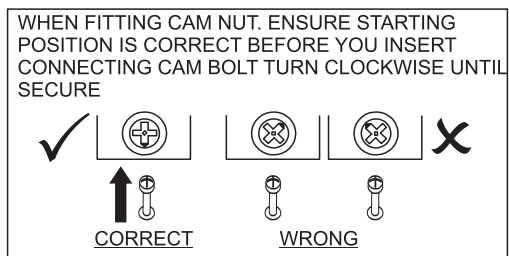

Cam bolt head needs to be in centre

### CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)

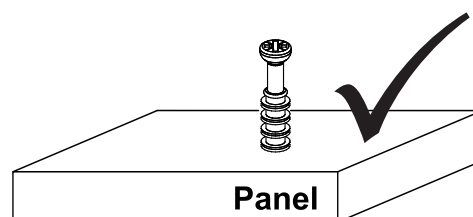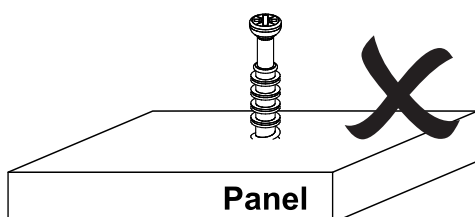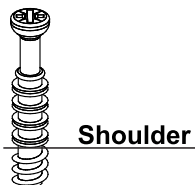



# STEP 1

## PARTS REQUIRED

1 - LEFT SIDE PANEL x1

## HARDWARE REQUIRED




E  02  
Ø6,0 x 30mm

F  02  
10 x 10

I  02

K  01  
GLUE

## TOOLS REQUIRED

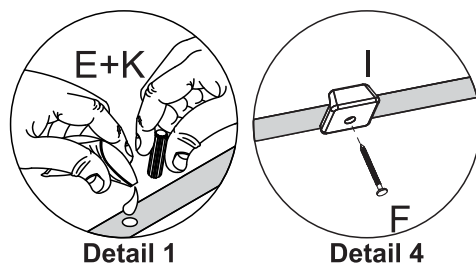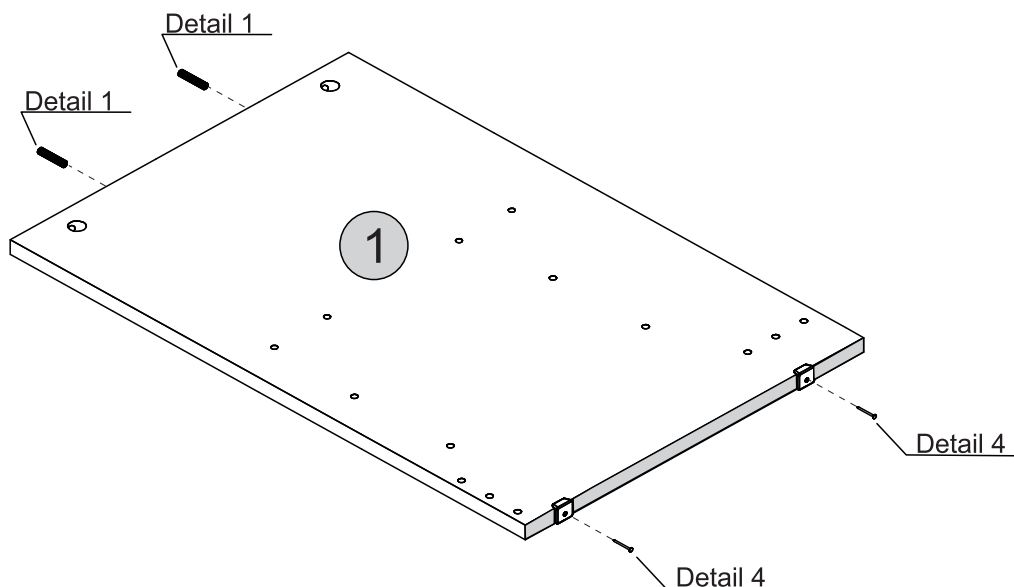



# STEP 2

## PARTS REQUIRED

2 - RIGHT SIDE PANEL x1

## HARDWARE REQUIRED



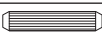
E  02  
Ø6,0 x 30mm

F  02  
10 x 10

I  02

K  01  
GLUE

## TOOLS REQUIRED

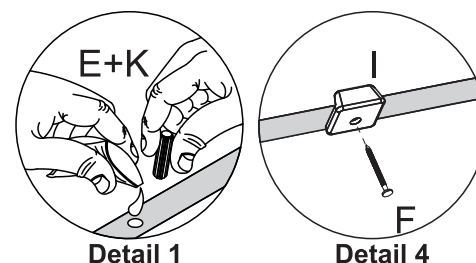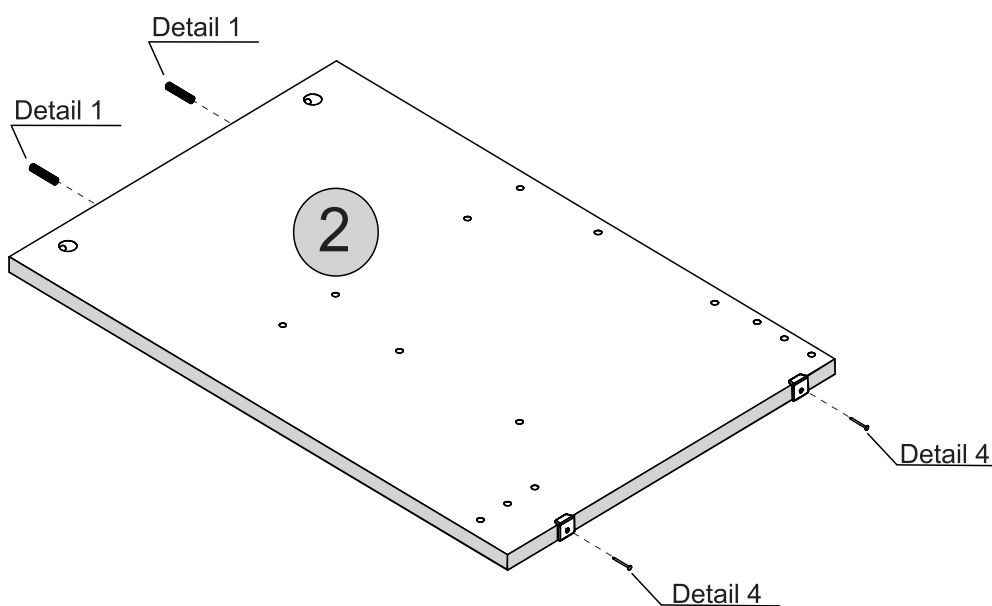


# STEP 3

## PARTS REQUIRED

2 - RIGHT SIDE PANEL x1





## HARDWARE REQUIRED

A  04  
Ø6,0 x 10mm

B  02  
Ø4,0 x 14mm

M  02  
RIGHT

## TOOLS REQUIRED

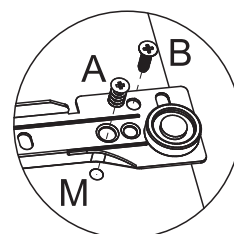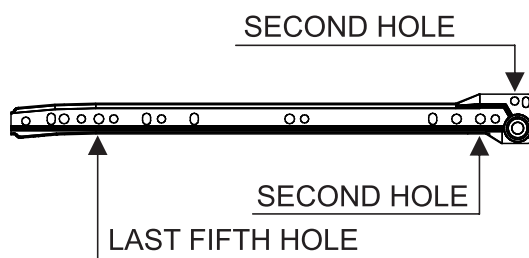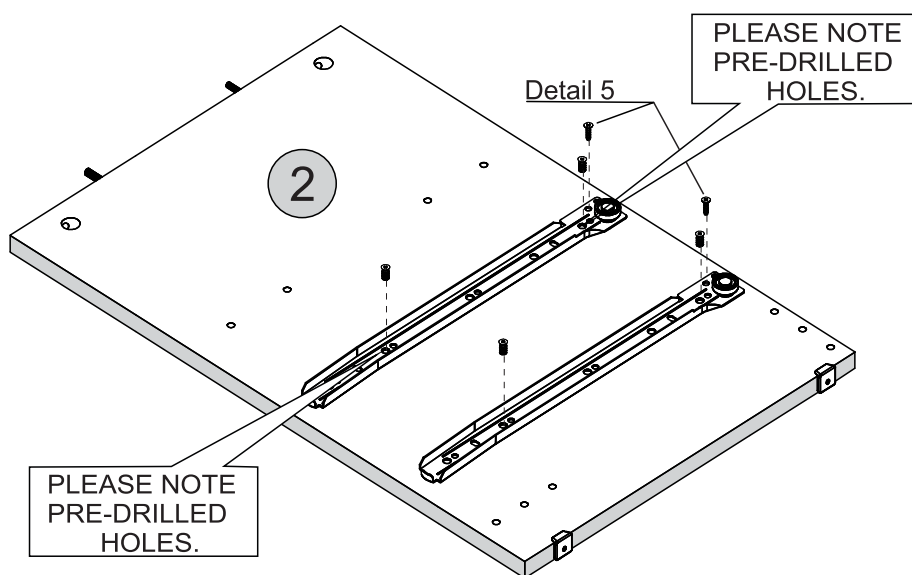

Detail 5


# STEP 4


## PARTS REQUIRED

1 - LEFT SIDE PANEL x1





## HARDWARE REQUIRED

A  04  
Ø6,0 x 10mm

B  02  
Ø4,0 x 14mm

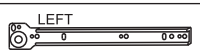M  02  
LEFT

## TOOLS REQUIRED

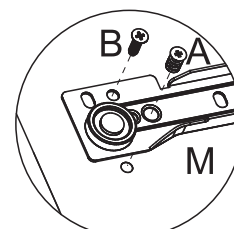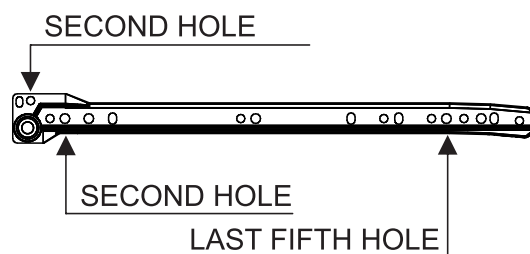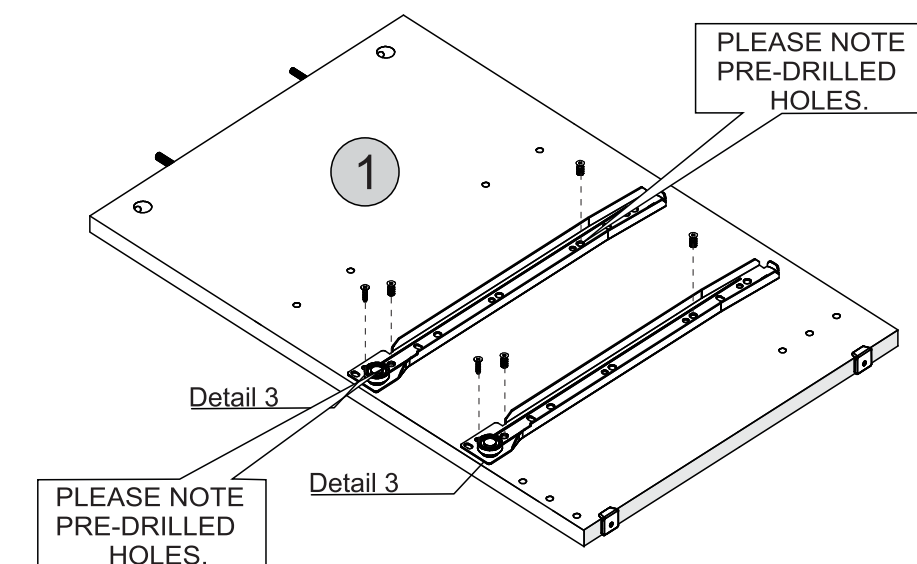

Detail 3

# STEP 5


## PARTS REQUIRED

3 - BACK BASEBOARD x1


4 - FRONT BASEBOARD x1

5 - SHELF x1

## HARDWARE REQUIRED

E  12  
Ø6,0 x 30mmK  01  
GLUE

## TOOLS REQUIRED

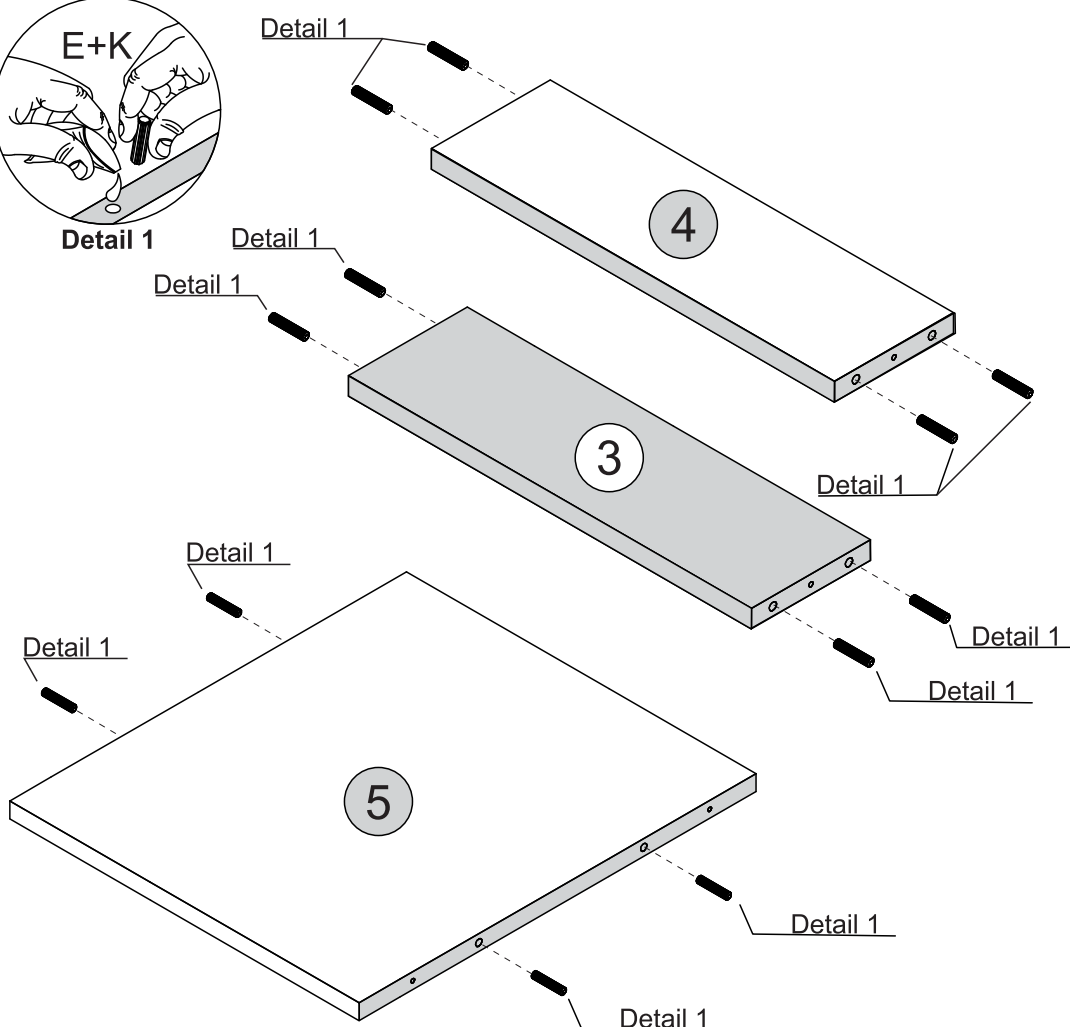

# STEP 6

## PARTS REQUIRED

2 - RIGHT SIDE PANEL x1

3 - BACK BASEBOARD x1



4 - FRONT BASEBOARD x1

5 - SHELF x1

## HARDWARE REQUIRED

D  04  
Ø4,0 x 50mmK  01  
GLUE


## TOOLS REQUIRED

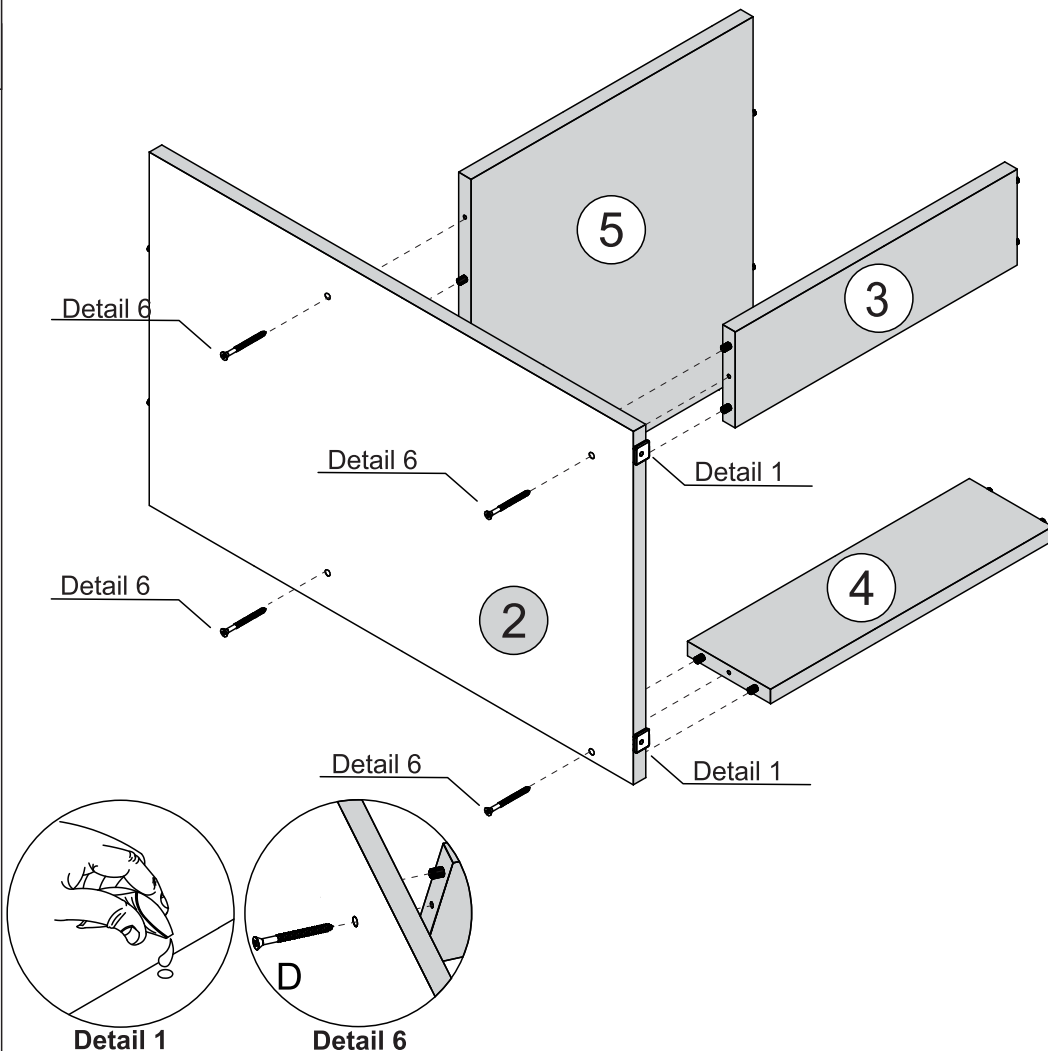

# STEP 7

## PARTS REQUIRED

1 - LEFT SIDE PANEL x1


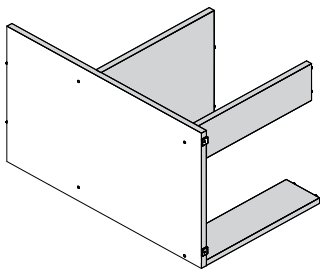


## HARDWARE REQUIRED


D  04  
Ø4,0 x 50mm

K  01

## TOOLS REQUIRED

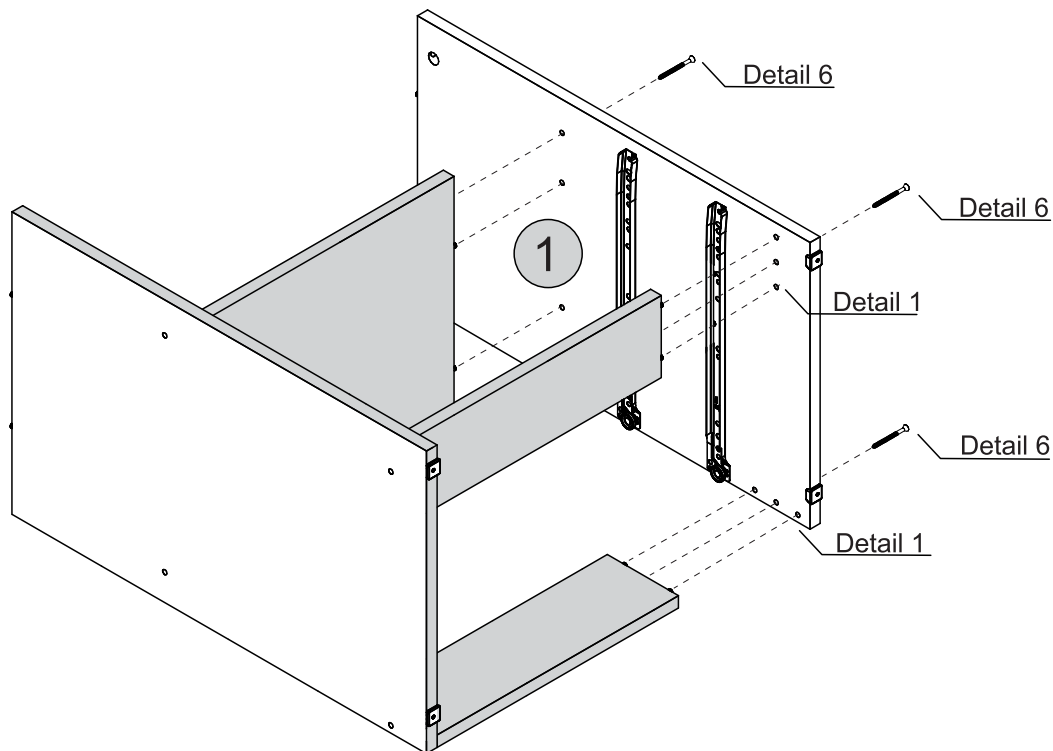

Detail 1

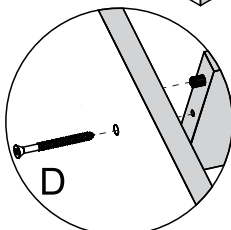

Detail 6

# STEP 8




## PARTS REQUIRED

6 - TOP PANEL x1


## HARDWARE REQUIRED

G  04

## TOOLS REQUIRED

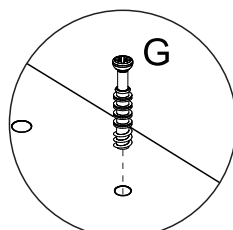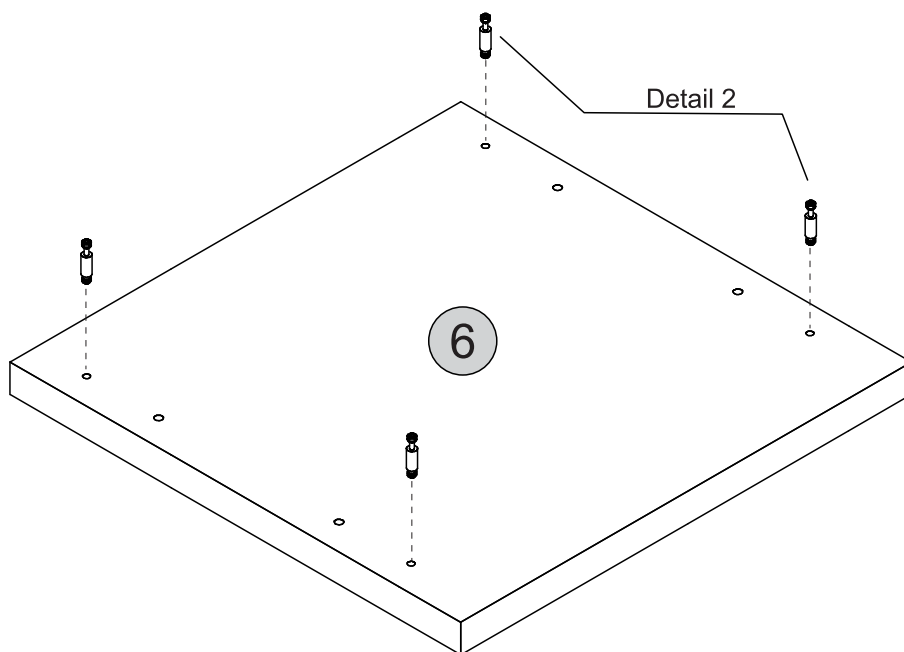


Detail 2

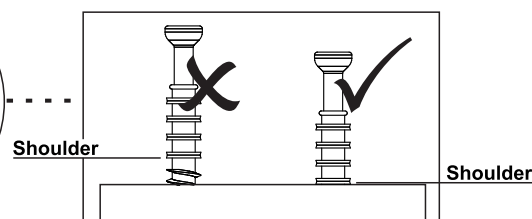

# STEP 9

## PARTS REQUIRED

6 - TOP PANEL x1

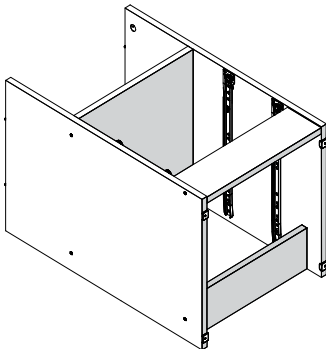






## HARDWARE REQUIRED

K GLUE 01

N 04

J 04


## TOOLS REQUIRED

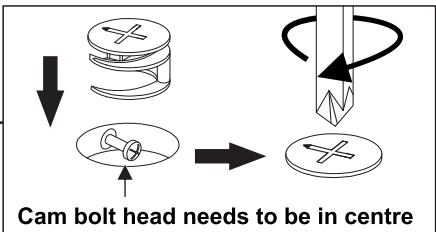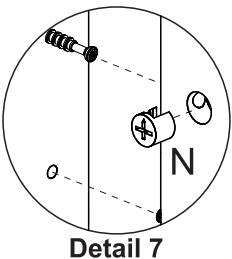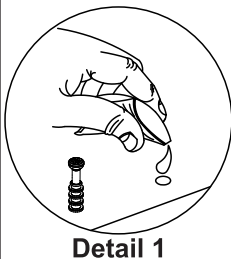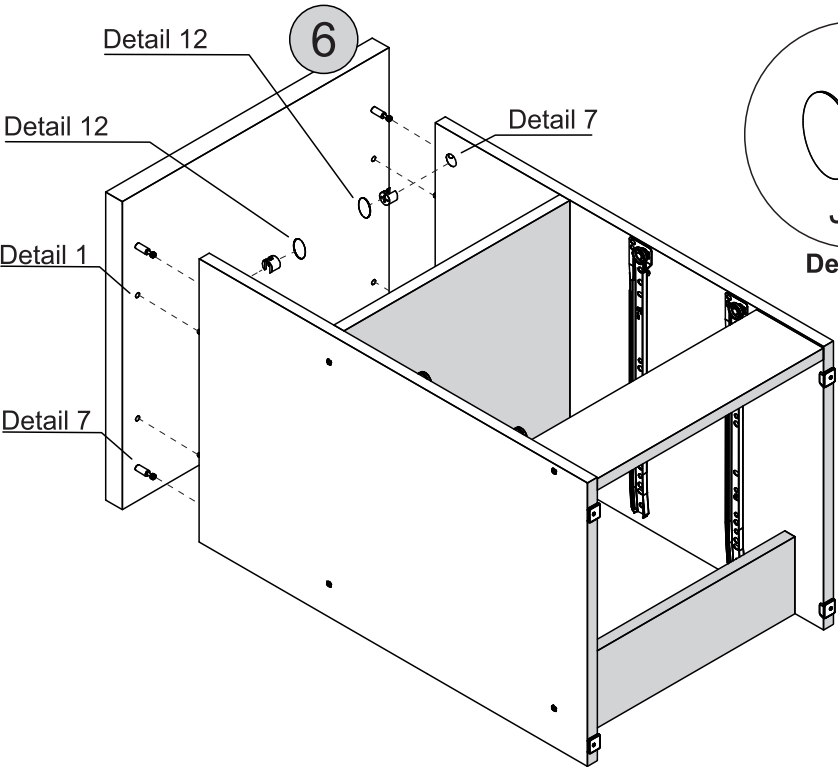

# STEP 10

## PARTS REQUIRED



7 - BACK PANEL x1

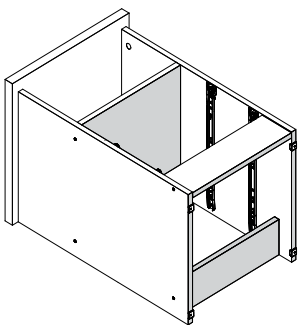


## HARDWARE REQUIRED

F 10 x 10 16



## TOOLS REQUIRED

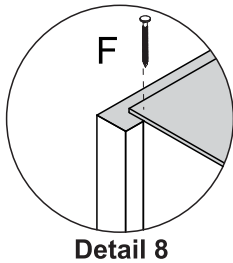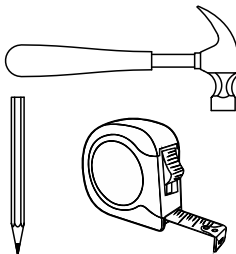

Detail 8

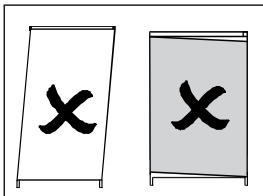

\* For your future reference  
Order Number should be here

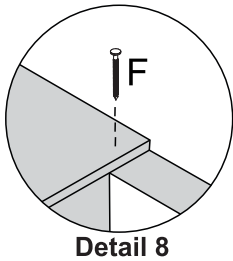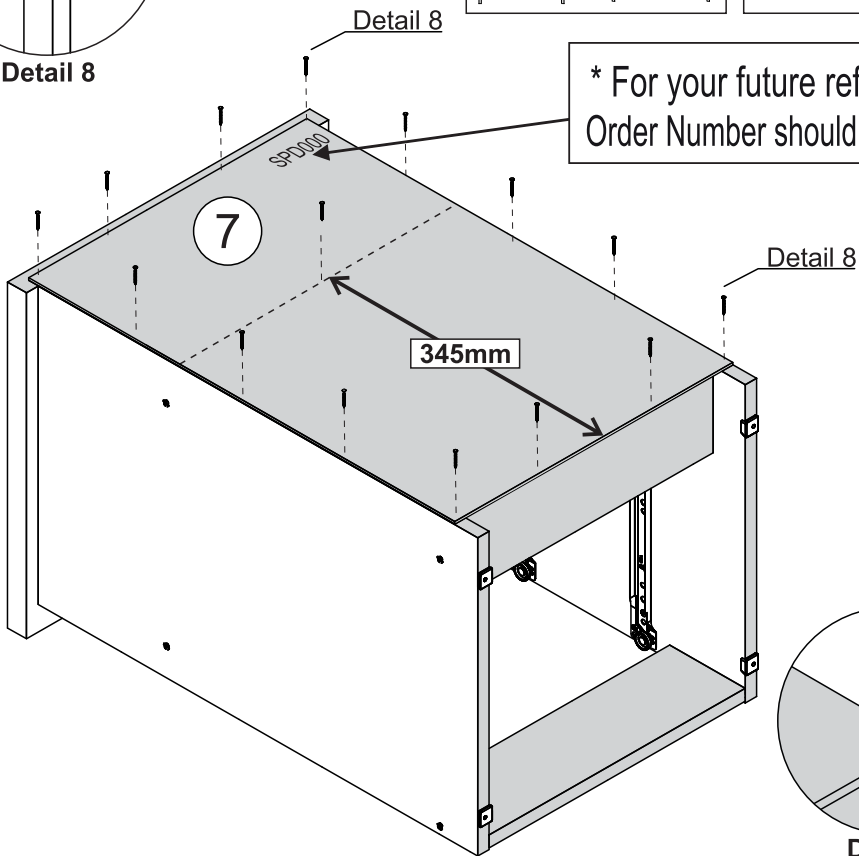

Detail 8




# STEP 11

## PARTS REQUIRED

8 - DRAWER SIDE x4


9 - DRAWER BACK PANEL x2

## HARDWARE REQUIRED

E  16  
Ø6,0 x 30mm

K  01  
GLUE

## TOOLS REQUIRED

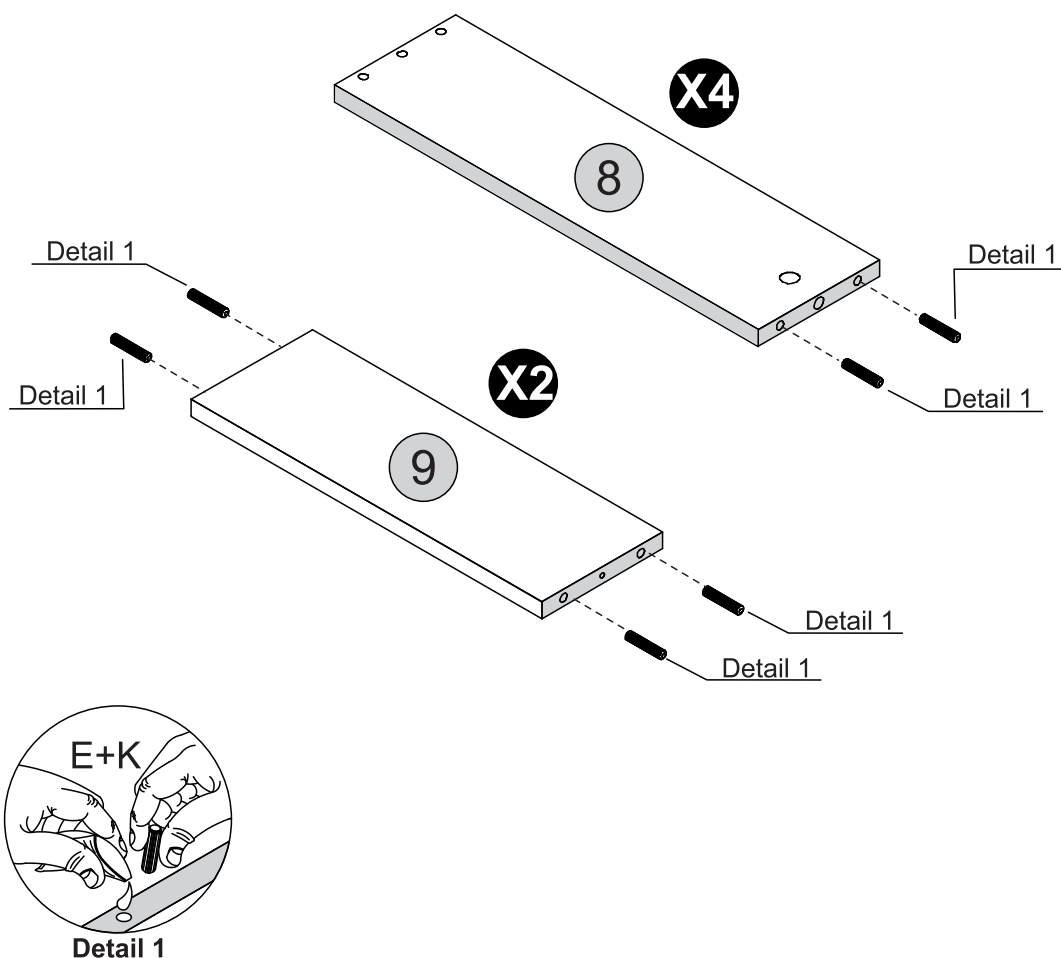


# STEP 12



## PARTS REQUIRED

10 - DRAWER FRONT x2

## HARDWARE REQUIRED

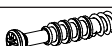G  04

## TOOLS REQUIRED

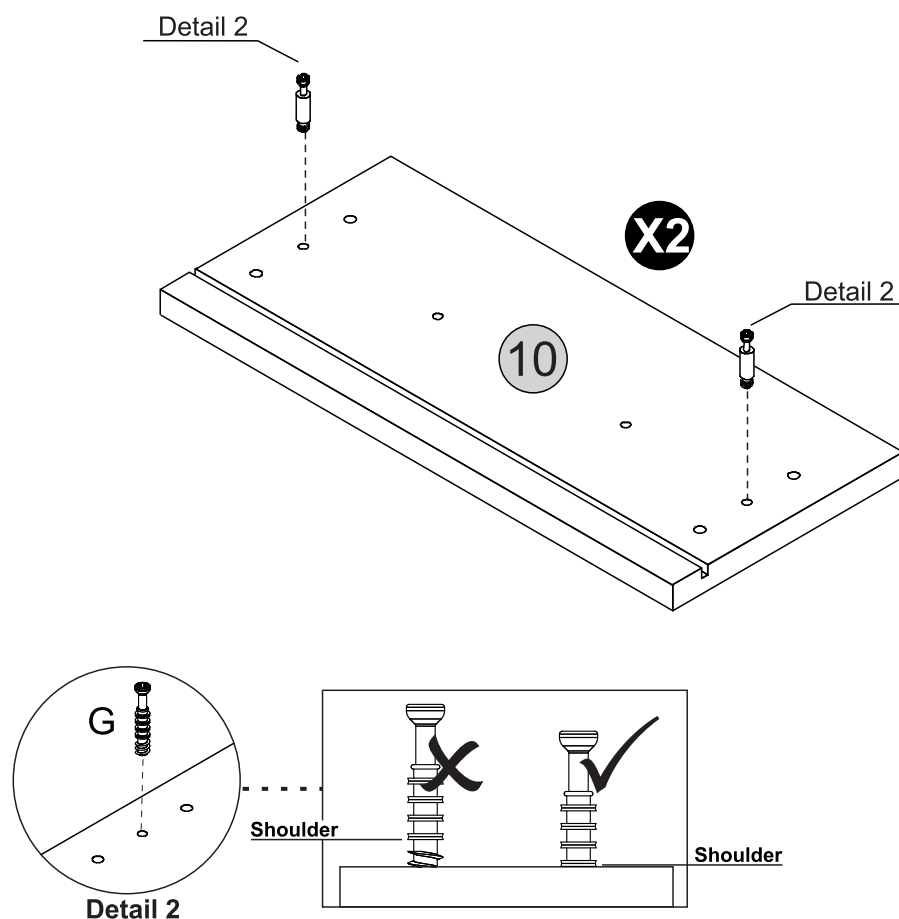

## STEP 13

PARTS REQUIRED



8 - DRAWER SIDE x4

9 - DRAWER BACK PANEL      x2

## HARDWARE REQUIRED

D  04  
Ø4,0 x 50mm


## TOOLS REQUIRED

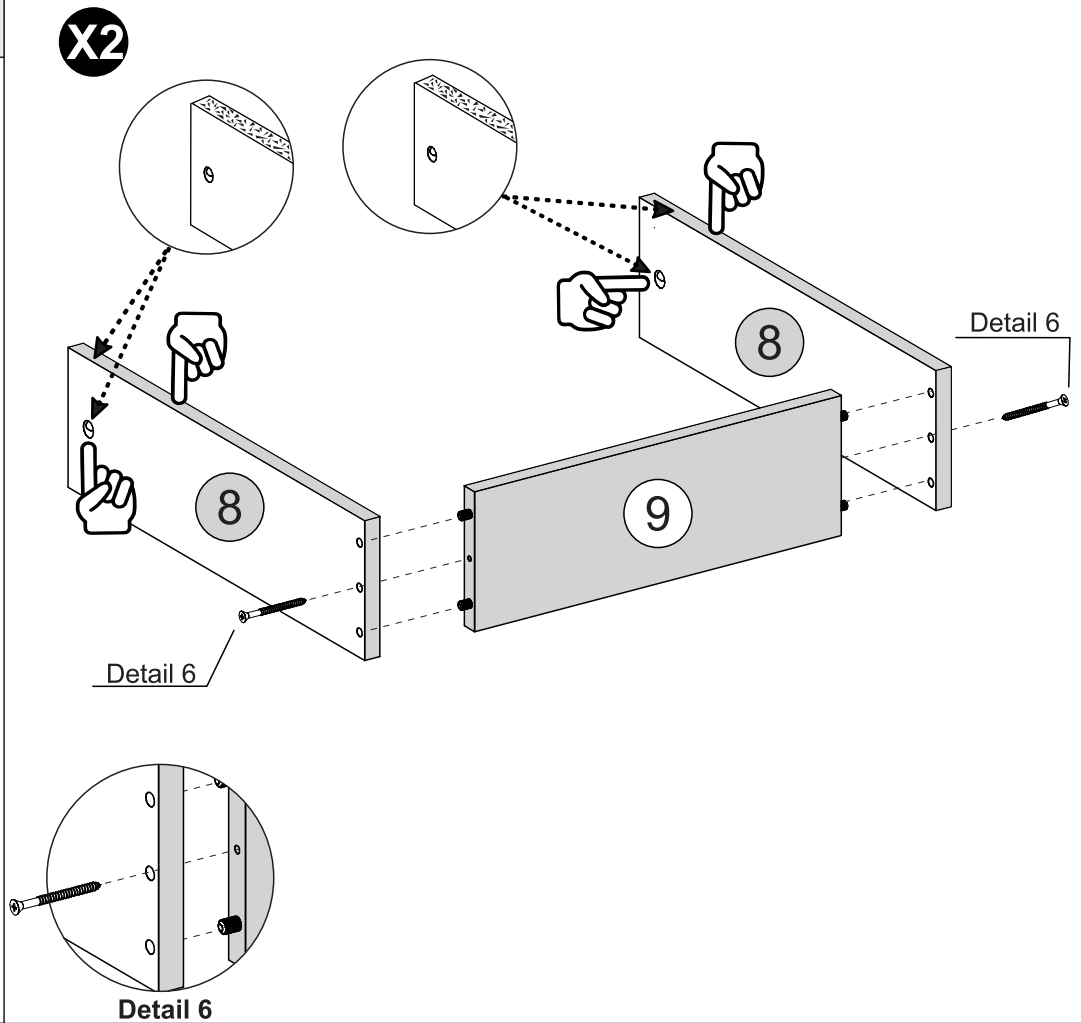

## STEP 14

### PARTS REQUIRED

10 -DRAWER FRONT x2


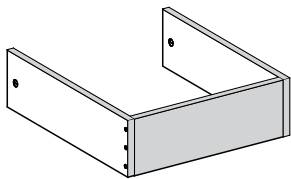


## HARDWARE REQUIRED

H  04

K  01


## TOOLS REQUIRED

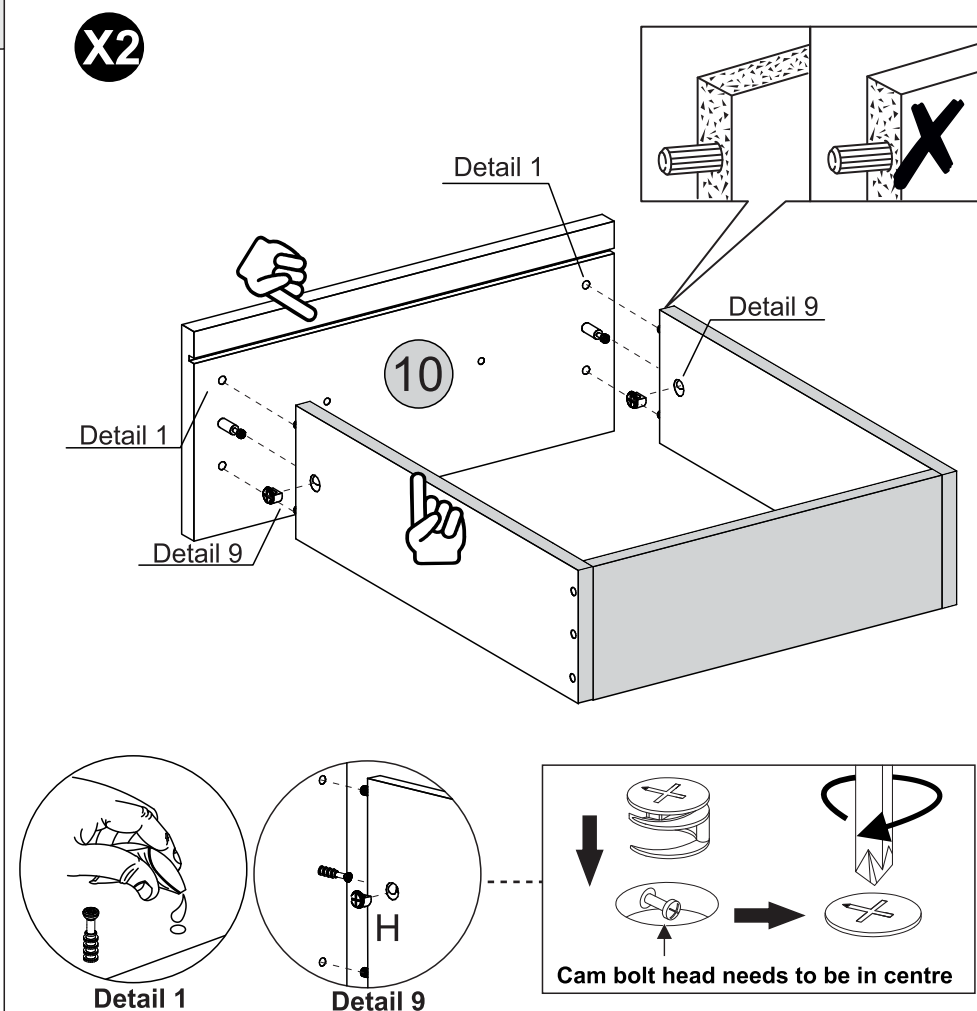

# STEP 15

## PARTS REQUIRED




11 - DRAWER BOTTOM x2

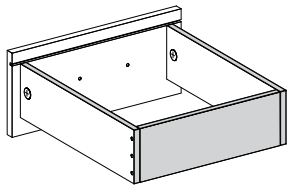

## HARDWARE REQUIRED


F 10 x 10 08

## TOOLS REQUIRED

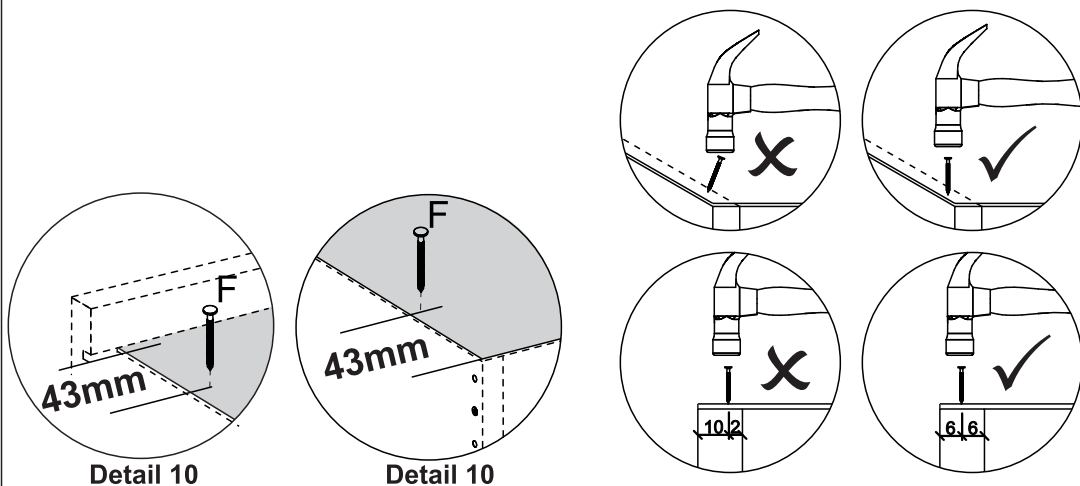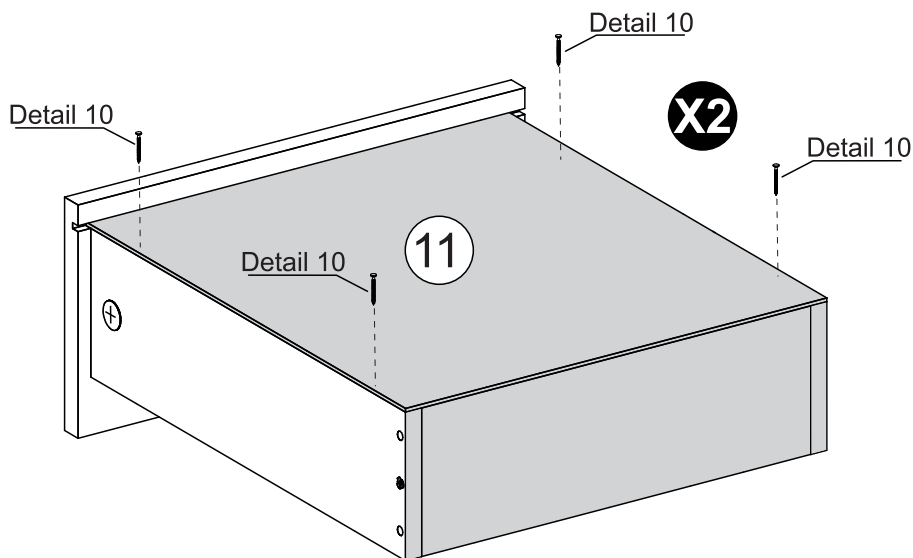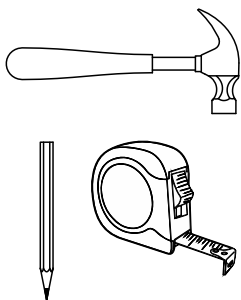

# STEP 16




## PARTS REQUIRED

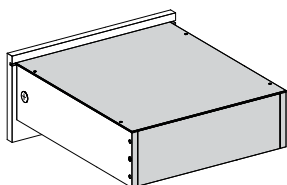

## HARDWARE REQUIRED


F 10 x 10 08

## TOOLS REQUIRED

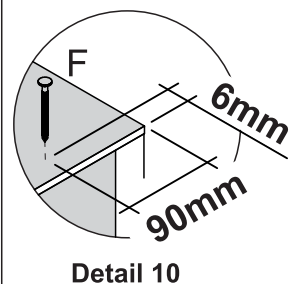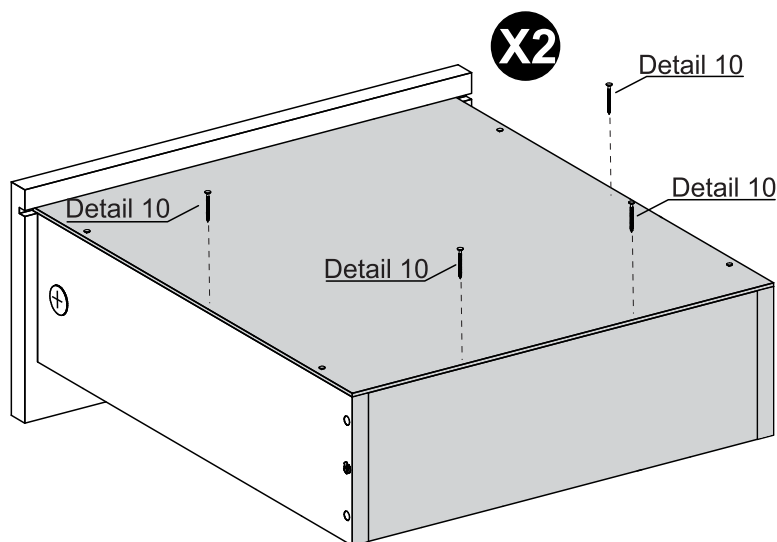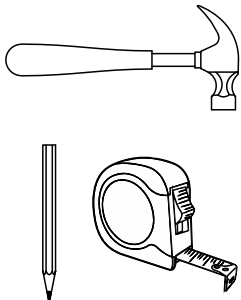


# STEP 17





## PARTS REQUIRED

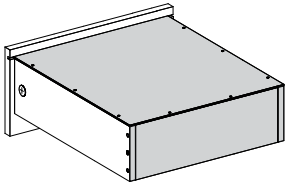

## HARDWARE REQUIRED




## TOOLS REQUIRED

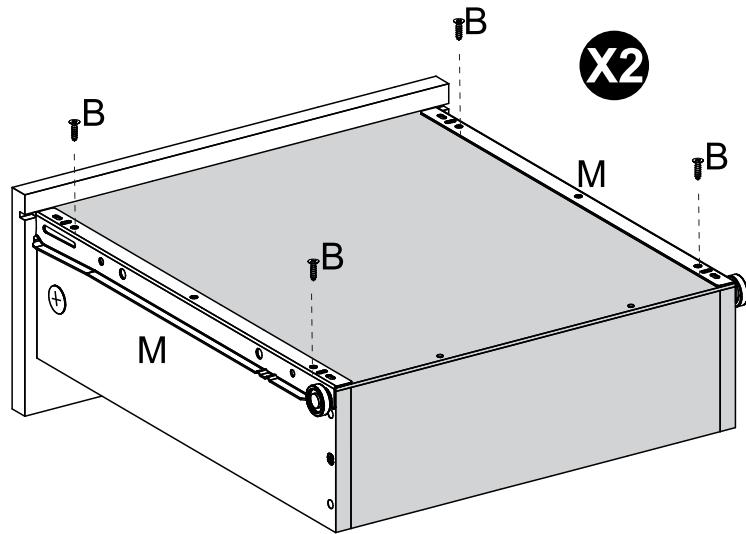


# STEP 18




## PARTS REQUIRED

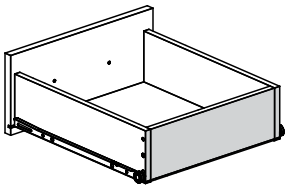

## HARDWARE REQUIRED




## TOOLS REQUIRED

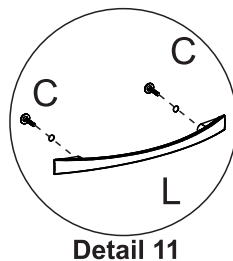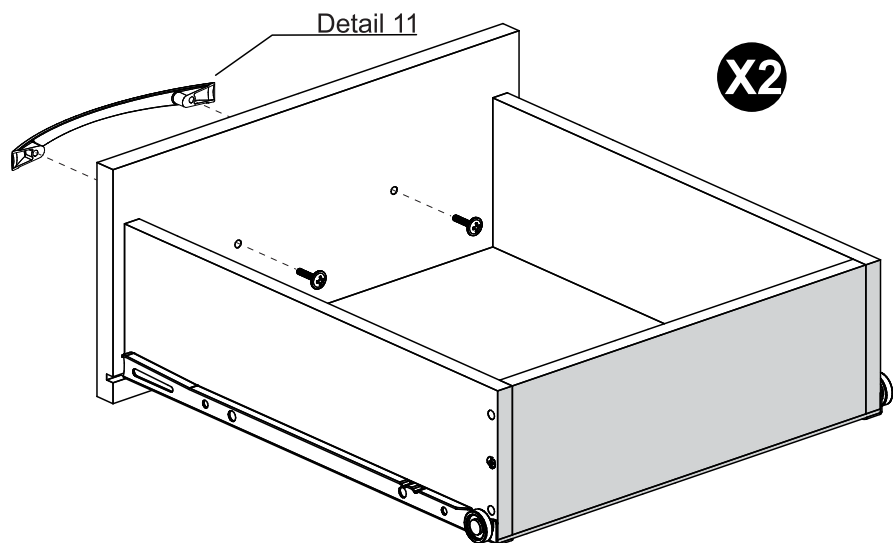


# STEP 19

PARTS REQUIRED


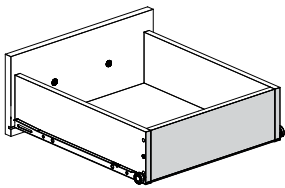


HARDWARE REQUIRED



TOOLS REQUIRED



X2

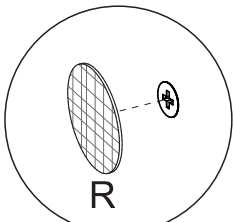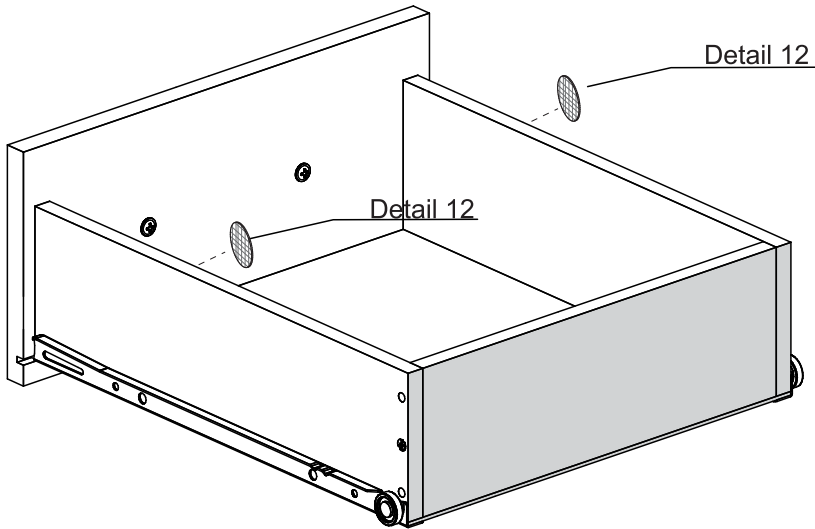

Detail 12

# STEP 20

PARTS REQUIRED

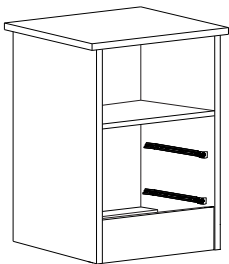

HARDWARE REQUIRED




TOOLS REQUIRED




See the last page

**TIP**


If desired, after assembly use an alcohol cleaner to erase the number printed on the parts.

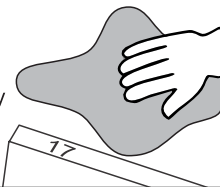

Detail 12

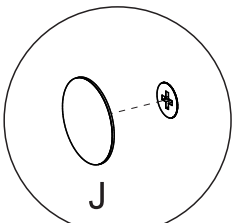

Detail 12

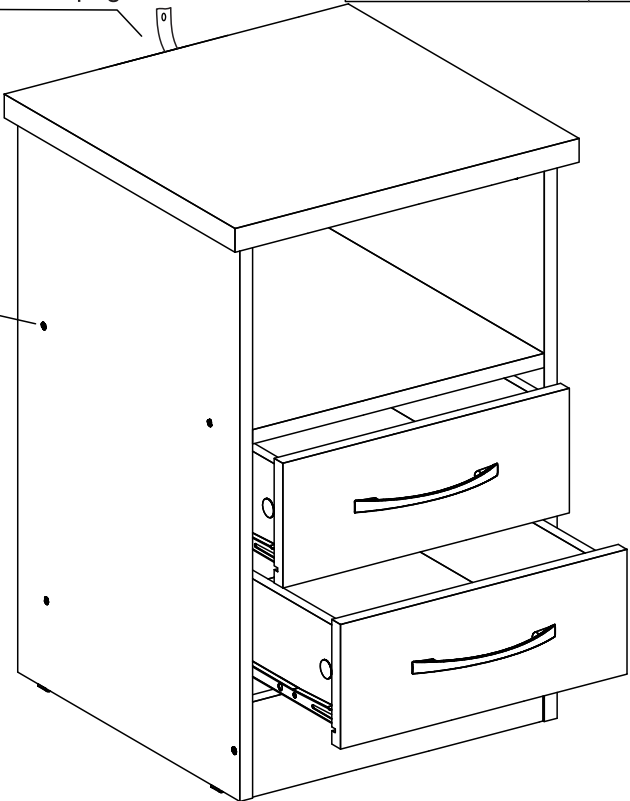

## **WARNING**

**Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.**

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.  
Please make sure you use fixings suitable for the walls in your home.

