
BLACK MALVERN 8 DRAWER CHEST ASSEMBLY INSTRUCTIONS

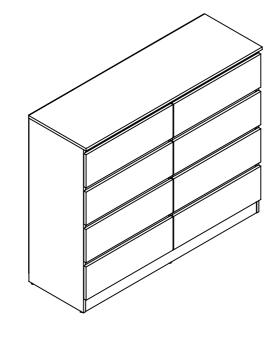





FOR DOMESTIC USE ONLY

IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTING KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES. IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET). $\underline{\text{DO}}$ NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THIS SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

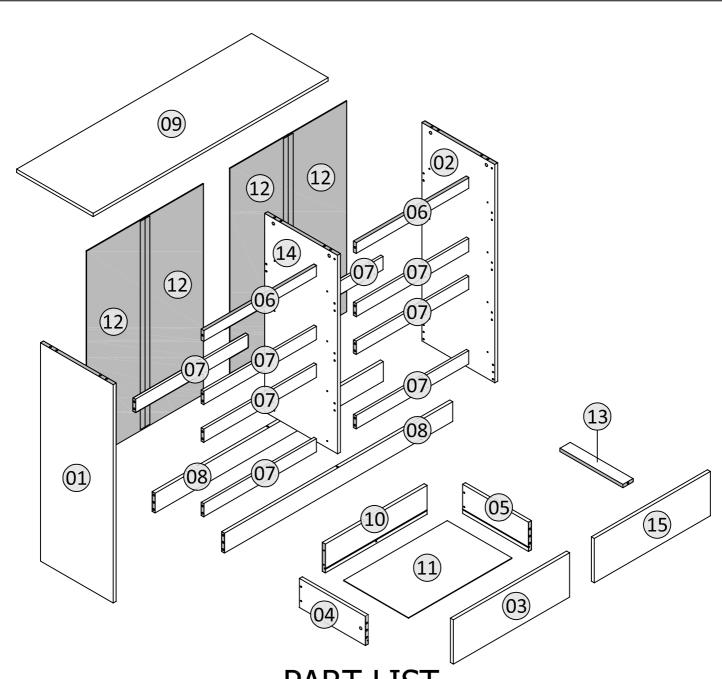


PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
01	S100-102-126-TA1-01	Left Panel	1	2/2
02	S100-102-126-TA1-02	Right Panel	1	2/2
03	S100-102-126-TA1-03	Drawer Front (Left)	4	1/2
04	S100-102-126-TA1-04	Drawer Left Panel	8	2/2
05	S100-102-126-TA1-05	Drawer Right Panel	8	2/2
06	S100-102-126-TA1-06	Top Support Panel	2	1/2
07	S100-102-126-TA1-07	Centre Support Panel	8	1/2
80	S100-102-126-TA1-08	Bottom Support Panel	2	1/2
09	S100-102-126-TA1-09	Top Panel	1	1/2
10	S100-102-126-TA1-10	Drawer Back Panel	8	1/2
11	S100-102-126-TA1-11	Drawer Bottom Panel	8	1/2
12	S100-102-126-TA1-12	Back Panel	4	2/2
13	S100-102-126-TA1-13	Drawer Support Panel	8	1/2
14	S100-102-126-TA1-14	Centre Panel	1	2/2
15	S100-102-126-TA1-15	Drawer Front (Right)	4	1/2

HARDWARE LIST

No.	Part Name		Qty
Α	5575 Cam Nut	®	42
В	Cam Bolt	O Tangara	34
С	Double Cam Bolt	87	4
D	M6 x 30mm Wood Dowel		76
Е	38mm Chipboard Screw	Bentalining	40
F	14mm Chipboard Screw	Share.	88
G	14" Drawer Slide	A Second	8 sets
Н	PVC L Bracket		2
J	Table Pin	Ø	6
К	Steel Nail		70
L	Safety Pack (4 x 20mm x 1)	200	2

TIPS FOR FITTING CAM-LOCKS

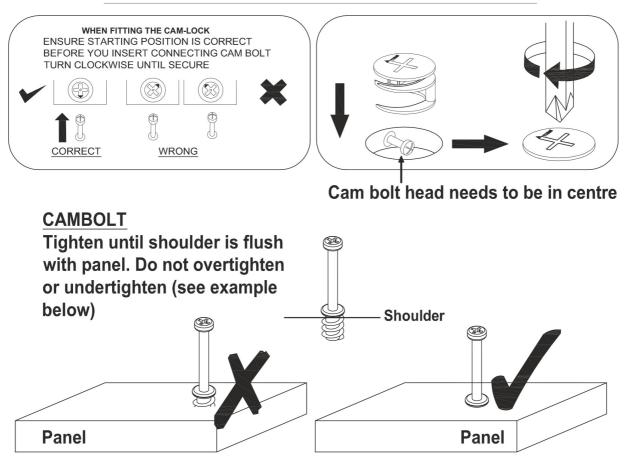




01- LEFT PANEL x1


HARDWARE REQUIRED






TOOLS REQUIRED





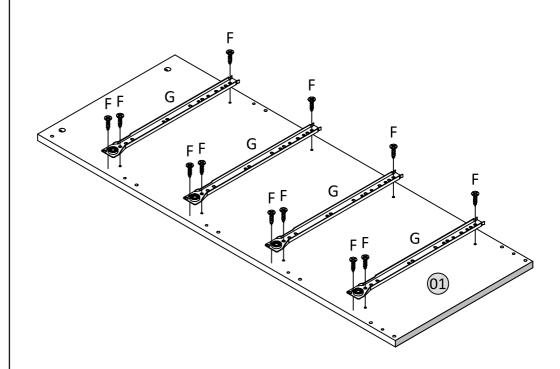



STEP 2


PARTS REQUIRED


02- RIGHT PANEL x1

HARDWARE REQUIRED







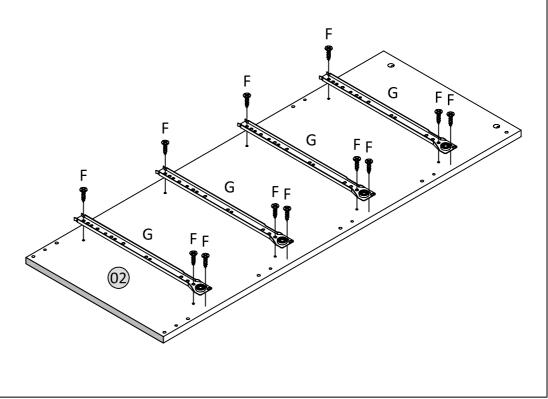




14- CENTRE PANEL x1


HARDWARE REQUIRED






TOOLS REQUIRED





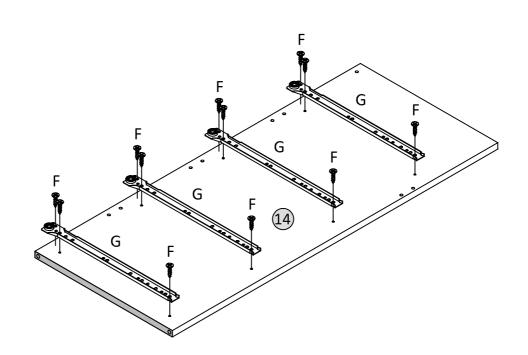


STEP 4


PARTS REQUIRED

14- CENTRE PANEL x1


HARDWARE REQUIRED



TOOLS REQUIRED




To Assembly the Drawer Slide, Please Follow Step as Below Last Second Hole Third Hole FRONT

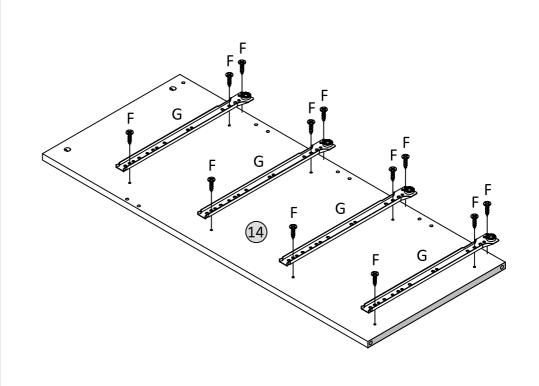




01- LEFT PANEL x1 02- RIGHT PANEL x1


HARDWARE REQUIRED





TOOLS REQUIRED



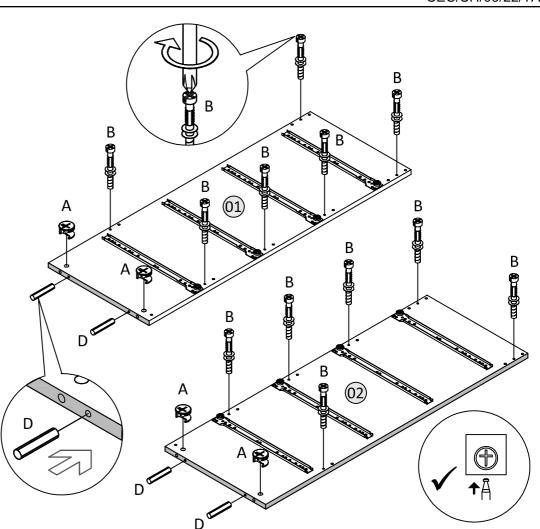

STEP 6


PARTS REQUIRED


06- TOP SUPPORT PANEL 07- CENTRE SUPPORT PANEL х8 08- BOTTOM SUPPORT PANEL x2 14- CENTRE PANEL x1

HARDWARE REQUIRED



32



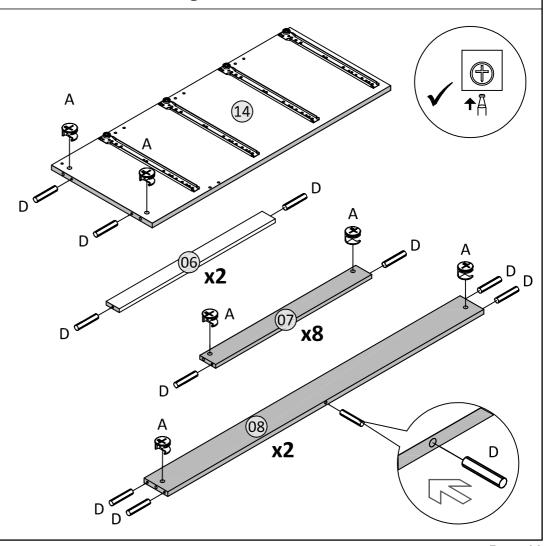

PARTS REQUIRED


01- LEFT PANEL x1


06- TOP SUPPORT PANEL x1

07- CENTRE SUPPORT PANEL x4

HARDWARE REQUIRED

TOOLS REQUIRED



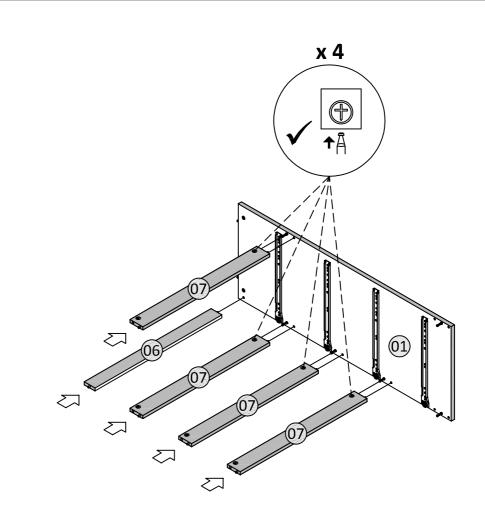


STEP 8


PARTS REQUIRED


08- BOTTOM SUPPORT PANEL x2

14- CENTRE PANEL x1

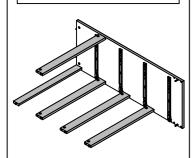


HARDWARE REQUIRED



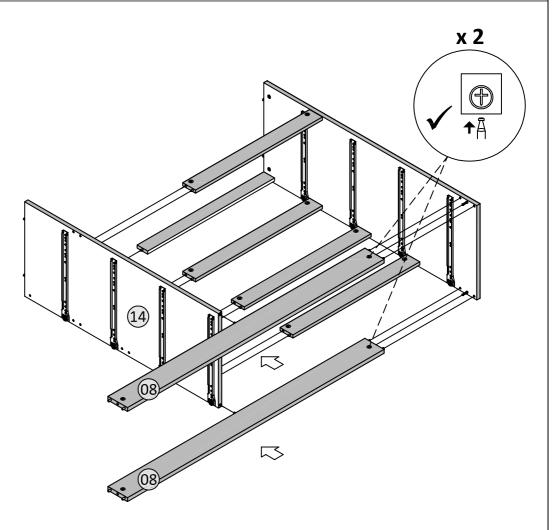




06- TOP SUPPORT PANEL x1
07- CENTRE SUPPORT PANEL x4

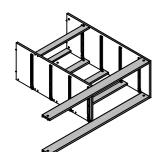


HARDWARE REQUIRED



TOOLS REQUIRED




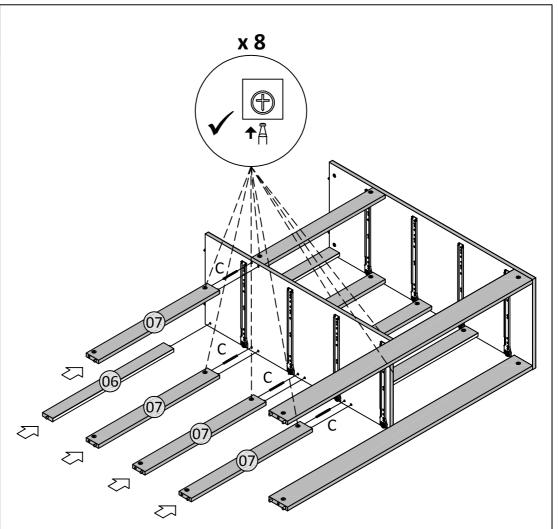


STEP 10


PARTS REQUIRED

02- RIGHT PANEL x1

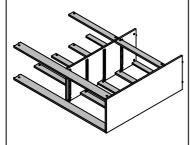

HARDWARE REQUIRED



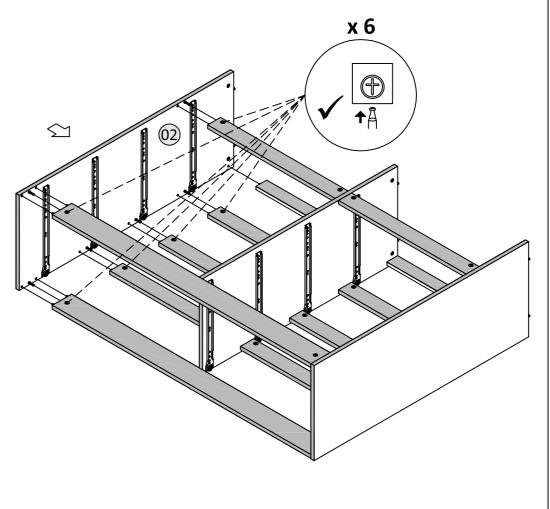

PARTS REQUIRED


09- TOP PANEL x1

HARDWARE REQUIRED



TOOLS REQUIRED



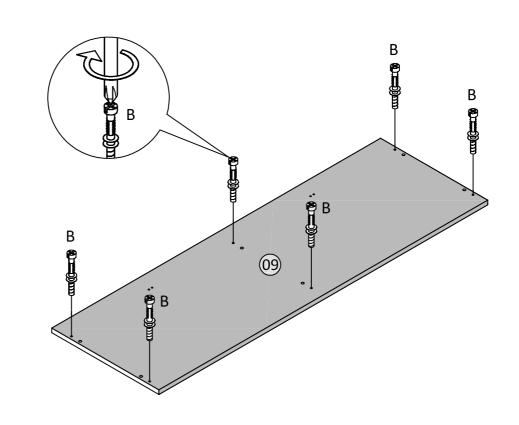


STEP 12

PARTS REQUIRED


09- TOP PANEL X1

HARDWARE REQUIRED



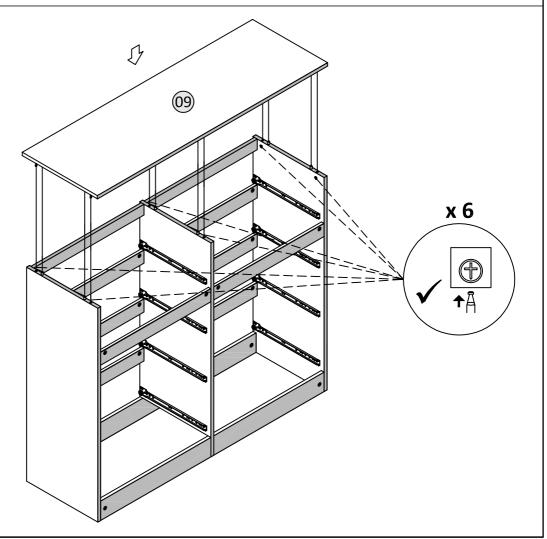


PARTS REQUIRED

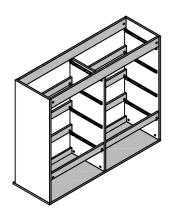


HARDWARE REQUIRED




TOOLS REQUIRED



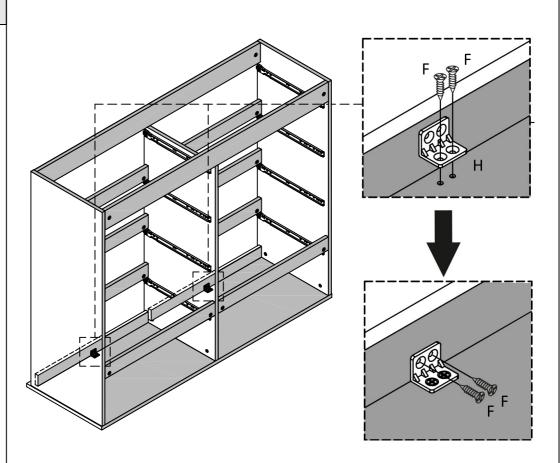


STEP 14


PARTS REQUIRED

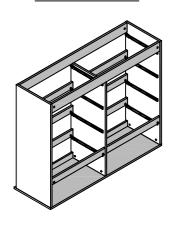

HARDWARE REQUIRED






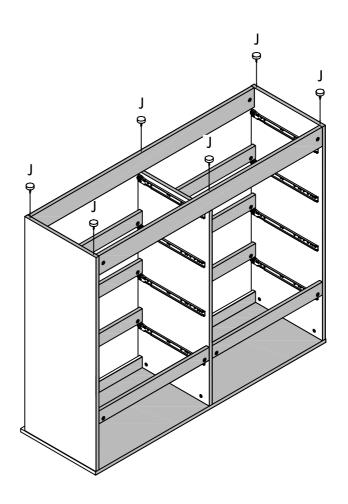

PARTS REQUIRED


12- BACK PANEL

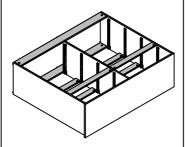


HARDWARE REQUIRED



TOOLS REQUIRED



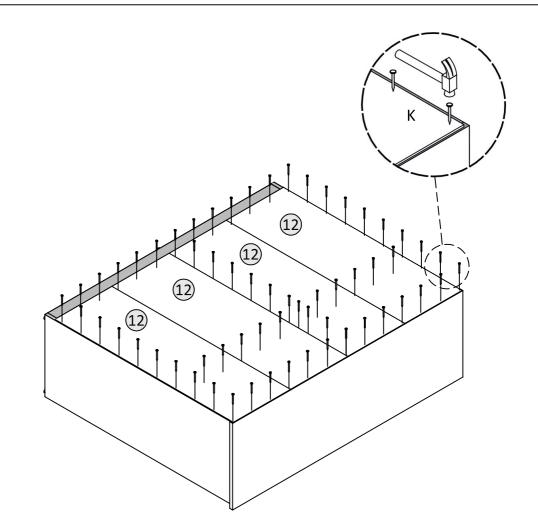


STEP 16

PARTS REQUIRED


03- DRAWER FRONT (LEFT)	х4
04- DRAWER LEFT PANEL	x8
05- DRAWER RIGHT PANEL	х8
13- DRAWER SUPPORT PANEL	x8
15- DRAWER FRONT (RIGHT)	x4


HARDWARE REQUIRED









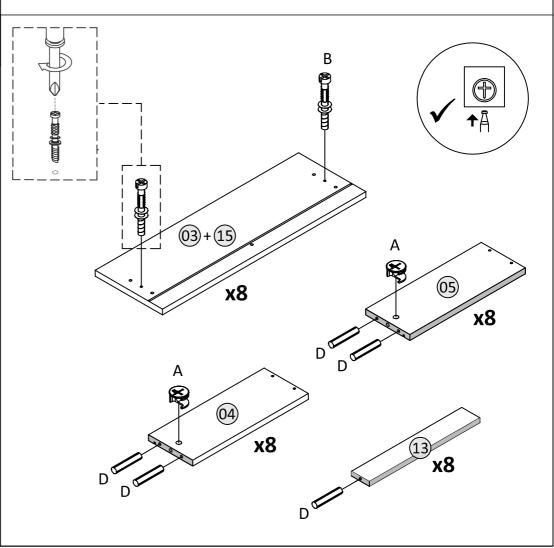

PARTS REQUIRED

04- DRAWER LEFT PANELx805- DRAWER RIGHT PANELx810- DRAWER BACK PANELx811- DRAWER BOTTOM PANELx8


13- DRAWER SUPPORT PANEL x8

HARDWARE REQUIRED



TOOLS REQUIRED



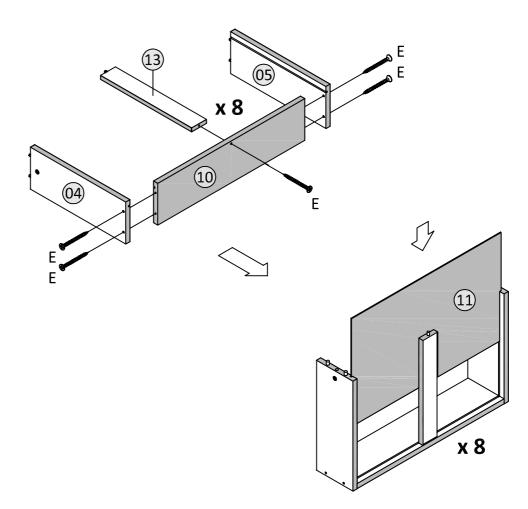


STEP 18

PARTS REQUIRED

03- DRAWER FRONT (LEFT) x4

15- DRAWER FRONT (RIGHT) x4

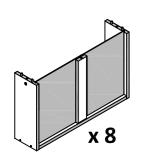


HARDWARE REQUIRED









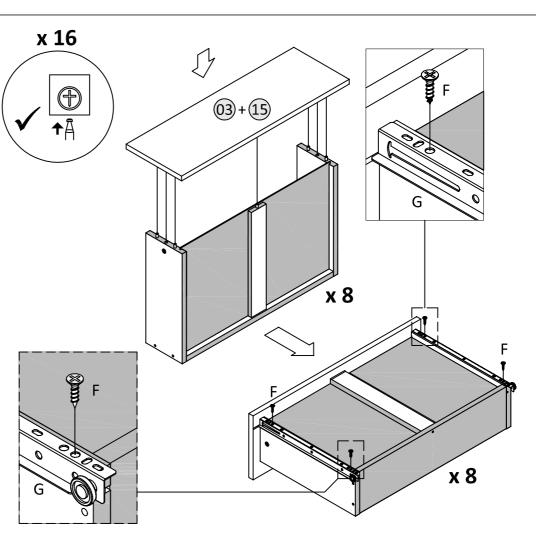

PARTS REQUIRED

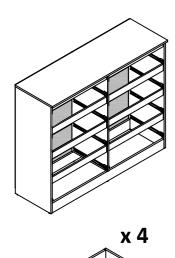


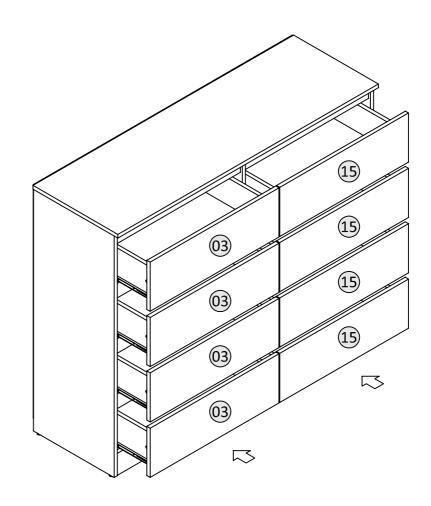

STEP 20

x 4

PARTS REQUIRED

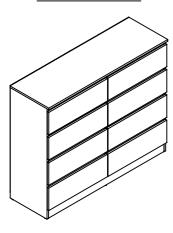

HARDWARE REQUIRED



TOOLS REQUIRED





WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

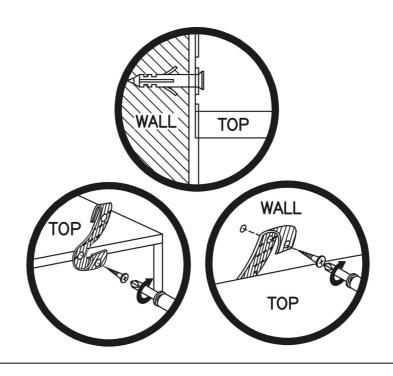

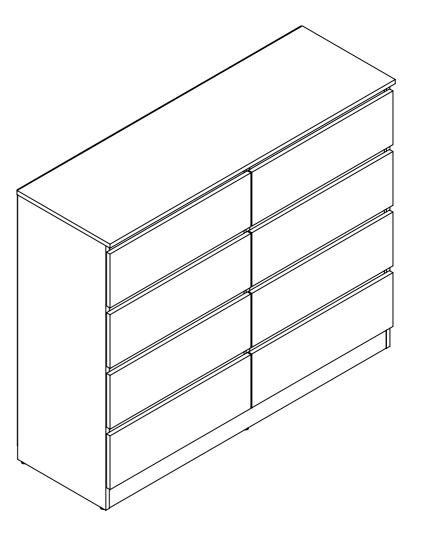

FINISH