


GREY MALVERN 3 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

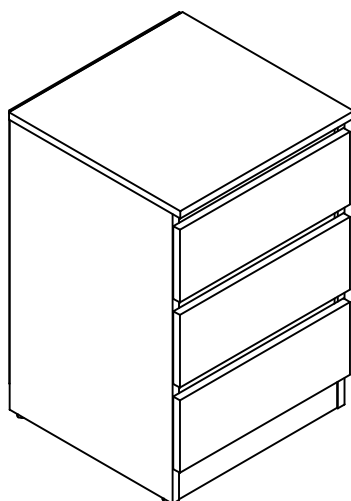

FOR DOMESTIC USE ONLY
IMPORTANT
PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTING KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES. IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET). DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.



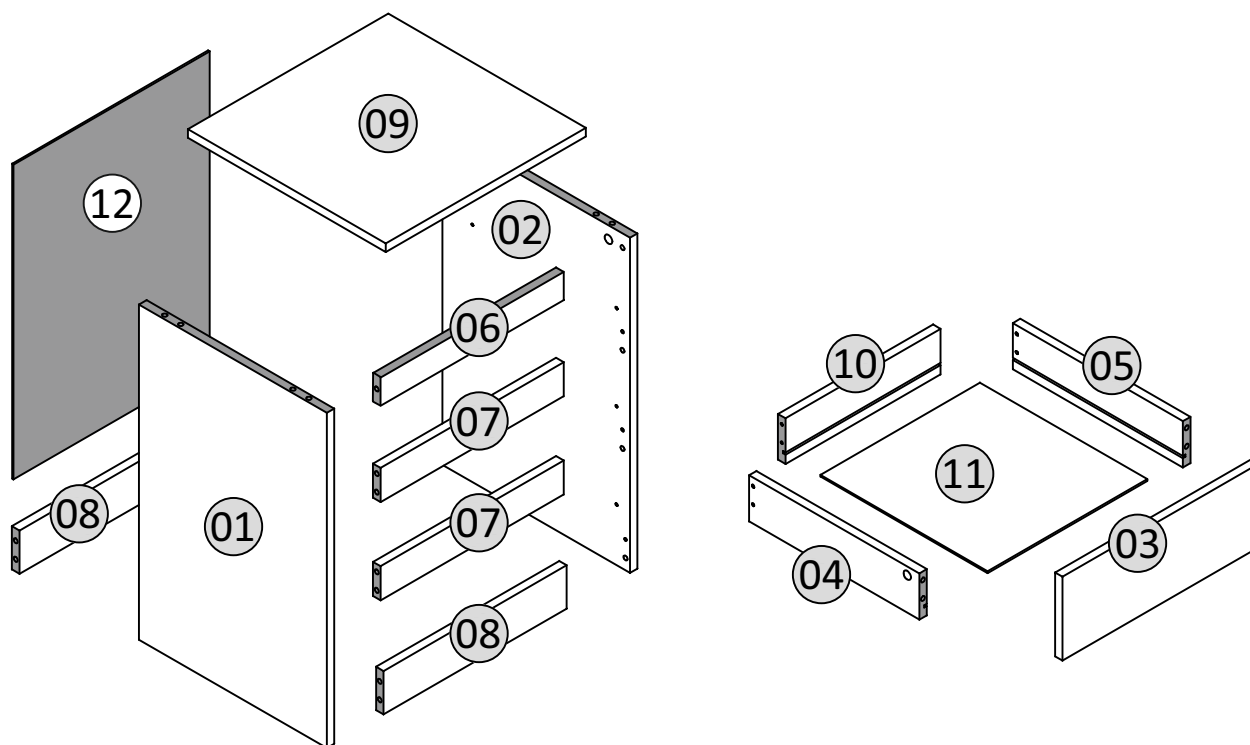

THIS SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.





PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
01	S100-103-069-TA1-01	Left Panel	1	1/1
02	S100-103-069-TA1-02	Right Panel	1	1/1
03	S100-103-069-TA1-03	Drawer Front	3	1/1
04	S100-103-069-TA1-04	Drawer Left Panel	3	1/1
05	S100-103-069-TA1-05	Drawer Right Panel	3	1/1
06	S100-103-069-TA1-06	Top Support Panel	1	1/1
07	S100-103-069-TA1-07	Centre Support Panel	2	1/1
08	S100-103-069-TA1-08	Bottom Support Panel	2	1/1
09	S100-103-069-TA1-09	Top Panel	1	1/1
10	S100-103-069-TA1-10	Drawer Back Panel	3	1/1
11	S100-103-069-TA1-11	Drawer Bottom Panel	3	1/1
12	S100-103-069-TA1-12	Back Panel	1	1/1

HARDWARE LIST

No.	Part Name		Qty
A	5575 Cam Nut		18
B	Cam Bolt		18
C	M6 x 30mm PVC Dowel		20
D	38mm Chipboard Screw		12
E	14mm Chipboard Screw		34
F	14" Drawer Slide		3 sets
G	PVC L Bracket		1
H	Table Pin		4
J	Steel Nail		20
K	Safety Pack (4 x 20mm x 1)		1


TIPS FOR FITTING CAM-LOCKS

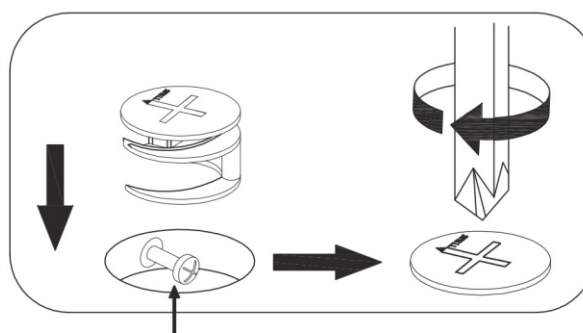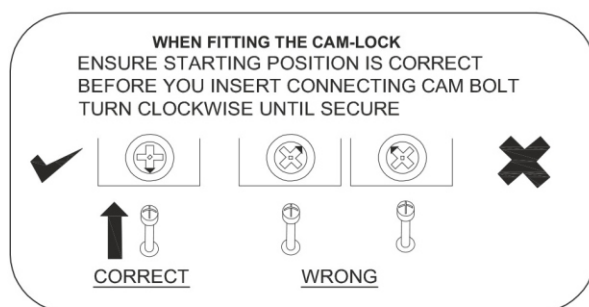

Cam bolt head needs to be in centre

CAMBOLT

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

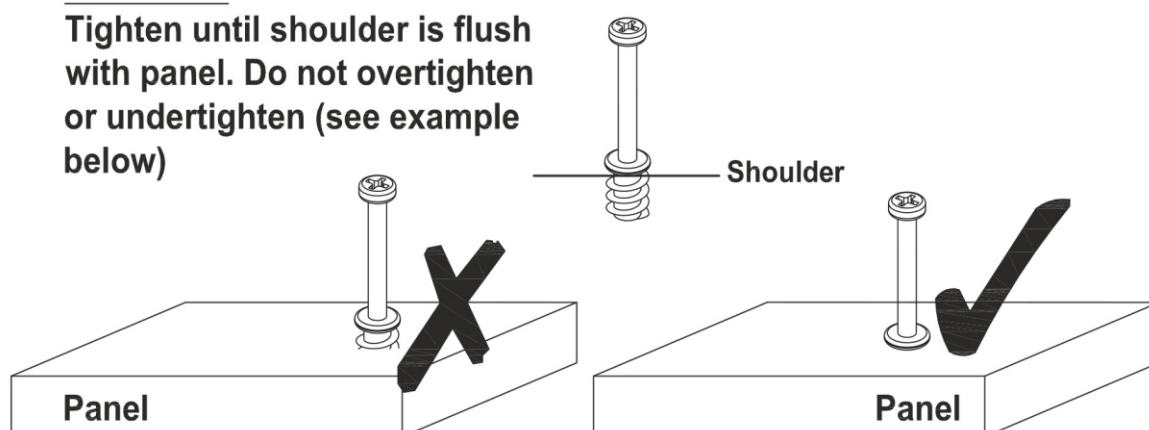

STEP 1

PARTS REQUIRED


01 - LEFT PANEL x1

HARDWARE REQUIRED


E  09

F  03

TOOLS REQUIRED



To Assemble the Drawer Slide, Please Follow Step as Below

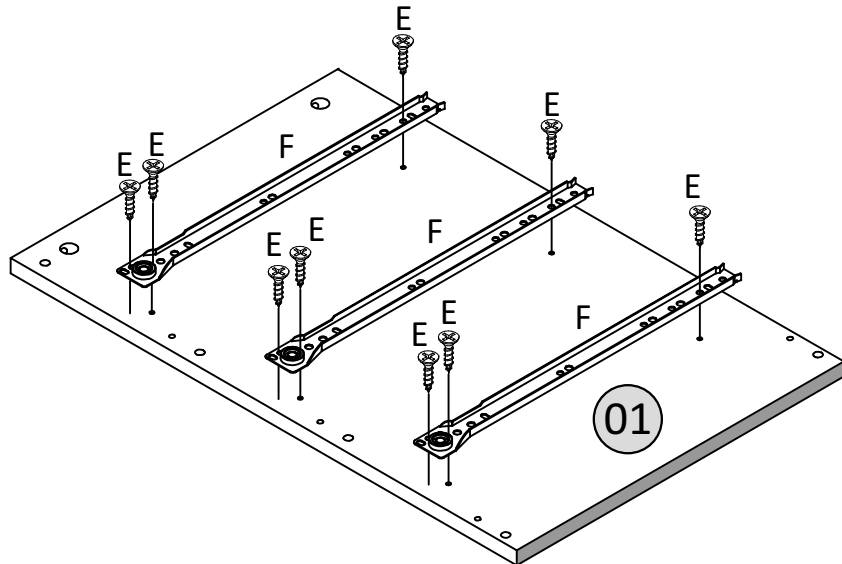

STEP 2

PARTS REQUIRED


02 - RIGHT PANEL x1

HARDWARE REQUIRED


E  09

F  03

TOOLS REQUIRED



To Assemble the Drawer Slide, Please Follow Step as Below

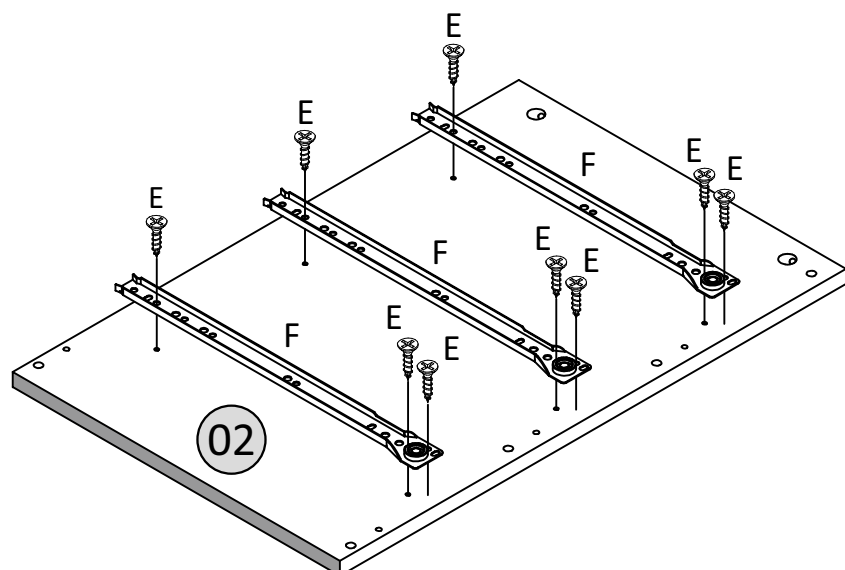

STEP 3

PARTS REQUIRED



01 - LEFT PANEL x1

02 - RIGHT PANEL x1

HARDWARE REQUIRED

A  04B  08C  04

TOOLS REQUIRED

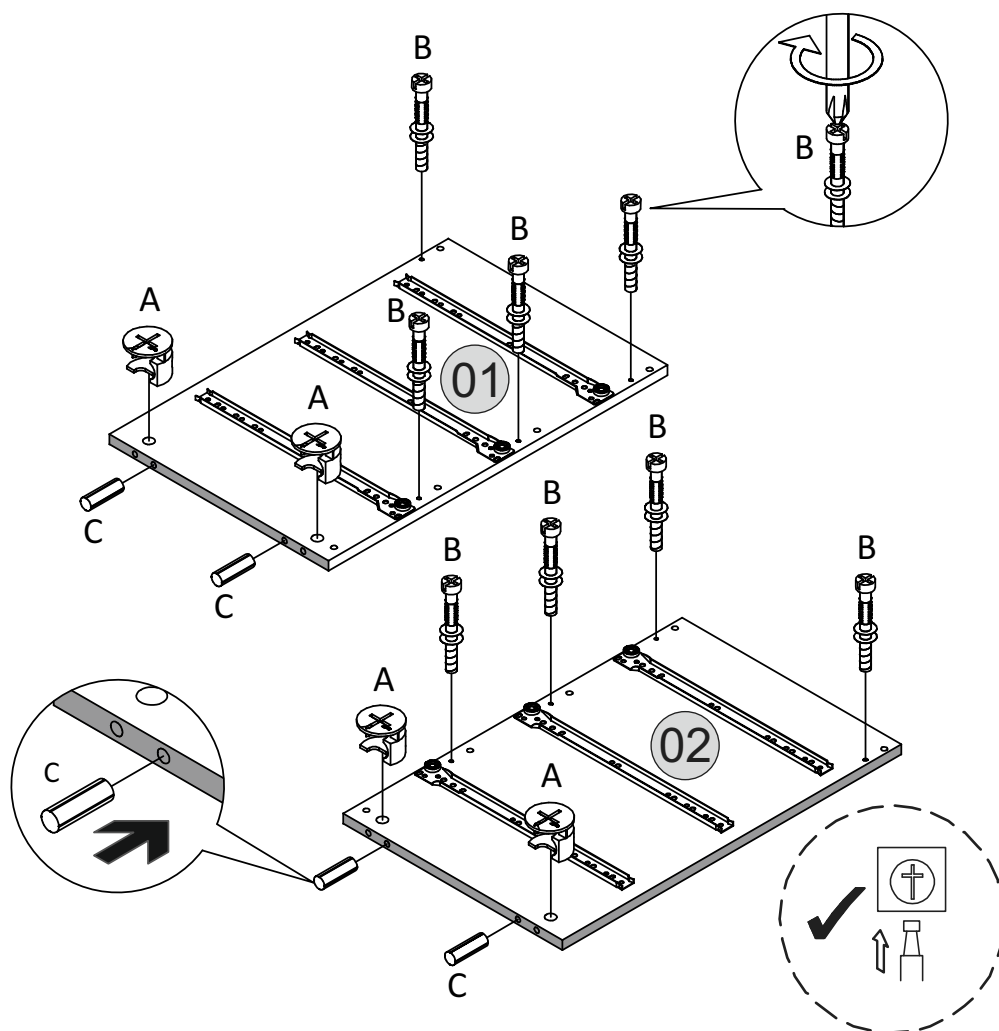

STEP 4

PARTS REQUIRED

06 - TOP SUPPORT PANEL x1

07 - CENTRE SUPPORT PANEL x1



08 - BOTTOM SUPPORT PANEL x1

09 - TOP PANEL x1

HARDWARE REQUIRED

A  08B  04C  10

TOOLS REQUIRED

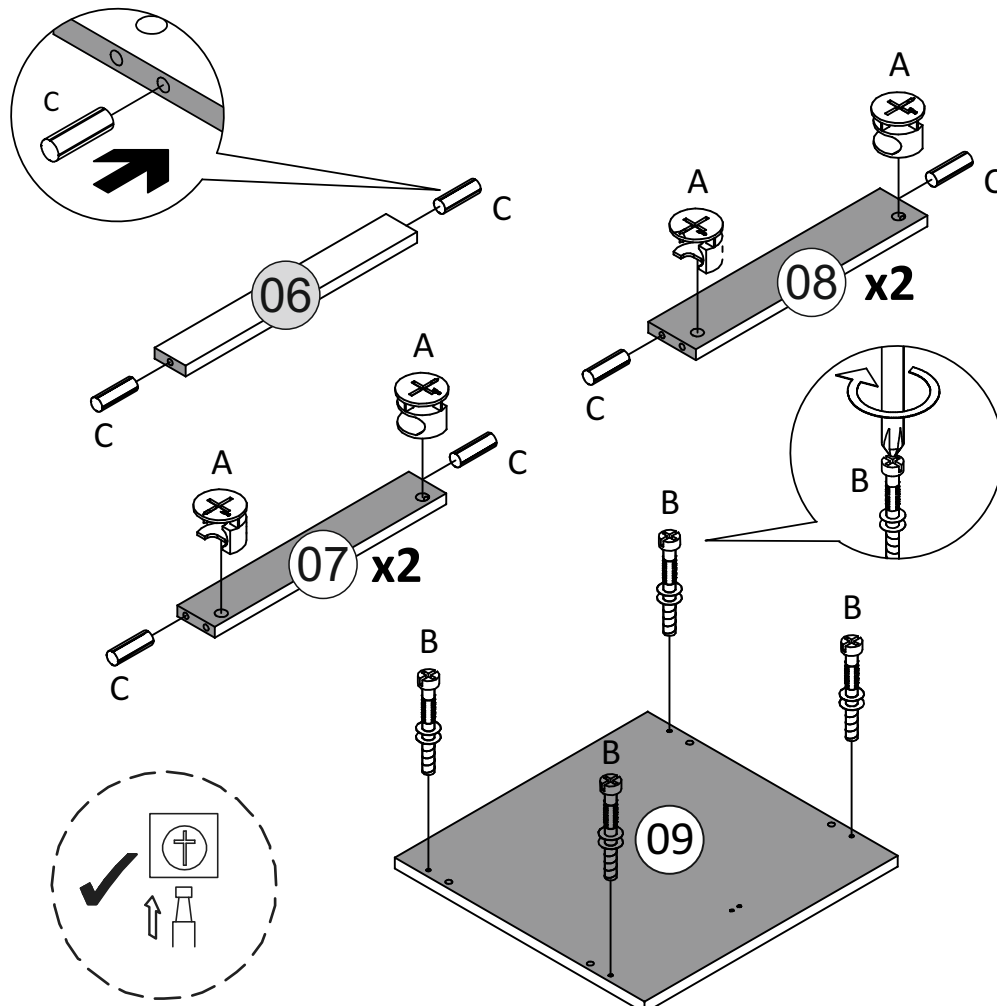

STEP 5

PARTS REQUIRED

02 - RIGHT PANEL x1



06 - TOP SUPPORT PANEL x1

07 - CENTRE SUPPORT PANEL x2

08 - BOTTOM SUPPORT PANEL x2

HARDWARE REQUIRED


TOOLS REQUIRED

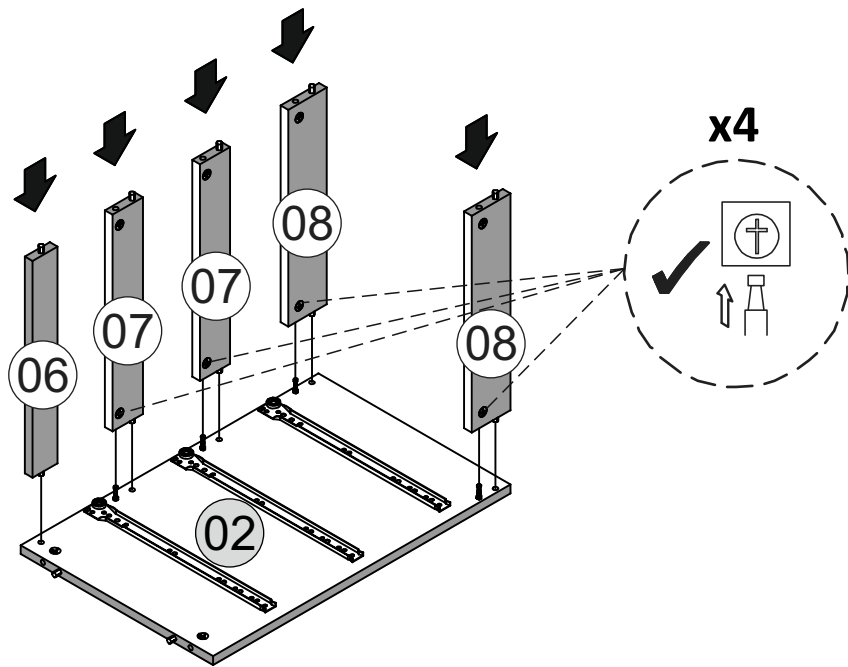

STEP 6



PARTS REQUIRED

01 - LEFT PANEL x1

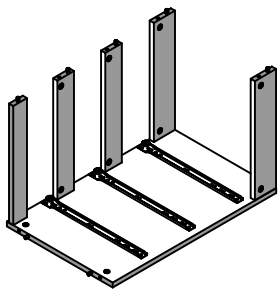

HARDWARE REQUIRED

TOOLS REQUIRED

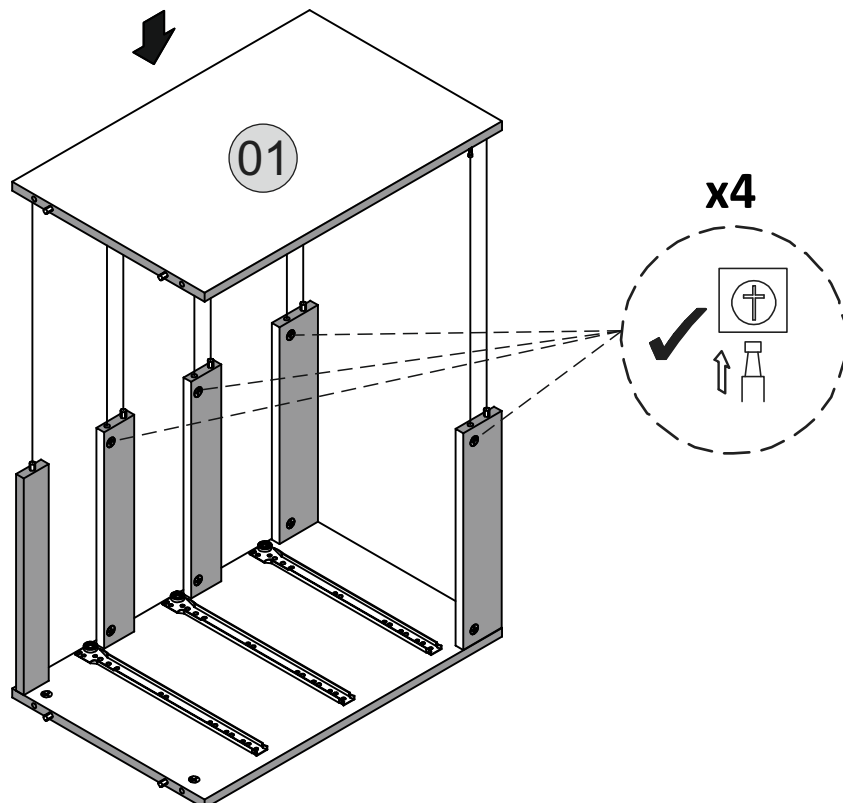


STEP 7

PARTS REQUIRED



09 - TOP PANEL

x1

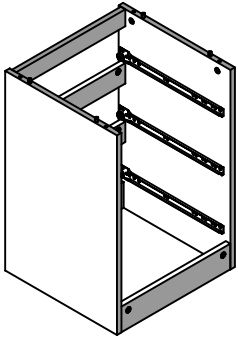


HARDWARE REQUIRED

TOOLS REQUIRED

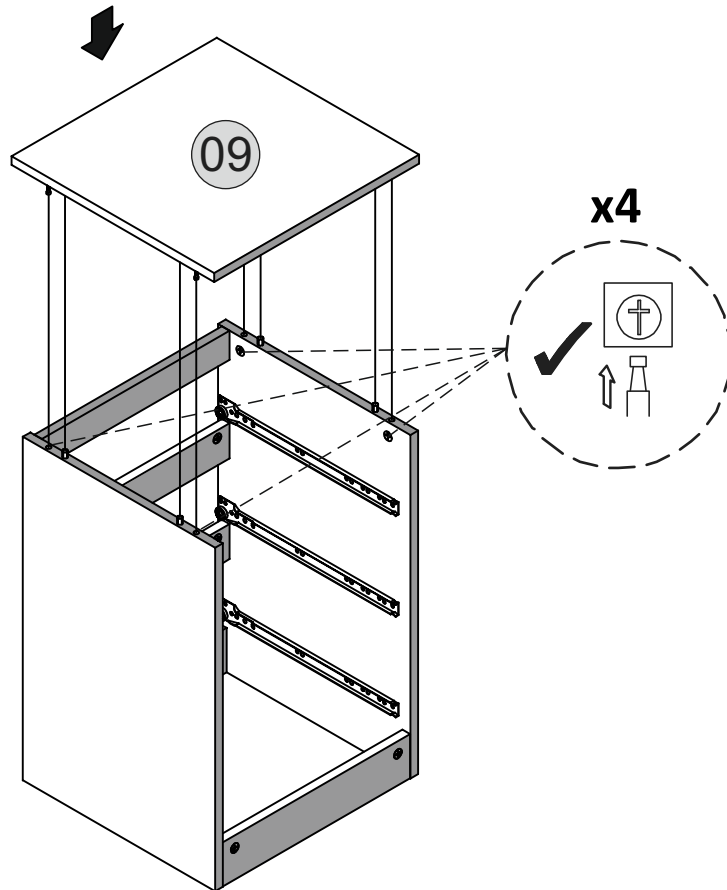

STEP 8





PARTS REQUIRED

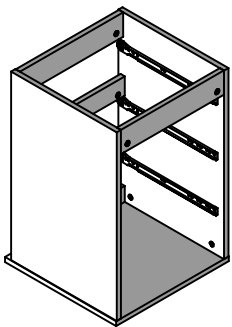

HARDWARE REQUIRED


E  04G  01

TOOLS REQUIRED

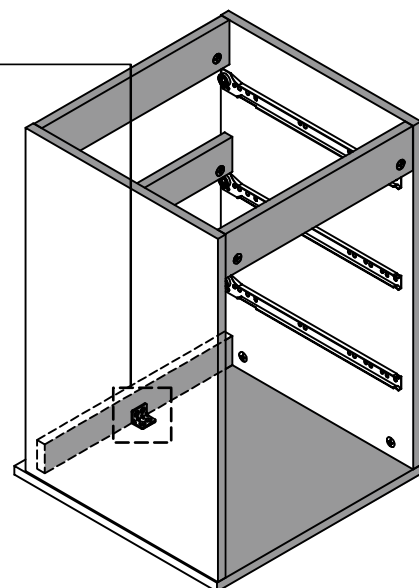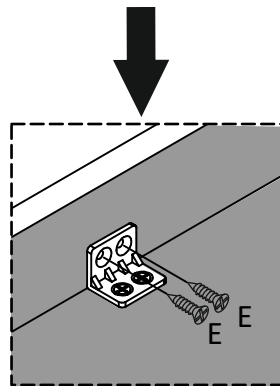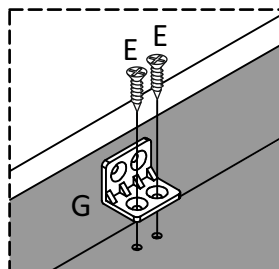

STEP 9



PARTS REQUIRED

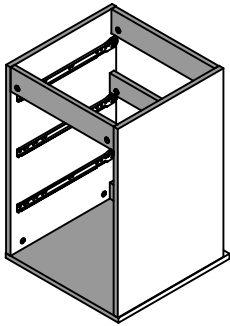

HARDWARE REQUIRED

H  04


TOOLS REQUIRED

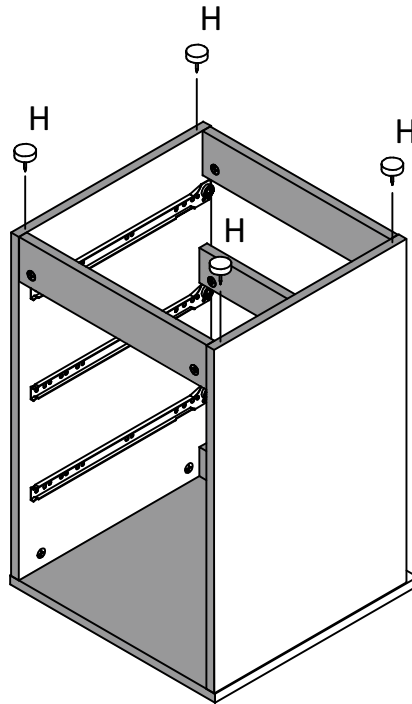


STEP 10

PARTS REQUIRED



12 - BACK PANEL x1

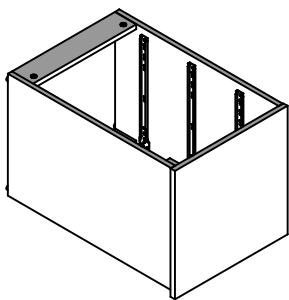

HARDWARE REQUIRED

J  20

TOOLS REQUIRED

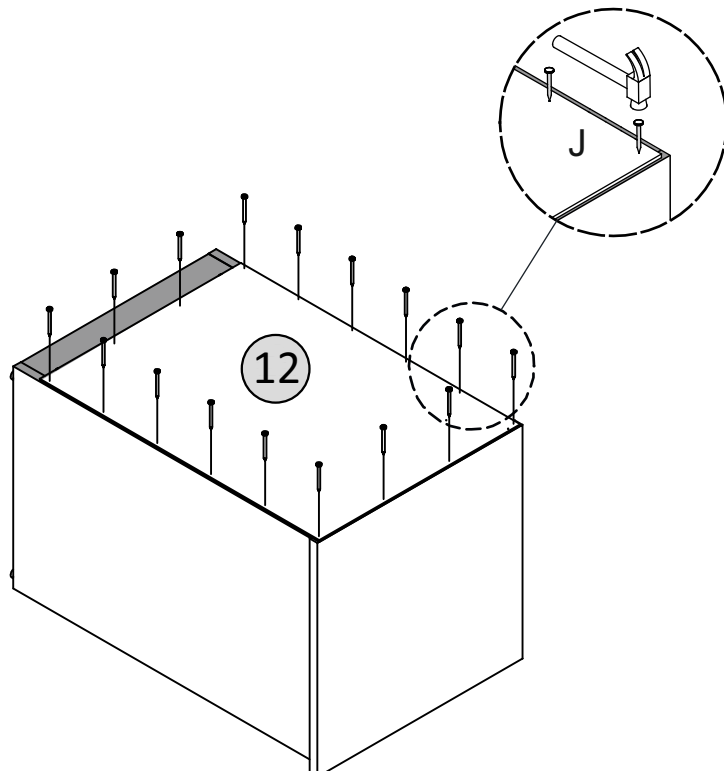

STEP 11

PARTS REQUIRED

03 - DRAWER FRONT x3



04 - DRAWER LEFT PANEL x3

05 - DRAWER RIGHT PANEL x3

HARDWARE REQUIRED

A  06B  06C  06

TOOLS REQUIRED

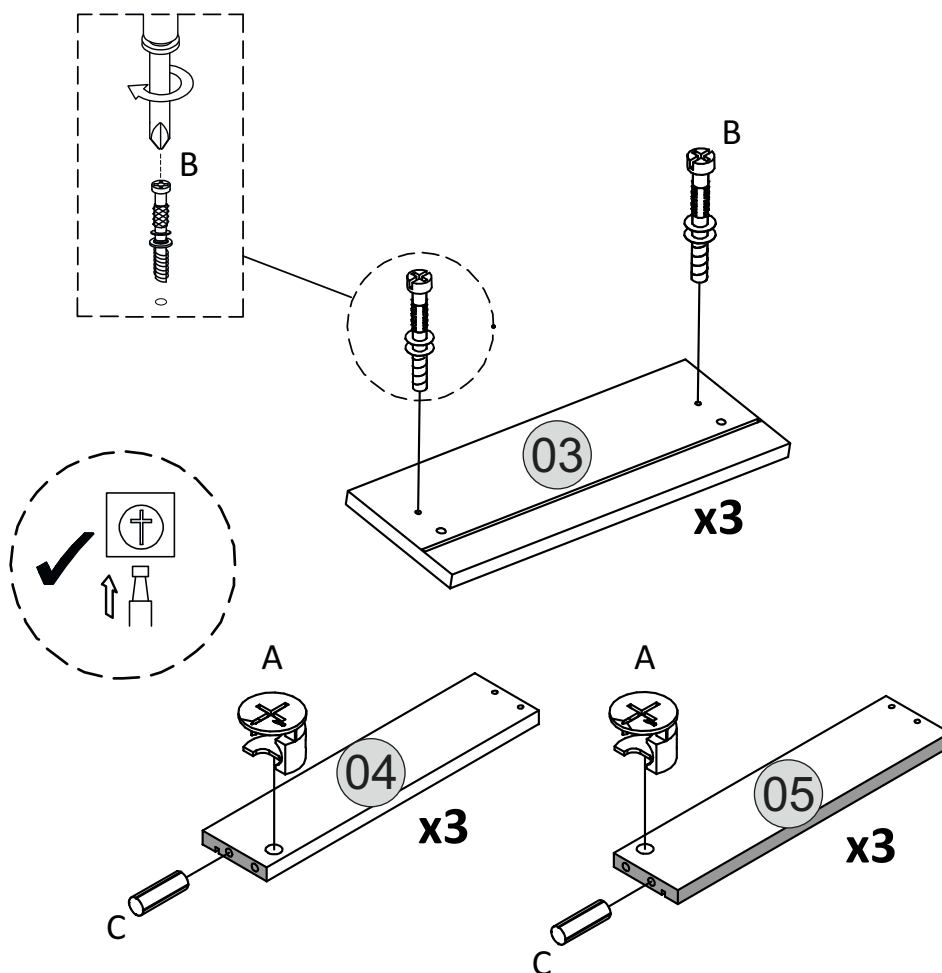

STEP 12

PARTS REQUIRED

04 - DRAWER LEFT PANEL x3

05 - DRAWER RIGHT PANEL x3



10- DRAWER BACK PANEL x3

11- DRAWER BOTTOM PANEL x3

HARDWARE REQUIRED

D  12


TOOLS REQUIRED

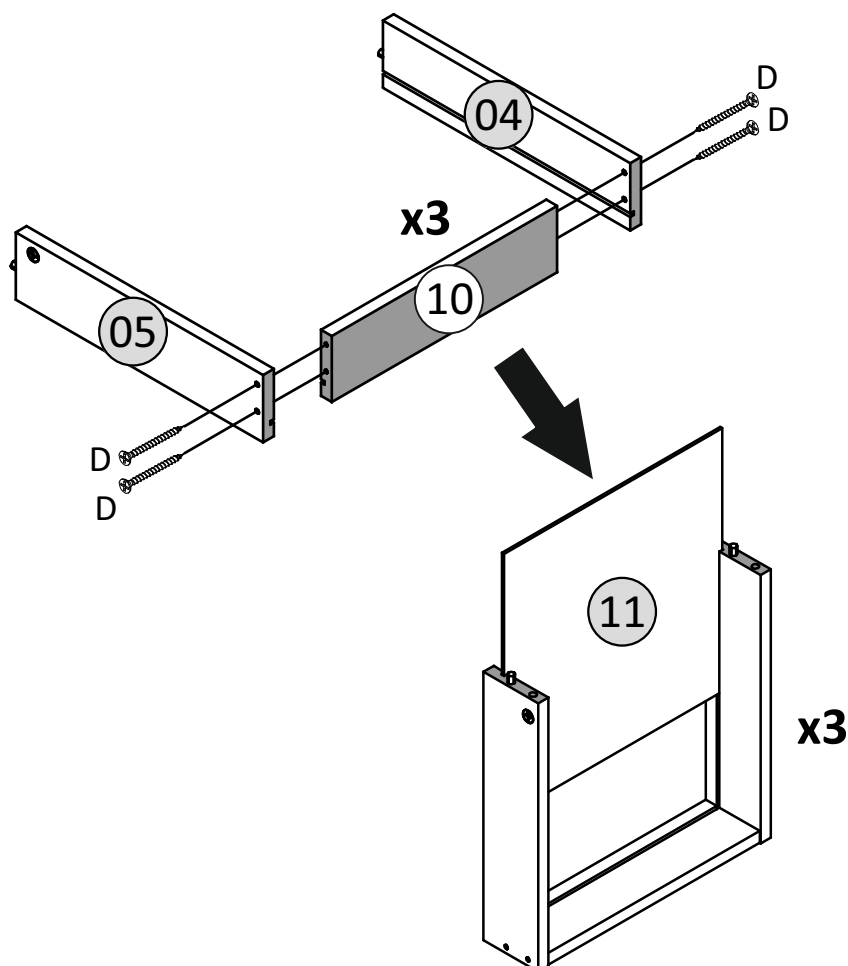

STEP 13

PARTS REQUIRED

03 - DRAWER FRONT x1


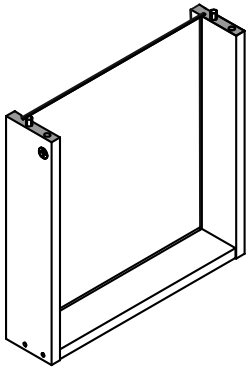


HARDWARE REQUIRED

E  12




F  03

TOOLS REQUIRED

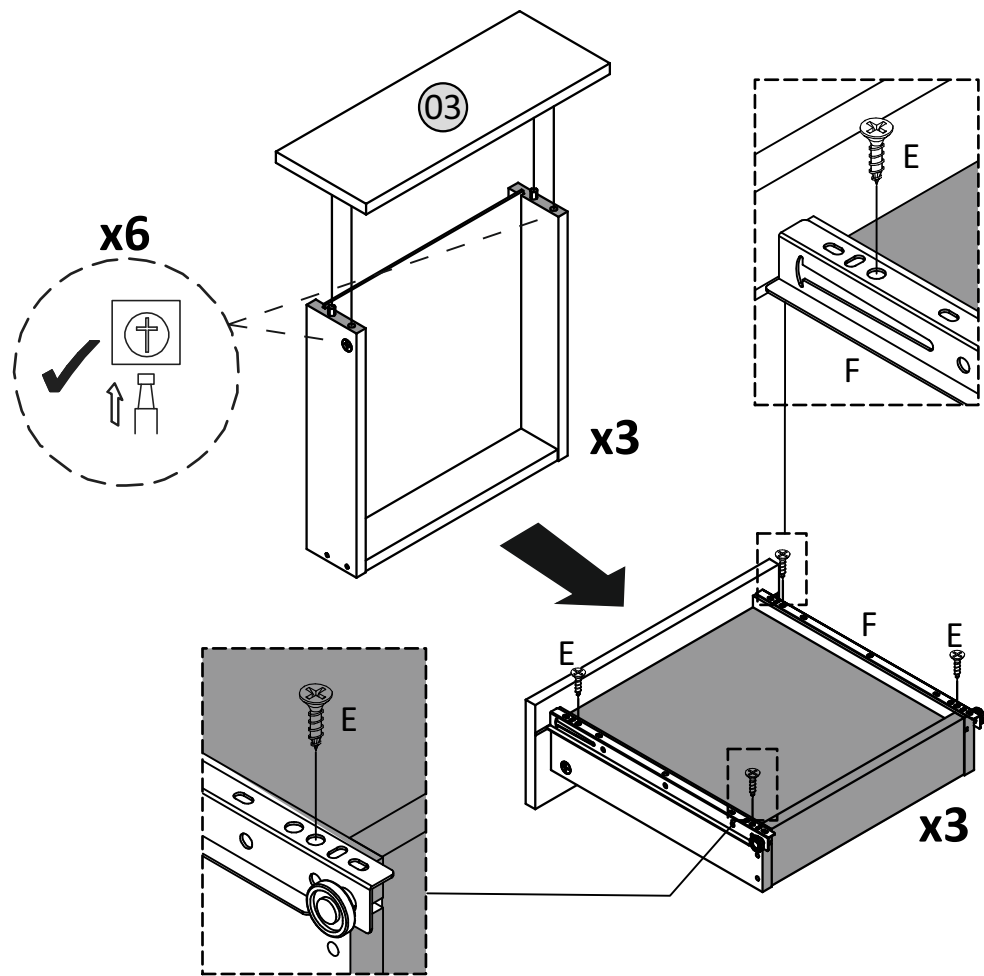


STEP 14

PARTS REQUIRED

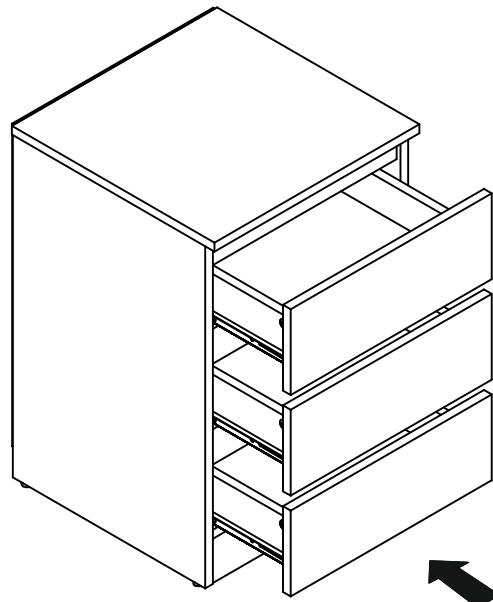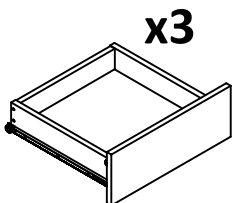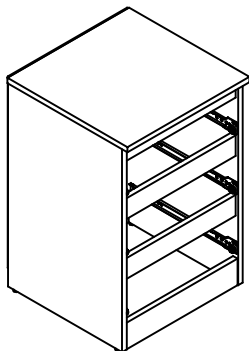


STEP 15


PARTS REQUIRED

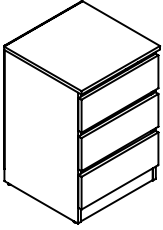

HARDWARE REQUIRED




TOOLS REQUIRED




WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

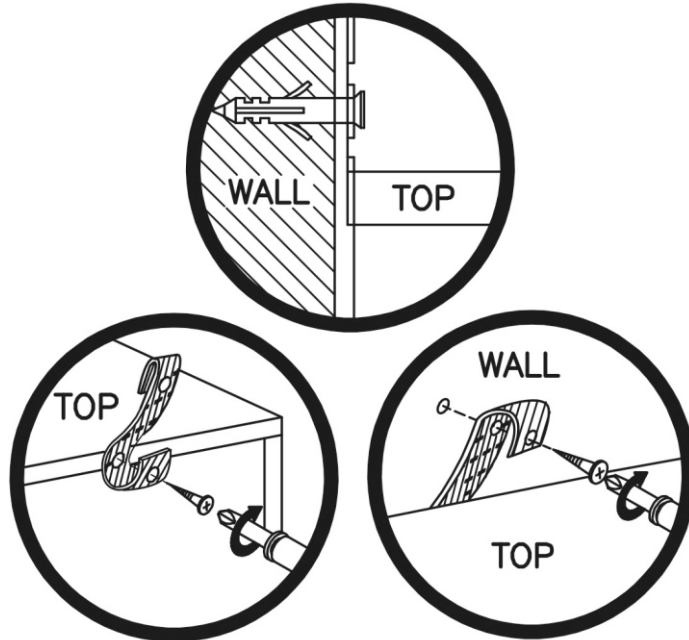

STEP 16

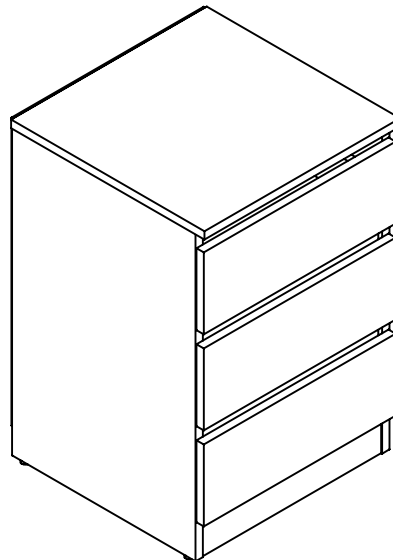

FINISH