
WHITE MALVERN 6 DRAWER CHEST ASSEMBLY INSTRUCTIONS

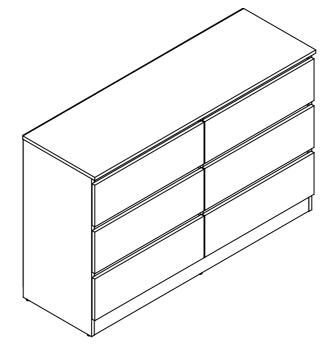





FOR DOMESTIC USE ONLY

IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTING KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES. IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET). $\underline{\text{DO}}$ NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THIS SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

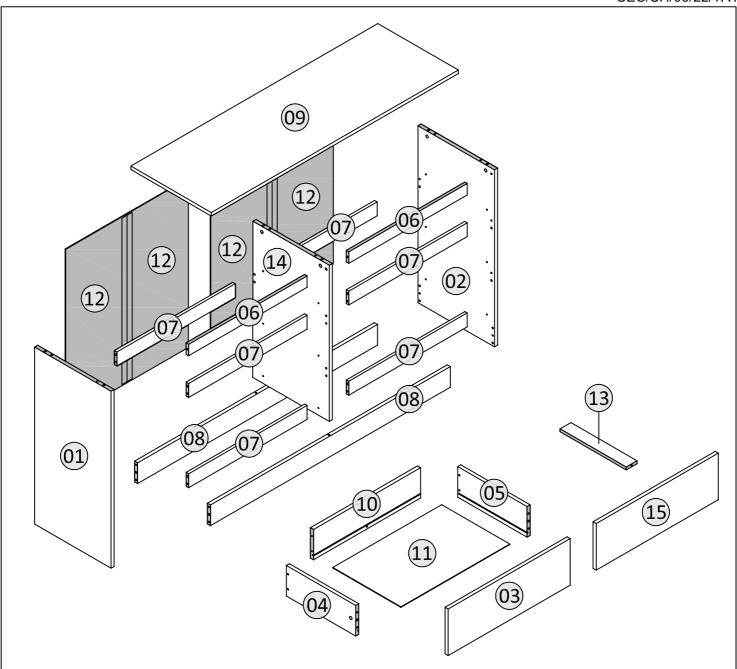


PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
01	S100-102-128-TA1-01	Left Panel	1	2/2
02	S100-102-128-TA1-02	Right Panel	1	2/2
03	S100-102-128-TA1-03	Drawer Front (Left)	3	1/2
04	S100-102-128-TA1-04	Drawer Left Panel	6	2/2
05	S100-102-128-TA1-05	Drawer Right Panel	6	2/2
06	S100-102-128-TA1-06	Top Support Panel	2	1/2
07	S100-102-128-TA1-07	Centre Support Panel	6	1/2
80	S100-102-128-TA1-08	Bottom Support Panel	2	1/2
09	S100-102-128-TA1-09	Top Panel	1	1/2
10	S100-102-128-TA1-10	Drawer Back Panel	6	1/2
11	S100-102-128-TA1-11	Drawer Bottom Panel	6	1/2
12	S100-102-128-TA1-12	Back Panel	4	2/2
13	S100-102-128-TA1-13	Drawer Support Panel	6	1/2
14	S100-102-128-TA1-14	Centre Panel	1	2/2
15	S100-102-128-TA1-15	Drawer Front (Right)	3	1/2

HARDWARE LIST

No.	Part Name		Qty
Α	5575 Cam Nut	®	34
В	Cam Bolt	O Tangara	28
С	Double Cam Bolt	82	3
D	M6 x 30mm Wood Dowel		62
Е	38mm Chipboard Screw	Bentalining	30
F	14mm Chipboard Screw	Barre	68
G	14" Drawer Slide		6 sets
Н	PVC L Bracket		2
J	Table Pin	Ø	6
К	Steel Nail		65
L	Safety Pack (4 x 20mm x 1)	200	2

TIPS FOR FITTING CAM-LOCKS

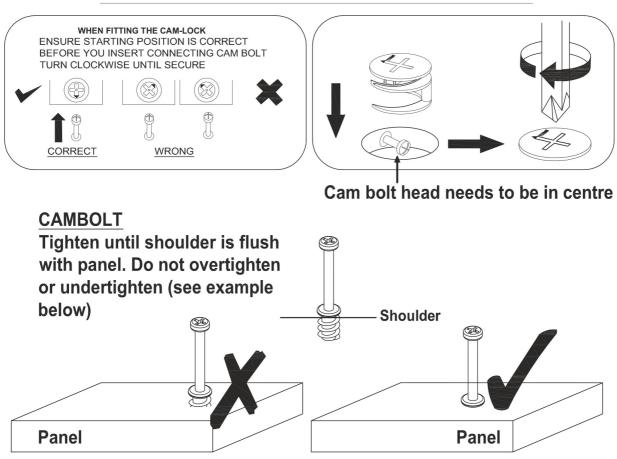




01- LEFT PANEL x1


HARDWARE REQUIRED






TOOLS REQUIRED





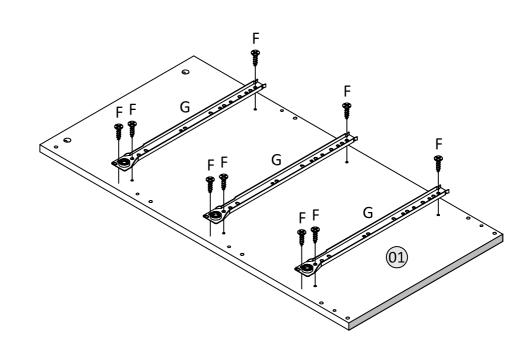


STEP 2


PARTS REQUIRED


02- RIGHT PANEL x1

HARDWARE REQUIRED







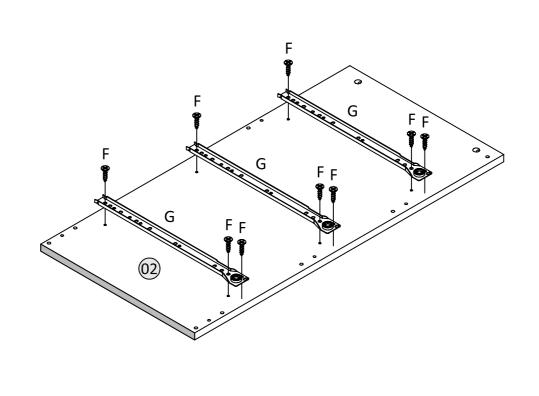




14- CENTRE PANEL x1


HARDWARE REQUIRED






TOOLS REQUIRED





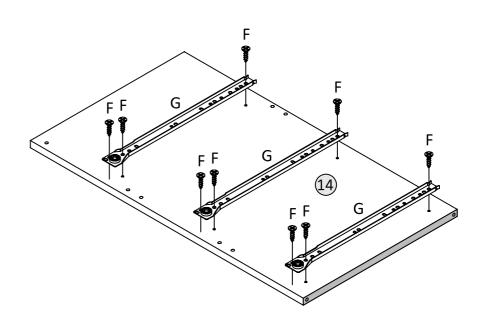


STEP 4


PARTS REQUIRED

14- CENTRE PANEL x1


HARDWARE REQUIRED



TOOLS REQUIRED



To Assembly the Drawer Slide, Please Follow Step as Below Last Second Hole Third Hole FRONT

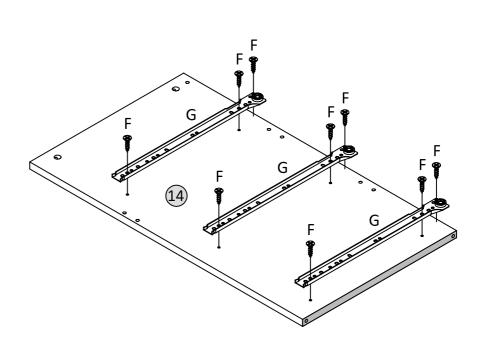



01- LEFT PANEL x1


02- RIGHT PANEL x1


HARDWARE REQUIRED





TOOLS REQUIRED



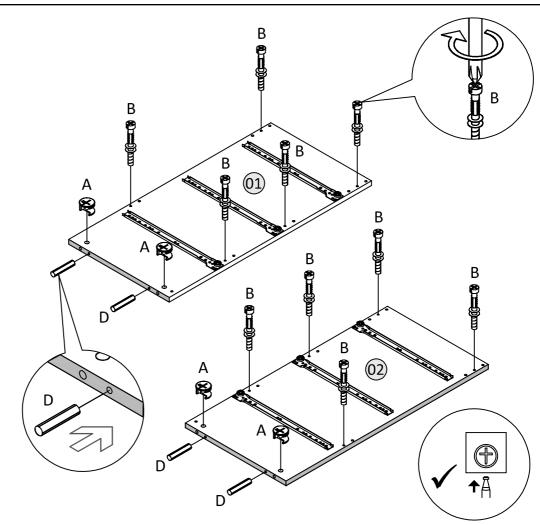


STEP 6


PARTS REQUIRED

06- TOP SUPPORT PANELx207- CENTRE SUPPORT PANELx608- BOTTOM SUPPORT PANELx214- CENTRE PANELx1

HARDWARE REQUIRED





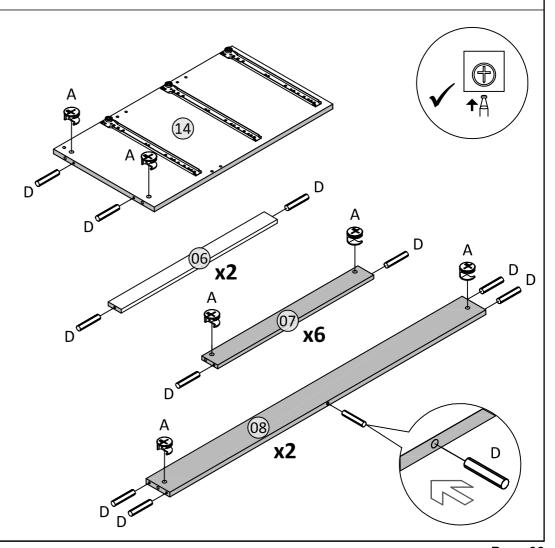

PARTS REQUIRED


01- LEFT PANEL x1


06- TOP SUPPORT PANEL x1

07- CENTRE SUPPORT PANEL x3

HARDWARE REQUIRED

TOOLS REQUIRED



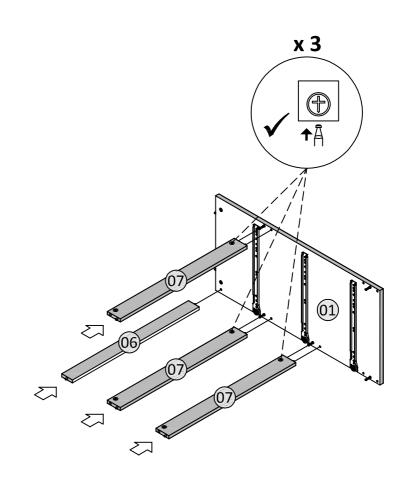


STEP 8


PARTS REQUIRED


08- BOTTOM SUPPORT PANEL x2

14- CENTRE PANEL x1

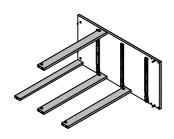

HARDWARE REQUIRED




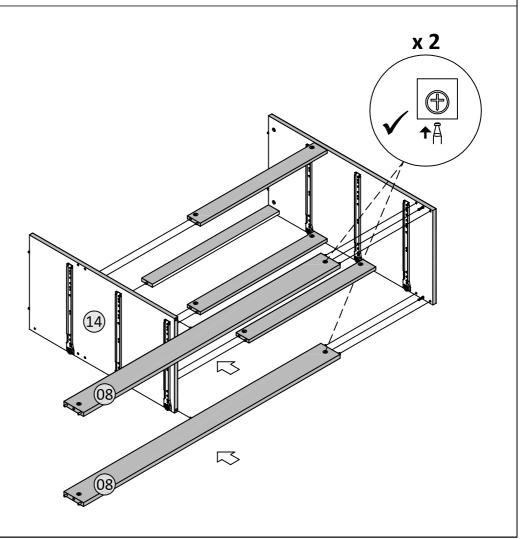



06- TOP SUPPORT PANEL x1

07- CENTRE SUPPORT PANEL x3

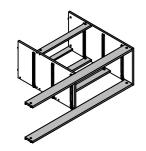


HARDWARE REQUIRED



TOOLS REQUIRED




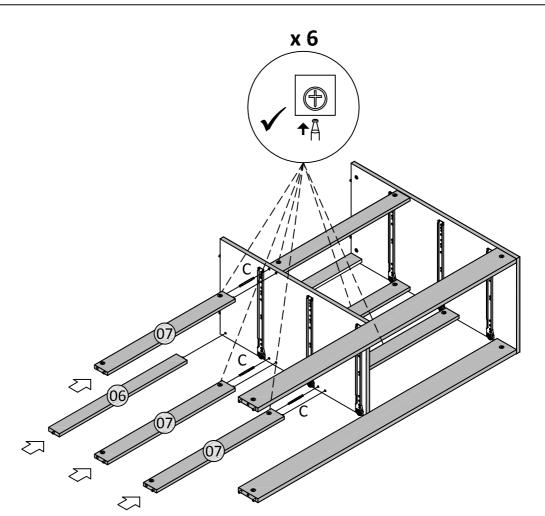


STEP 10


PARTS REQUIRED

02- RIGHT PANEL x1

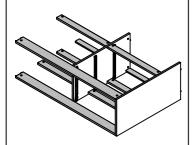

HARDWARE REQUIRED



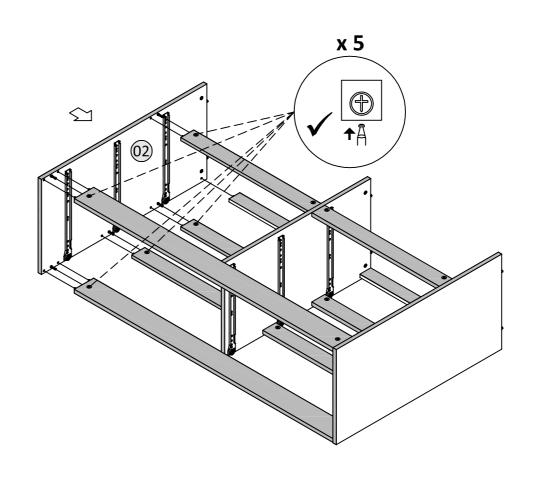

PARTS REQUIRED


09- TOP PANEL x1

HARDWARE REQUIRED



TOOLS REQUIRED




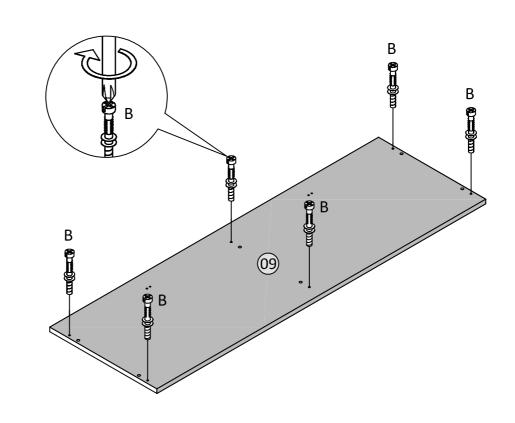


STEP 12


PARTS REQUIRED

09- TOP PANEL x1

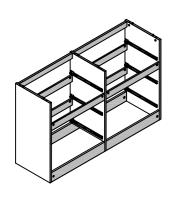


HARDWARE REQUIRED



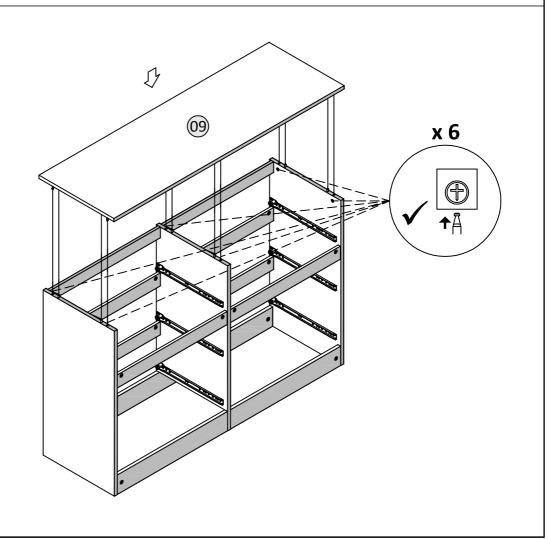

PARTS REQUIRED

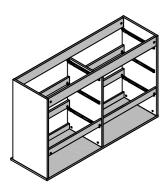


HARDWARE REQUIRED






TOOLS REQUIRED



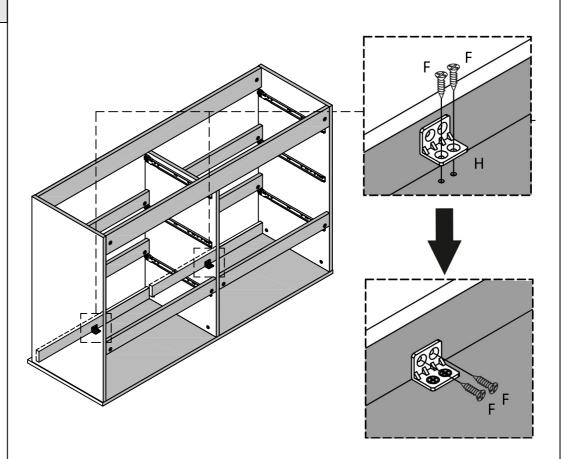


STEP 14


PARTS REQUIRED

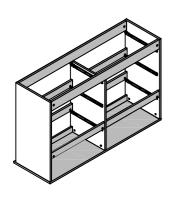

HARDWARE REQUIRED






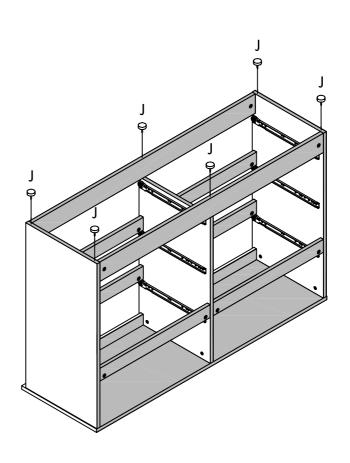

PARTS REQUIRED


12- BACK PANEL

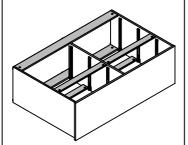


HARDWARE REQUIRED



TOOLS REQUIRED



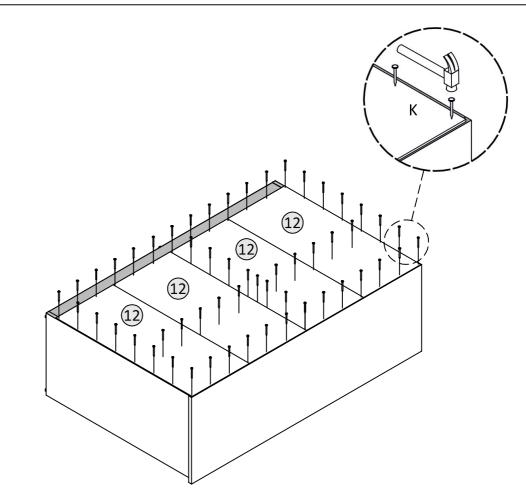


STEP 16


PARTS REQUIRED


03- DRAWER FRONT (LEFT)	х3
04- DRAWER LEFT PANEL	х6
05- DRAWER RIGHT PANEL	х6
13- DRAWER SUPPORT PANEL	х6
15- DRAWER FRONT (RIGHT)	х3

HARDWARE REQUIRED







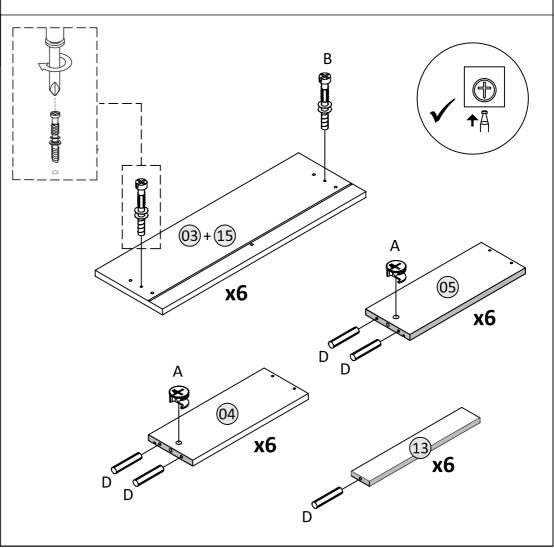

PARTS REQUIRED


04- DRAWER LEFT PANEL	х6
05- DRAWER RIGHT PANEL	х6
10- DRAWER BACK PANEL	х6
11- DRAWER BOTTOM PANEL	х6


HARDWARE REQUIRED

13- DRAWER SUPPORT PANEL x6



TOOLS REQUIRED



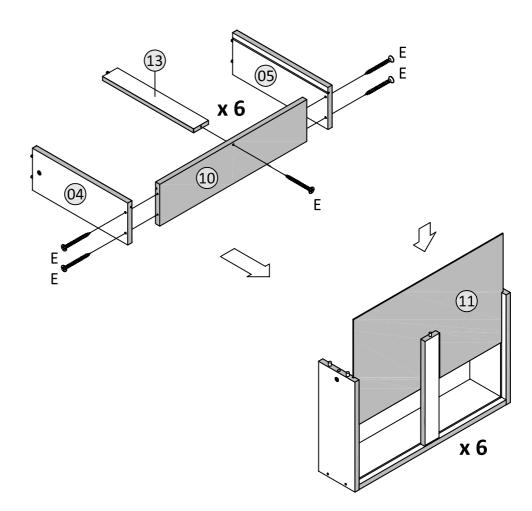


STEP 18


PARTS REQUIRED


03- DRAWER FRONT (LEFT) x3


15- DRAWER FRONT (RIGHT) x3

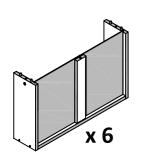


HARDWARE REQUIRED







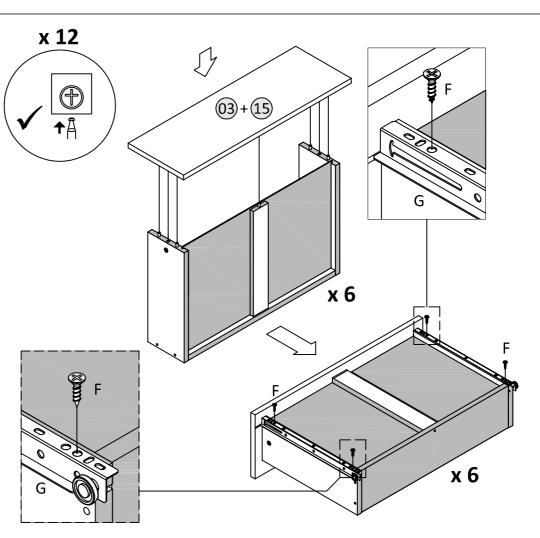


PARTS REQUIRED

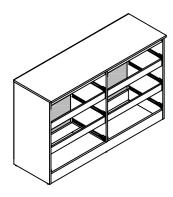






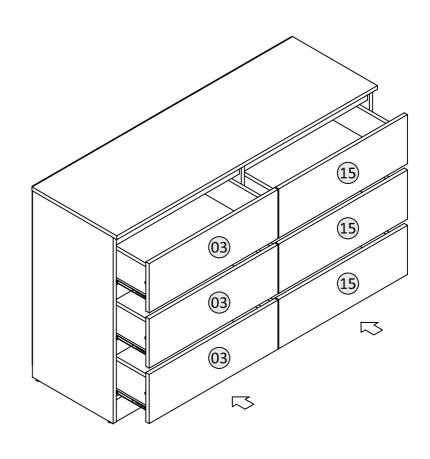

STEP 20


PARTS REQUIRED

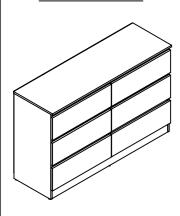

HARDWARE REQUIRED



TOOLS REQUIRED





WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

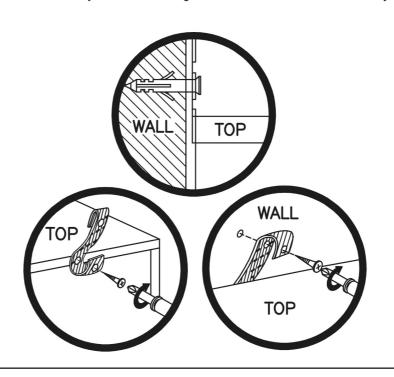

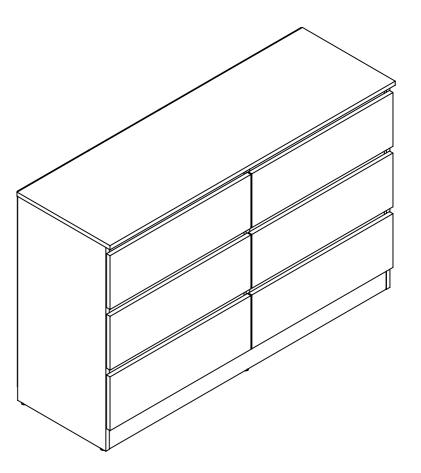

FINISH