





52428

CARLOW 4'6" BED ASSEMBLY INSTRUCTIONS

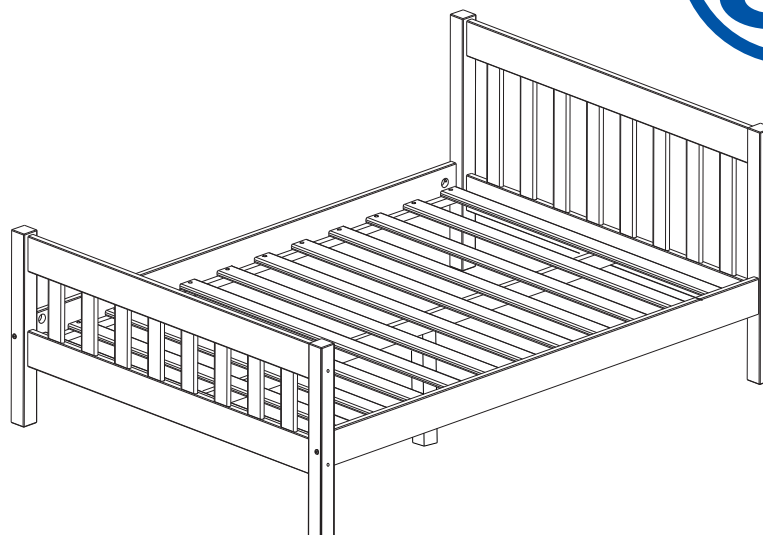

IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER **CARE AND MAINTENANCE**

- After unpacking this product please keep the original packaging in case it needs to be returned for any reason.
- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible.
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not drag or push items across your furniture as this may cause the surface to scratch.
- Do not place this product next to a radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- Do not place on a wet or damp floor as staining may occur to your floor.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

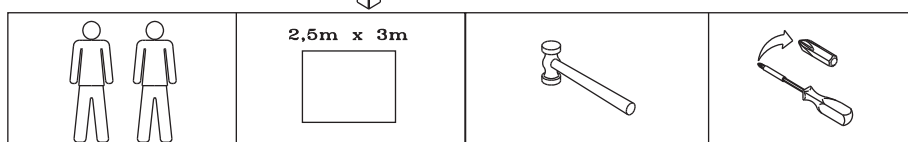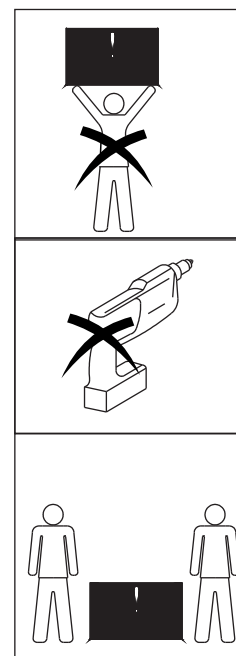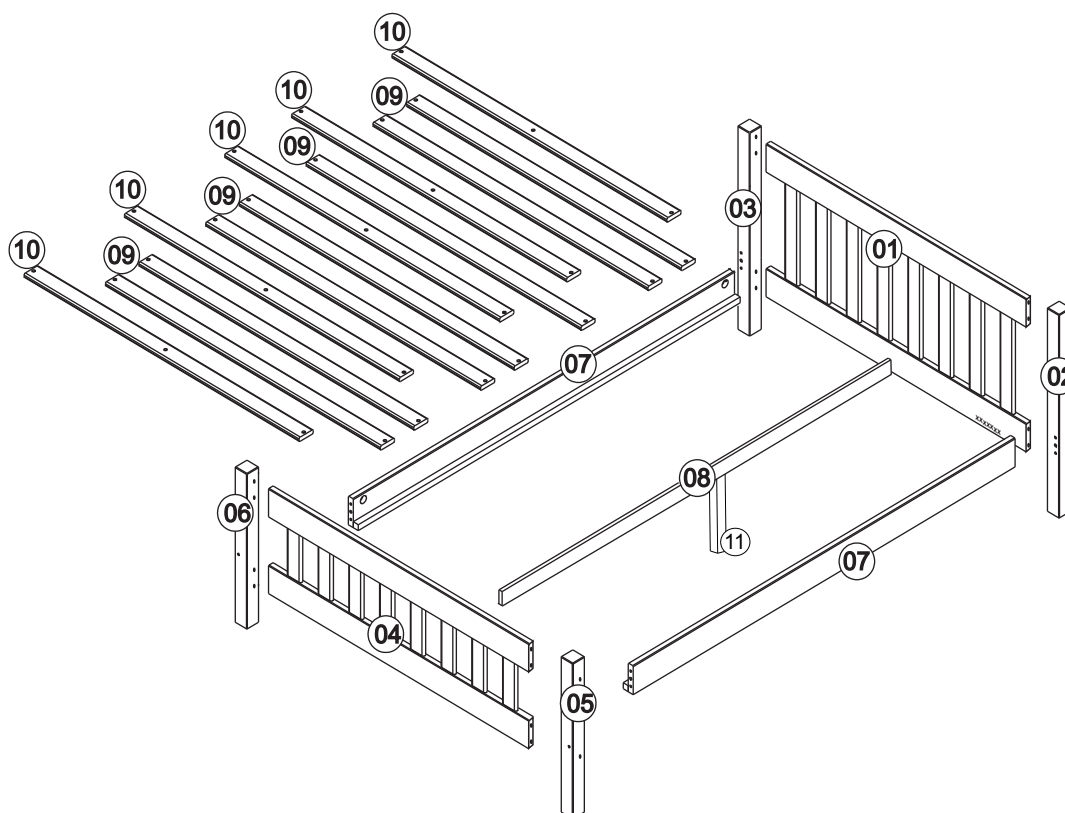

! * Use of power tools to assemble this product will invalidate any claim and could damage this product making it unsafe!!!
* Please assemble on a clean soft surface to avoid damage.





! * Please check contents and read the instructions before commencing assembly.
* Assemble this product following the enclosed instructions carefully.
* Please take care to avoid damaging parts during assembly.





PARTS LIST




part number	name of part	quantity
1	Headboard Panel	1
2	Right Headboard Post	1
3	Left Headboard Post	1
4	Footboard Panel	1
5	Right Footboard Post	1
6	Left Footboard Post	1

part number	name of part	quantity
7	Side Rails	2
8	Centre Support Rail	1
9	Slats (2 holes)	7
10	Slats (3 holes)	5
11	Centre Support Leg	1


FITTINGS

A	 $\varnothing 1/4" \times 110$	04
B		04
C	 $\varnothing 3,5 \times 35$	29
D	 $\varnothing 08 \times 50$	16


E	ALLEN KEY 	01
F	SPACER (WOODEN) 	02
G	 $\varnothing 7 \times 100$	08
H	 $\varnothing 4,0 \times 20$	08

I	 $\varnothing 4,0 \times 16$	02
J		02
K	 $\varnothing 7 \times 90\text{mm}$	01



01

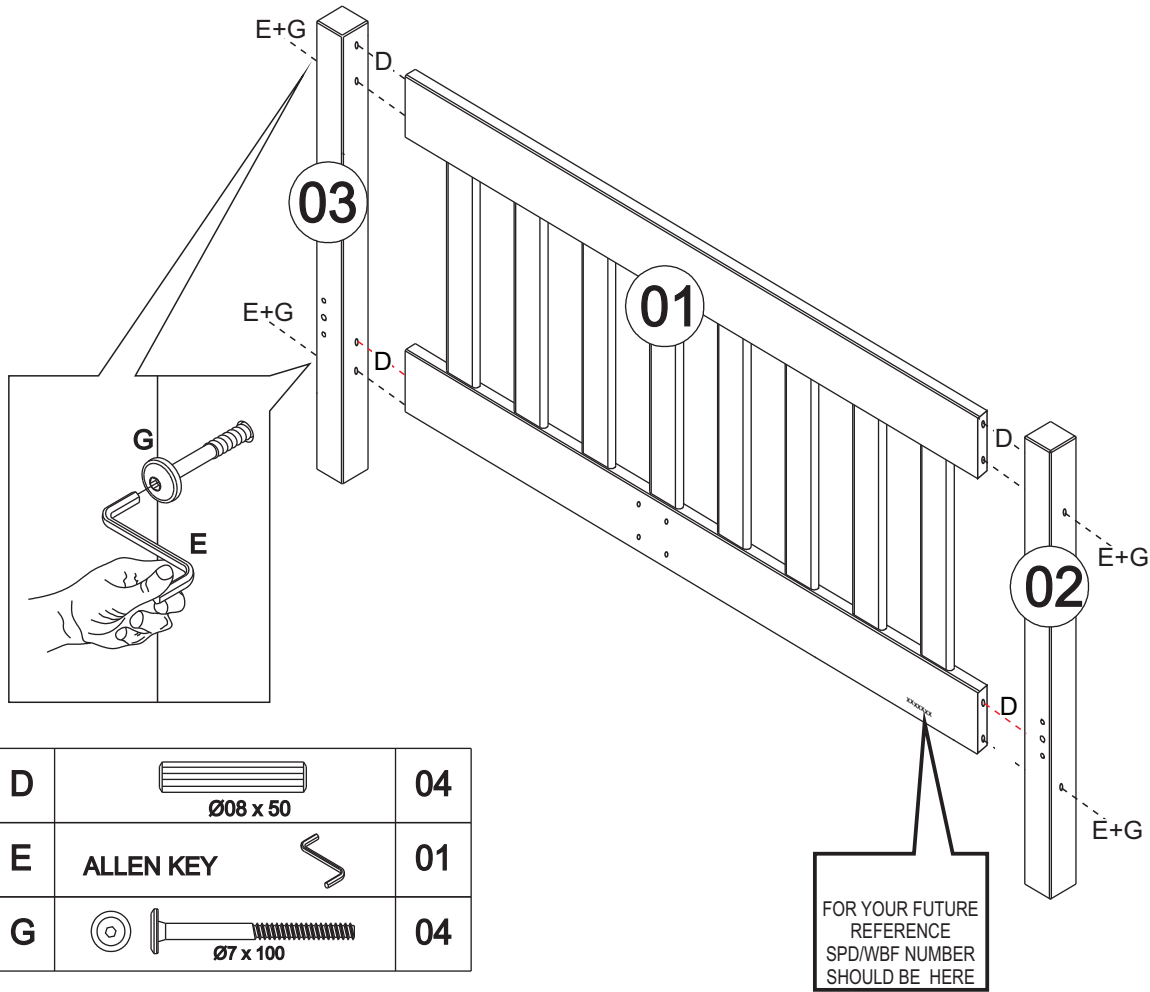

02

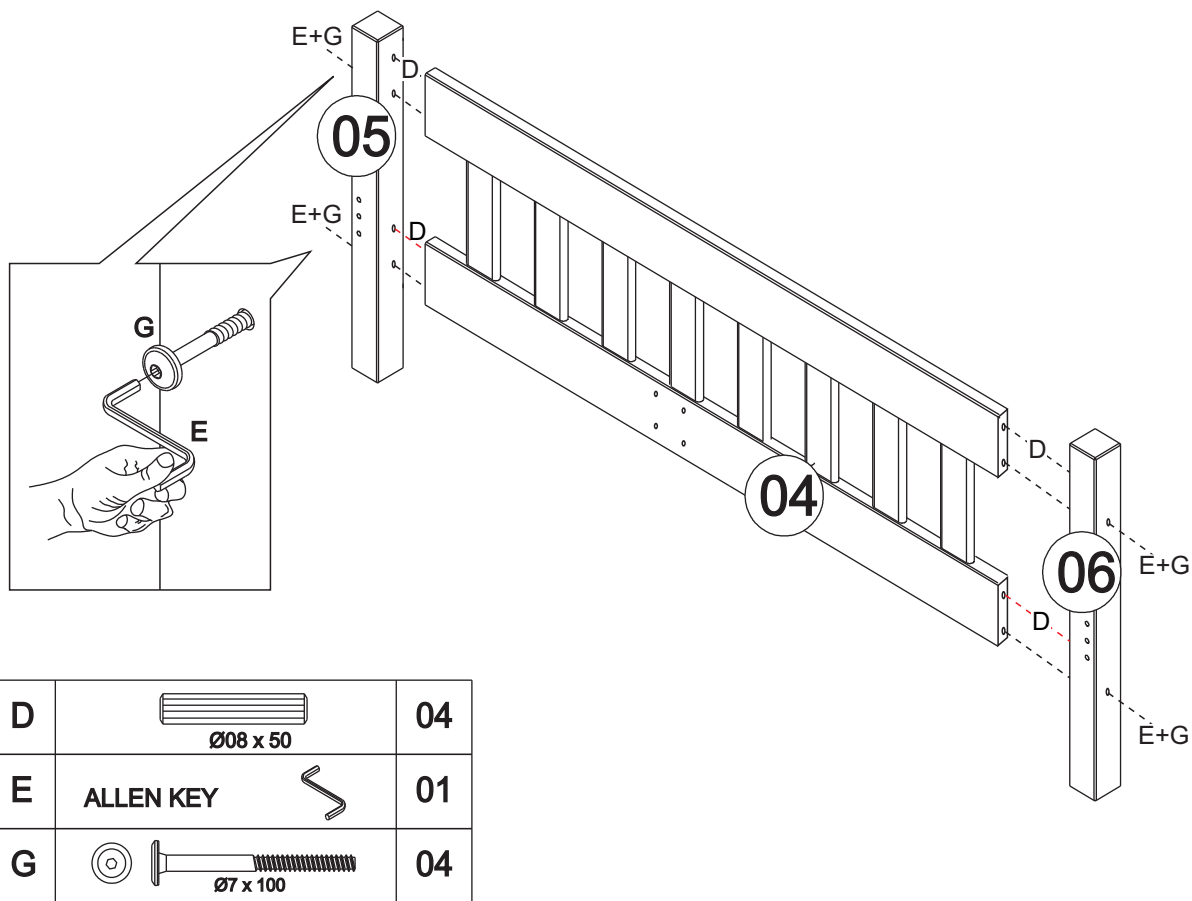


03

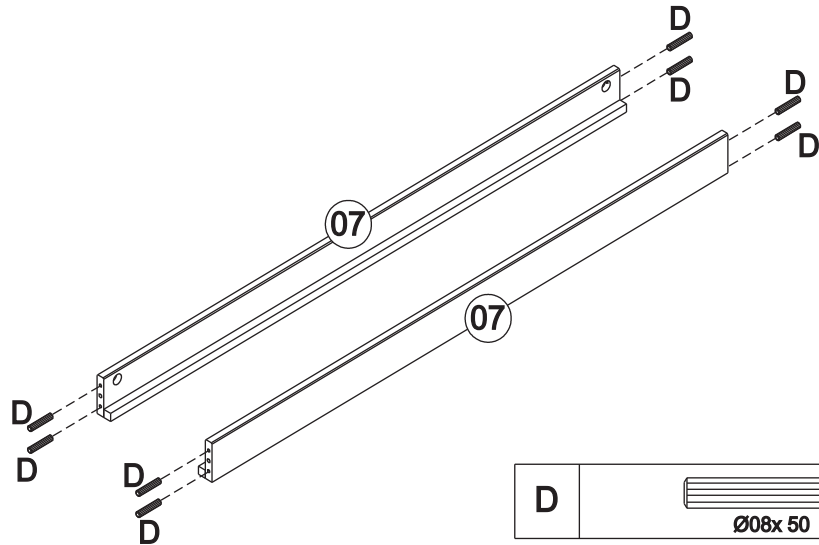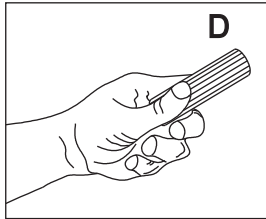


D		08
---	--	----

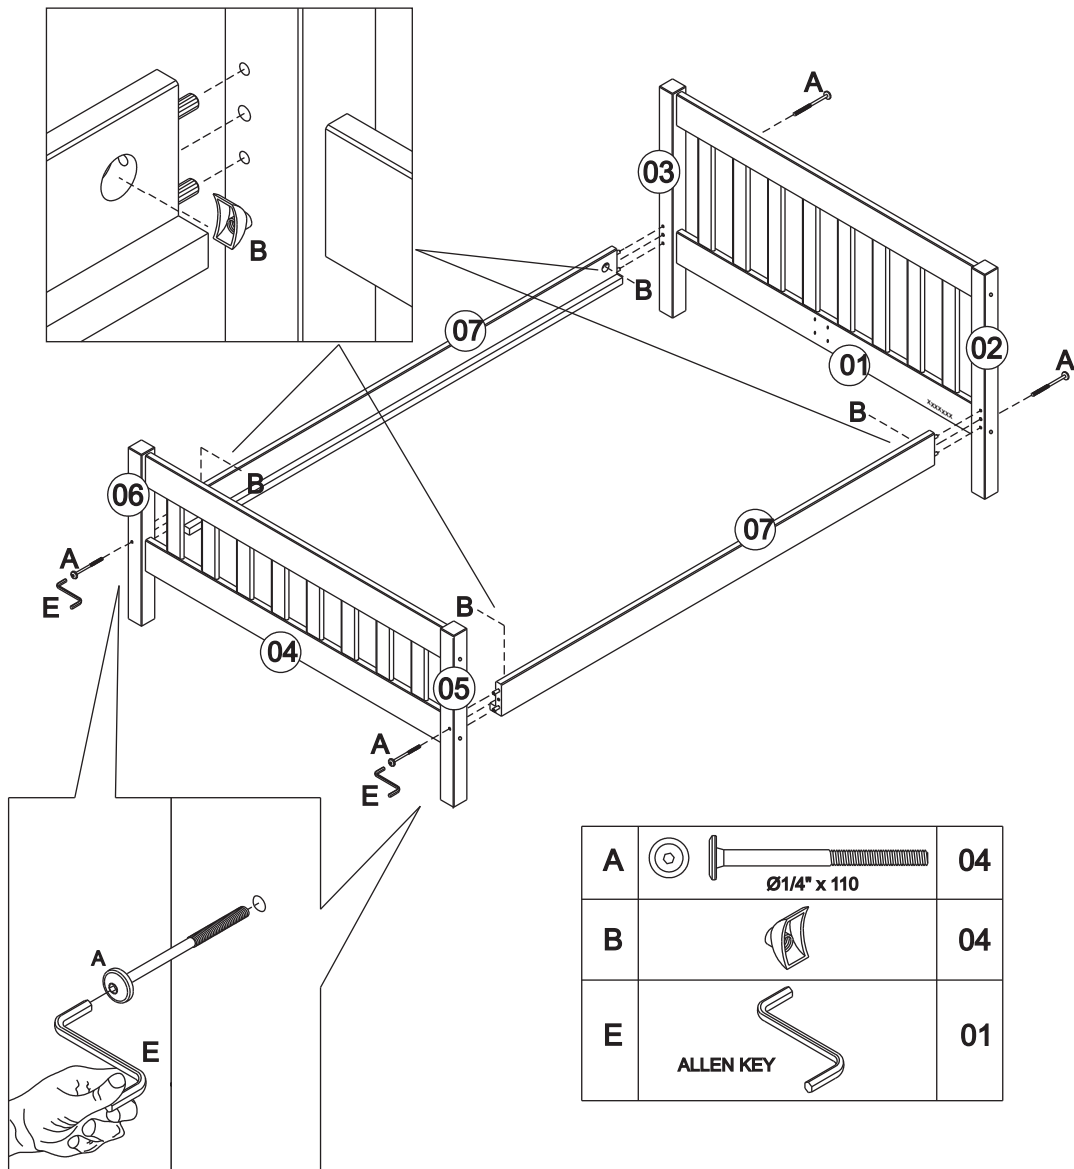

04




A		04
B		04
E		01

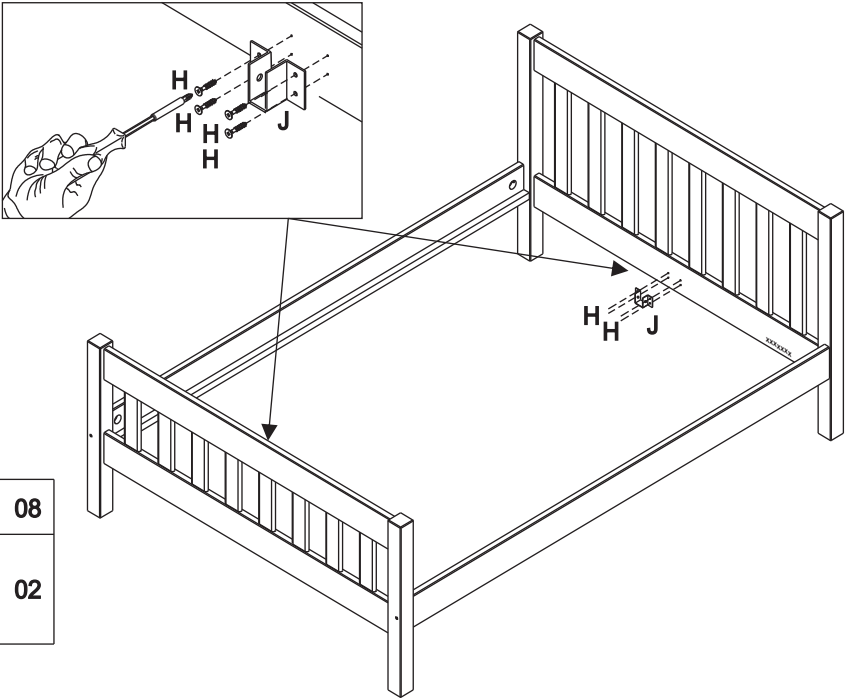05




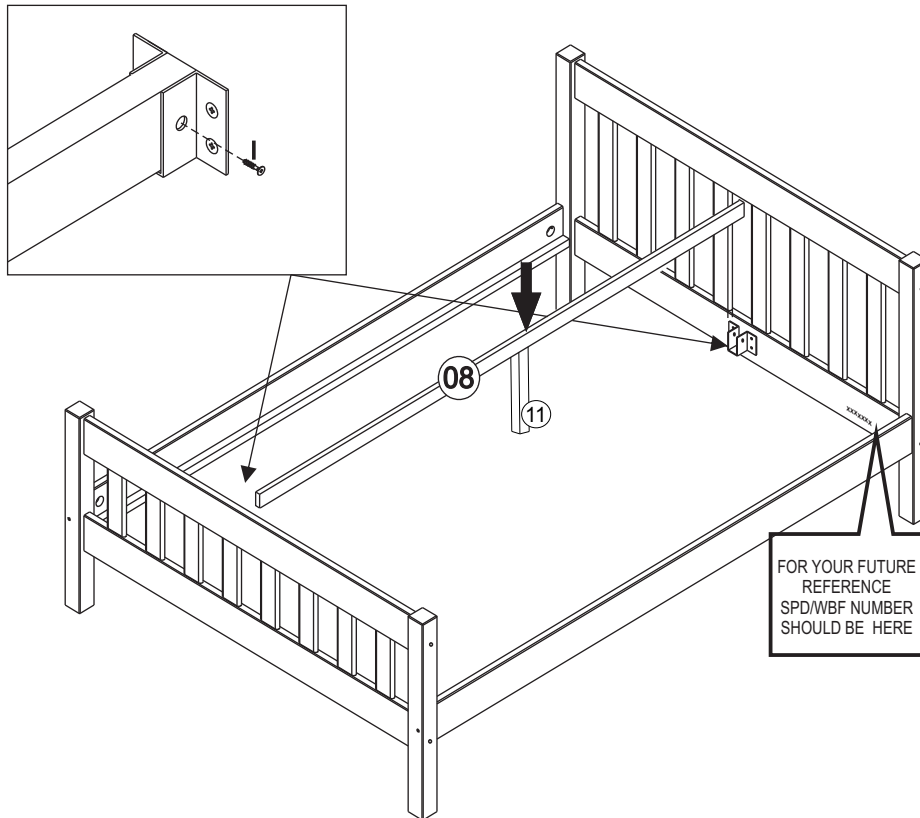
H	 $\varnothing 4,0 \times 20$	08
J		02

06

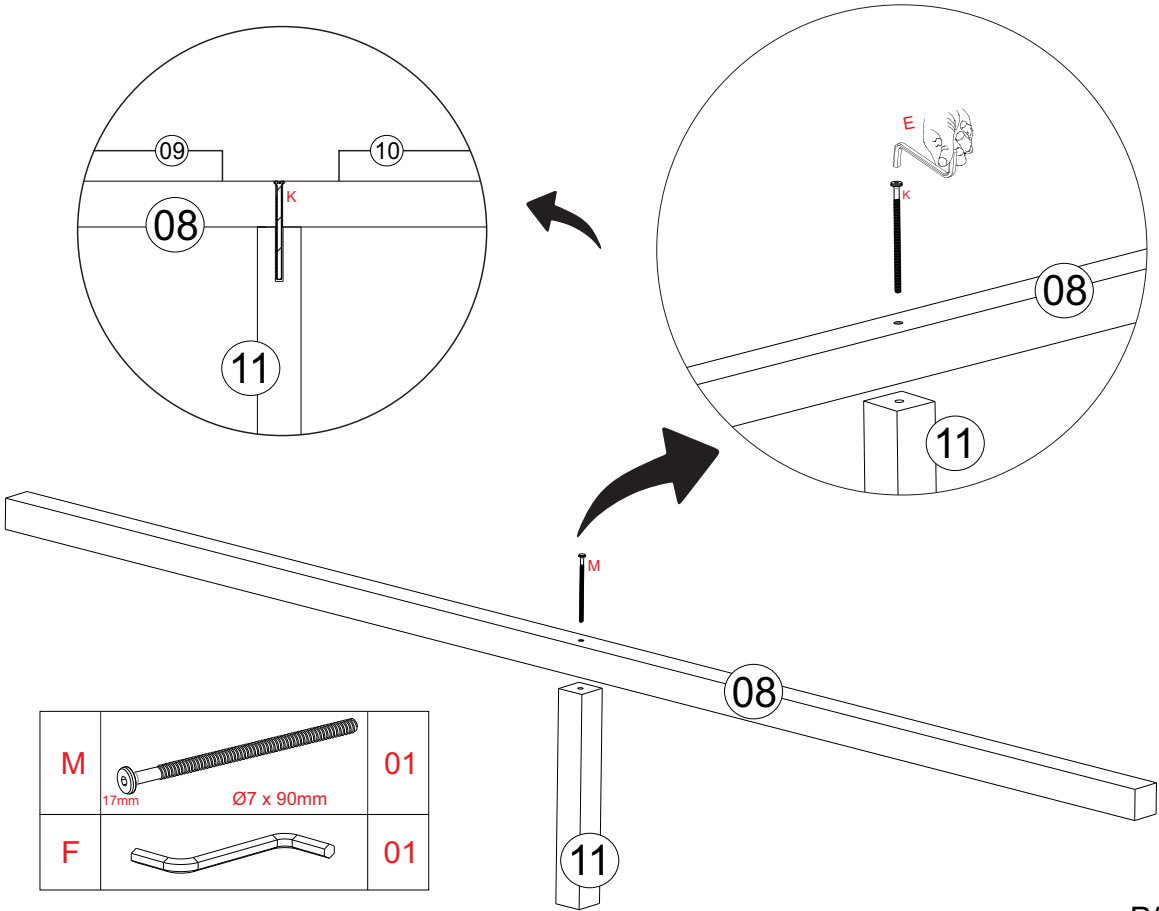




07

I	 $\varnothing 4,0 \times 16$	02
---	--	----



08

C	 $\varnothing 3,5 \times 35$	29
F	SPACER (WOODEN) 	02

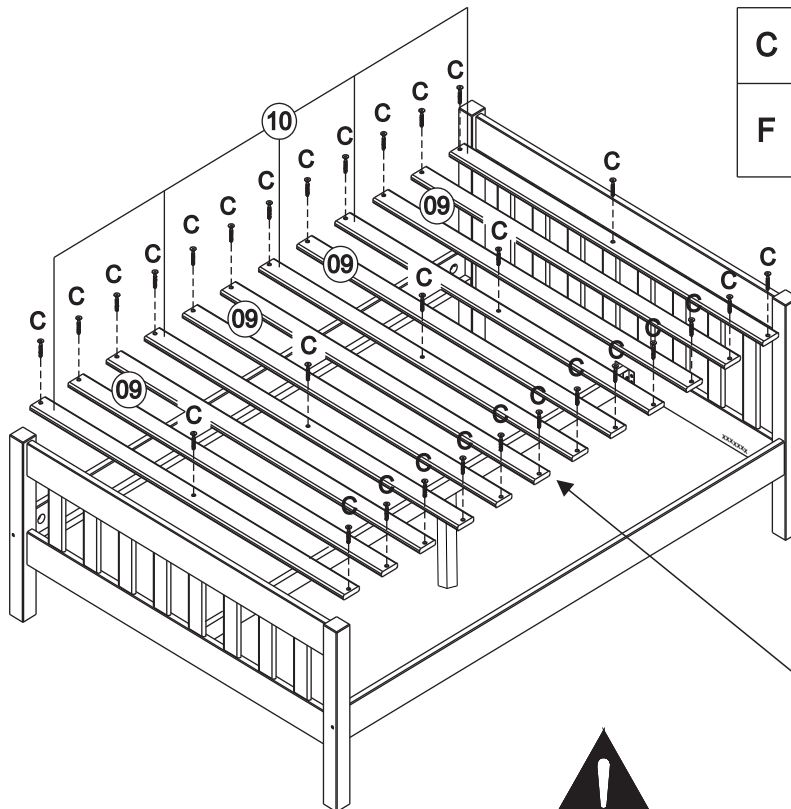

* Please fix the first slats adjacent to the headboard and footboard and work towards the middle of the bed using the spacer (F) as shown to ensure correct spacing. Fix all the slats to one siderail first then push the siderail tight against the slats and fix. Please, retain the allen key (E) and use periodically to check that all bolts are tight.