




C	 Ø3,5 x 30	29
F	SPACER (WOODEN) 	02

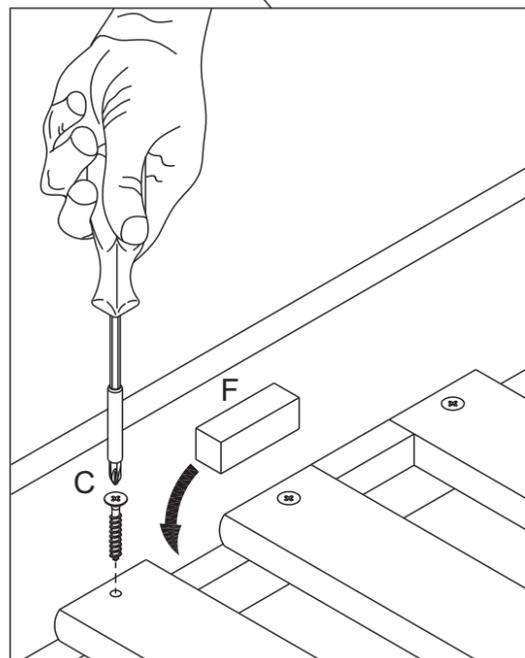

* Please fix the first slats adjacent to the headboard and footboard and work towards the middle of the bed using the spacer (F) as shown to ensure correct spacing. Fix all the slats to one siderail first then push the siderail tight against the slats and fix. Please, retain the allen key (E) and use periodically to check that all bolts are tight.

SOL 4' AND 4'6" BED

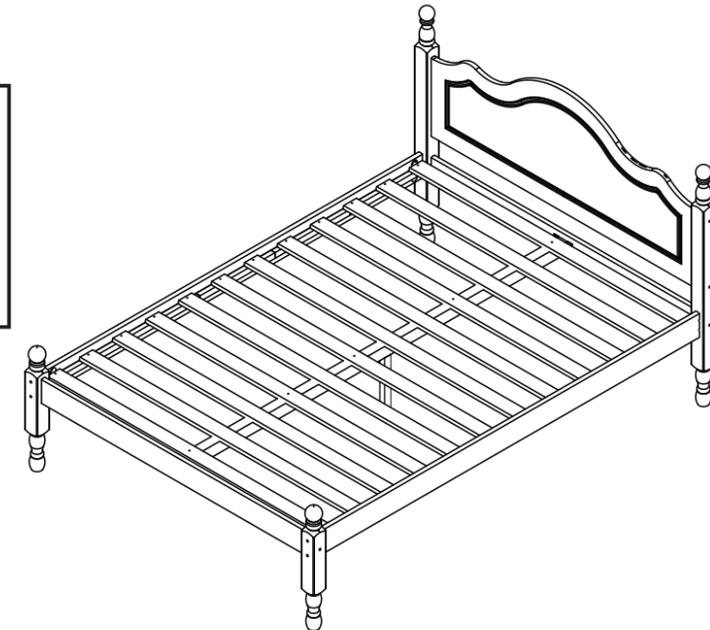


IMPORTANT



PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

- After unpacking this product please keep the original packaging in case it needs to be returned for any reason.
- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible.
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not drag or push items across your furniture as this may cause the surface to scratch.
- Do not place this product next to a radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- Do not place on a wet or damp floor as staining may occur to your floor.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

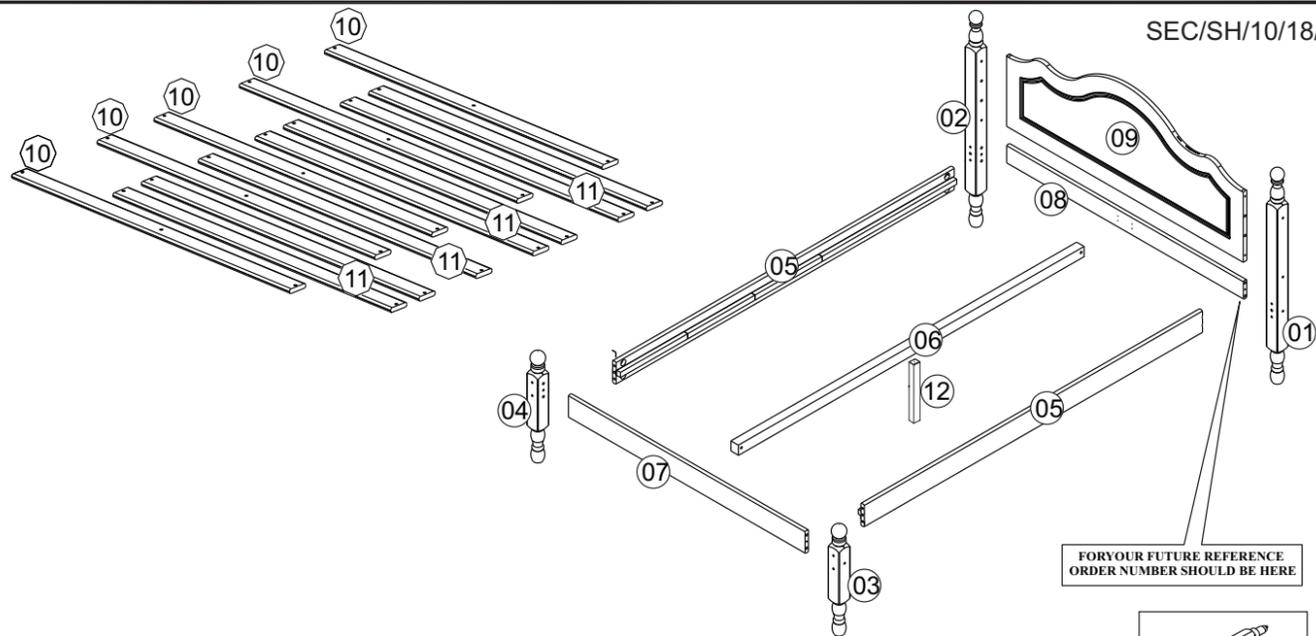

FOR YOUR FUTURE REFERENCE ORDER NUMBER SHOULD BE HERE

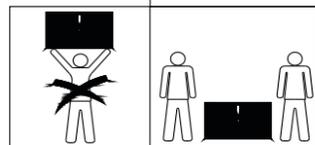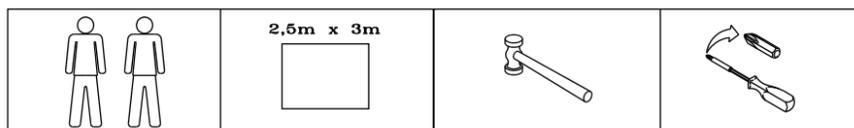

* Use of power tools to assemble this product will invalidate any claim and could damage this product making it unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

* Please check contents and read the instructions before commencing assembly.
* Assemble this product following the enclosed instructions carefully.
* Please take care to avoid damaging parts during assembly.


PARTS LIST

NUMBER	DESCRIPTION	QUANTITY	NUMBER	DESCRIPTION	QUANTITY
01	Right Headboard Post	01	07	Footboard Crossbeam	01
02	Left Headboard Post	01	08	Headboard Crossbeam	01
03	Right Footboard Post	01	09	Headboard Panel	01
04	Left Footboard Post	01	10	Slat with three holes	05
05	Side Rail	02	11	Slat with two holes	07
06	Support Centre Rail	01	12	Centre Support Leg	01

FITTINGS


A		08	G		08
B		08	H		02
C		29	I		02
D		12	J		02
E	ALLEN KEY	01	K		08
F	SPACER (WOODEN)	02	L		04
			M		01

04

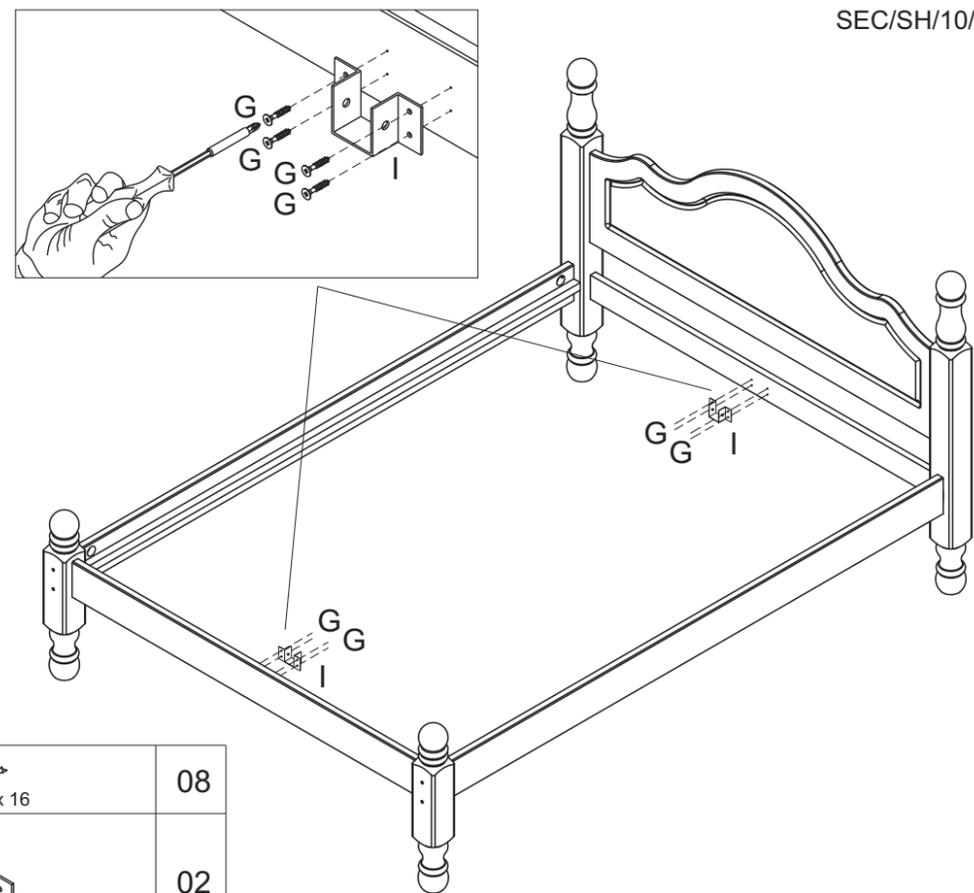



G		08
I		02


05

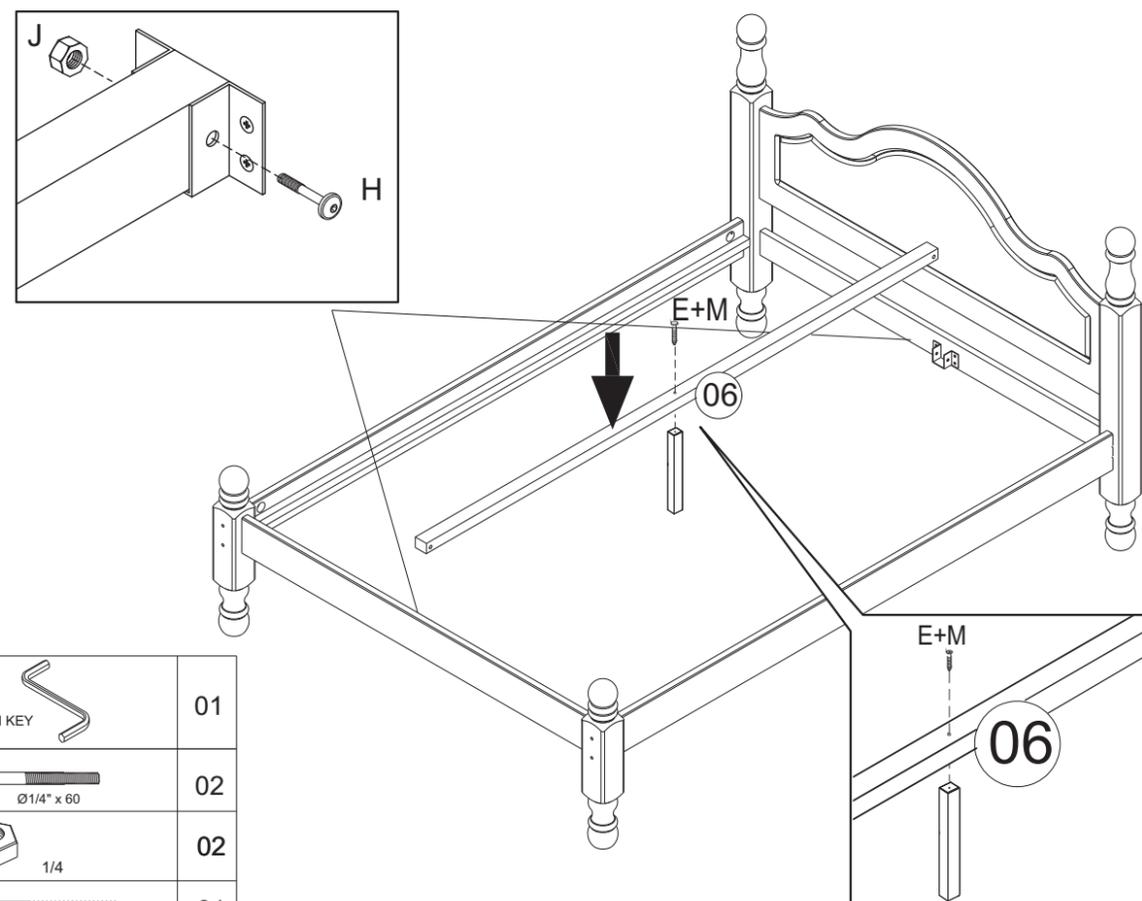

E	ALLEN KEY	01
H		02
J		02
M		01


01

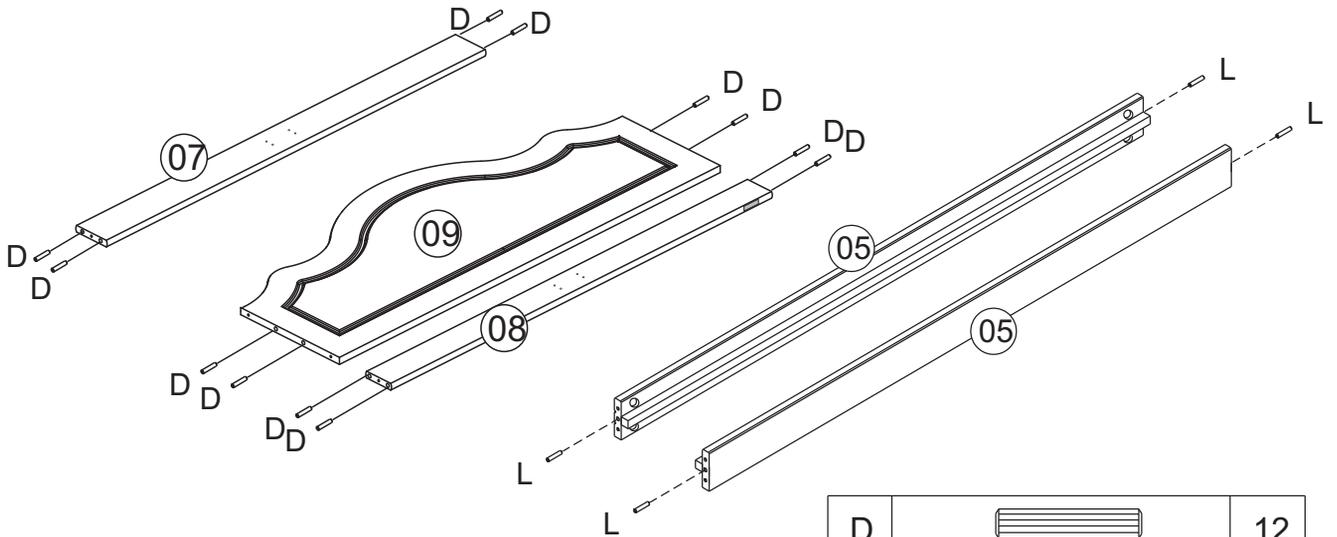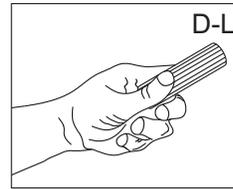


D	 Ø10 x 50	12
L	 Ø12 x 40	4

02

K	 Ø7 x 100	08
E	 ALLEN KEY	01

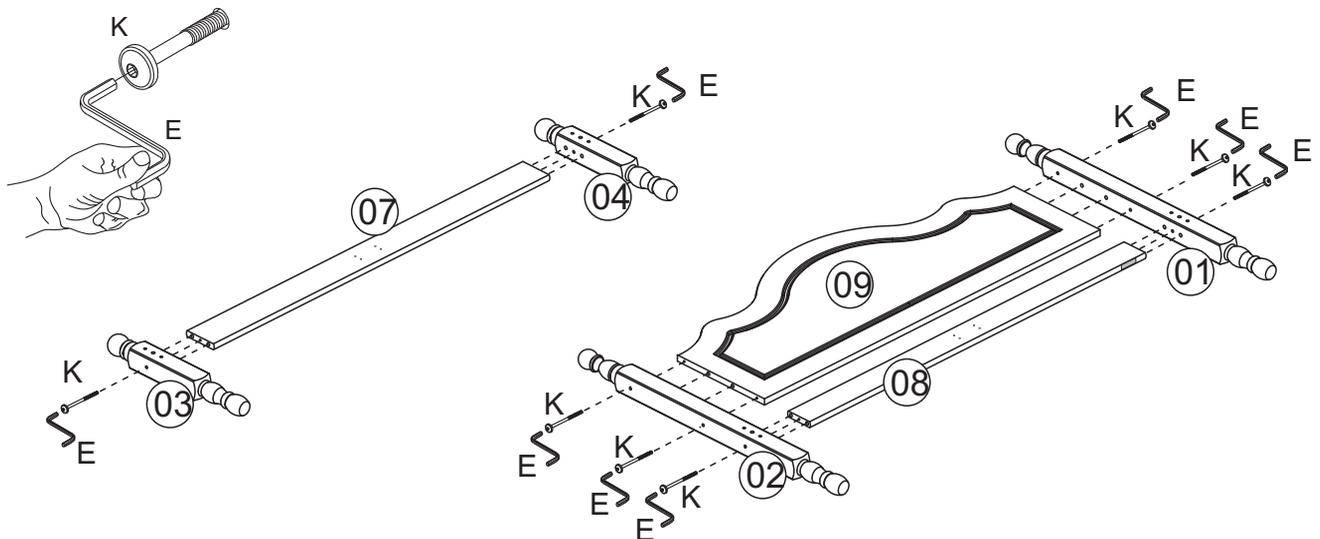

A	 Ø1/4" x 110	08
B		08
E	 ALLEN KEY	01

