
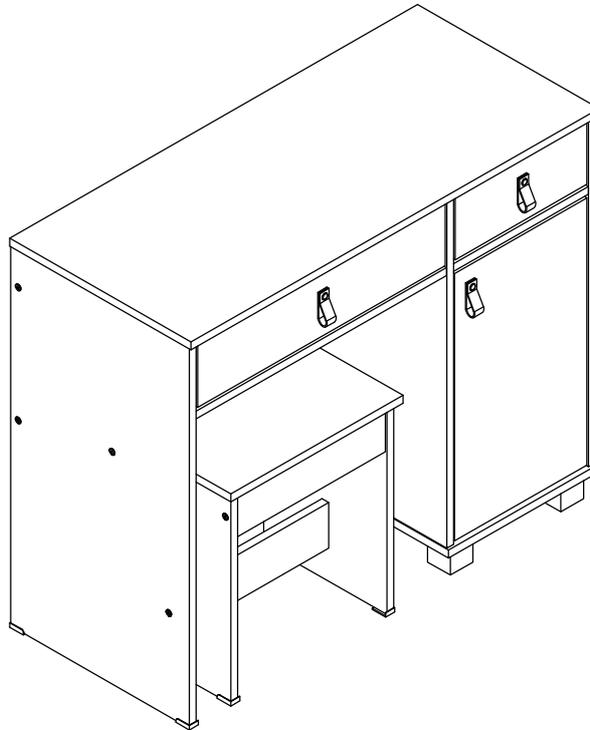


# BROOKLYN DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

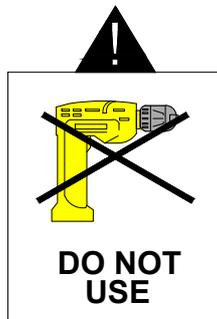

## **IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER**

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.




THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

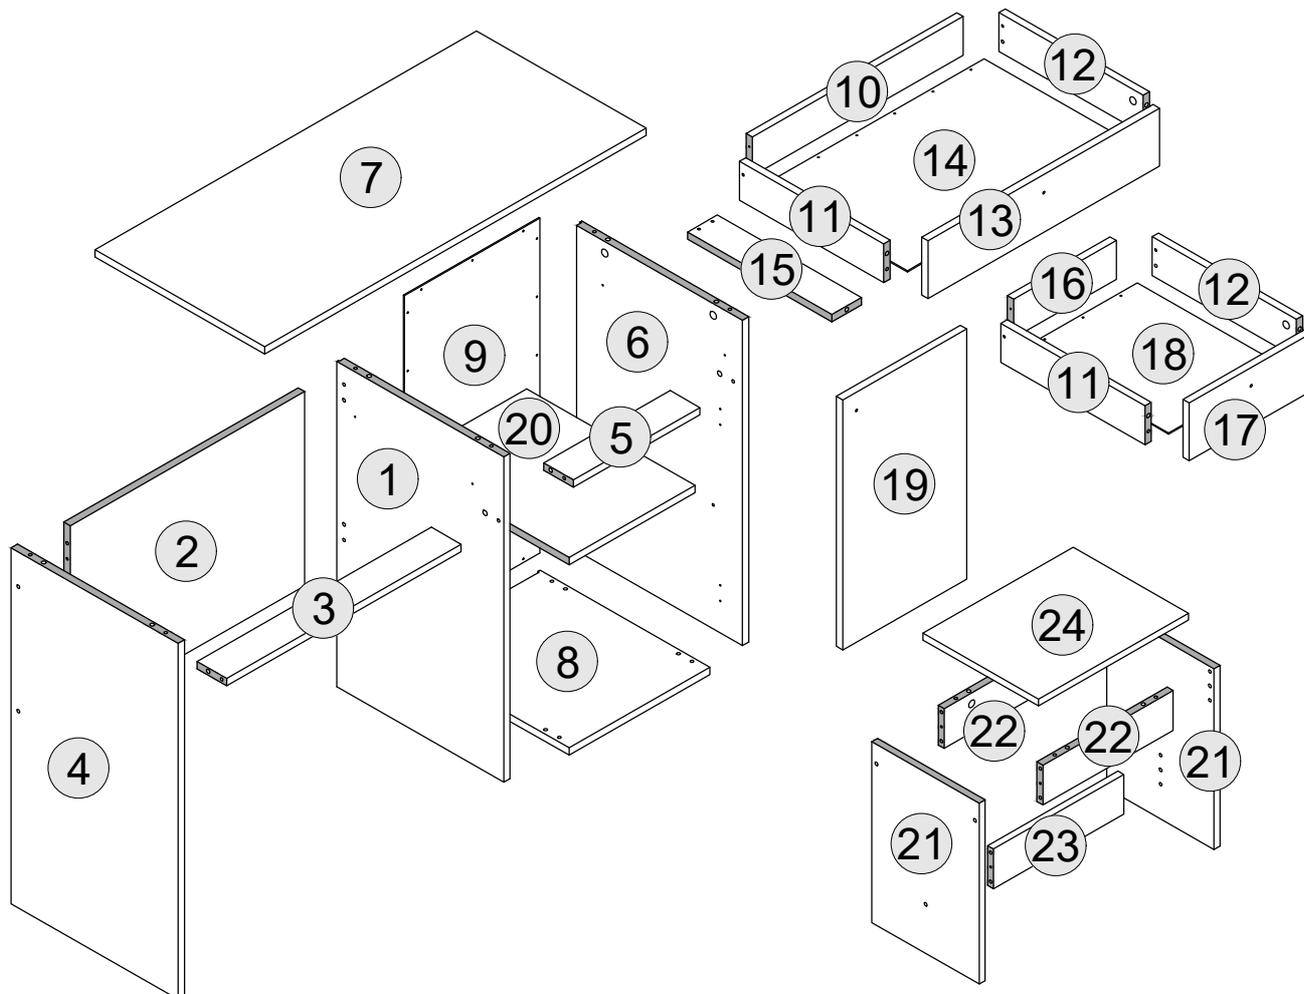


## PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-105-023-EU1-01	Centre Panel	1	1/1
2	S100-105-023-EU1-02	Back Panel - Left	1	1/1
3	S100-105-023-EU1-03	Large Crossbar	1	1/1
4	S100-105-023-EU1-04	Side Panel - Left	1	1/1
5	S100-105-023-EU1-05	Small Crossbar	1	1/1
6	S100-105-023-EU1-06	Side Panel - Right	1	1/1
7	S100-105-023-EU1-07	Top Panel	1	1/1
8	S100-105-023-EU1-08	Bottom Panel	1	1/1
9	S100-105-023-EU1-09	Back Panel - Right	1	1/1
10	S100-105-023-EU1-10	Large Drawer Back	1	1/1
11	S100-105-023-EU1-11	Drawer Side - Left	2	1/1
12	S100-105-023-EU1-12	Drawer Side - Right	2	1/1
13	S100-105-023-EU1-13	Large Drawer Front	1	1/1
14	S100-105-023-EU1-14	Large Drawer Base	1	1/1
15	S100-105-023-EU1-15	Drawer Bottom Support Rail	1	1/1
16	S100-105-023-EU1-16	Small Drawer Back	1	1/1
17	S100-105-023-EU1-17	Small Drawer Front	1	1/1
18	S100-105-023-EU1-18	Small Drawer Base	1	1/1
19	S100-105-023-EU1-19	Door Panel	1	1/1
20	S100-105-023-EU1-20	Shelf Panel	1	1/1
21	S100-105-023-EU1-21	Side Panel - Stool	2	1/1
22	S100-105-023-EU1-22	Upper Support - Stool	2	1/1
23	S100-105-023-EU1-23	Lower Support - Stool	1	1/1
24	S100-105-023-EU1-24	Top Panel - Stool	1	1/1


## HARDWARE LIST

A		DOWEL 6 X 30MM	42 PCS	O		DRAWER RUNNER A - L/R	4 PCS
B		CAM BOLT + CAM NUT	19 SETS	P		DRAWER RUNNER B - L/R	4 PCS
C		SCREW M6 X 50MM	4 PCS	Q		SCREW M4 X 30MM	2 PCS
D		SCREW M3.5 X 16MM	23 PCS	R		HANDLE SCREW 19MM	3 PCS
E		TACK	20 PCS	S		SCREW M3.5 X 12MM	25 PCS
F		SCREW M4 X 50MM	16 PCS	T		BOLT M6 X 50MM	10 PCS
G		HANDLE	3 PCS	U		SCREW M4 X 38MM	4 PCS
H		TAPPING SCREW M8 X 12MM	4 PCS	V		WASHER	3 PCS
I		WOOD FOOT	4 PCS	W		ANTI - TIP STRAP	2 PCS
J		ALLEN KEY	1 PC	X		SCREW M4 X 16MM	2 PCS
K		PLASTIC FOOT	6 PCS				
L		SHELF SUPPORT	4 PCS				
M		PVC STOPPER	1 PCS				
N		HINGES 7/8	2 PCS				

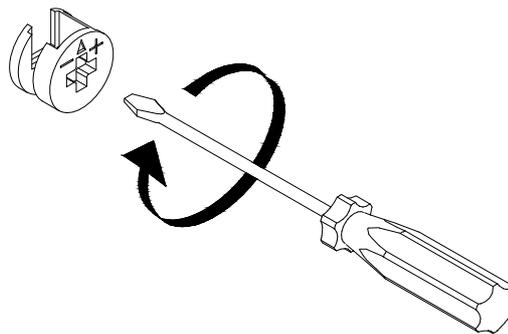

(SCREWDRIVER NOT PROVIDED)

USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

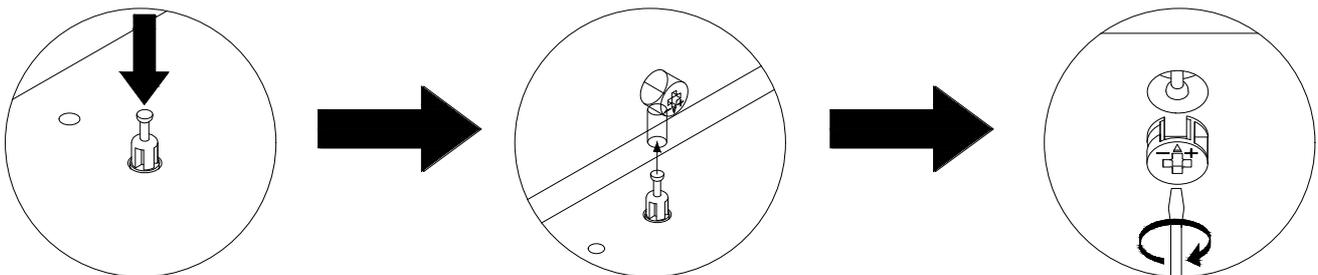

STEP 1 - PUSH CAM BOLT INTO INSERT

STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. ( MAKE SURE THE ARROW OF THE CAM LOCK IS POINTING TOWARD ON THE EDGE OF THE PANEL.)


STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSES OVER THE BOLT.

# STEP 1




**PARTS REQUIRED**

1 - CENTRE PANEL x1

**HARDWARE REQUIRED**

- A  04
- B  01
- O  01
- S  04

**TOOLS REQUIRED**

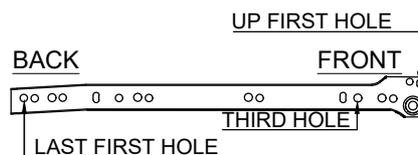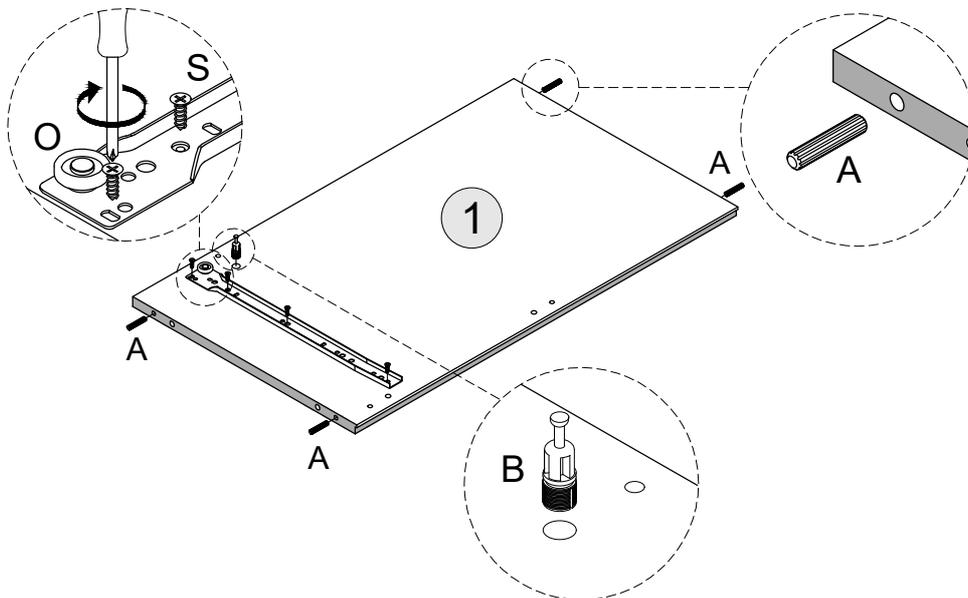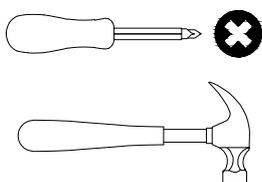

# STEP 2




**PARTS REQUIRED**

1 - CENTRE PANEL x1

**HARDWARE REQUIRED**

- B  01
- B  02
- D  01
- L  02
- M  01
- O  01
- S  04

**TOOLS REQUIRED**

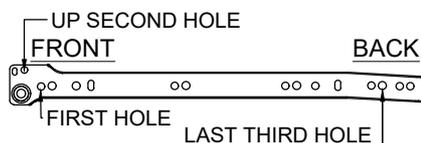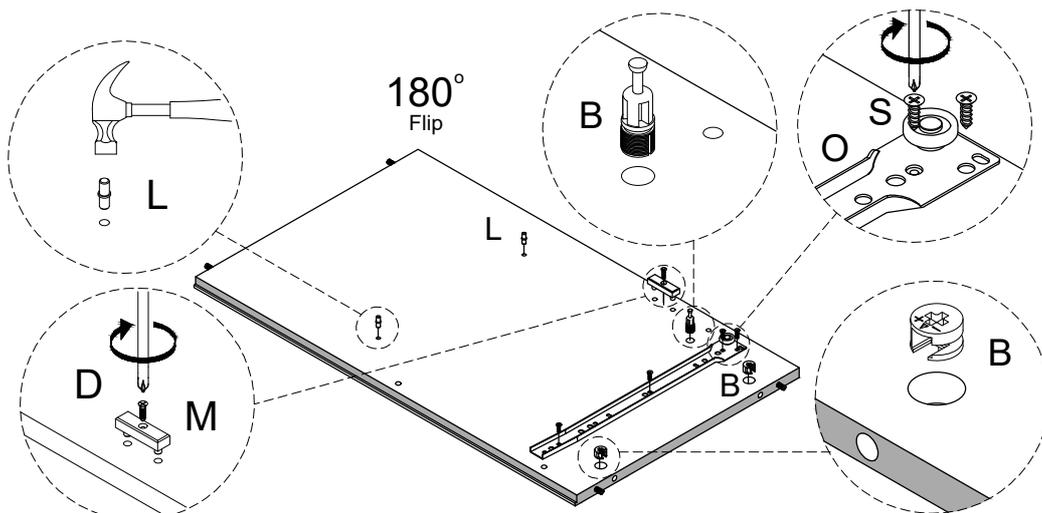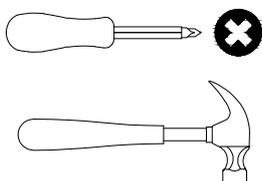


# STEP 3



**PARTS REQUIRED**

4 - SIDE PANEL - LEFT x1

**HARDWARE REQUIRED**

- A  02
- B  02
- B  01
- O  01
- S  04

**TOOLS REQUIRED**

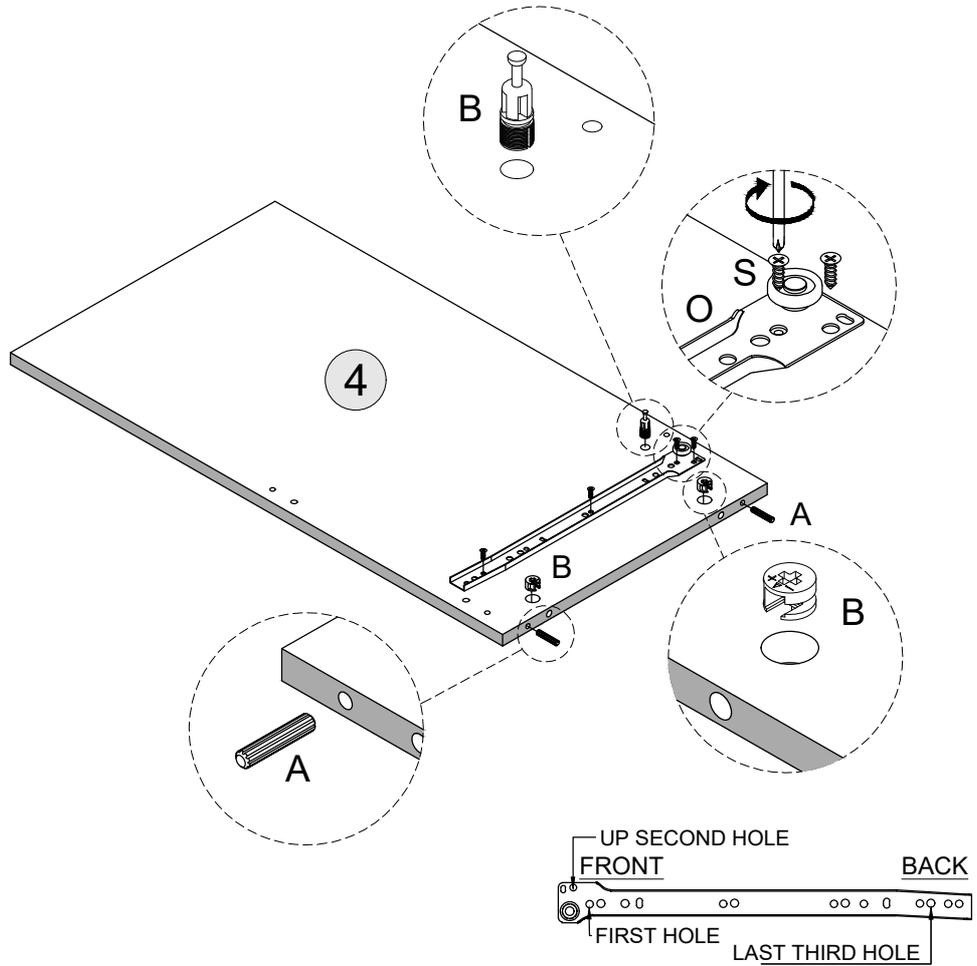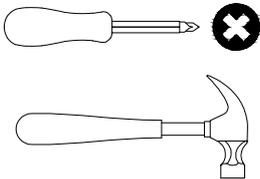

# STEP 4



**PARTS REQUIRED**

6 - SIDE PANEL - RIGHT x1

**HARDWARE REQUIRED**

- A  04
- B  02
- B  01
- L  02
- O  01
- S  04

**TOOLS REQUIRED**

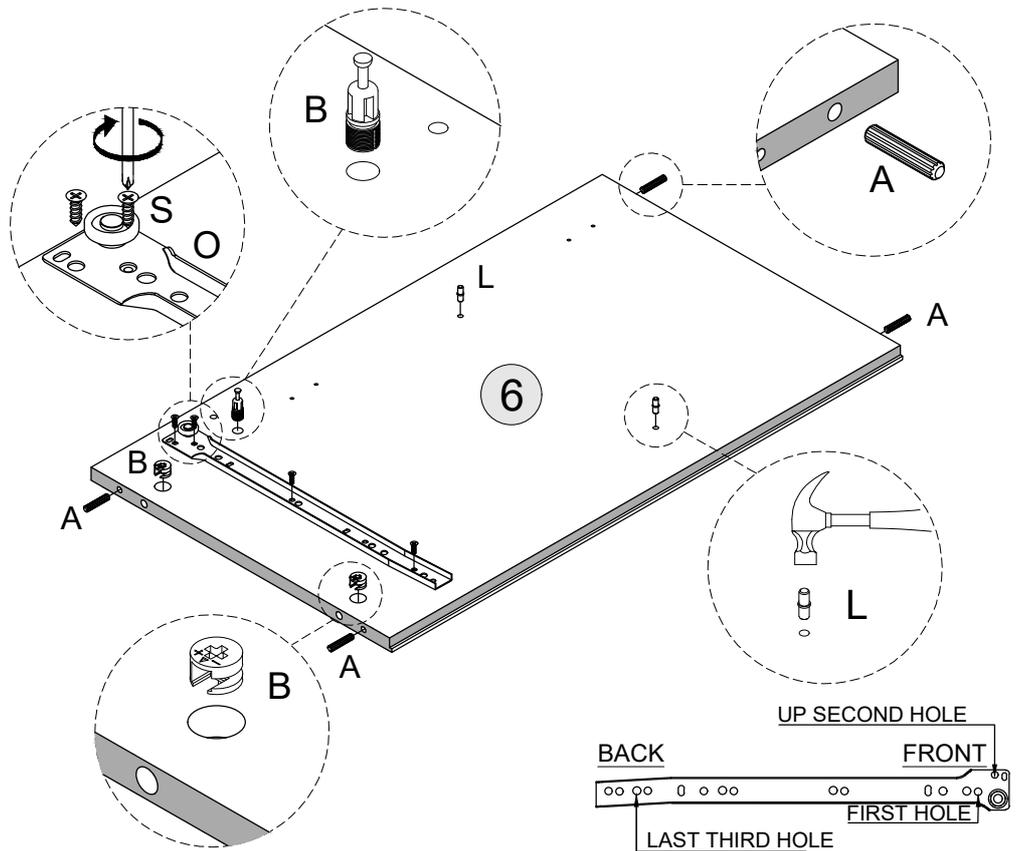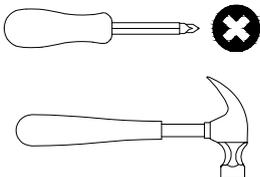

# STEP 5



PARTS REQUIRED

2 - BACK PANEL - LEFT	x1
3 - LARGE CROSSBAR	x1
5 - SMALL CROSSBAR	x1

HARDWARE REQUIRED

A		08
B		04

TOOLS REQUIRED

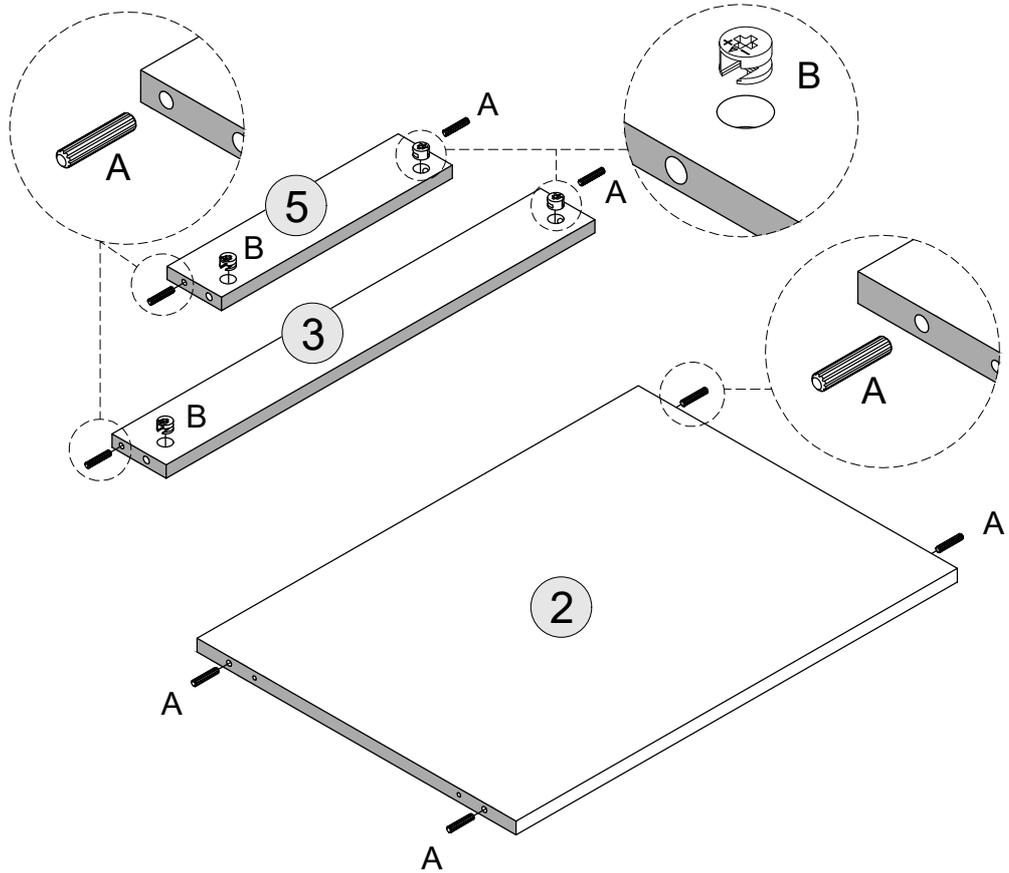

# STEP 6


PARTS REQUIRED

7 - TOP PANEL	x1
---------------	----

HARDWARE REQUIRED

B		06
---	---	----

TOOLS REQUIRED

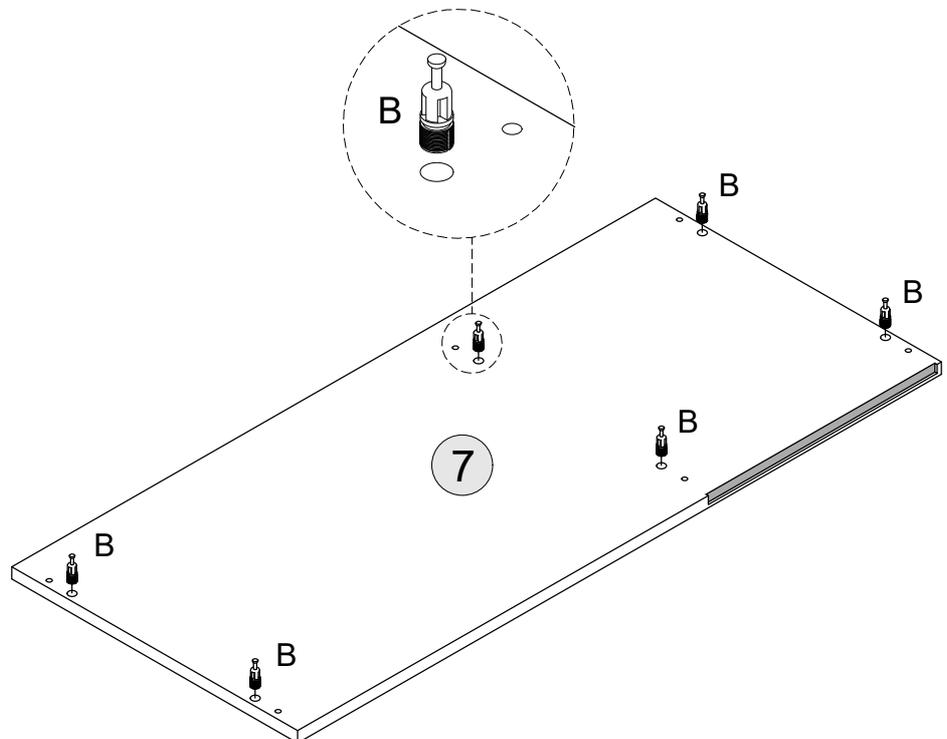


# STEP 7


**PARTS REQUIRED**

- 1 - CENTRE PANEL x1
- 2 - BACK PANEL - LEFT x1

**HARDWARE REQUIRED**

- T  02


**TOOLS REQUIRED**

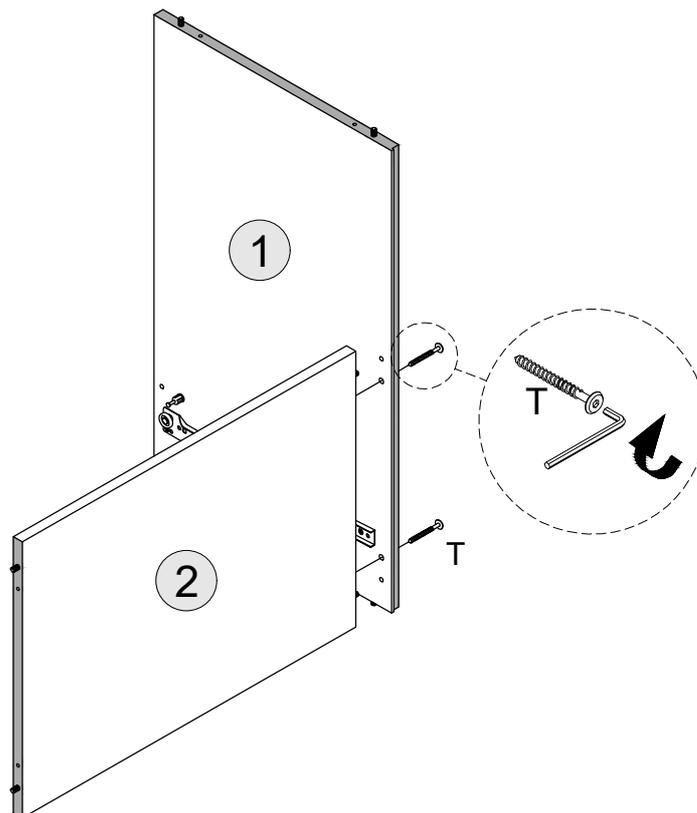


# STEP 8

**PARTS REQUIRED**



- 3 - LARGE CROSSBAR x1
- 4 - SIDE PANEL - LEFT x1



**HARDWARE REQUIRED**

- T  02

**TOOLS REQUIRED**

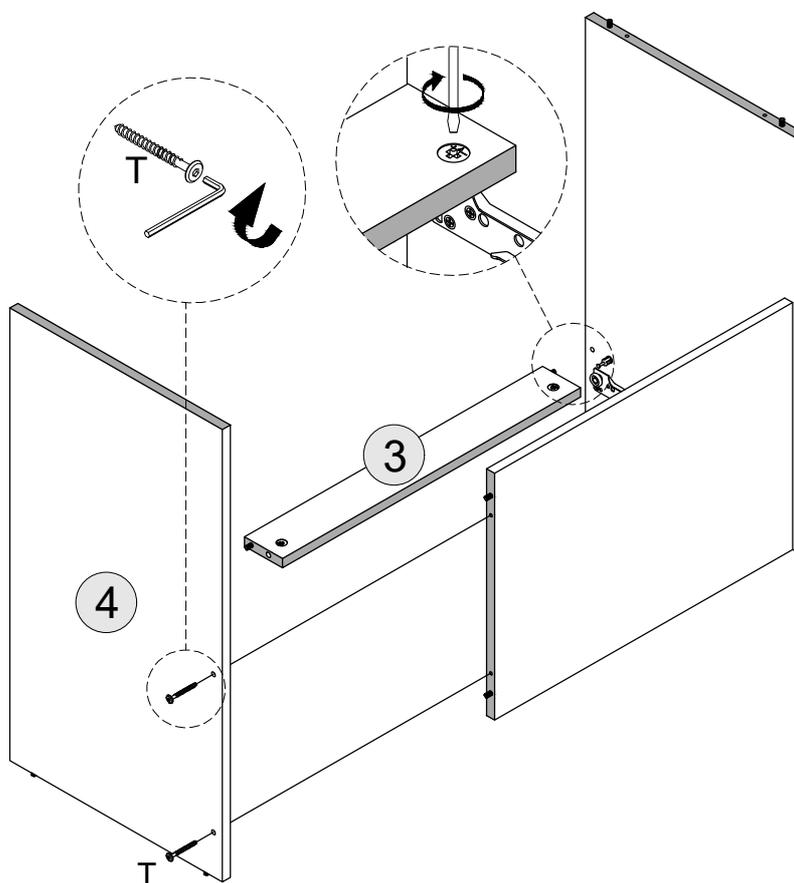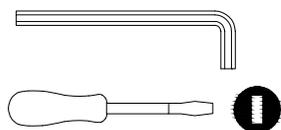


## STEP 9

### PARTS REQUIRED



5 - SMALL CROSSBAR x1

6 - SIDE PANEL - RIGHT x1

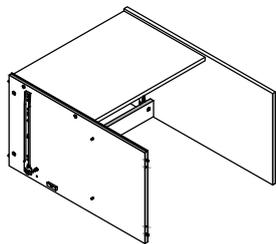

### HARDWARE REQUIRED


### TOOLS REQUIRED

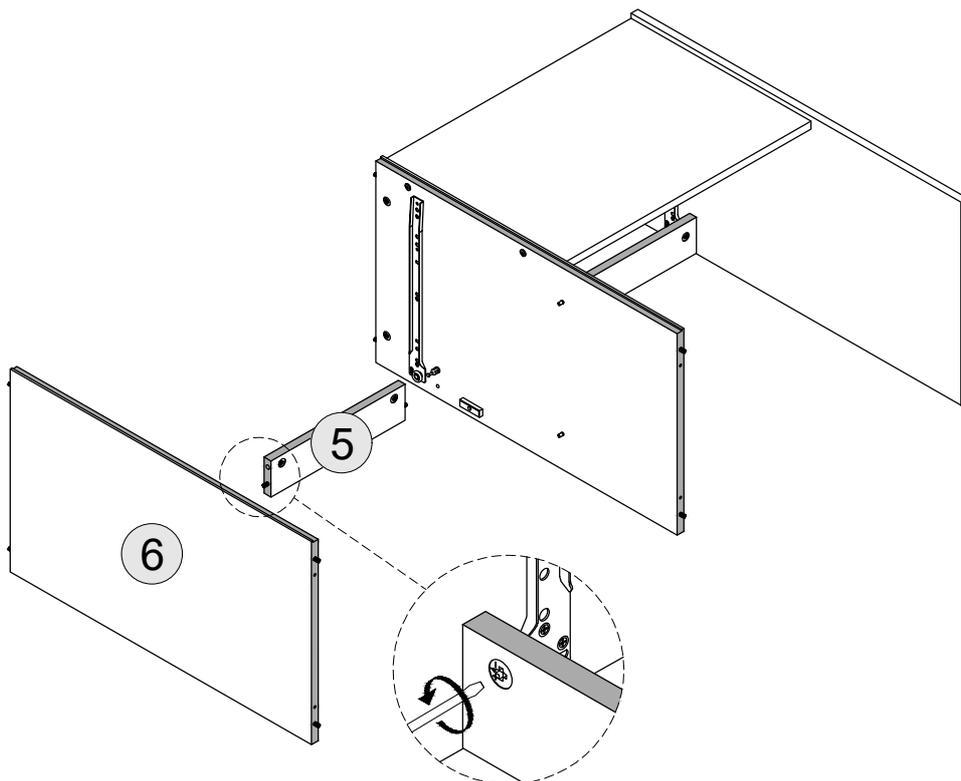

## STEP 10



### PARTS REQUIRED

7 - TOP PANEL x1

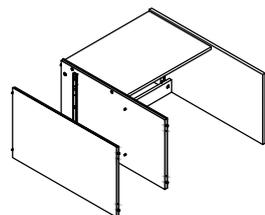

### HARDWARE REQUIRED


### TOOLS REQUIRED

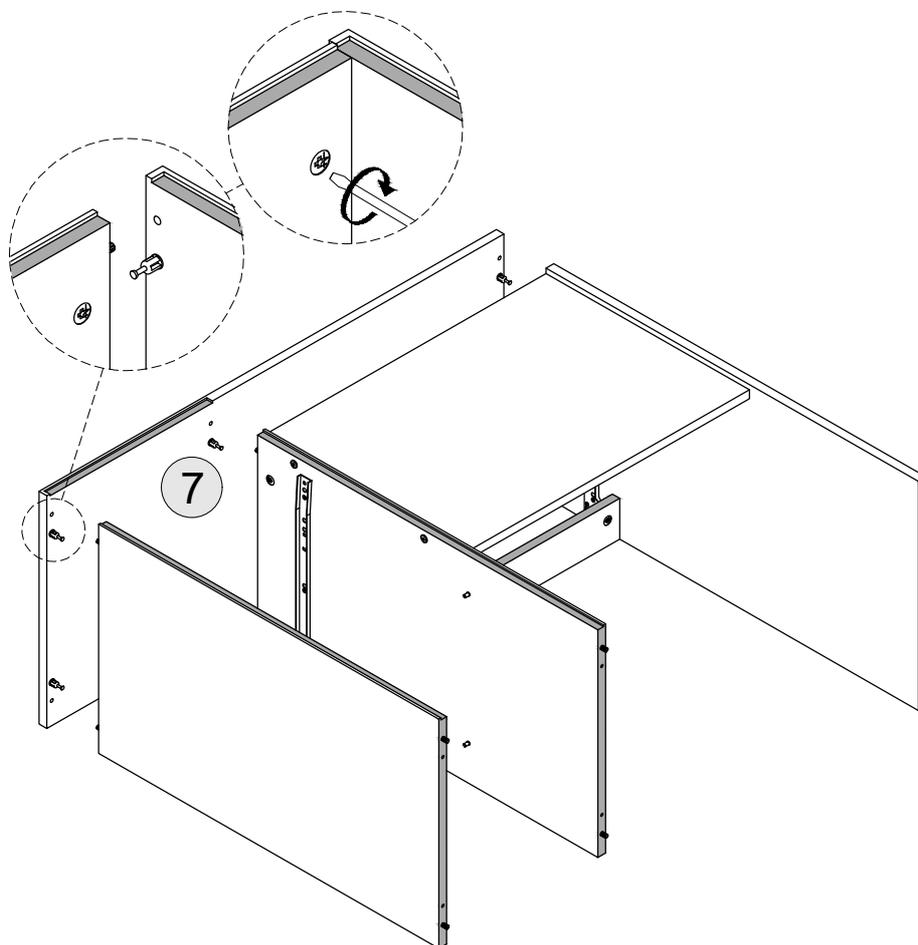


# STEP 11

**PARTS REQUIRED**

8 - BOTTOM PANEL x1

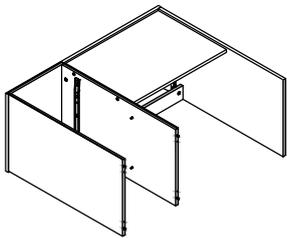


**HARDWARE REQUIRED**

C  04

D  02


K  02

**TOOLS REQUIRED**

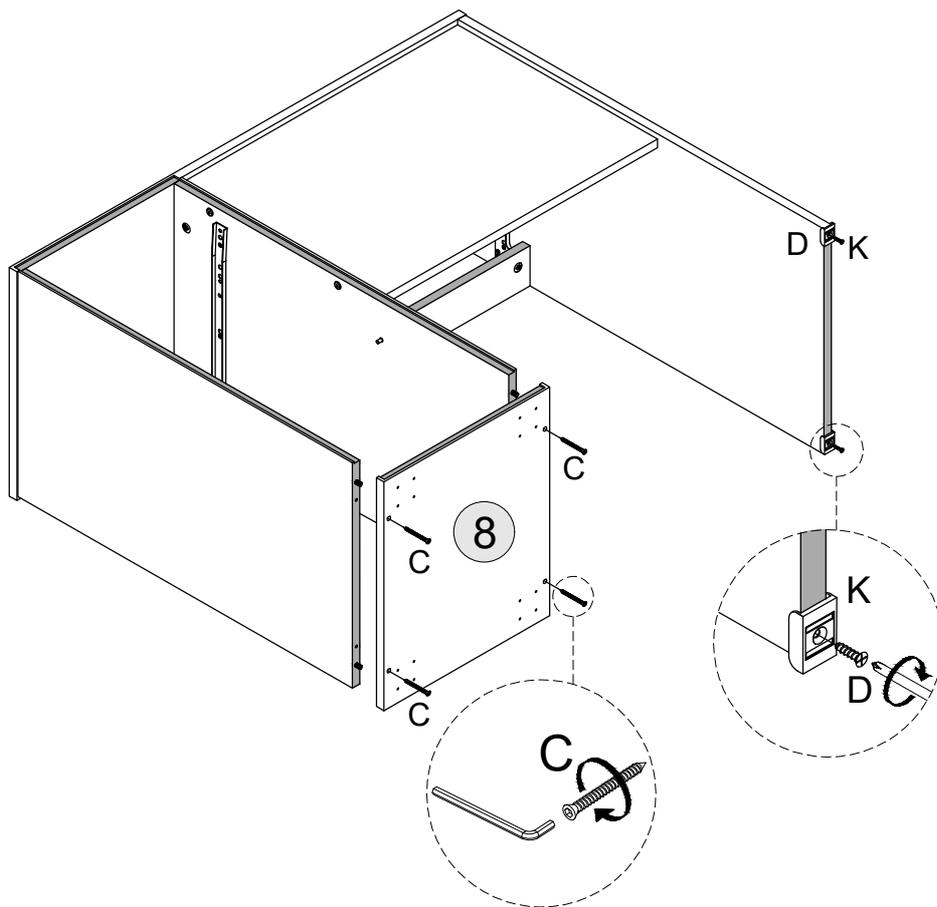


# STEP 12

**PARTS REQUIRED**


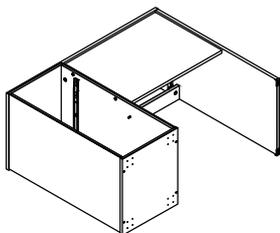


**HARDWARE REQUIRED**

F  16

I  04


**TOOLS REQUIRED**

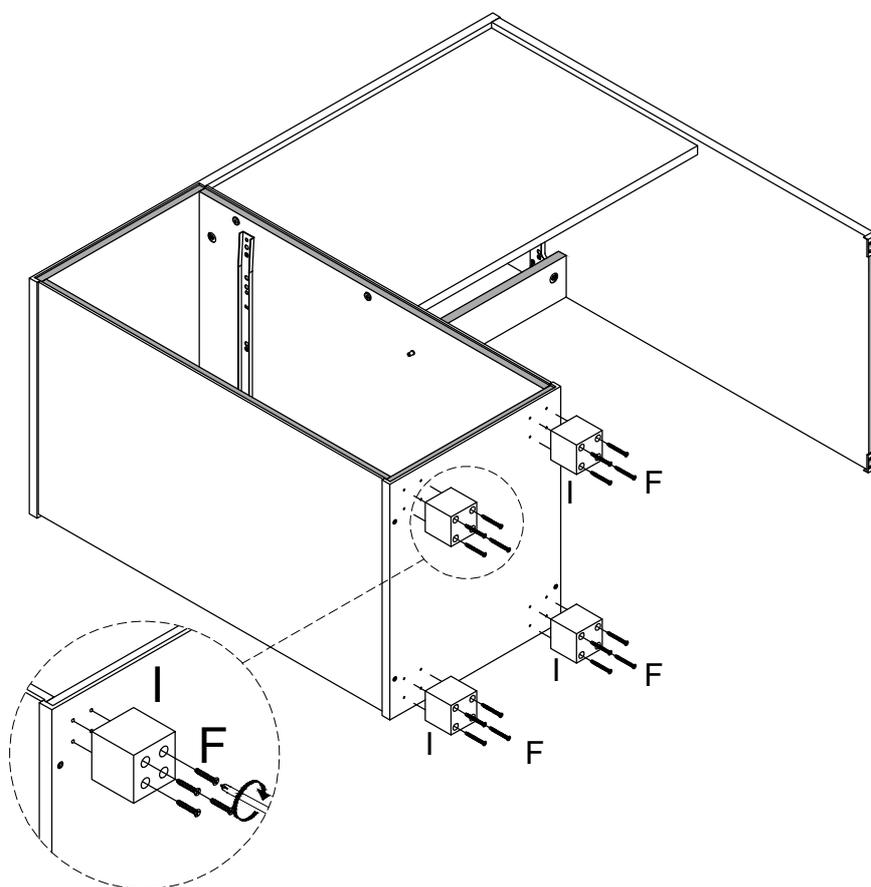

# STEP 13

**PARTS REQUIRED**



9 - BACK PANEL - RIGHT x1

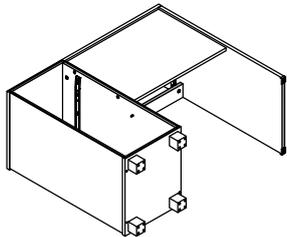

**HARDWARE REQUIRED**

E  20

**TOOLS REQUIRED**

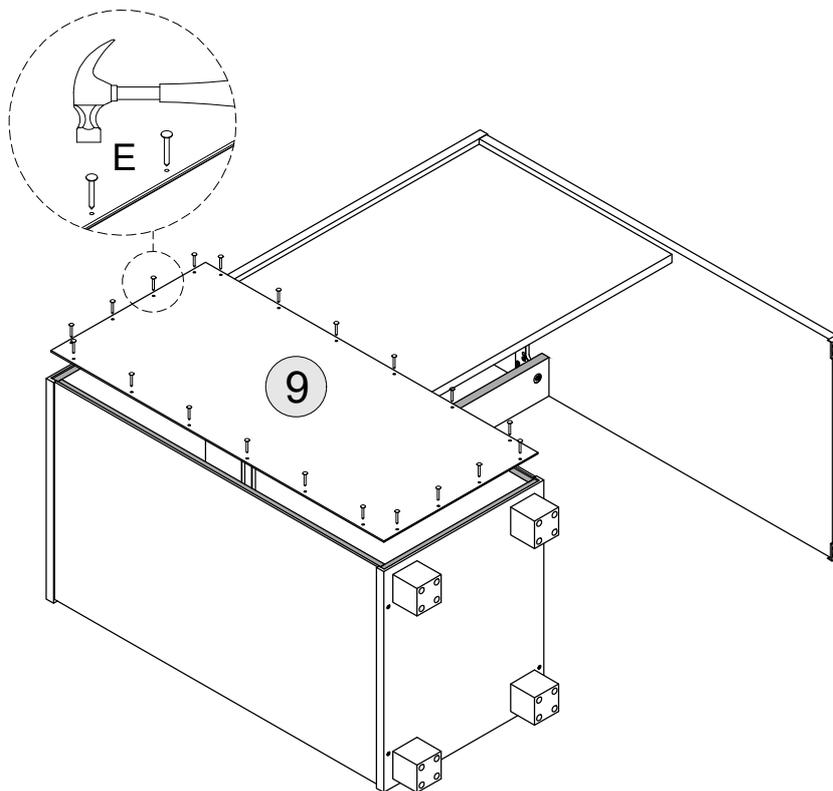

# STEP 14

**PARTS REQUIRED**

10 - LARGE DRAWER BACK x1

11 - DRAWER SIDE-LEFT x1

12 - DRAWER SIDE-RIGHT x1

13 - LARGE DRAWER FRONT x1

**HARDWARE REQUIRED**



A  04

B  03

B  02

U  02


**TOOLS REQUIRED**

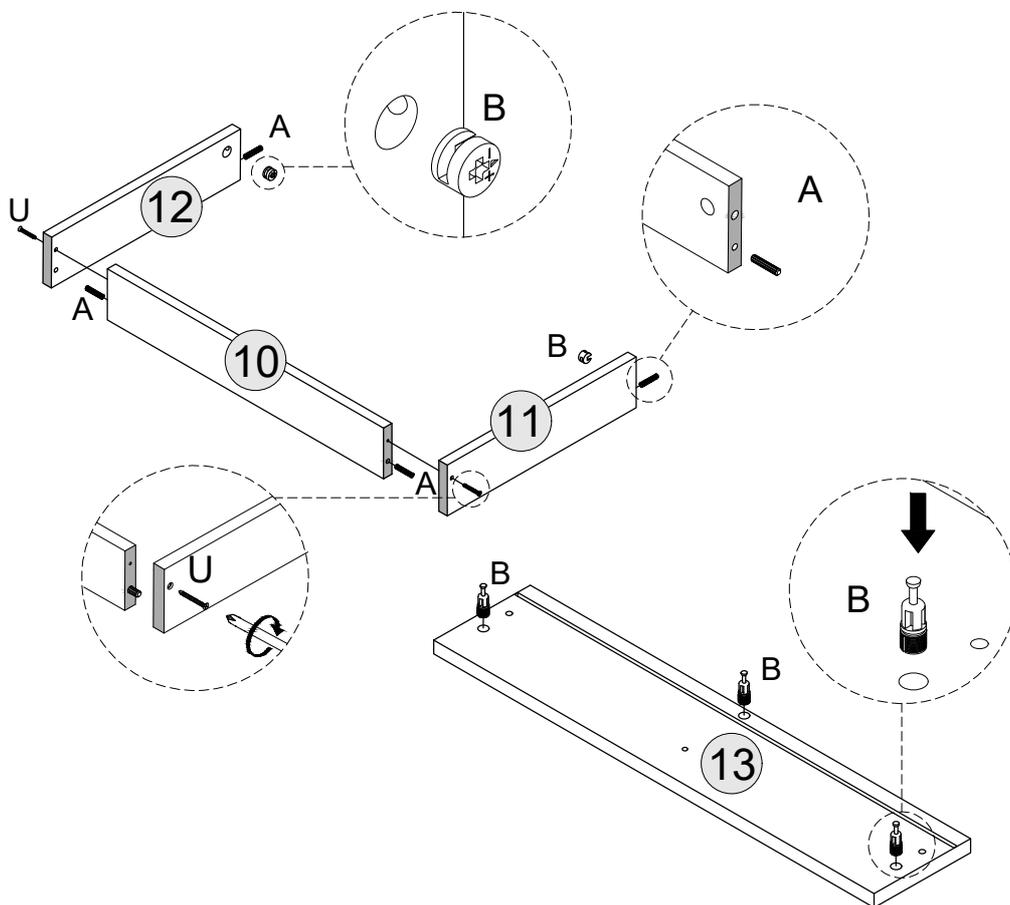

# STEP 15

**PARTS REQUIRED**

14 - LARGE DRAWER BASE x1

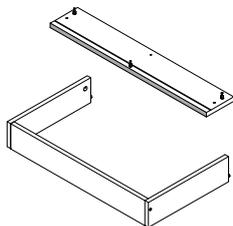

**HARDWARE REQUIRED**



G  01

R  01

S  06

V  01


**TOOLS REQUIRED**

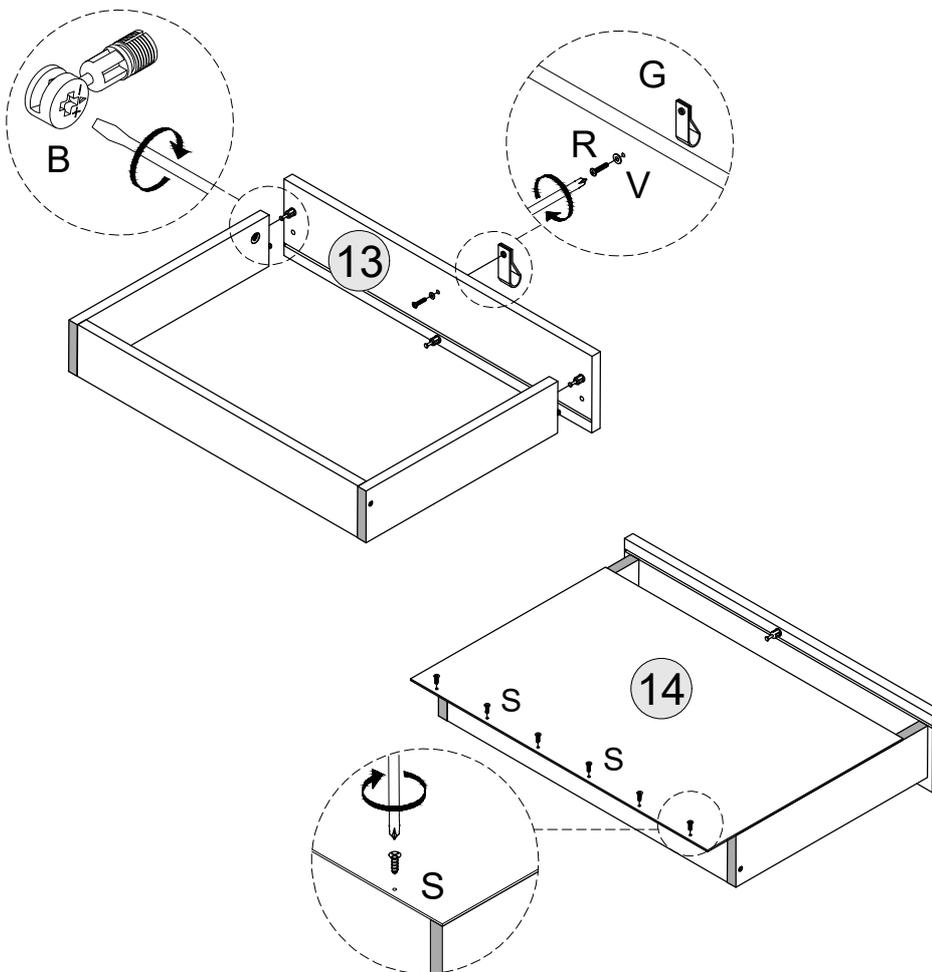

# STEP 16

**PARTS REQUIRED**

15 - DRAWER BOTTOM SUPPORT RAIL x1

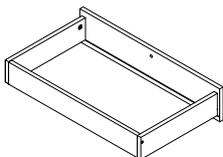

**HARDWARE REQUIRED**



B  01

D  06

P  02

Q  02

**TOOLS REQUIRED**

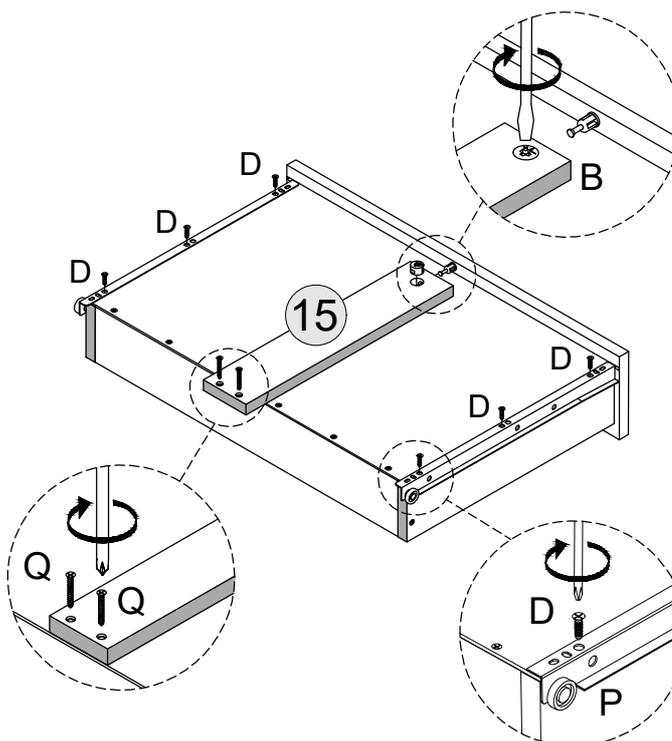

# STEP 17



**PARTS REQUIRED**

11 - DRAWER SIDE-LEFT	x1
12 - DRAWER SIDE-RIGHT	x1
16 - SMALL DRAWER BACK	x1
17 - SMALL DRAWER FRONT	x1

**HARDWARE REQUIRED**

A		04
B		02
B		02
U		02


**TOOLS REQUIRED**

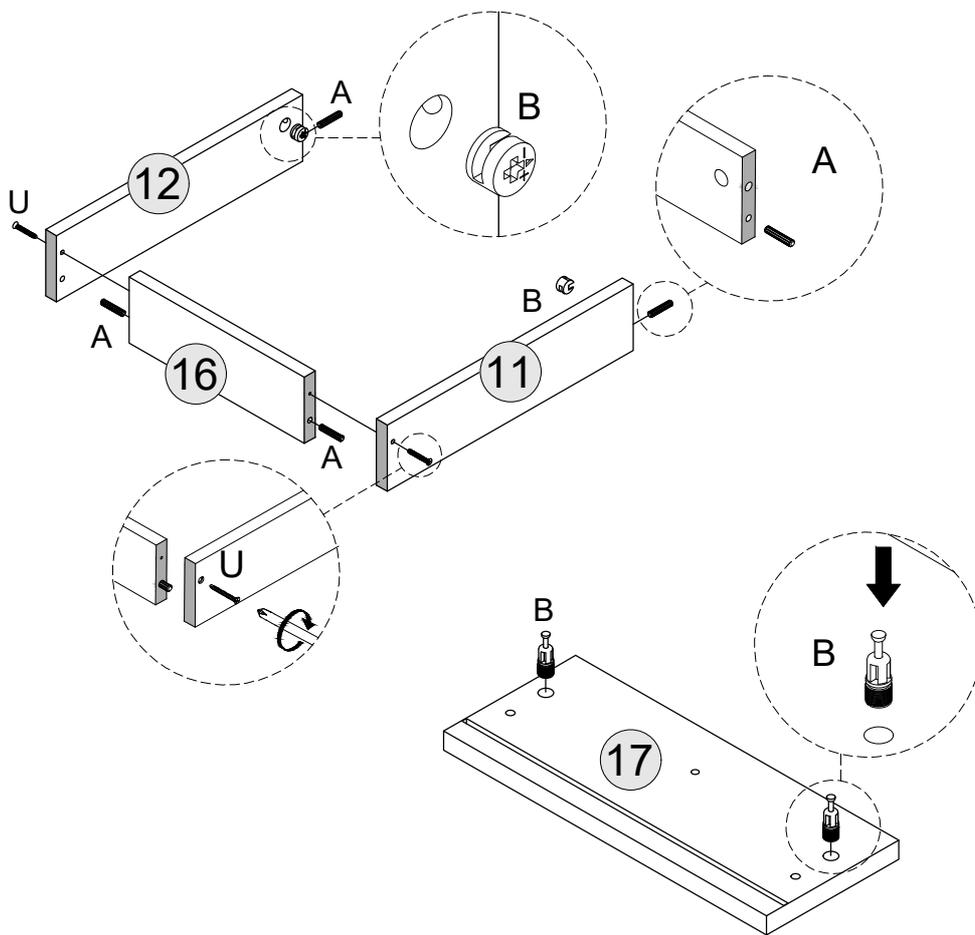

# STEP 18

**PARTS REQUIRED**



18 - SMALL DRAWER BASE	x1
------------------------	----

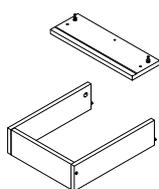

**HARDWARE REQUIRED**


G		01
R		01
S		03
V		01

**TOOLS REQUIRED**

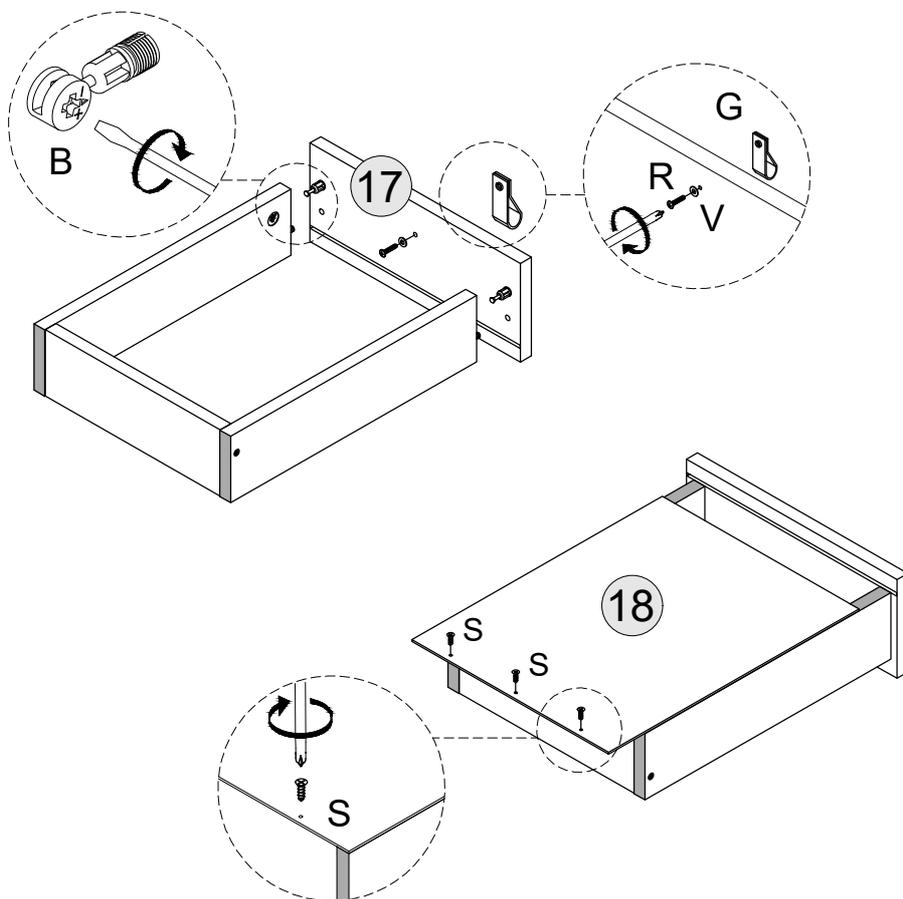


# STEP 19



PARTS REQUIRED

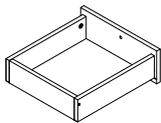

HARDWARE REQUIRED






TOOLS REQUIRED

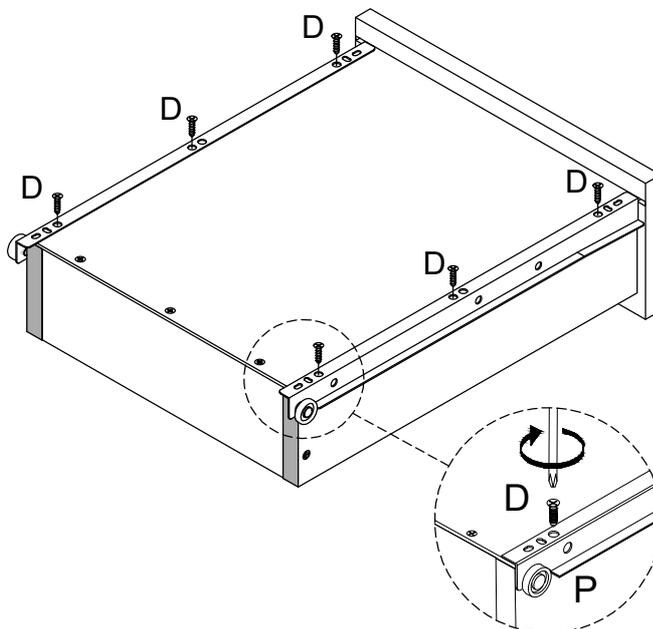


# STEP 20

PARTS REQUIRED

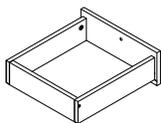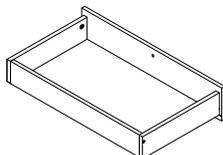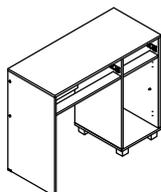

HARDWARE REQUIRED

TOOLS REQUIRED

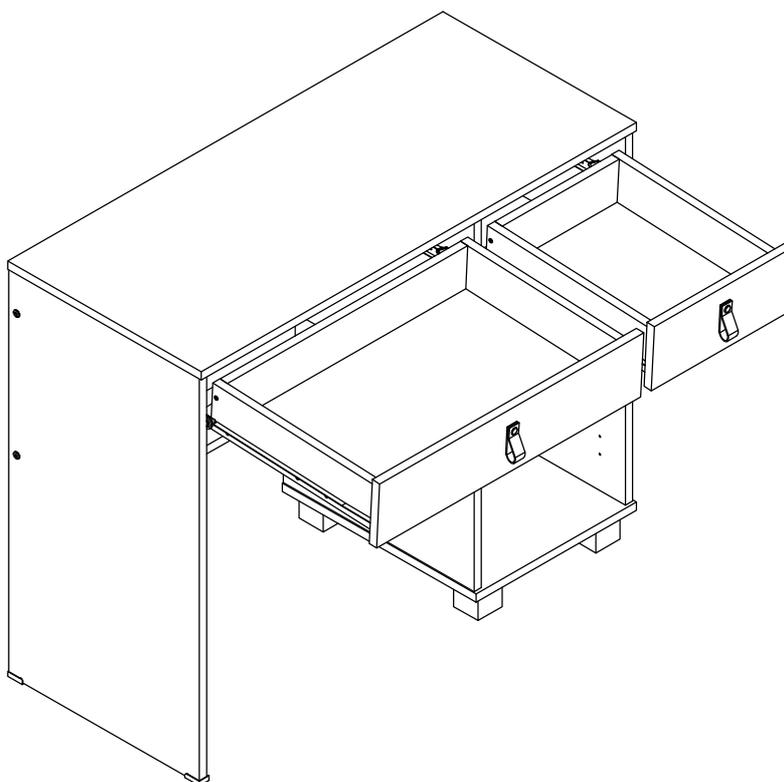

# STEP 21

## PARTS REQUIRED



19 - DOOR PANEL x1

## HARDWARE REQUIRED

D  04

N  02

## TOOLS REQUIRED

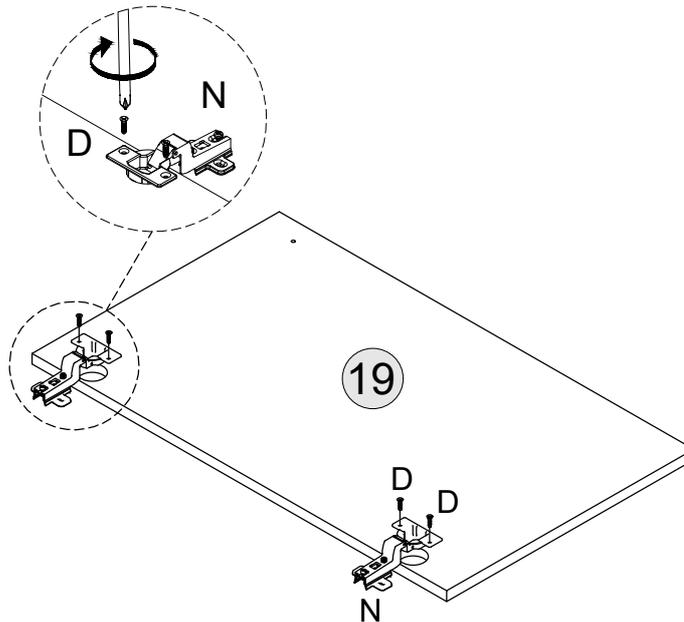


# STEP 22

## PARTS REQUIRED

19 - DOOR PANEL x1

20 - SHELF PANEL x1

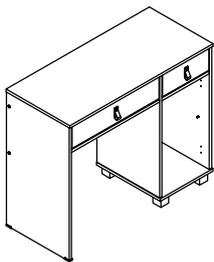

## HARDWARE REQUIRED



G  01

H  04

R  01

V  01

## TOOLS REQUIRED

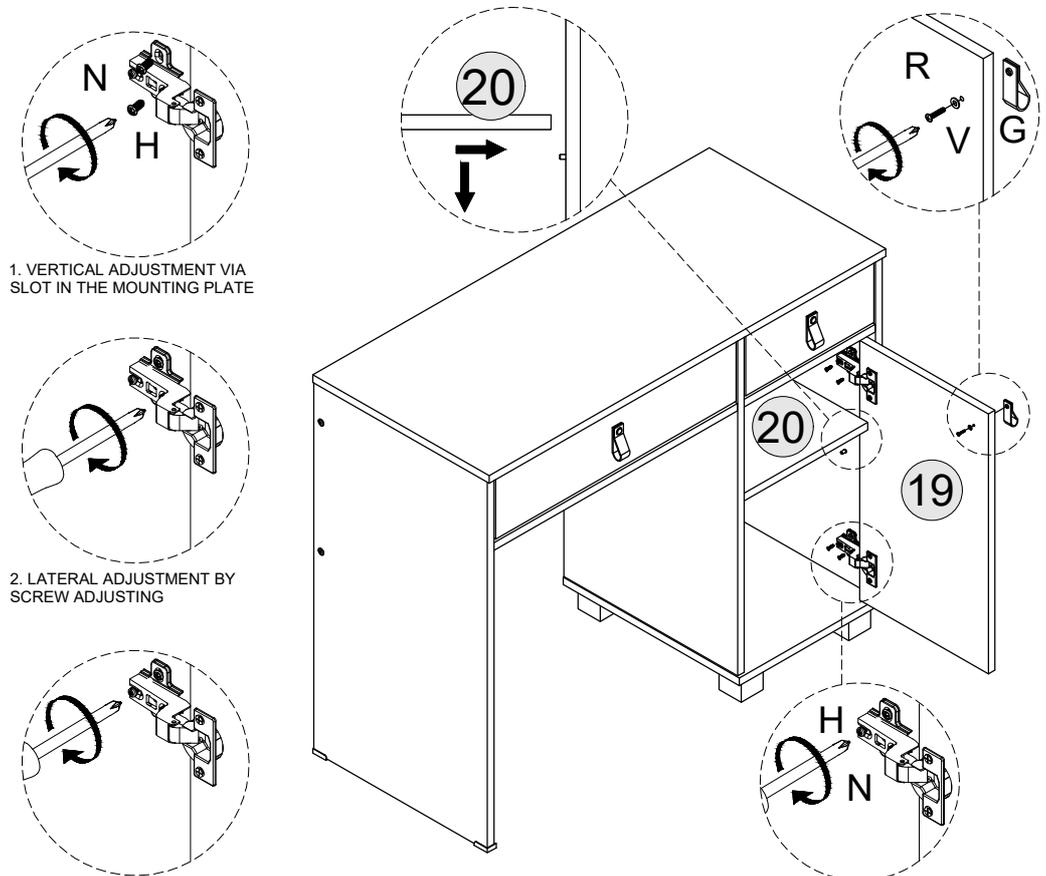



1. VERTICAL ADJUSTMENT VIA SLOT IN THE MOUNTING PLATE

2. LATERAL ADJUSTMENT BY SCREW ADJUSTING





3. FRONT-TO-BACK BY THE SLACKING THE HINGE ARM MOUNTING SCREW

YOU SHOULD RE-ADJUST SCREWS AS SHOWN TO ALIGN DOOR ONCE HINGES HAVE BEEN ATTACHED.

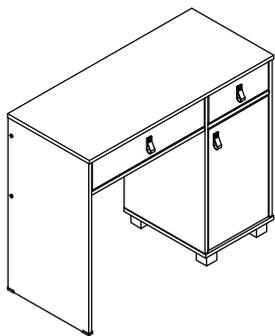**STEP 23**PART REQUIREDHARDWARE REQUIREDTOOLS REQUIRED**WARNING**

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

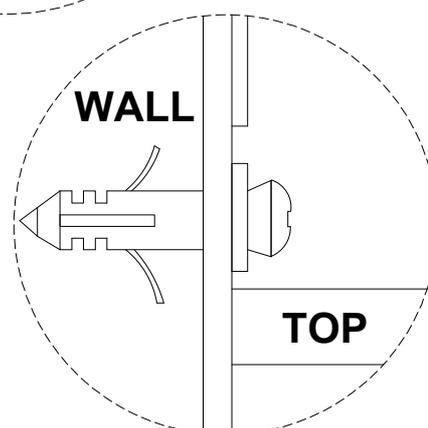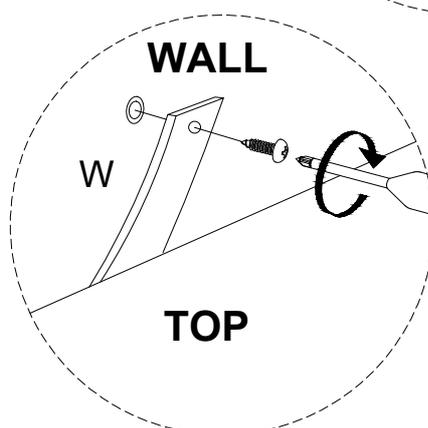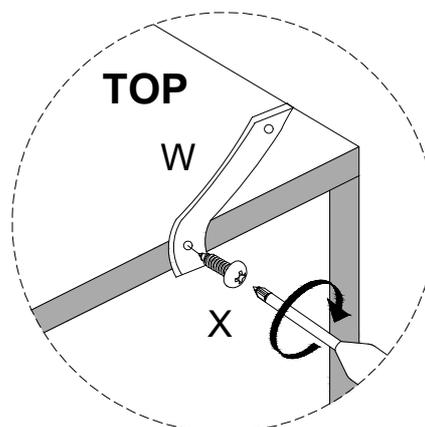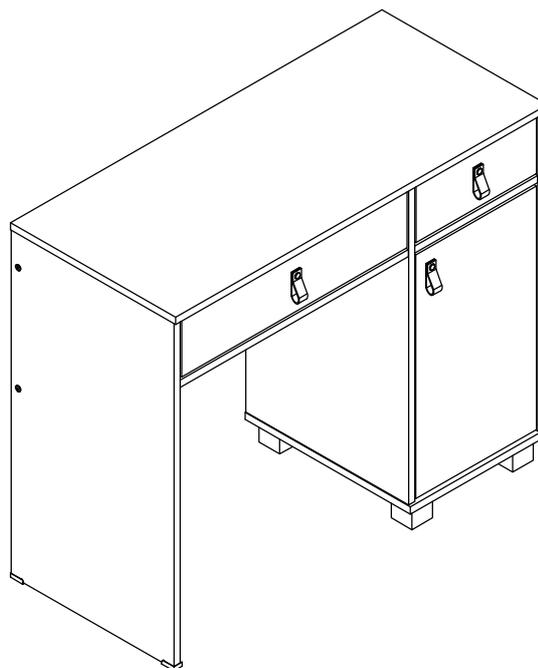

# STEP 24



**PARTS REQUIRED**

- 22 - UPPER SUPPORT - STOOL x2
- 23 - LOWER SUPPORT - STOOL x1
- 24 - TOP PANEL - STOOL x1

**HARDWARE REQUIRED**

- A  16
- B  04

**TOOLS REQUIRED**

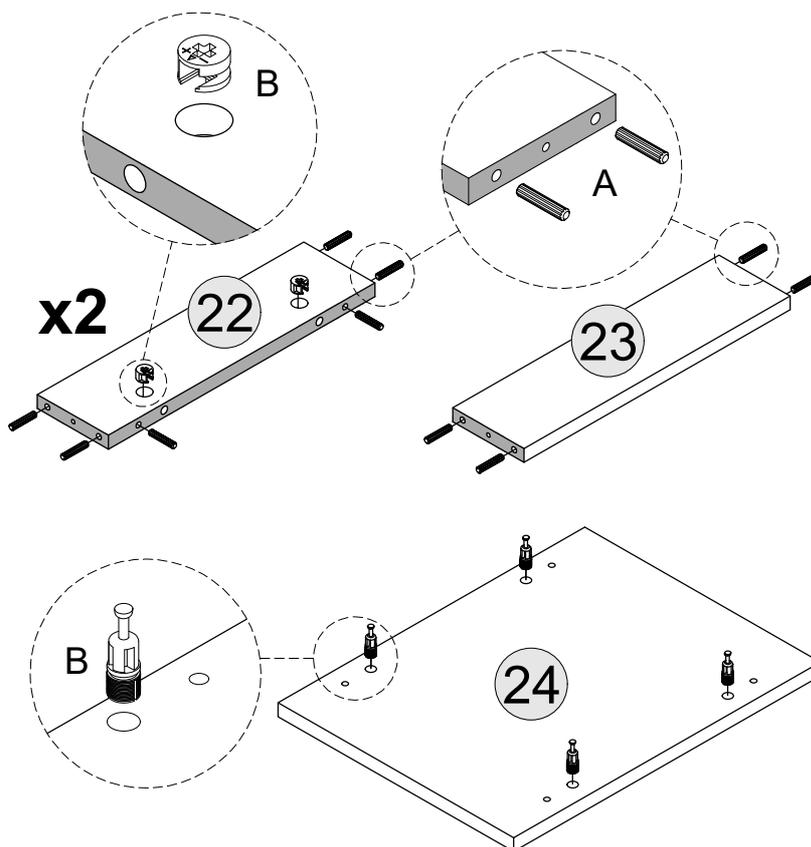


# STEP 25


**PARTS REQUIRED**

- 21 - SIDE PANEL - STOOL x1
- 22 - UPPER SUPPORT - STOOL x2
- 23 - LOWER SUPPORT - STOOL x1

**HARDWARE REQUIRED**

- T  03

**TOOLS REQUIRED**

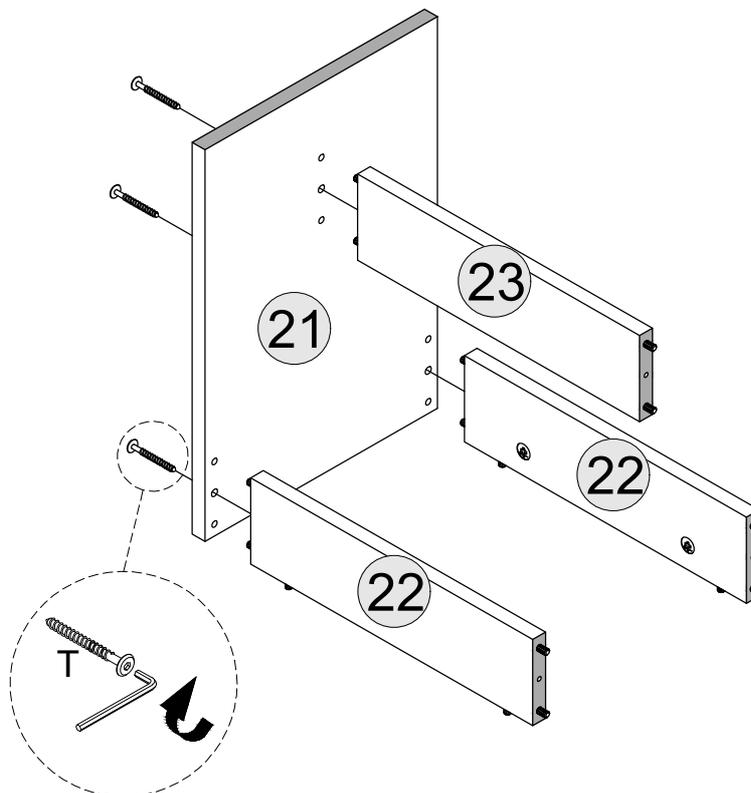


# STEP 26


PARTS REQUIRED

21 - SIDE PANEL - STOOL x1

HARDWARE REQUIRED

T  03


TOOLS REQUIRED

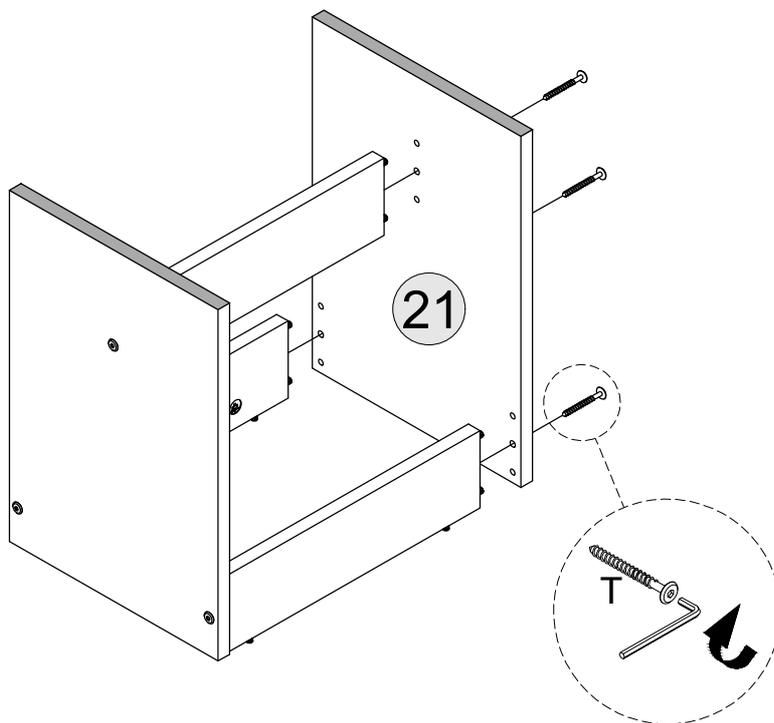

# STEP 27


PARTS REQUIRED

24 - TOP PANEL - STOOL x1

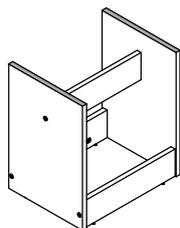

HARDWARE REQUIRED

TOOLS REQUIRED

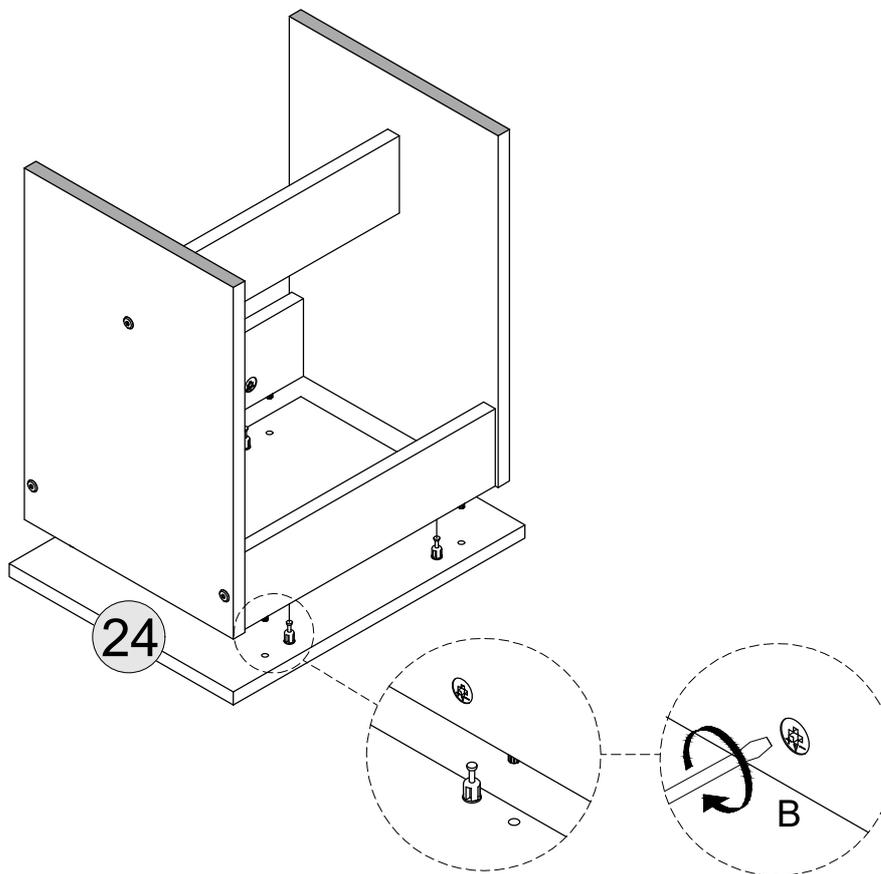


# STEP 26


PARTS REQUIRED

21 - SIDE PANEL - STOOL x1

HARDWARE REQUIRED

T  03


TOOLS REQUIRED

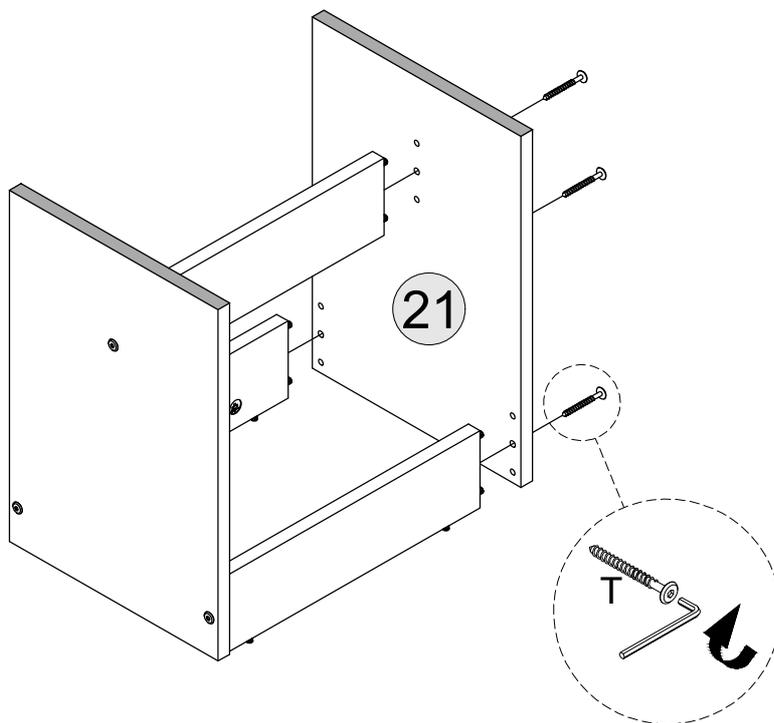

# STEP 27


PARTS REQUIRED

24 - TOP PANEL - STOOL x1

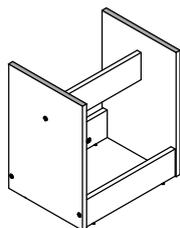


HARDWARE REQUIRED

TOOLS REQUIRED

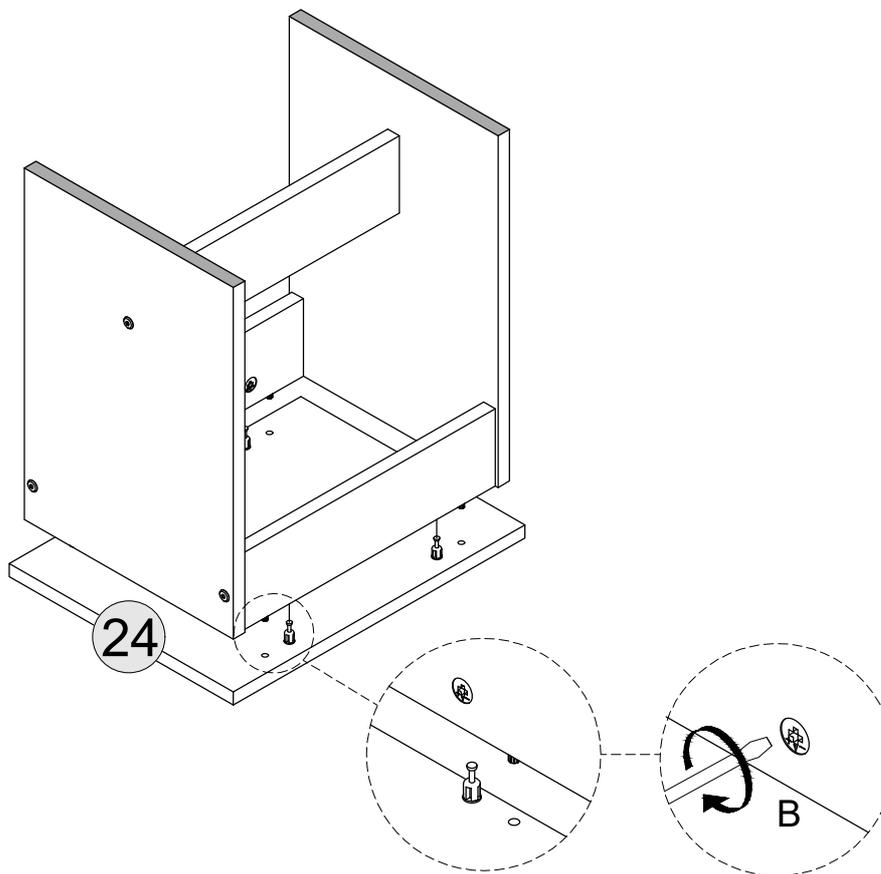

# BROOKLYN DRESSING TABLE MIRROR ASSEMBLY INSTRUCTIONS

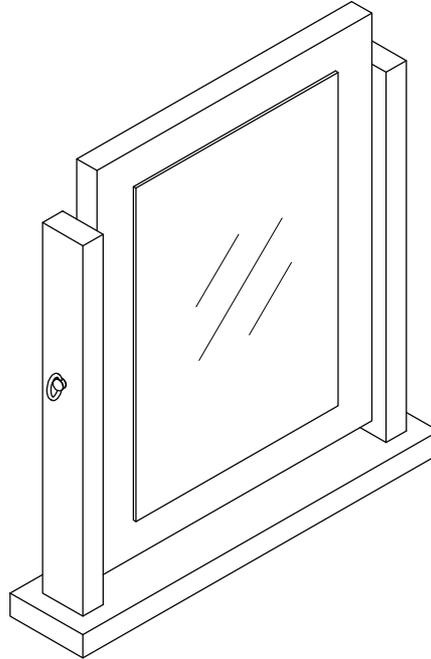

## **IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER**

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

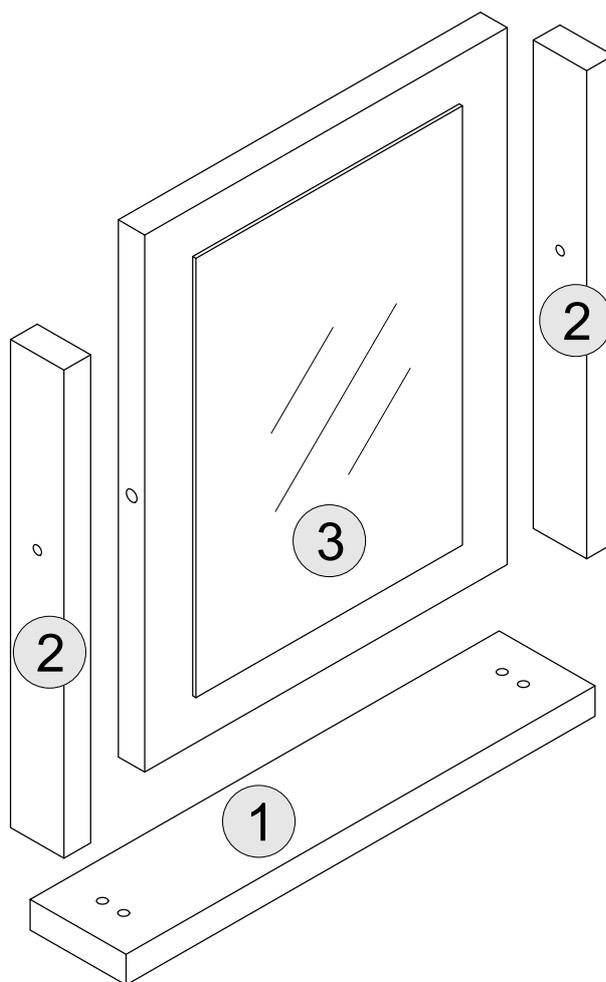

## PART LIST

<u>Part Number</u>	<u>Part Code</u>	<u>Part Description</u>	<u>Quantity</u>	<u>Carton</u>
1	S100-105-023-EU1-01M	Bottom Panel	1	1/1
2	S100-105-023-EU1-02M	Side Panel	2	1/1
3	S100-105-023-EU1-03M	Mirror Panel	1	1/1

# HARDWARE LIST

A		BOLT M7 X 60MM	4 PCS
B		SCREW	2 PCS
C		ALLEN KEY	1 PC


## STEP 1

### PARTS REQUIRED


1 - BOTTOM PANEL x1

2 - SIDE PANEL x2

### HARDWARE REQUIRED

A  04


### TOOLS REQUIRED

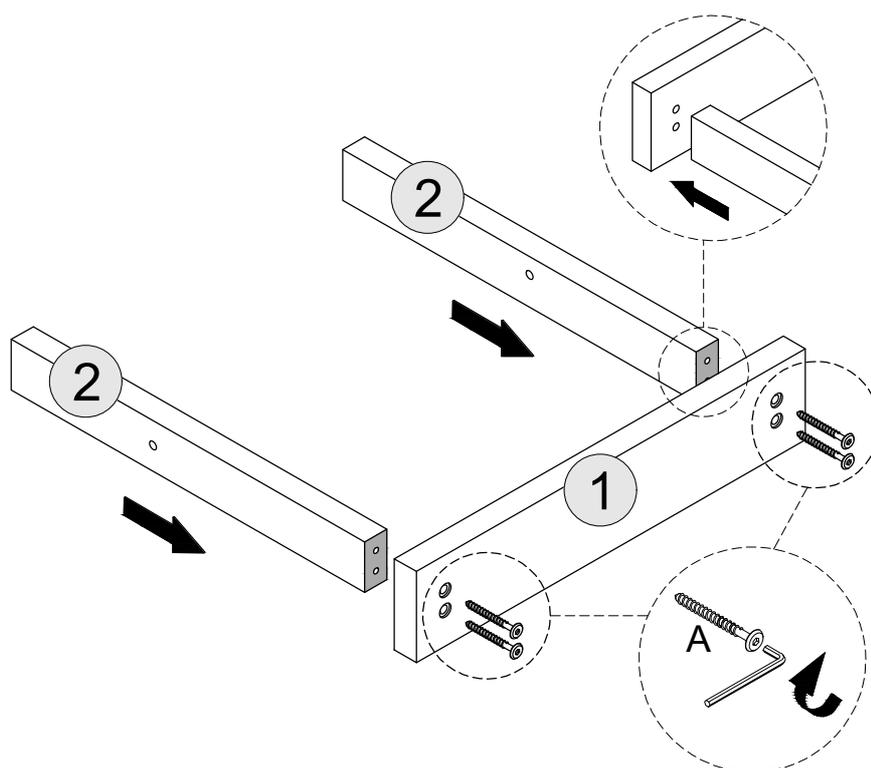

## STEP 2

PARTS REQUIRED


3 - MIRROR PANEL x1

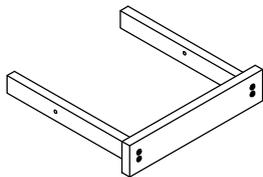

HARDWARE REQUIRED


B  02

TOOLS REQUIRED

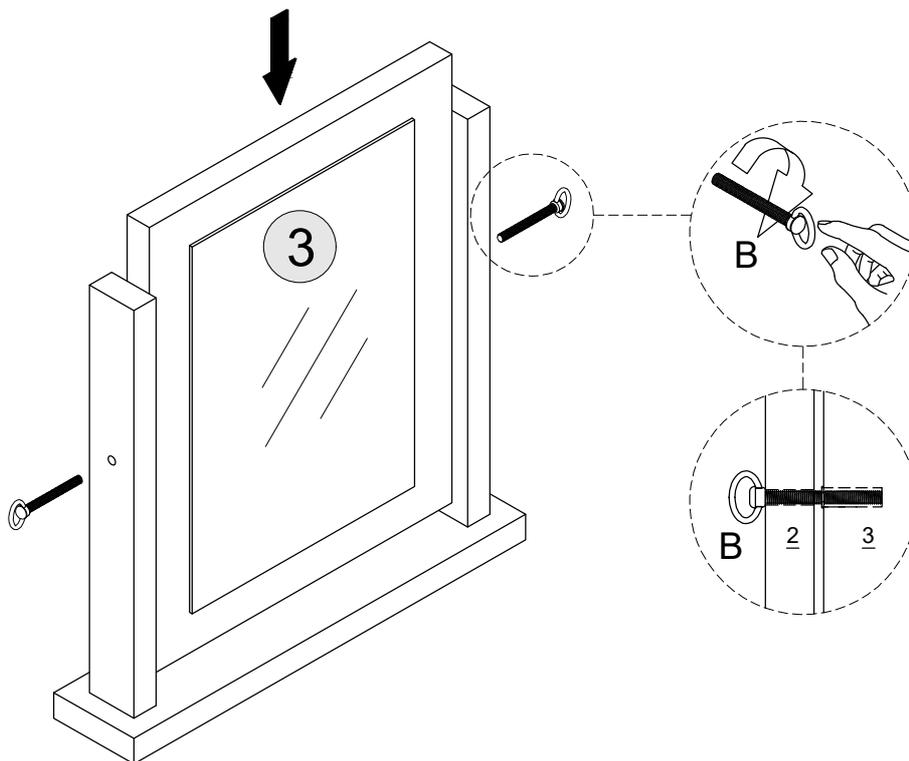

## STEP 3

PARTS REQUIRED

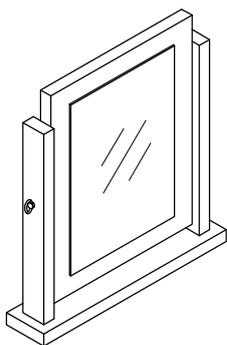

HARDWARE REQUIRED

TOOLS REQUIRED

