

* KINDLY CHECK ALL THE FITTINGS BEFORE ASSEMBLE

TURIN SINGLE (3')BED


ASSEMBLY INSTRUCTION

ACCESSORIES LIST


M8 X 16
ALLEN SCREW



PLASTIC CAP
SIDE

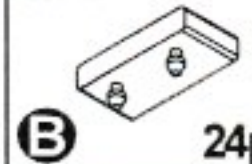

M5 ALLENKEY

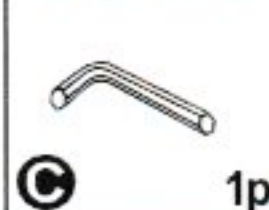


PART

1	HEADBOARD	1 pc
2	FOOTBOARD	1 pc
3	SIDE RAIL	2 pc
4	BASE (BEND WOOD)	12 pc



STEP 1

*M8 X 16mm Allen Screw already attach to HFB

Fix Side Rail with M5 Allenkey

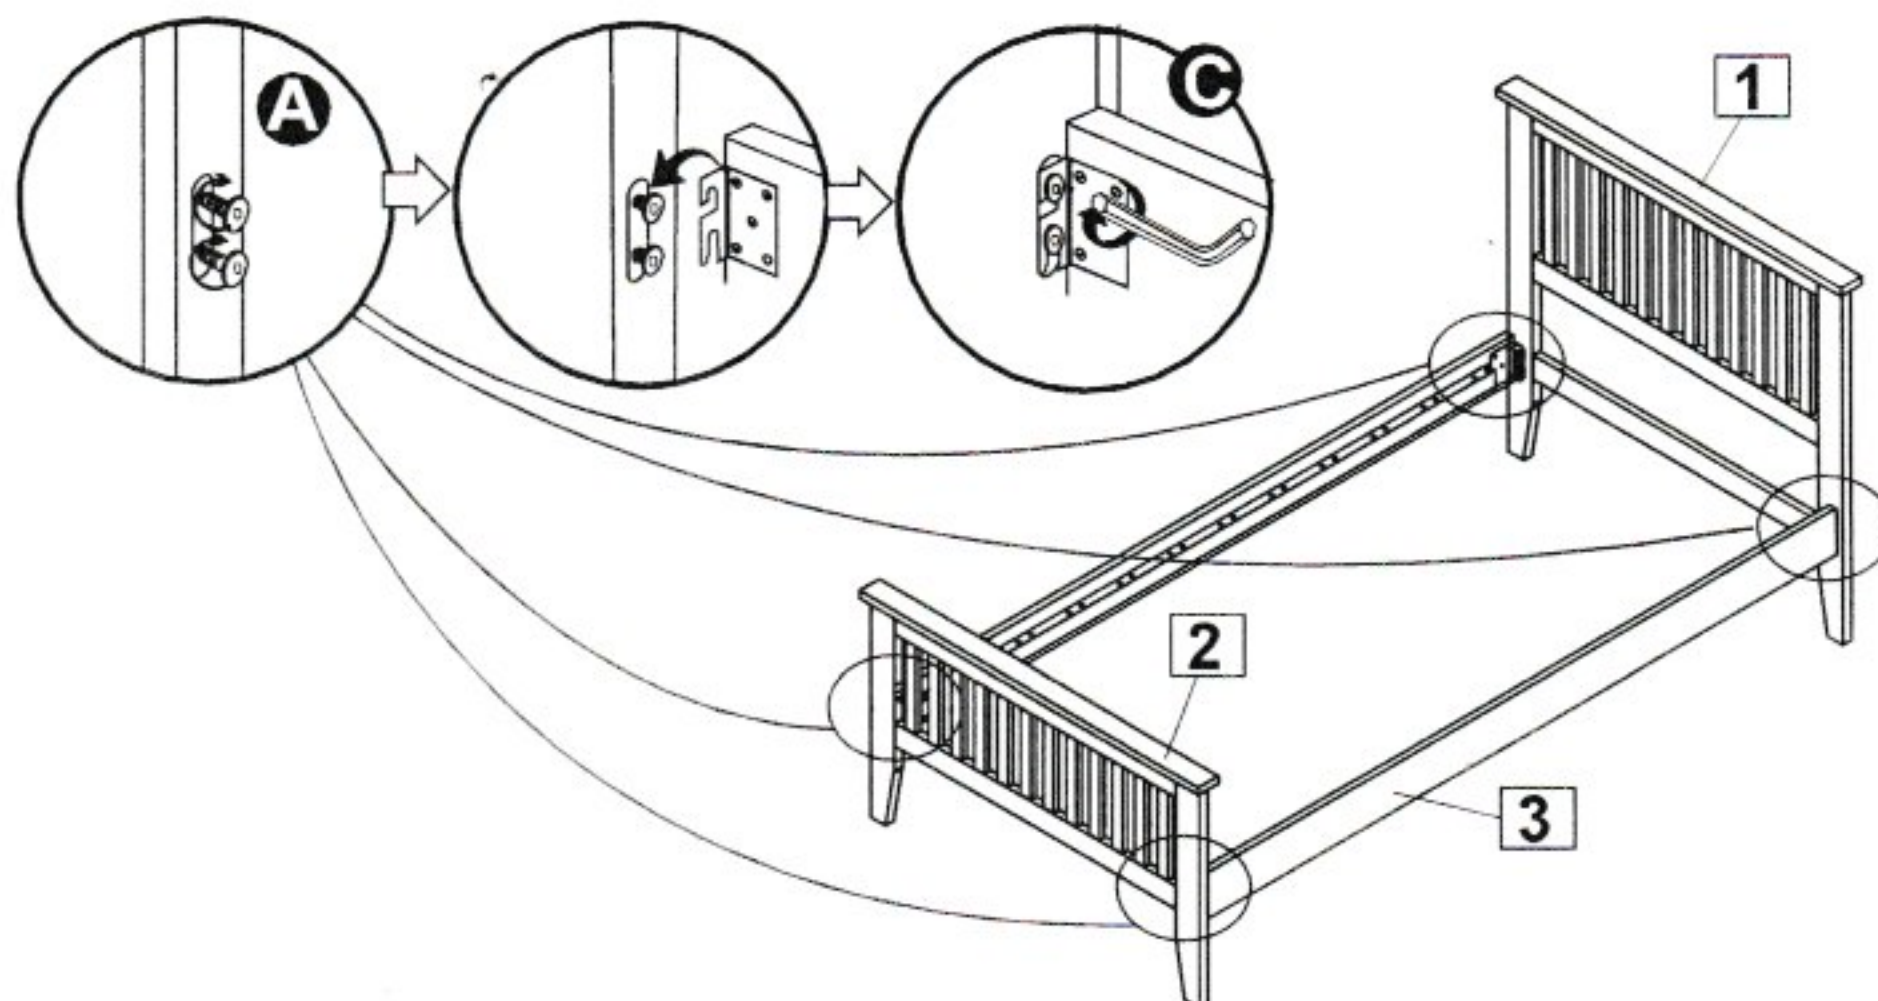

STEP 2

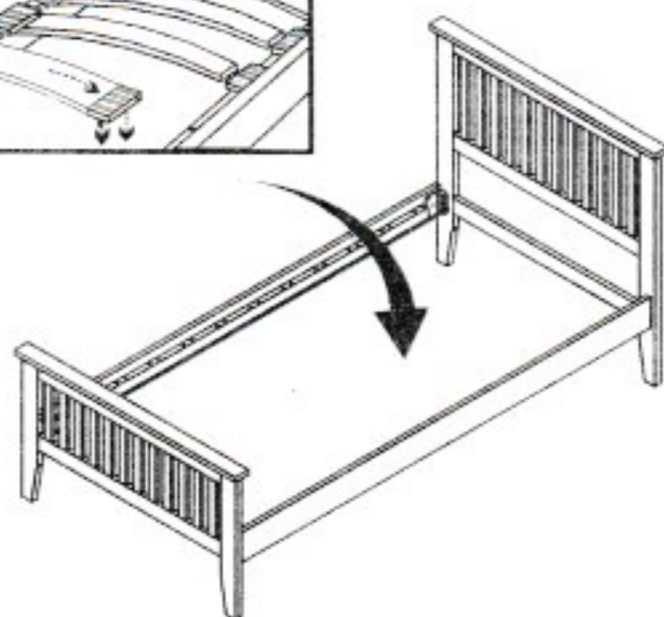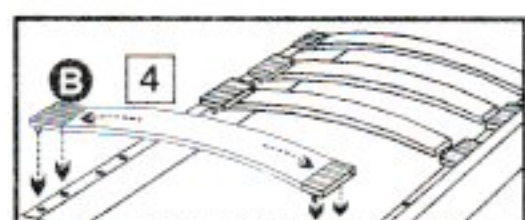

COMPLETE

