


LPD STOCKHOLM 1 DRAWER BEDSIDE CABINET

Assembly Instructions - Please keep for future reference

PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN PLACE. IN THE UNLIKELY EVENT THAT YOU NEED TO RETURN YOUR PRODUCT, IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE. FAILURE TO COMPLY TO THESE PROCEDURES, NO RETURN'S WILL BE ACCEPTED.

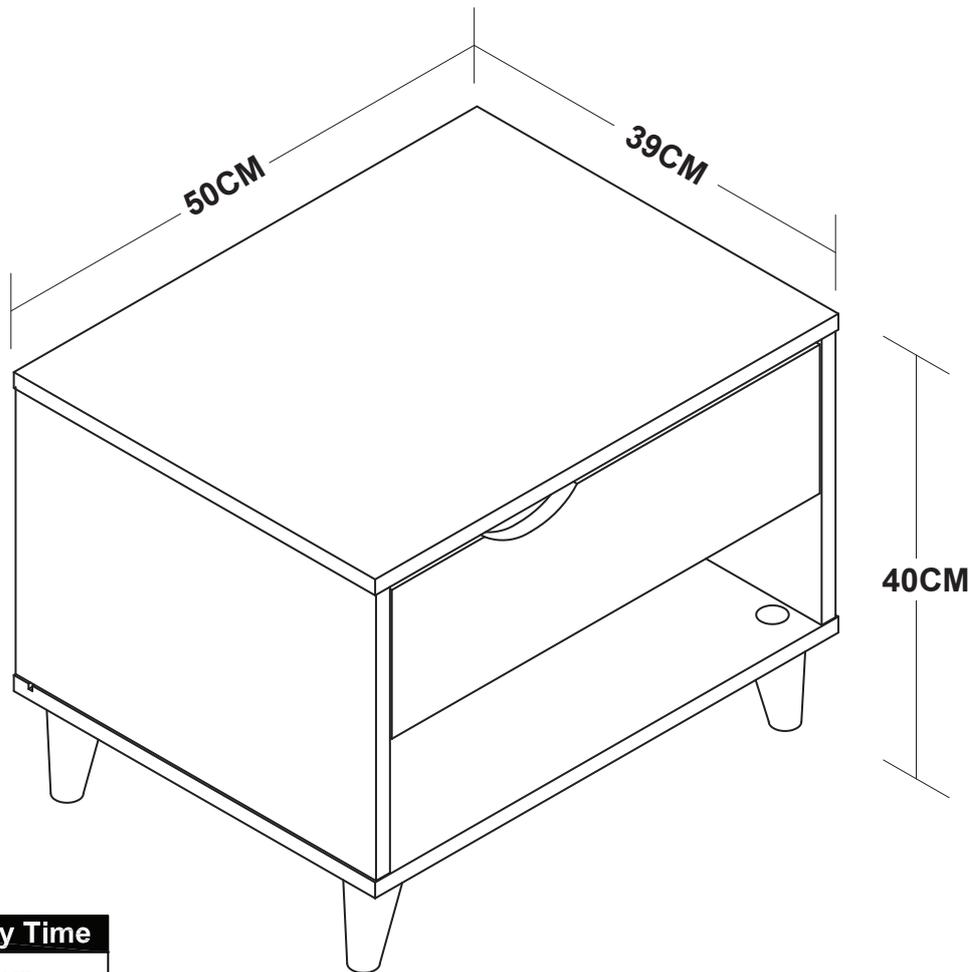


No. people	Assembly Time
	1 Hour (approx.)

" SHOULD IT BE NECESSARY TO RETURN THIS PRODUCT FOR ANY REASON,
IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING"

Important: Read carefully

-  Please check you have all parts listed on your assembly sheet. In the unlikely event that any parts are missing, please contact your retailer immediately.
-  Do not use any other tools than those listed on your assembly sheet / tools provided. Use of power tools could damage your product and returns would not be accepted back in these circumstances. Use of power tools could also make your product unsafe due to overtightening.
-  Depending on the amount of use your product receives, it may be necessary to tighten the fixings from time to time.
-  Assemble your product on a soft surface to avoid scratching and also preferably in the room intended for use to avoid having to move the product unnecessarily once assembled.
-  For cleaning please use a clean damp cloth or duster. Use of abrasive or chemical cleaners will most likely scratch or damage the surface of your product. We do not accept returns for damages arising from incorrect care of products.
-  Please keep the original packing until your item is fully assembled and in place. In the unlikely event you need to return your product. It must be returned back in its original packing to avoid any damage.
-  The surface of this item is not heat resistant. Please use a mat under hot, cold or wet items to prevent marking.

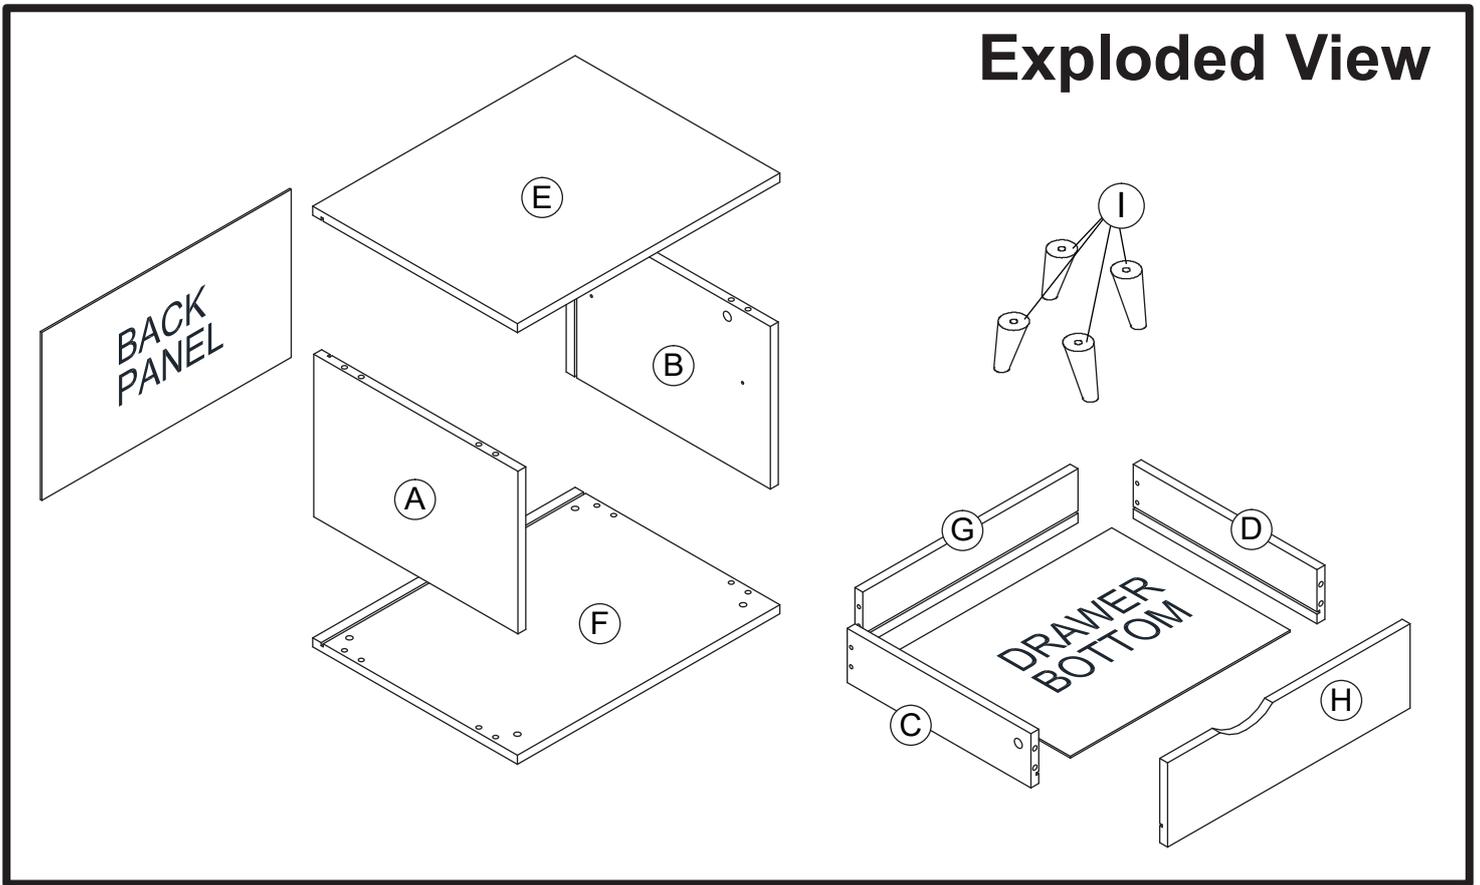

Components - Panels






Please check that you have all the components listed below before constructing your items.

Parts No	Description	Qty
A	Side Panel - L	1
B	Side Panel - R	1
C	Drawer Side Panel - L	1
D	Drawer Side Panel - R	1
E	Top Panel	1
F	Bottom Panel	1
G	Drawer Back Panel	1
H	Drawer Front	1
I	Wooden Leg	4
	Drawer Bottom	1
	Back Panel	1


Components - Fixings

Please check that you have all the components listed below before constructing your items.


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A)	CB Screw 4 x 38mm  4 units	(B)	Cam Bolt  6 units	(C)	Wood Dowel 8 x 30mm  10 units	(D)	Unitar Screw 7 x 40mm  4 units
(E)	JCBC Screw 8 x 40mm  4 units	(F)	CB Screw 3.5 x 20mm  4 units	(G)	PVC Sticker 25mm  4 units	(H)	CB Screw 3.5 x 14mm  4 units
(I)	Corner Support (AC101)  2 units	(J)	Cam Nut  6 units	(K)	Allen Key M4  1 unit	(L)	Allen Key M5  1 unit
(M)	Drawer Slide 14"  1 set	(N)	Drawer Slide 14"  1 set	(O)	Euro Screw 6 x 8mm  4 units		

Tools Required





Ruler - Use this to measure your screws (mm)




Assembly Instructions

Step 1

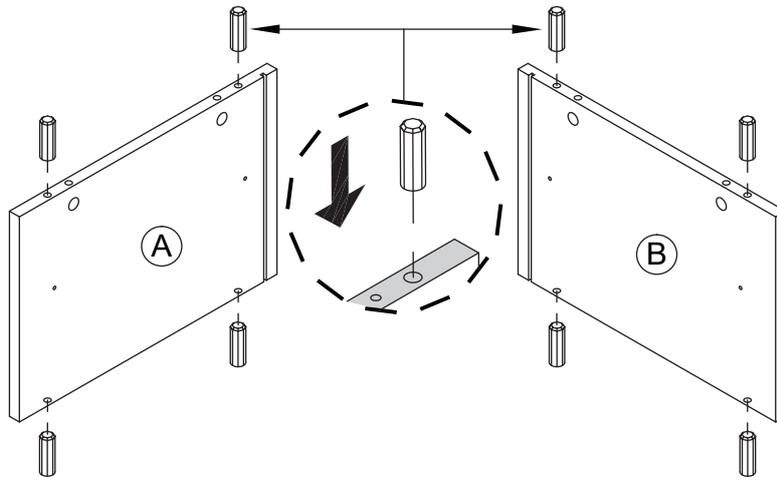


C x 8

Step 2

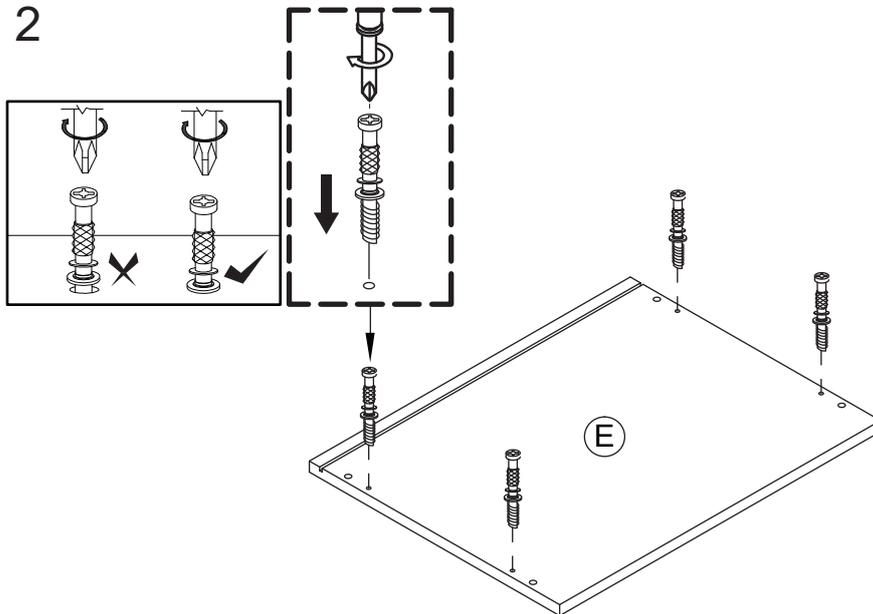


B x 4

Step 3

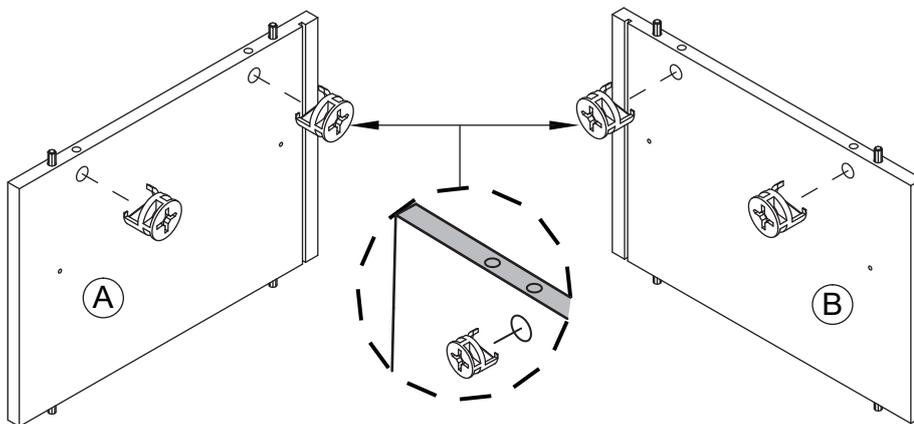

J x 4


Step 4

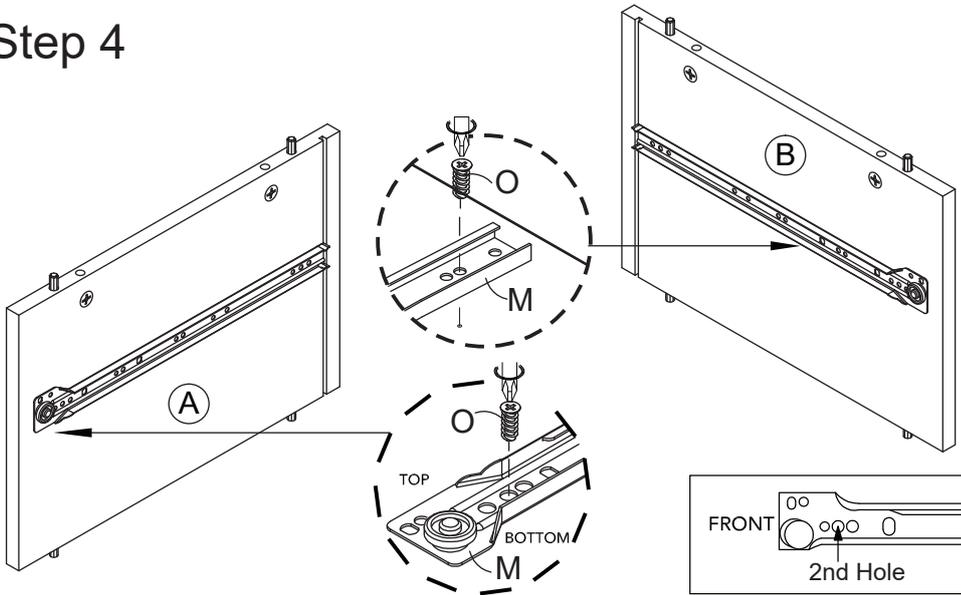

M x 1	O x 4


PLEASE ENSURE TO FIX THE SCREWS AS PER ABOVE POINTED HOLES INSTRUCTION TO AVOID DISTORTION OF OVERALL LOOK OF PRODUCTS

Step 5

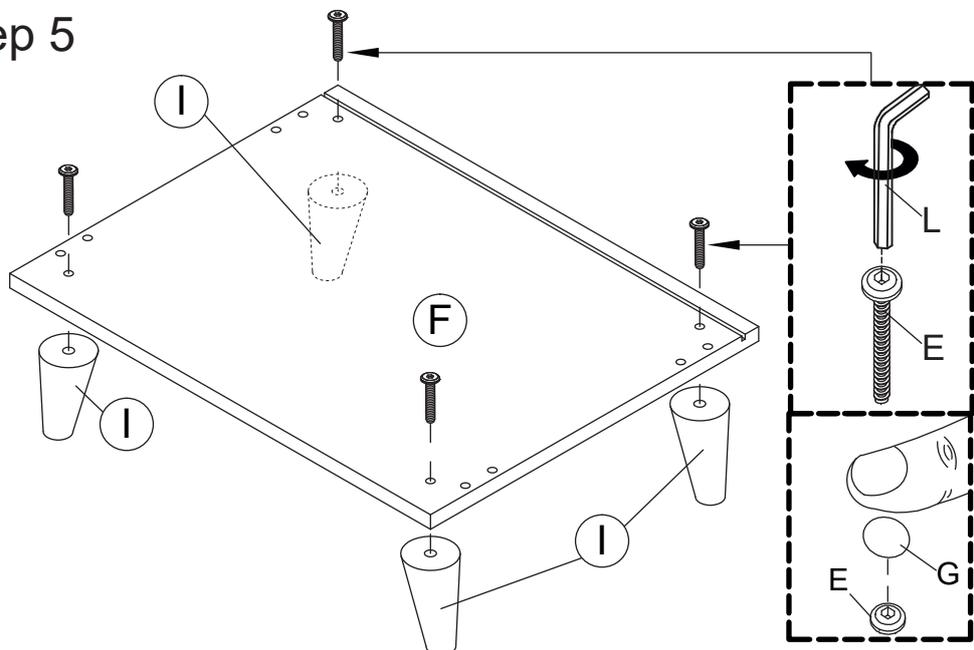


E x 4	G x 4

Step 6

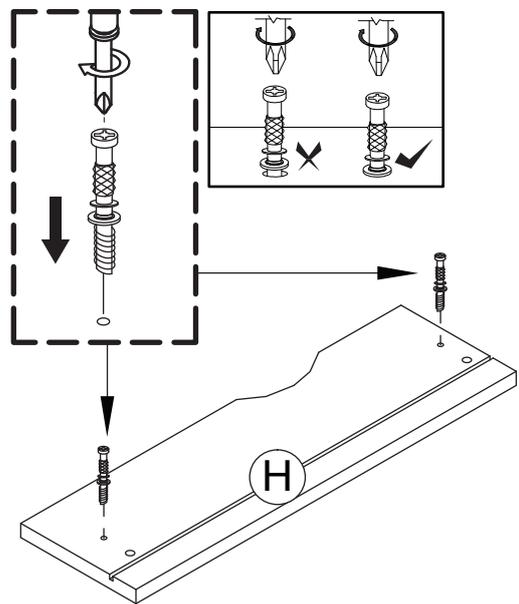


B x 2


Step 7

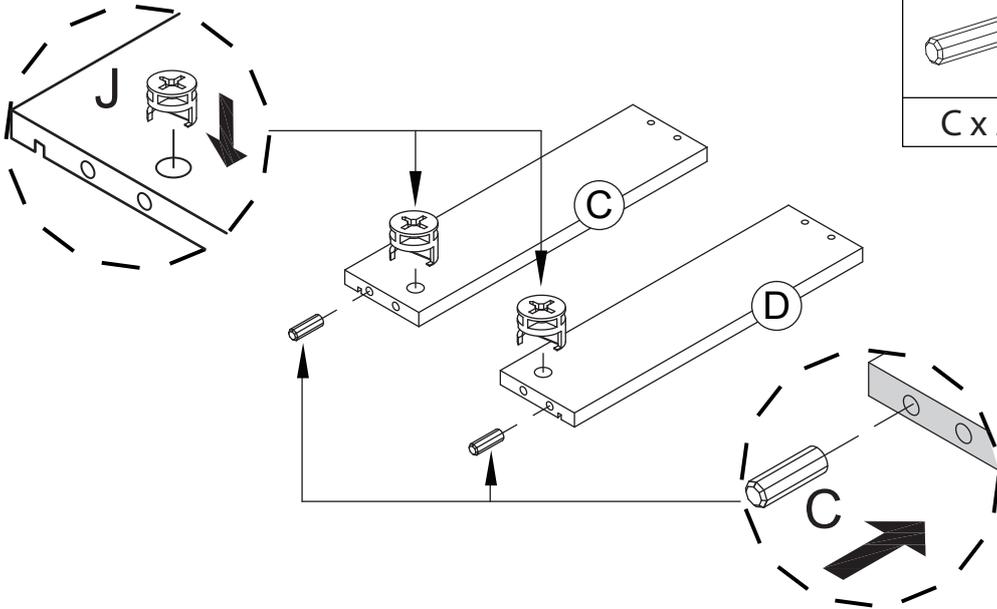


Step 8

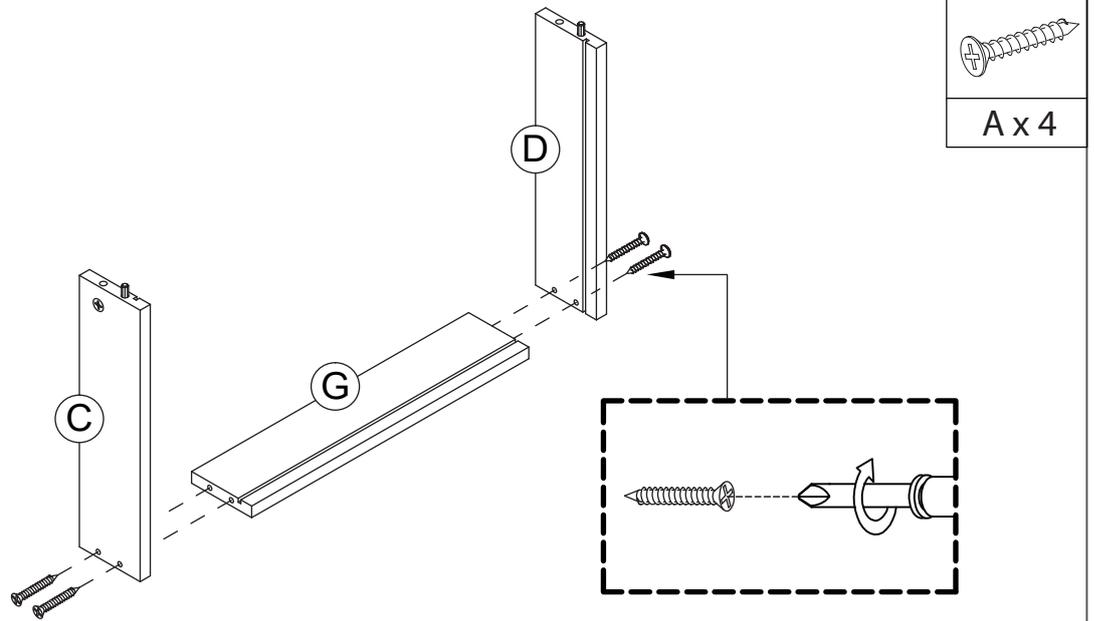


Step 9

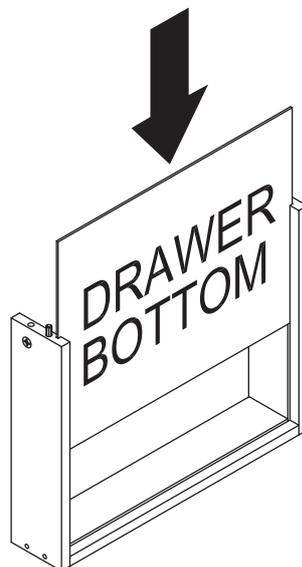


Step 10

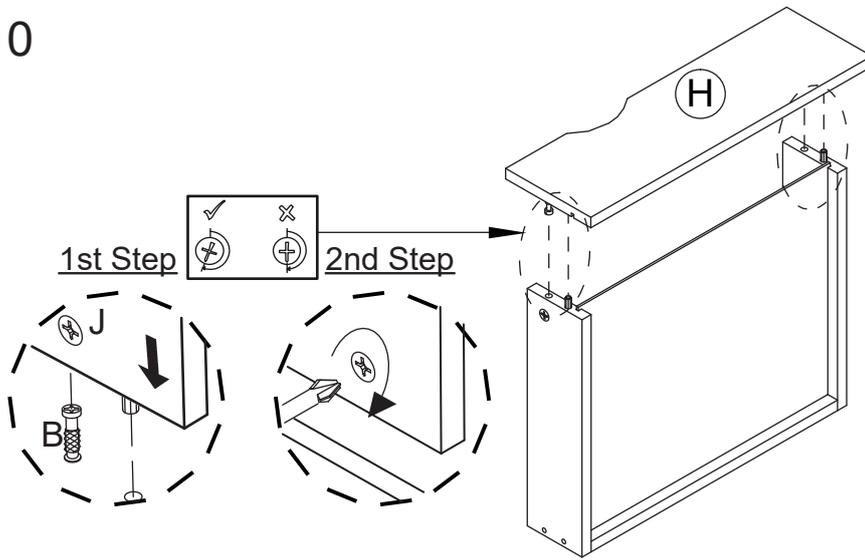


Step 11

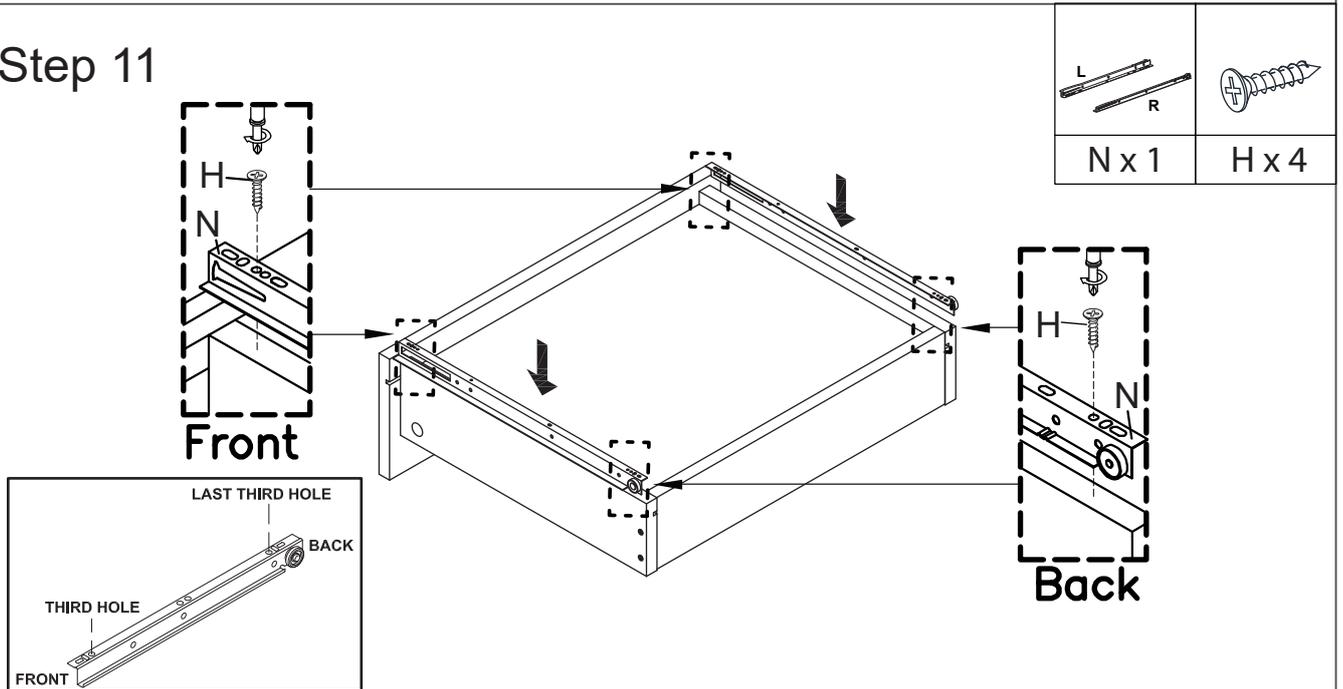



Step 12

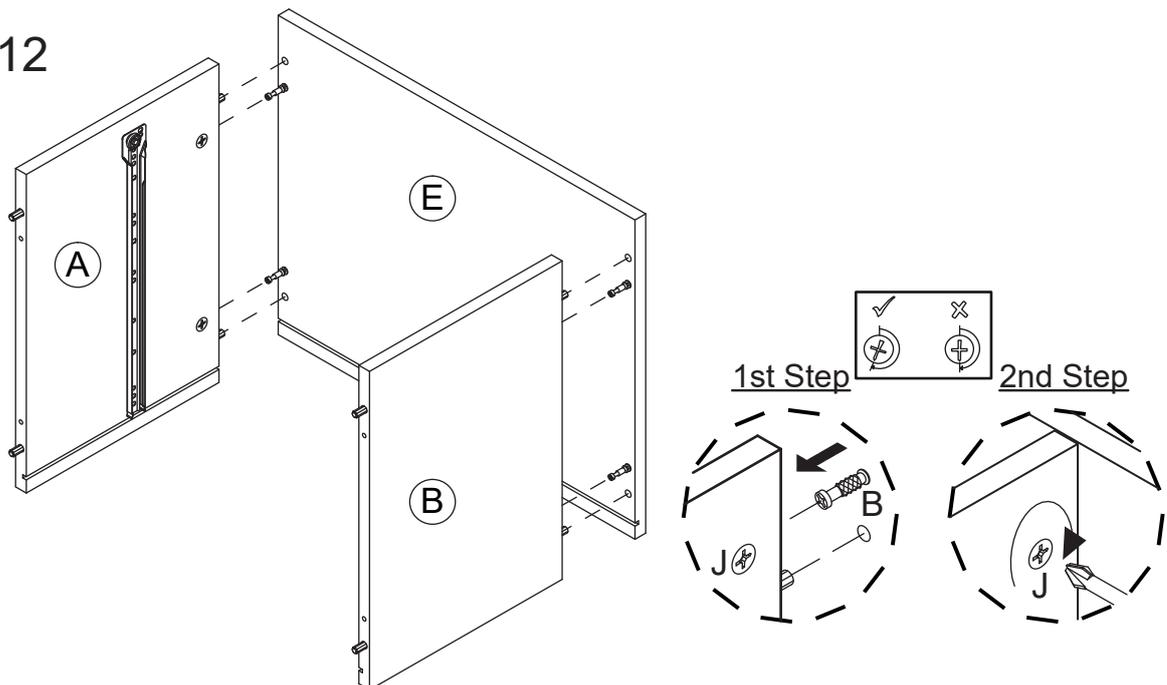


Step 13

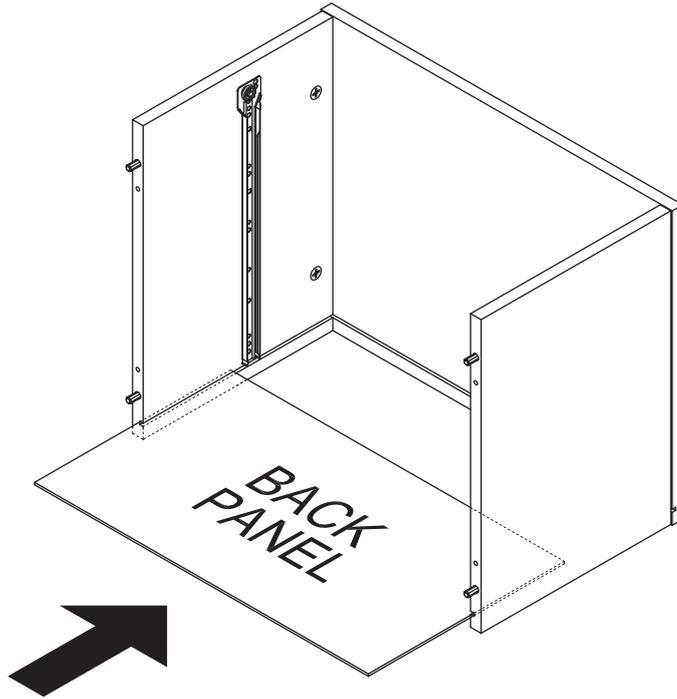


Step 14

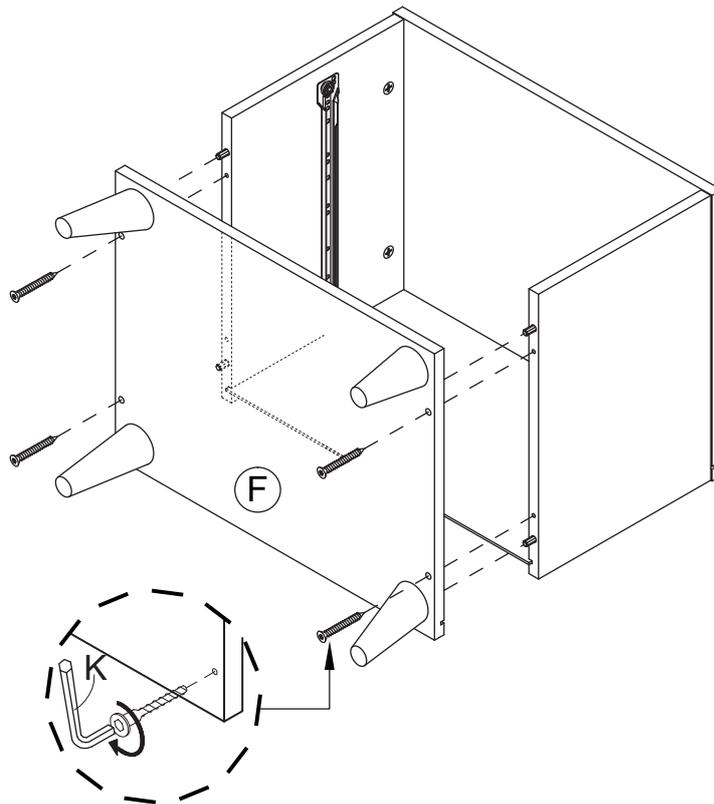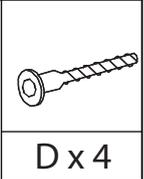



Step 15

	
F x 4	l x 2

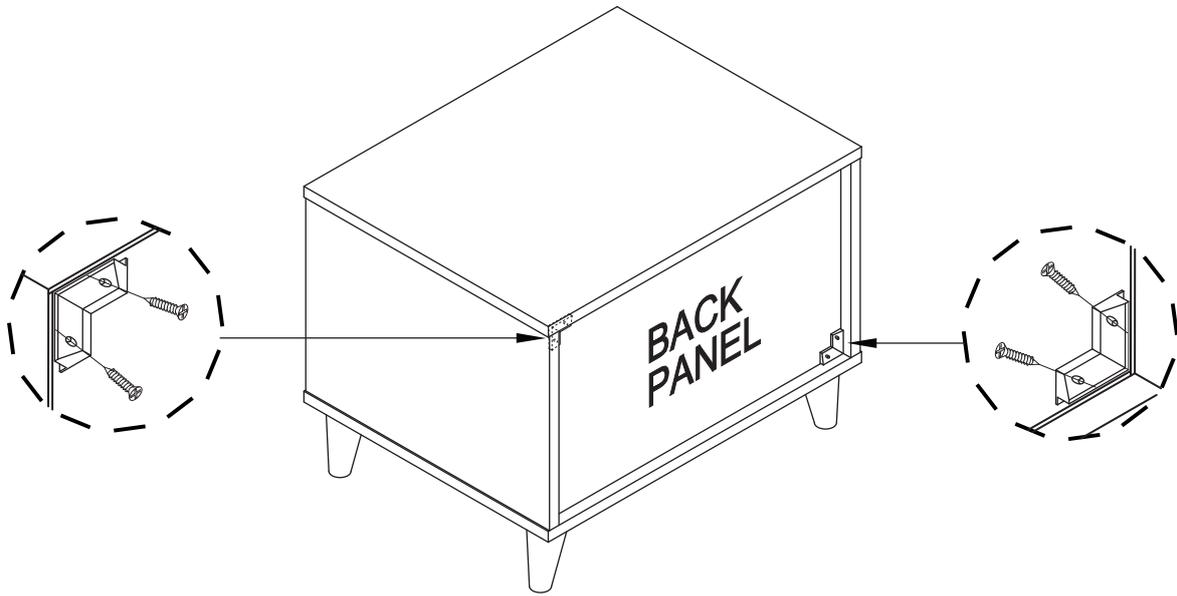

Rear View

Step 16

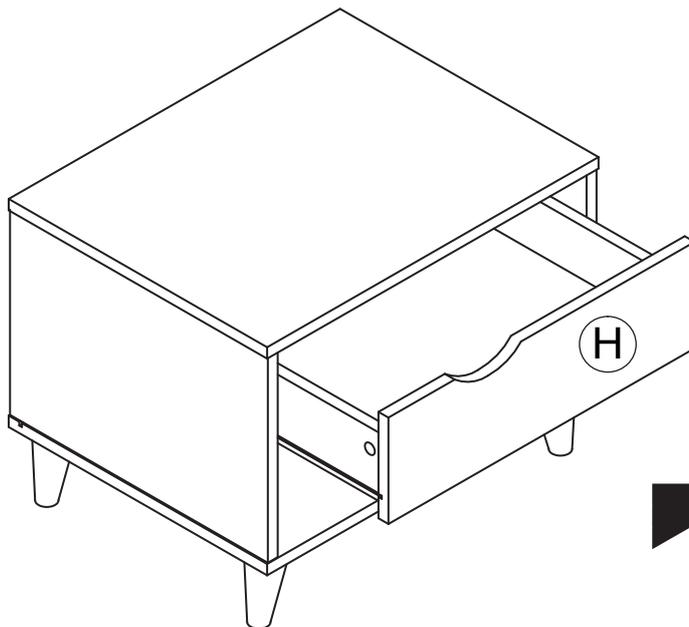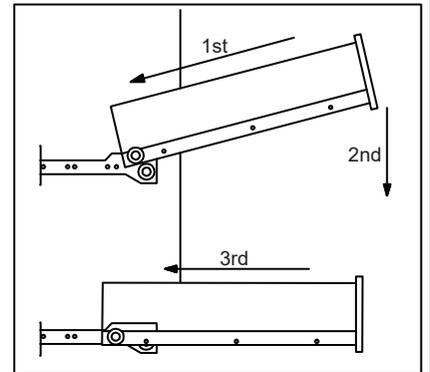

COMPLETE

