

ASSEMBLY INSTRUCTIONS


Minimum No.
Of People
Recommended
To Assemble
This Product :

2

Approximate
Assembly
Time :

30

MINUTES

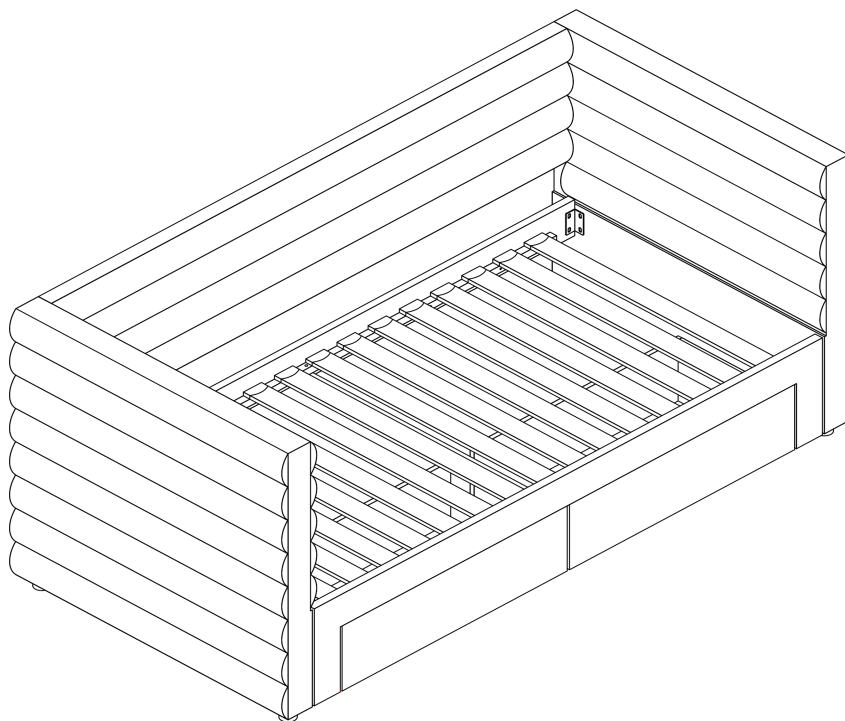



























BEFORE YOU START, HERE IS SOME HELPFUL ADVICE :

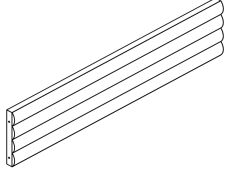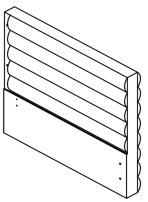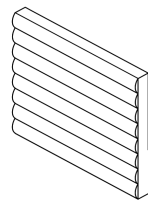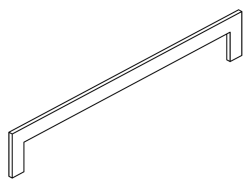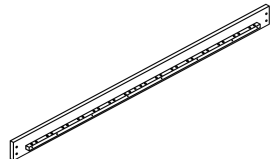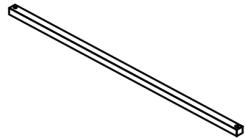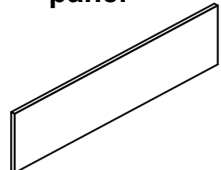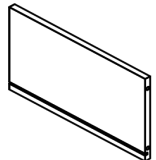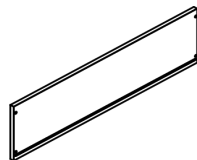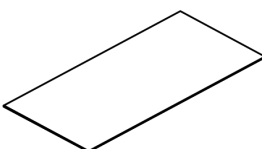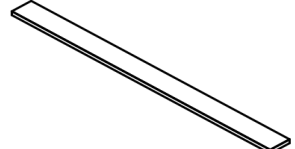

Do not use Power Tools


1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. If you follow the instructions carefully, the end result should be worth the effort.
3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings is correct and you are happy with the product.
4. To ensure an easier assembly, we strongly advise that all fittings are only finger-tightened during initial assembly phase. Only upon completion of the assembly should all fixing points be fully tightened.
5. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
6. Keep any fittings out of children's reach.

PARTS AND HARDWARE LISTS

1 x1pc Backrest 	2R x1pc Armrest 	2L x1pc Armrest 	3 x1pc Front Side rail 
4 x1pc Back Side rail 	5 x1pc Metal cross bar 	6 x2pcs Drawer outer panel 	7 x4pcs Drawer side board 
8 x2pcs Drawer back board 	9 x2pcs Drawer bottom board 	10 x4pcs Legs 	11 x15pcs Slat 
A x1pc 	B x16pcs  M8x18mm	C x4pcs  M8x35mm	D x2pcs  M8x60mm
E x16pcs  M3x20mm	F x2pcs 	G x4pcs 	H x1pc 
I x16pcs 	J x16pcs 	K x2pcs 	L x2pcs 
M x8pcs 	N x30pcs 		

STEP 1


Fix the Legs ⑩ to the bottom of the Armrest ②L& ②R .

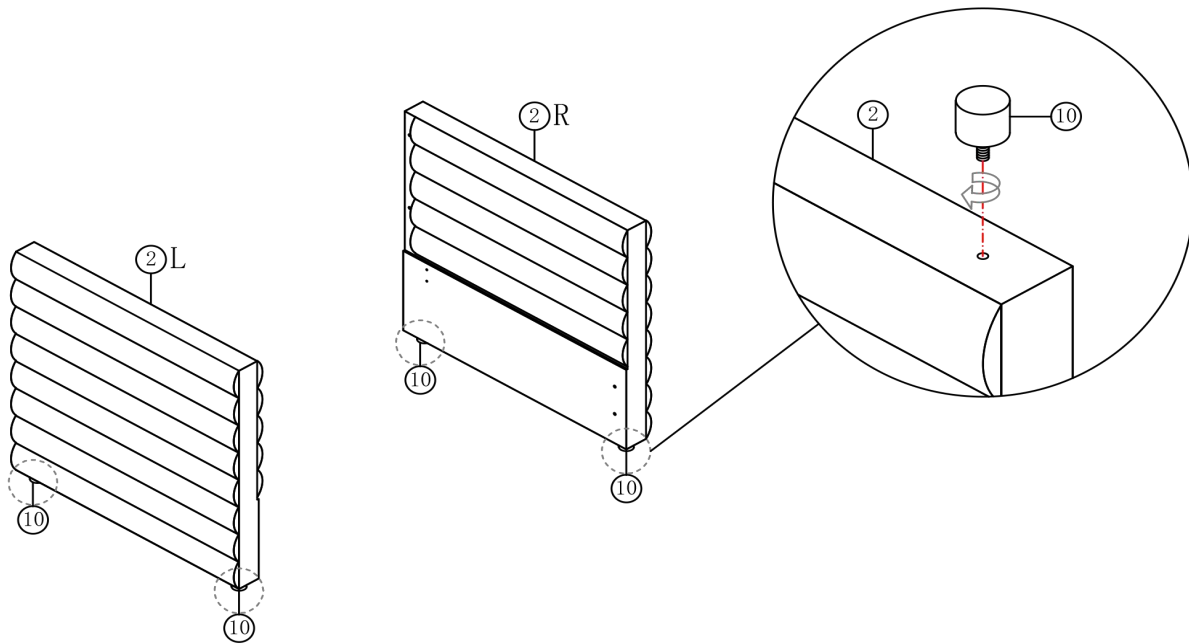**STEP 2**

Fix the Backrest ① to the Armrest ②L& ②R with Bolts C and Washer G by using Allen key A.



Do not use Power Tools


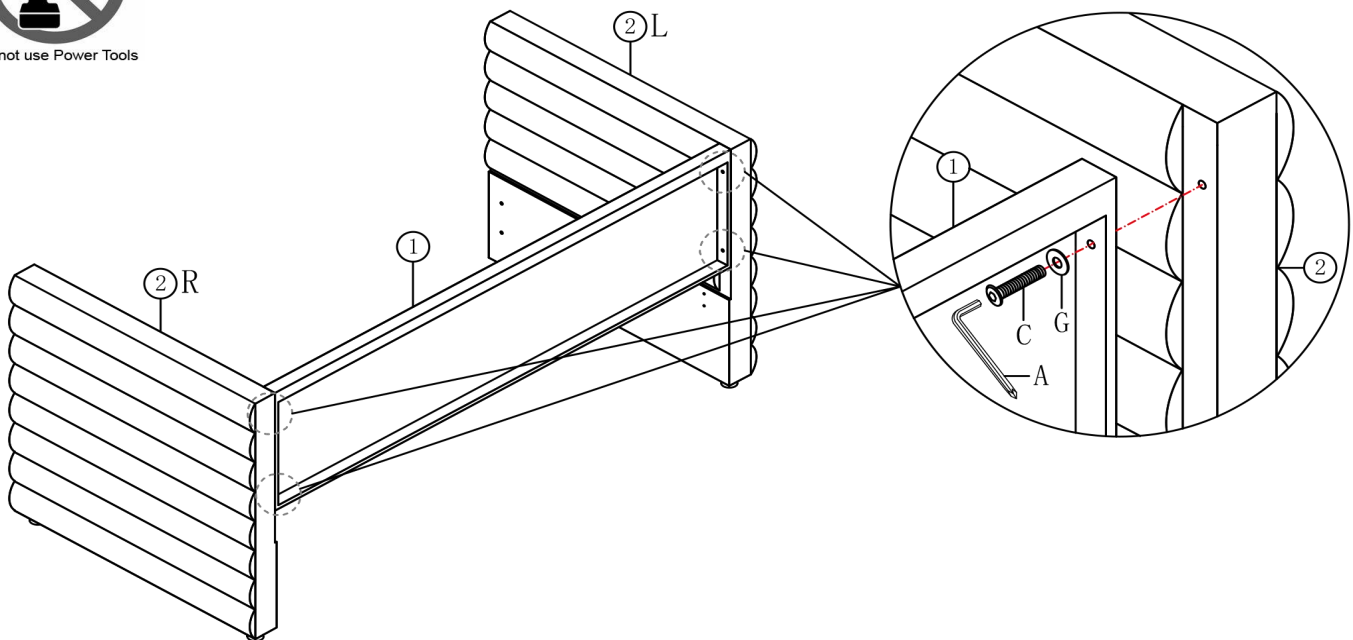


STEP 3

Fix the Back Side rail ④ to the Armrest ②L& ②R with Bolts B and Hinge K by using Allen key A.





Do not use Power Tools

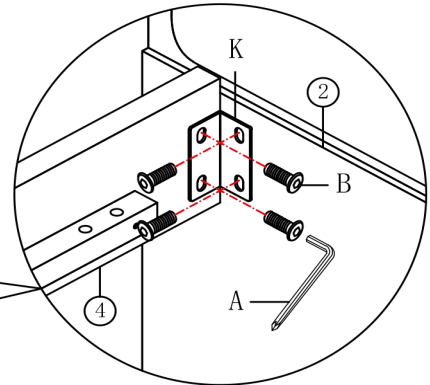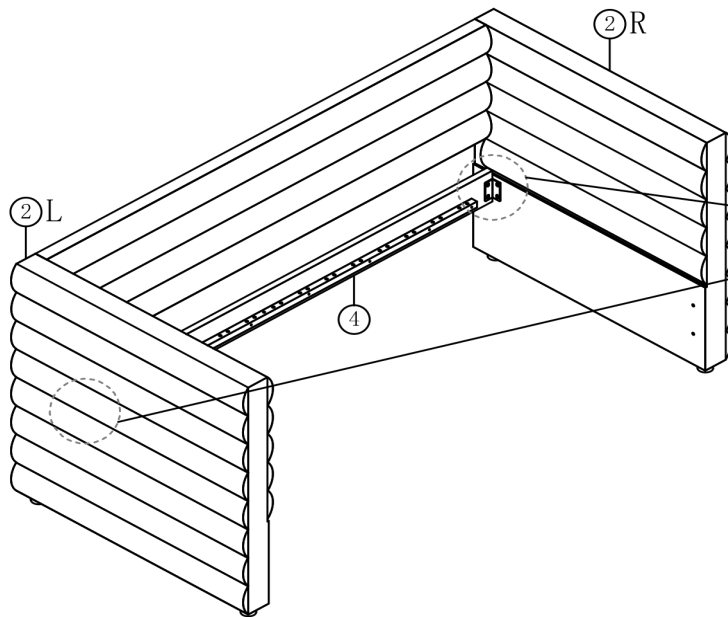**STEP 4**

Fix the Front Side rail ③ to the Armrest ②L& ②R with Bolts B and Hinge L by using Allen key A.



Do not use Power Tools

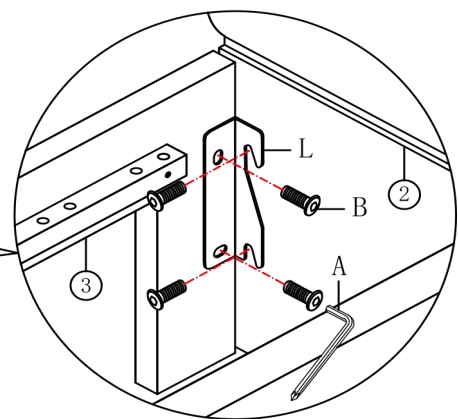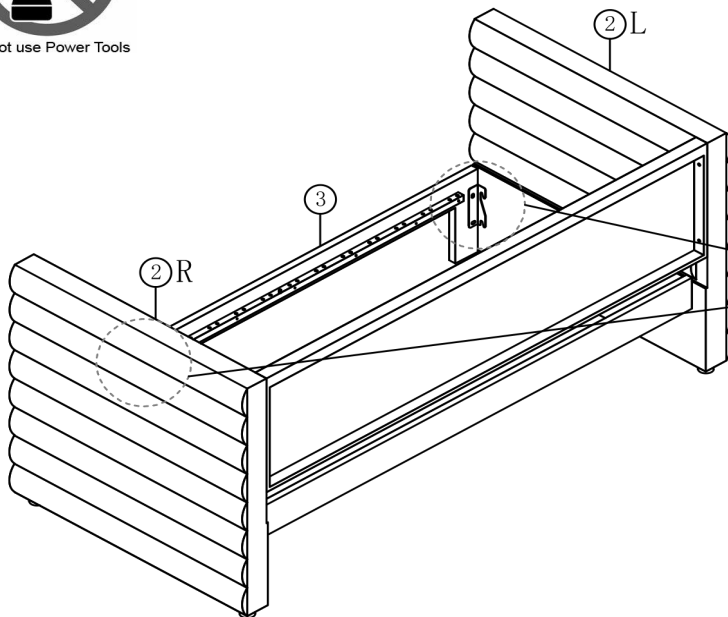


STEP 5


Fix the Metal cross bar ⑤ to the Front Side rail ③ and Back Side rail ④ with Bolts D and Nuts F by using Allen key A and Spanner H.



Do not use Power Tools

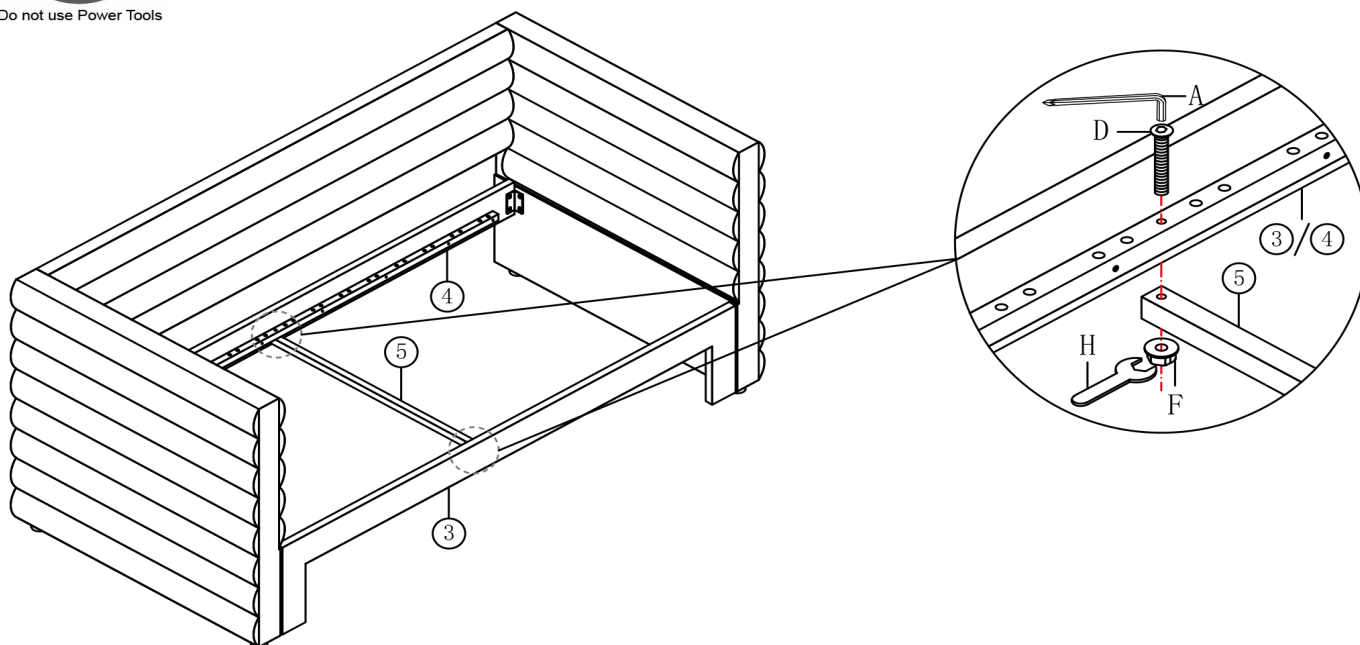**STEP 6**

Insert the Flat Slats ⑪ to both ends of Slat End Holder N. Having done this, press down the End Holder N to the Front Side rail ③ and Back Side rail ④. Repeat the above for balance row.

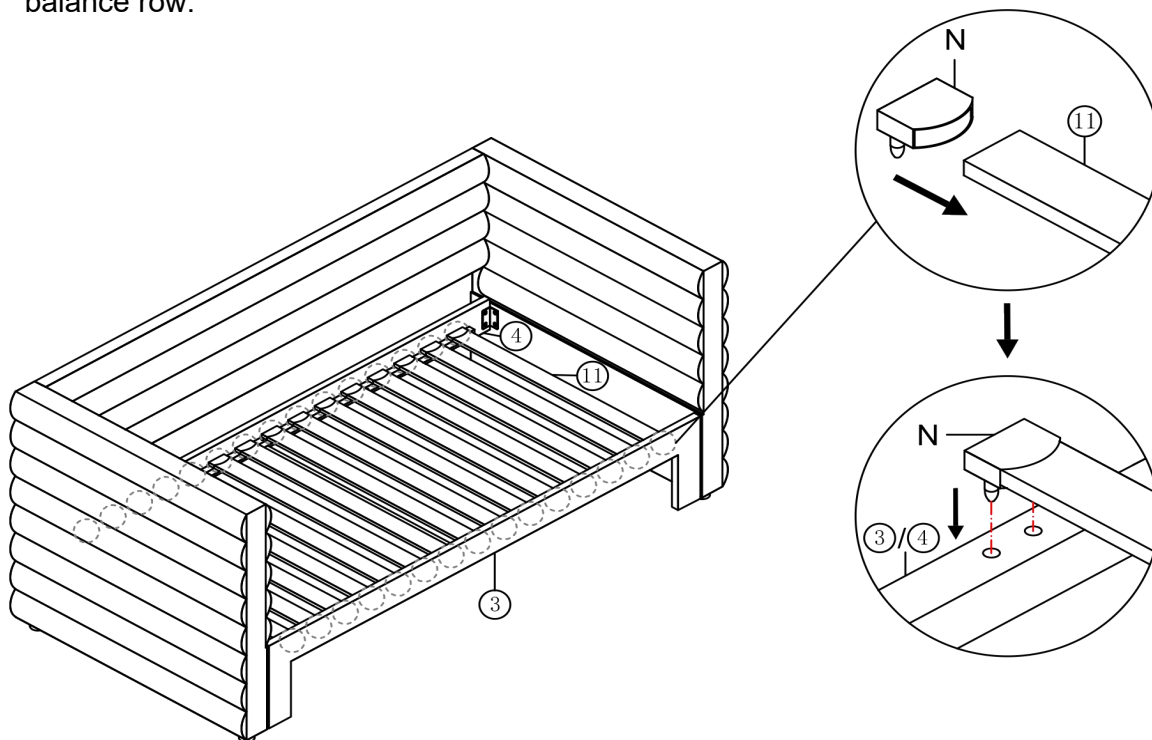


STEP 7

Assembled the Drawer with Drawer fittings I and J. Fix the Drawer wheel M with Nails E by using Allen key A.



Do not use Power Tools

Drawers x 2PCS

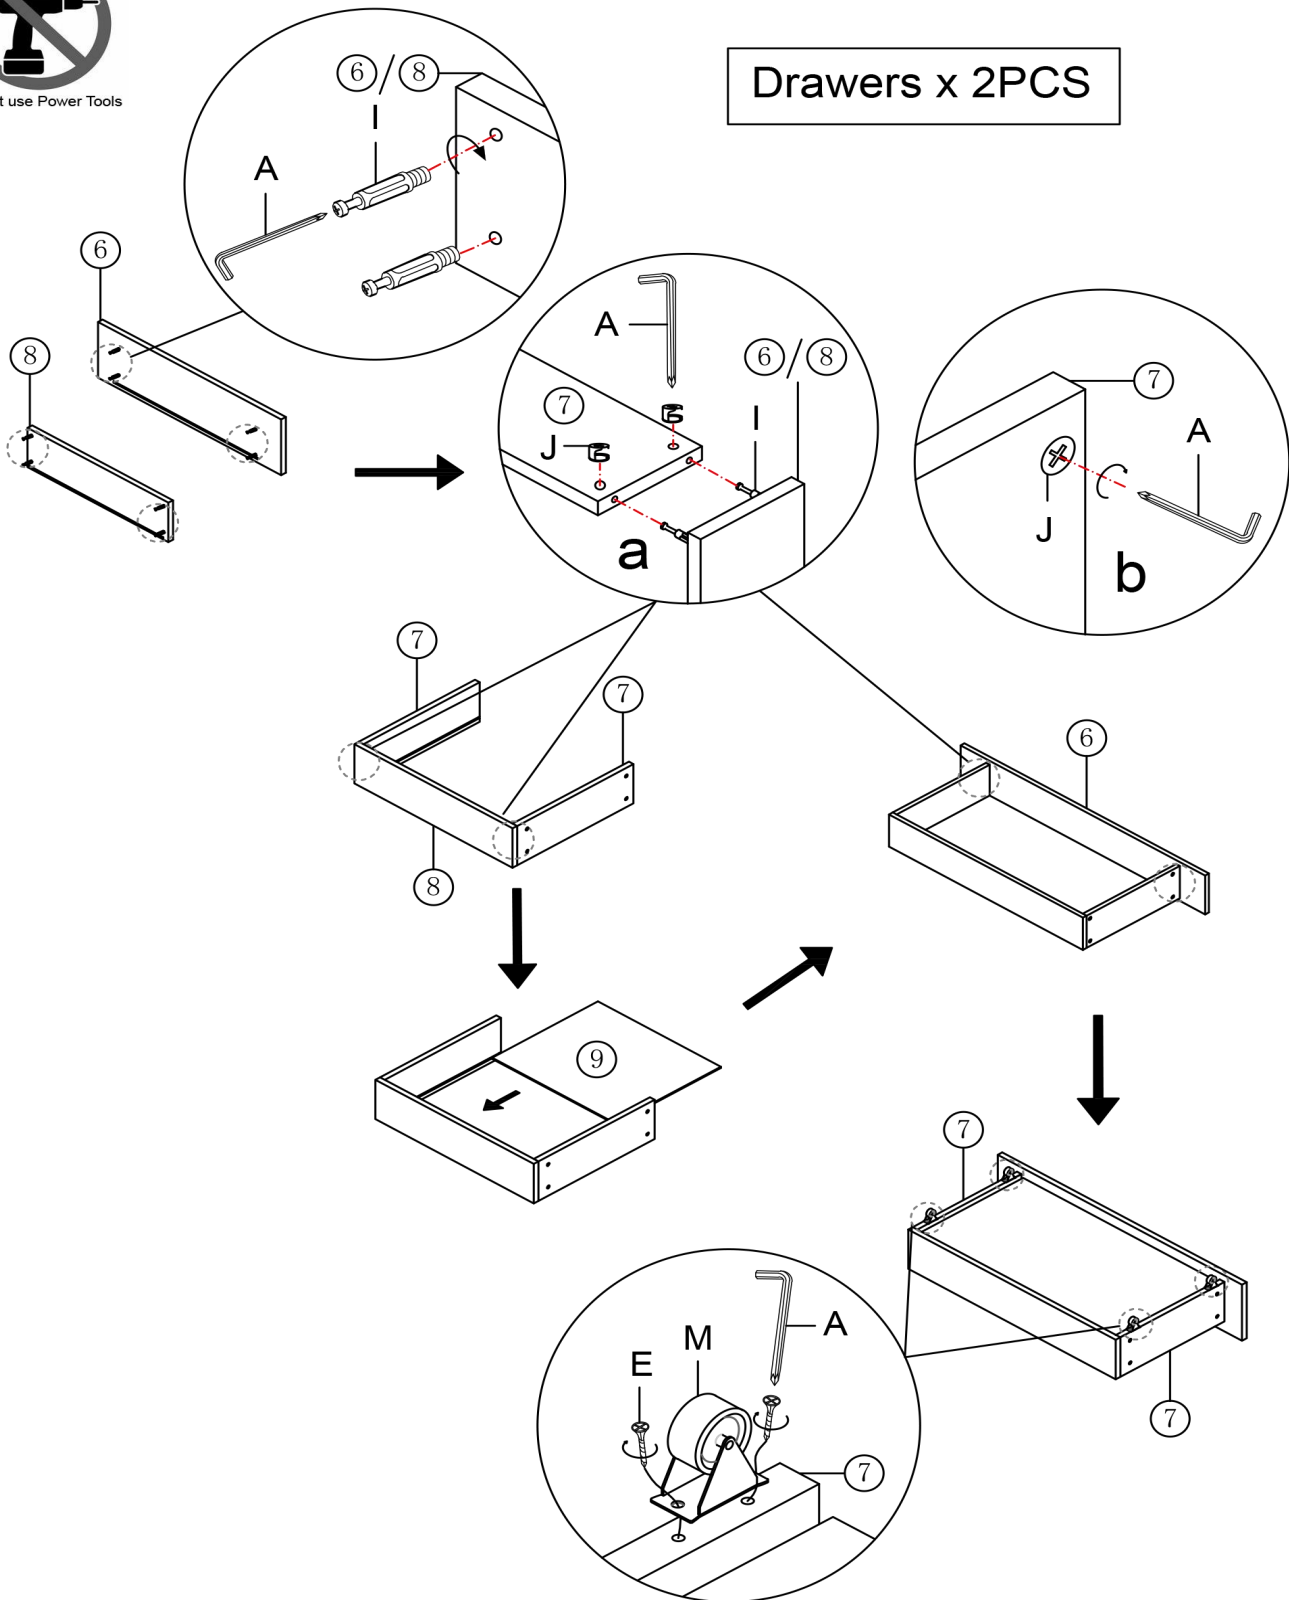

STEP 8

Assembly is finished now, please tighten all of the hardware and enjoy your bed.

