


AGC916

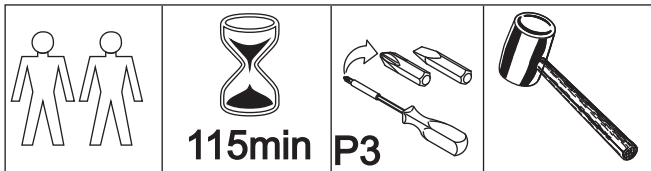

Thank you for choosing this furniture.

BEFORE YOU START ASSEMBLY please store the carton at room temperature for 48 hours or more so the contents can acclimatise.

PLEASE RETAIN ALL PACKING UNTIL YOU HAVE COMPLETED ASSEMBLY.

Information about your Pine furniture.

Our pine furniture ranges have been carefully crafted from solid wood and wood fibre based composite boards. Each piece of pine has unique characteristics such as knots, variances in shading and graining. These are part of the natural character of the furniture itself.

Caring for your Pine furniture.

Extreme temperature can cause slight movements in the wood itself so please avoid placing your furniture close to radiators or other direct sources of heat. Humidity should also be avoided.

Please avoid exposing your furniture to continued bright sunlight as it can affect the colour.


Any fluid spills should be removed as quickly as possible.

Always lift your furniture when moving as dragging may cause damage to your furniture or flooring.

After care.

Wipe the surfaces with a dry cloth and an occasional use of a normal household furniture polish. For the models with drawers, we also recommend you use household spray polish occasionally on drawer grooves and runners as this will aid use. Please do not use detergents or chemicals on your furniture.

PARTS LIST

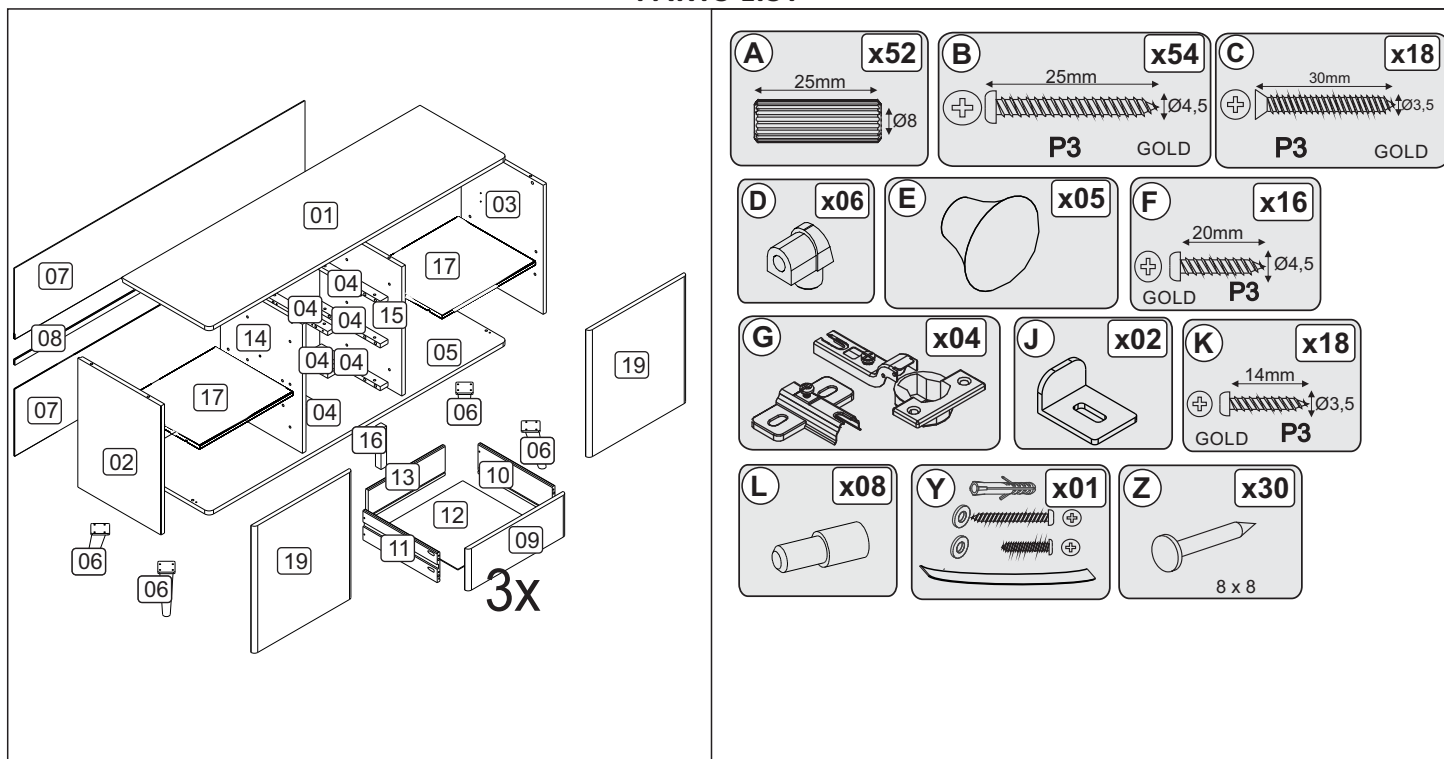

BEFORE YOU START ASSEMBLY

Please check that you have all the correct parts and fittings as detailed on the assembly instructions.


FOR DAMAGED/REPLACEMENT PARTS

Please visit

www.coreproducts.co.uk/parts


Batch
Number

2023-0000

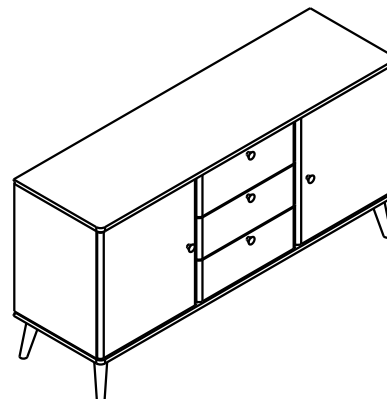


**PLEASE RETAIN THIS LEAFLET ALONG WITH YOUR DELIVERY
NOTE/RECEIPT FOR FUTURE REFERENCE**


01

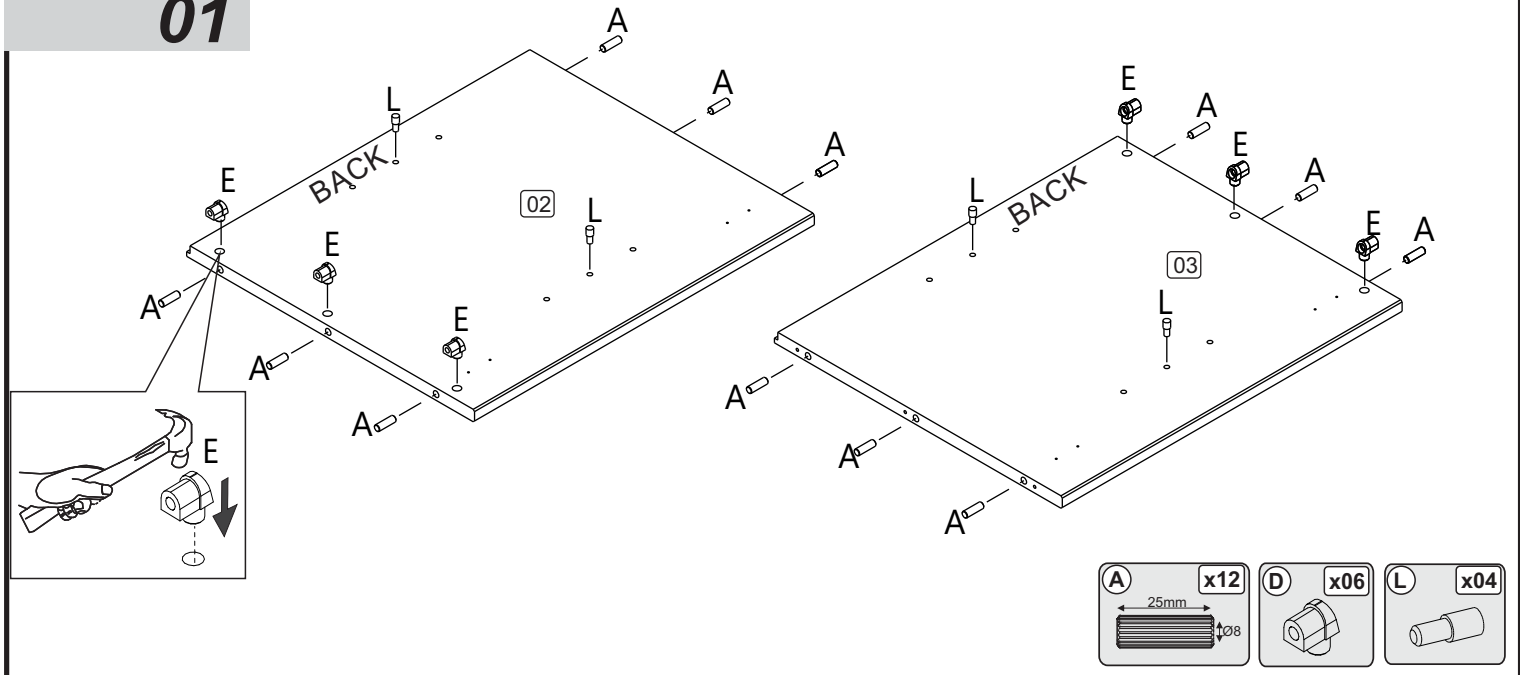

02



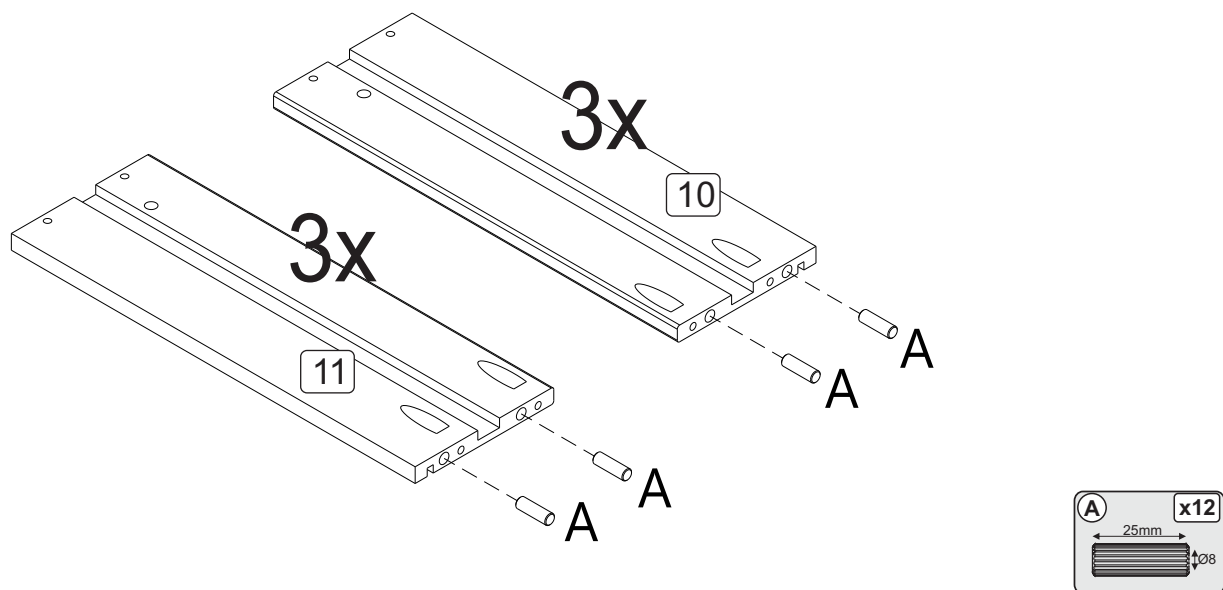


03

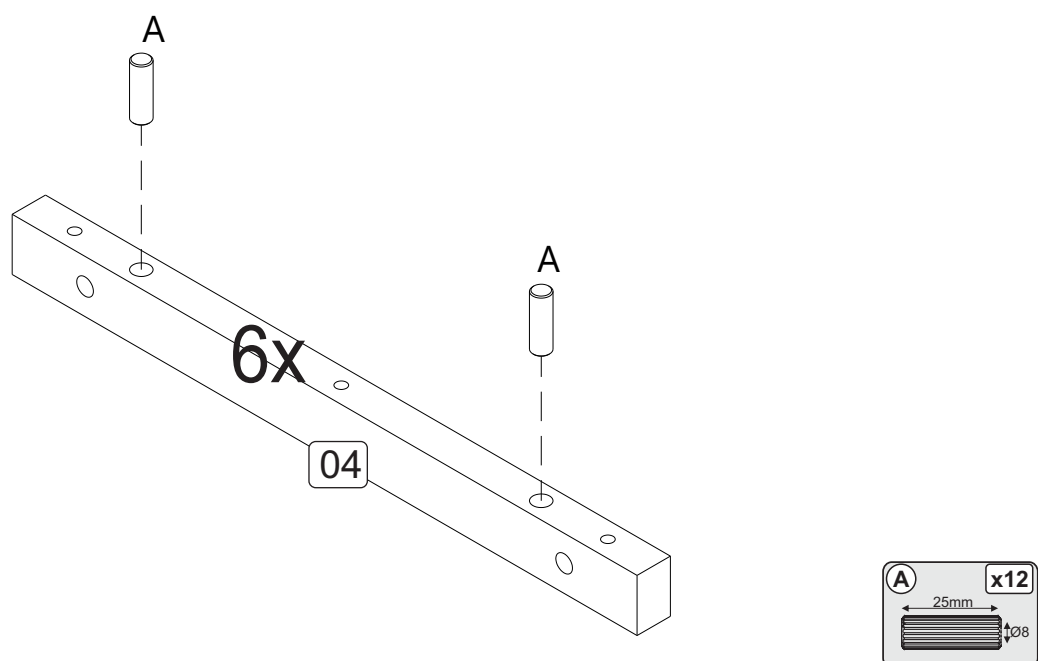






04

Ensure the drawer runner side with 2 holes for dowels part 04 is facing towards the top of the panel.

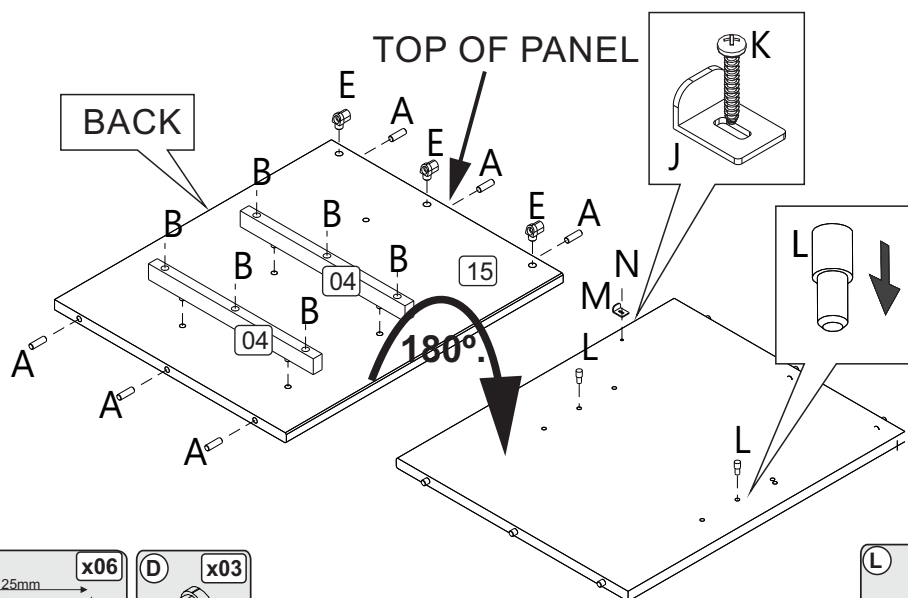



05

Ensure the drawer runner side with 2 holes for dowels part 04 is facing towards the top of the panel.

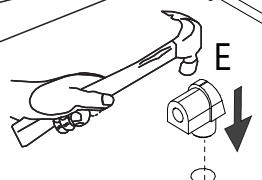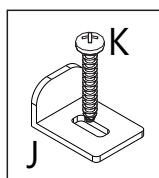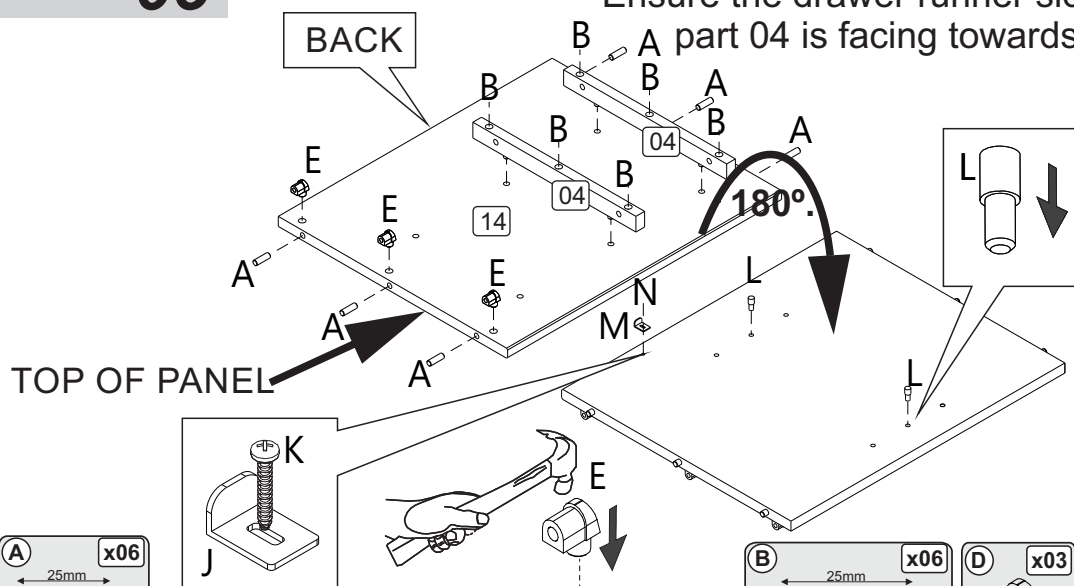


06

Build your furniture on a soft clean cover to stop the components getting marked during assembly.

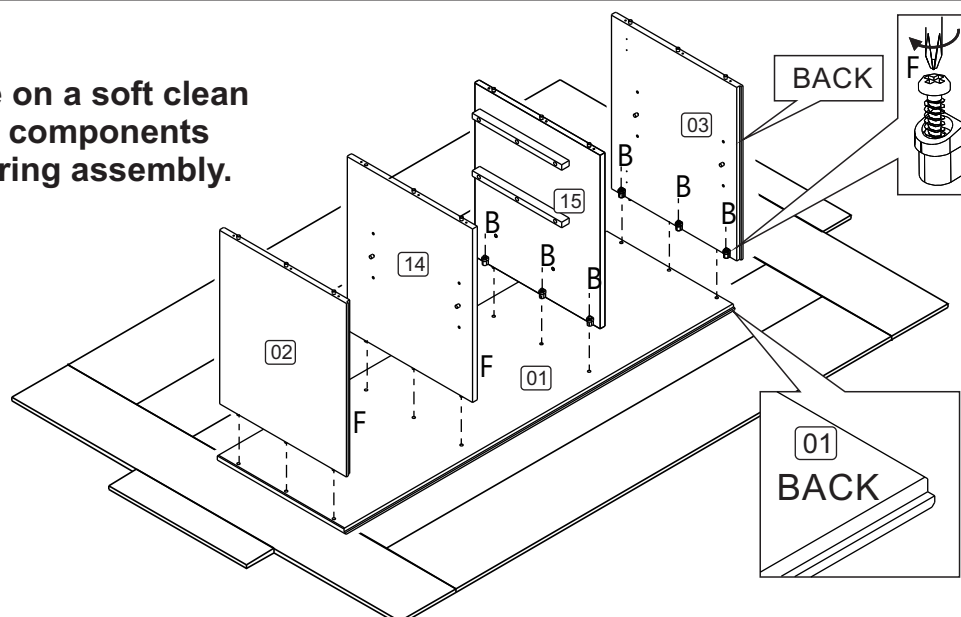

Technical drawing of a P3 Gold screw. The drawing shows a side view of the screw with a length of 25mm and a diameter of Ø4,5. The head is marked with a 'B' in a circle and a '+' in a circle. The material is labeled 'P3 GOLD' and the quantity is 'x12'.


Ensure the drawer runner side with 2 holes for dowels part 04 is facing towards the top of the panel.

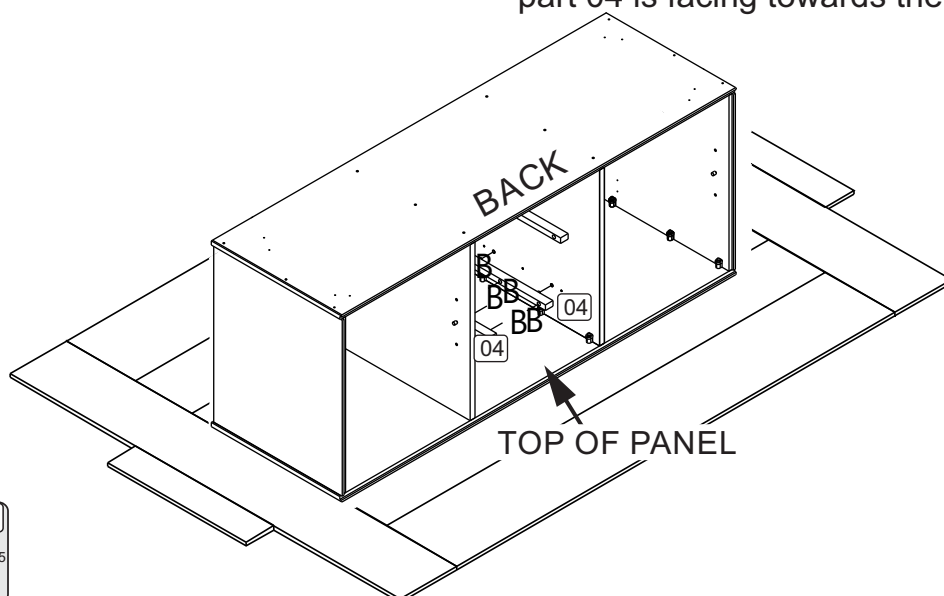

(B) **x06**
25mm
Ø4,5
P3 **GOLD**

A diagram showing the front panel being rotated 90 degrees clockwise. A curved arrow with the text "90°" indicates the direction and angle of rotation.

Z **x30**







8 x 8



3

90°

10



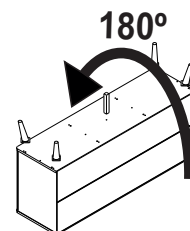
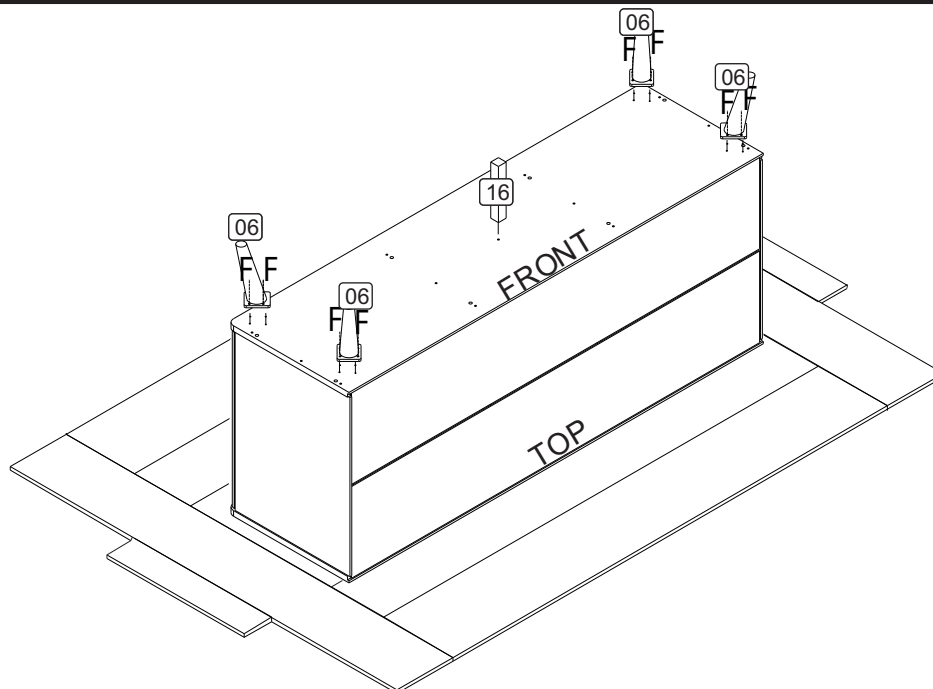
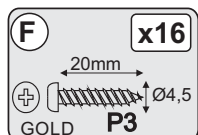
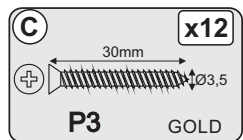



11

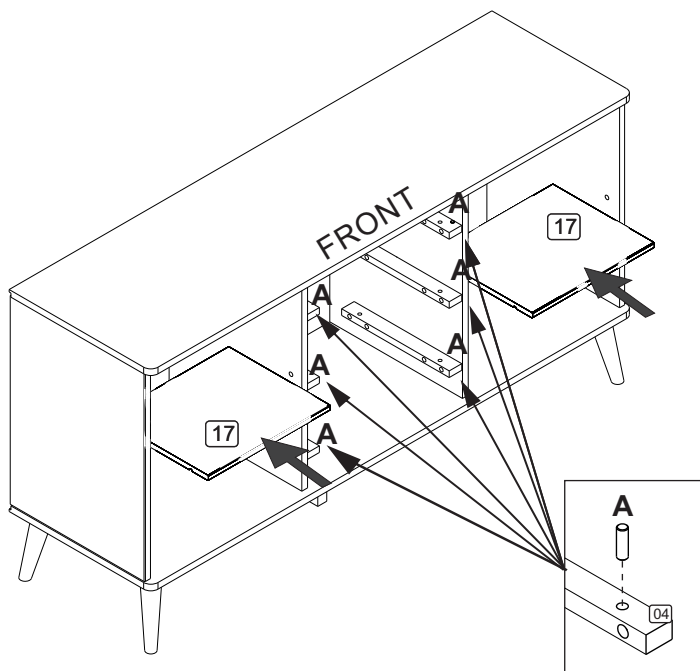



12

3x

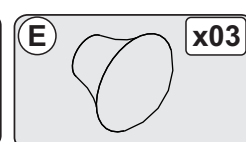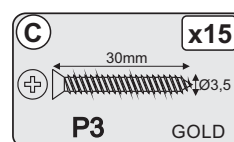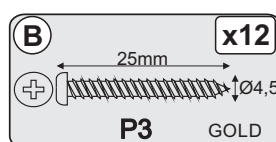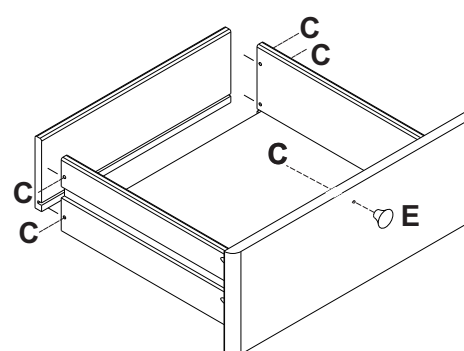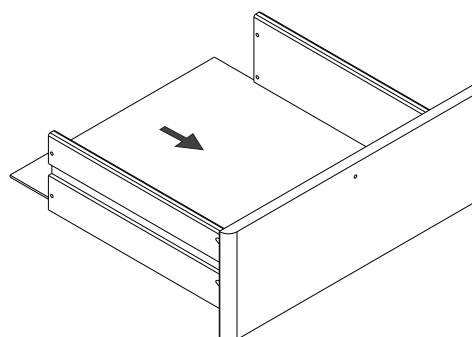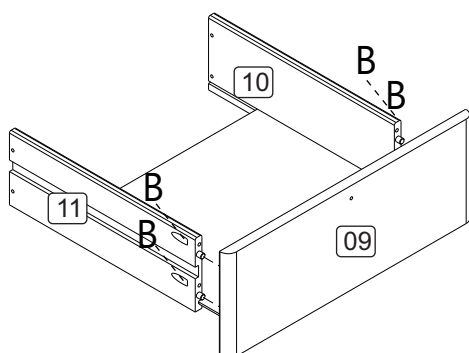







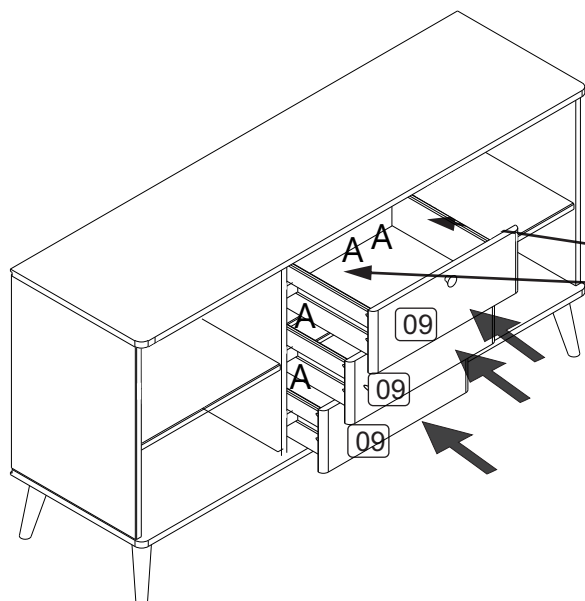




Fixing drawer safety stops
1; Insert drawers into frame
by approximately 50mm.

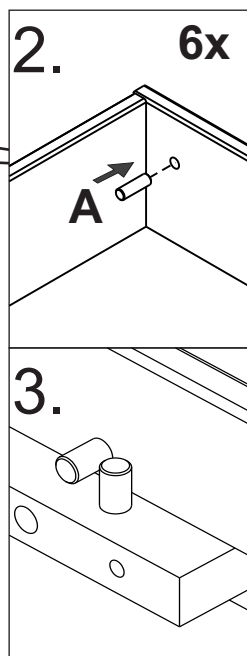


2; Push wooden dowels
in through the pre-drilled
holes close to the back
of the drawer sides until
they are level with the
inside edge of the
drawer sides.

3; Check the position of
the drawer stops are
correct by opening and
closing the drawers.

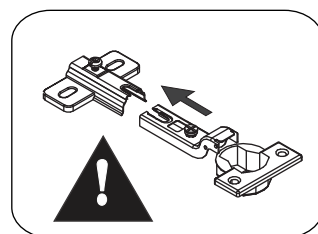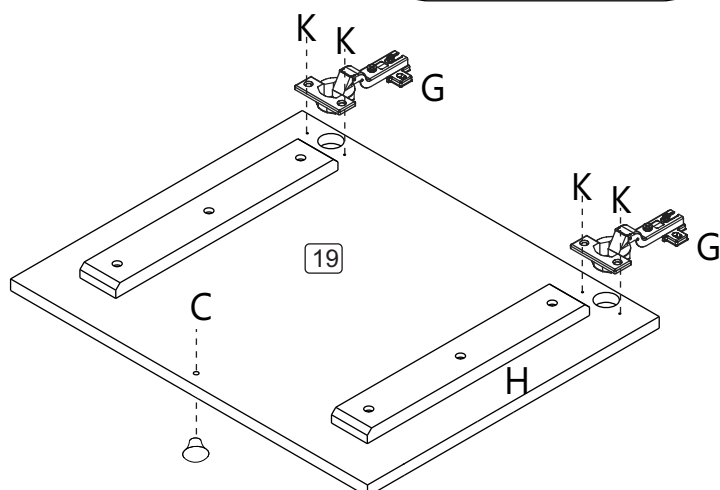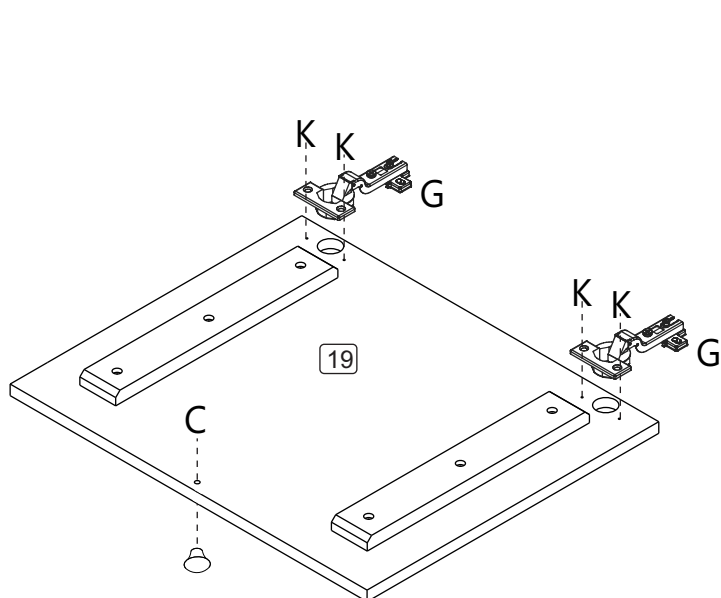



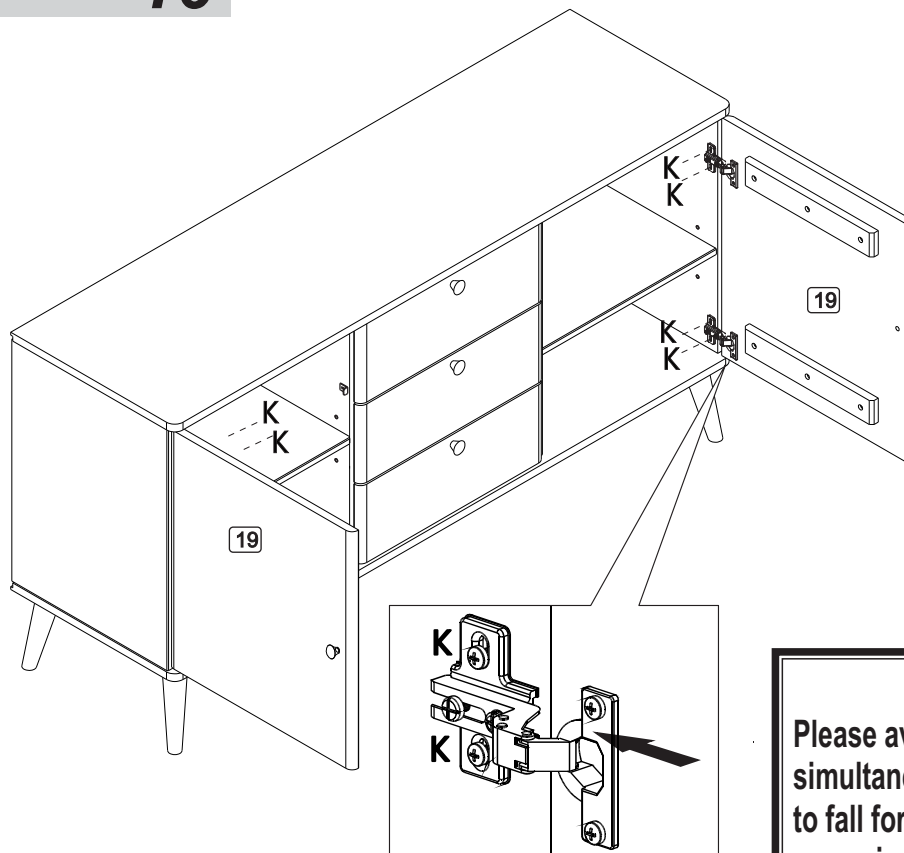


ADJUSTING HINGE

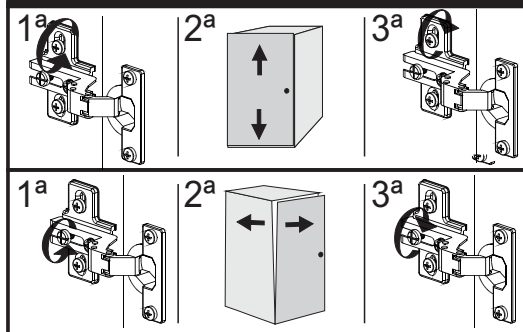

IMPORTANT NOTICE

Please avoid opening all drawers or doors simultaneously as this could cause your furniture to fall forwards. Where there is a risk of this occurring, especially in environments with children or uneven floors we recommend that this item of furniture is attached to your wall using appropriate fixings (supplied).

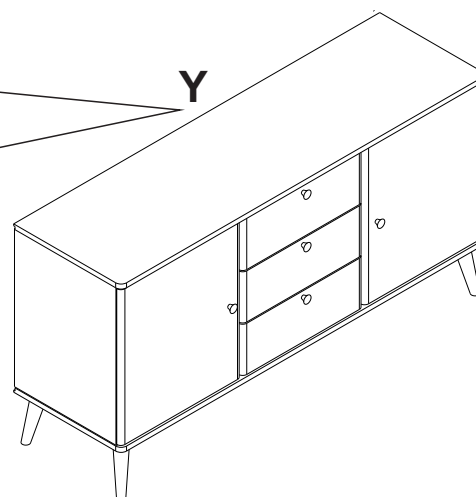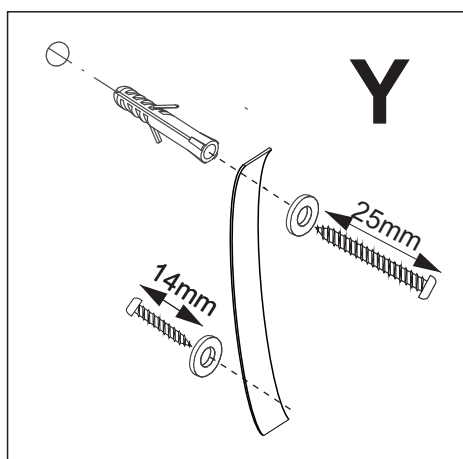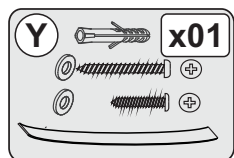

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, YOU WILL REQUIRE SPECIALIST FITTINGS (NOT SUPPLIED).

- Place fixing strip against the wall and mark position for drilling hole.
- Drill hole in your wall to a depth of 30mm using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.
- Insert plug into hole with end flush to the wall surface.
- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten.
- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end of fixing strip to the back edge of the furniture top using the 14mm screw + washer and securely tighten.