

ASSEMBLY INSTRUCTION FOR NCWC-4-748H-WSR-BW






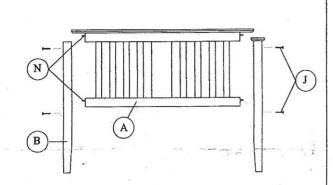


Assemble the bed frame component and tighten all bolt.

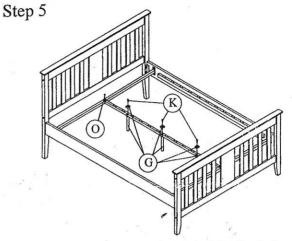


Fix center bar with bolt 'O' and tighten it. After that fix in support leg with bolt 'K'.

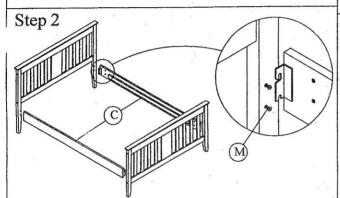


Flook the side rall to bolt as shown and don't tighten the bolt yet.

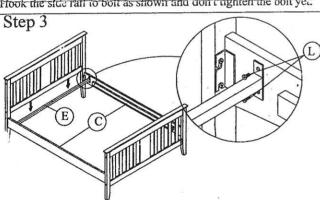

Put in cross bars and fix in bolt 'L' as shown in diagram and tighten ali bolts.

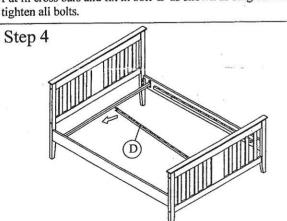


Fix center bar 'D' to cross bar 'E' by follow like diagram as shown.

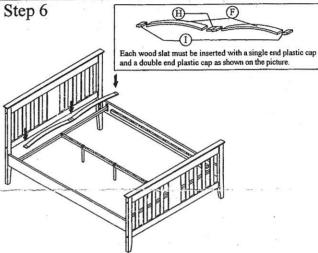

Once both wood slats have been inserted with the plastic caps, fix it on the wood side rails and center bar by pressing it accordingly to the default holes. Ensure the plastic cap's pin is aimed to the hole. At last make sure all screws and bolts are tighten.



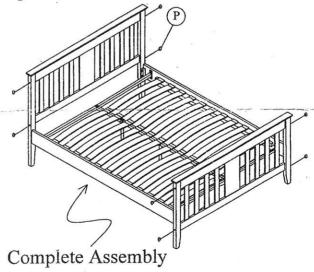

Make sure all bolts are tighten. At last insert wood button (P) as shown.

PARTS & HARDWARE LIST FOR NCWC-45748H-WSR-BW

HEAD FRAME FOOT FRAME HEAD POST FOOT POST	1 pc 1 pc 2 pcs 2 pcs	G H	SUPPORT LEG Double end plastic cap Single end plastic cap M6x80mm	3 pcs 12 pcs 24 pcs
HEAD POST	2 pcs	I	Single end plastic cap	24 pcs
	B (2)			24 pcs
FOOT POST	2 pcs	Y	M6x80mm	0
		J	(4pcs assembled)	8 pcs
		K	M8x40mm (assembled)	3 pcs
Side rail	2pcs	L	M6x15mm	8 pcs
		M	M8x25mm	8 pcs
D Center bar 25mm x 25mm	1pc	N	Wood Dowel (4pcs assembled)	8 pcs
		0	M6x30mm	2 pcs
E Cross bar	2pcs	P	Wood Button	8 pcs
			M6 - ALLEN KEY	1 pc
	24pcs		M8 - ALLEN KEY	1 pc
	Center bar 25mm x 25mm	Center bar 25mm x 25mm Cross bar 2pcs 24pcs	Center bar 25mm x 25mm O Cross bar 2pcs P	Center bar 25mm x 25mm O M6x30mm Cross bar 2pcs P Wood Button M6 - ALLEN KEY