


CHARLES 1 DOOR 6 DRAWER CHEST
ASSEMBLY INSTRUCTIONS

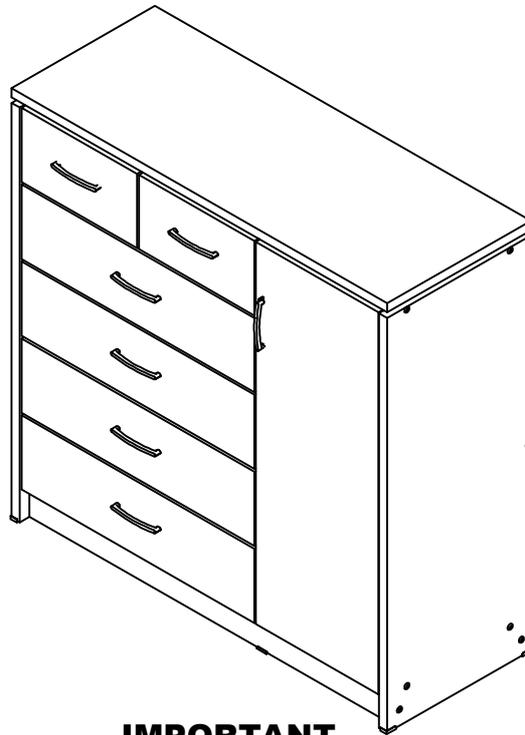

IMPORTANT

FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.





FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

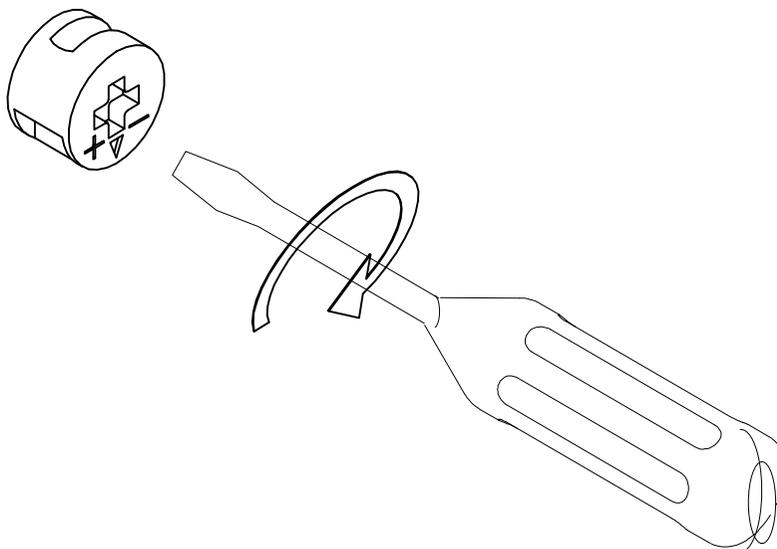

(SCREWDRIVER NOT PROVIDED)

USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

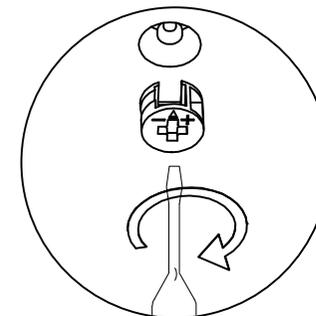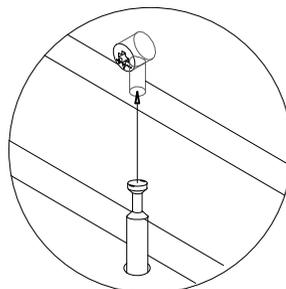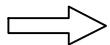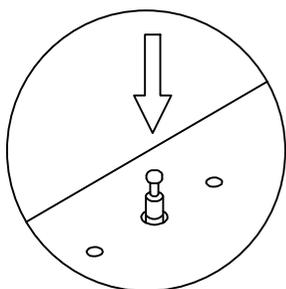


STEP 1 - PUSH CAM BOLT INTO INSERT


STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. (MAKE SURE THE ARROW OF CAM LOCK IS POINTING TOWARD THE HOLE ON EDGE OF PANEL.)

STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSES OVER THE BOLT.

! CAUTION : THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

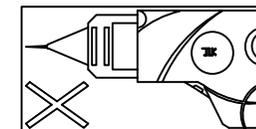


PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED BEFORE YOU START ASSEMBLING. IF YOU DO FIND THAT SOMETHING IS MISSING, DO NOT CONTINUE ASSEMBLY. PLEASE CONTACT YOUR SUPPLIER IMMEDIATELY.

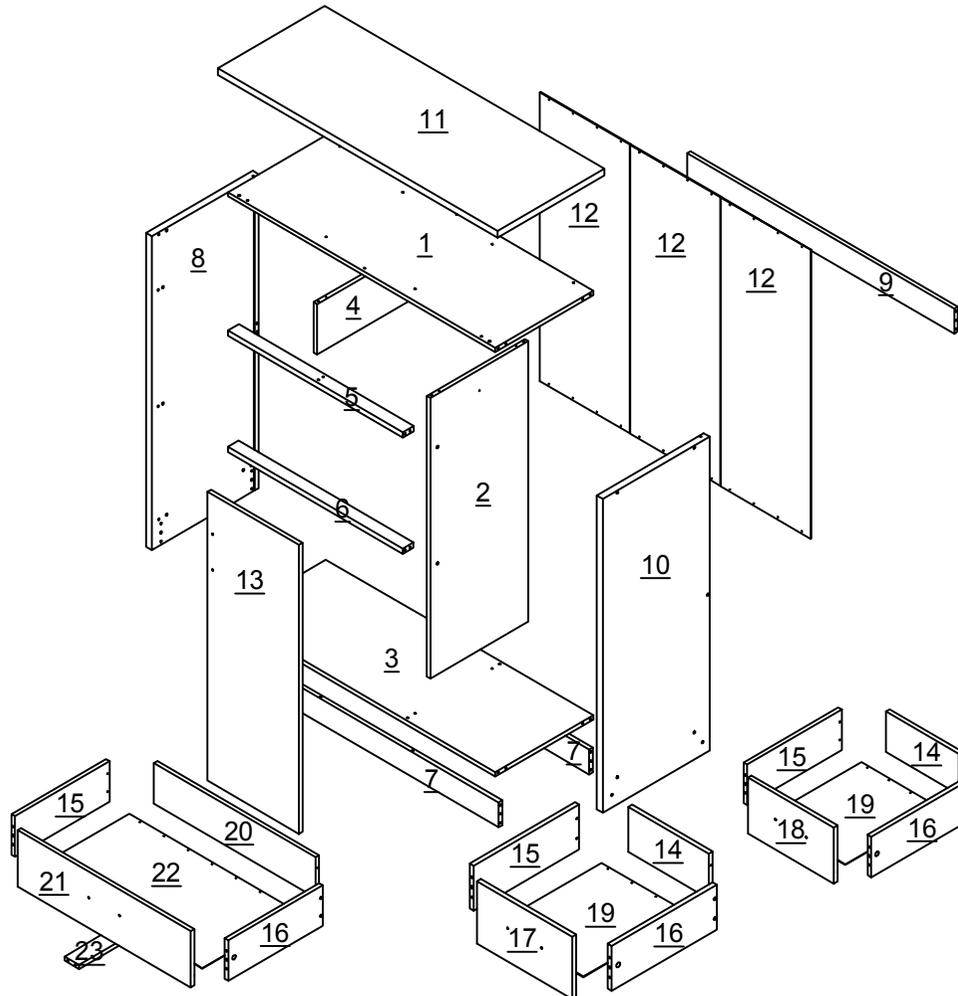


PARTS LIST

1	INNER TOP PANEL	1 PC
2	CENTRE PANEL	1 PC
3	BASE PANEL	1 PC
4	CENTRE DRAWER DIVIDE	1 PC
5	UPPER FRONT CROSSBAR	1 PC
6	CENTRE FRONT CROSSBAR	1 PC
7	LOWER BASE CROSSBARS	2 PCS
8	LEFT SIDE PANEL	1 PC
9	CENTRE BACK CROSSBAR	1 PC
10	RIGHT SIDE PANEL	1 PC
11	TOP PANEL	1 PC
12	BACK PANEL	3 PCS
13	DOOR PANEL	1 PC
14	SMALL DRAWER BACK	2 PCS
15	DRAWER SIDE - LEFT	6 PCS
16	DRAWER SIDE - RIGHT	6 PCS
17	SMALL DRAWER FRONT - LEFT	1 PC
18	SMALL DRAWER FRONT - RIGHT	1 PC
19	SMALL DRAWER BASE	2 PCS
20	LARGE DRAWER BACK	4 PCS
21	LARGE DRAWER FRONT	4 PCS
22	LARGE DRAWER BASE	4 PCS
23	LARGE DRAWER BOTTOM SUPPORT RAIL	4 PCS

! CAUTION: THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

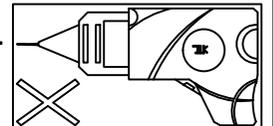


HARDWARE LIST

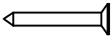A		DOWEL 6 X 30MM	69 PCS
B		BOLT M7 X 60MM	18 PCS
C		SCREW M3.5 X 16MM	100 PCS
D		SCREW M4 X 50MM	7 PCS
E		SCREW M4 X 30MM	14 PCS
F		SCREW M4 X 38MM	24 PCS
G		TACK	60 PCS
H		DRAWER RUNNER A	12 PCS
I		DRAWER RUNNER B	12 PCS
J		HINGES	3 SETS
K		HANDLE	7 PCS
L		HANDLE SCREW 4 X 30MM	14 PCS
M		HANGING RAIL	1 PC


N		HANGING RAIL SUPPORT	2 PCS
O		PLASTIC H STRIP	2 PCS
P		TAPPING SCREW 8 X 12MM	6 PCS
Q		PVC LEG	2 SETS
R		PVC LEG	2 PCS
S		ALLEN KEY	1 PC
T		ANTI - TIP STRAP	2 PCS
U		SCREW M4 X 16MM	2 PCS
V		CAM BOLT + CAM NUT	12 SETS

! **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

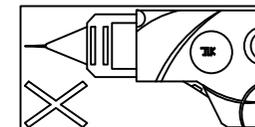

STEP 1


YOU WILL NEED:-		
A		4 PCS
C		40 PCS
H		10 PCS

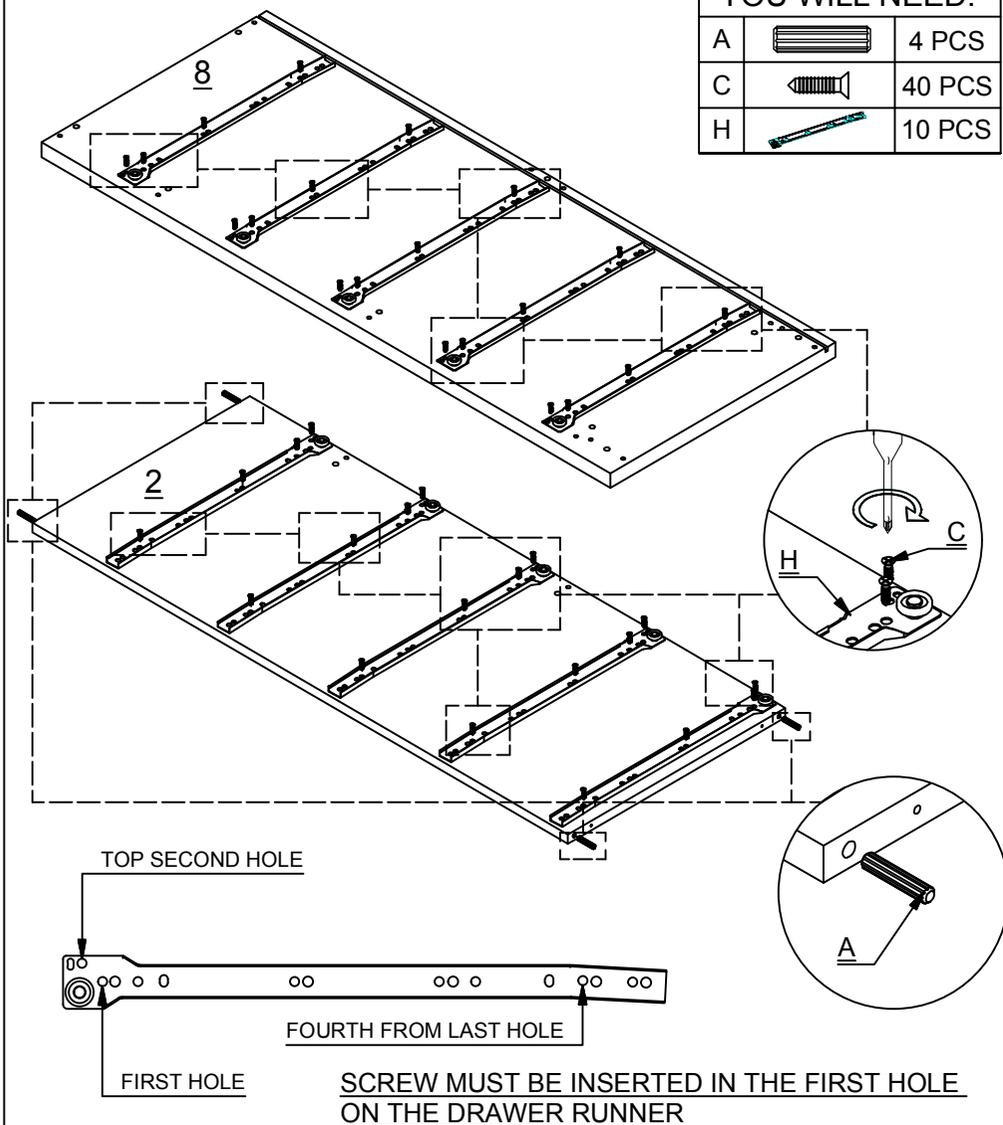


STEP 2

YOU WILL NEED:-		
A		3 PCS
C		8 PCS
H		2 PCS

SCREW MUST BE INSERTED IN THE THIRD HOLE ON THE DRAWER RUNNER

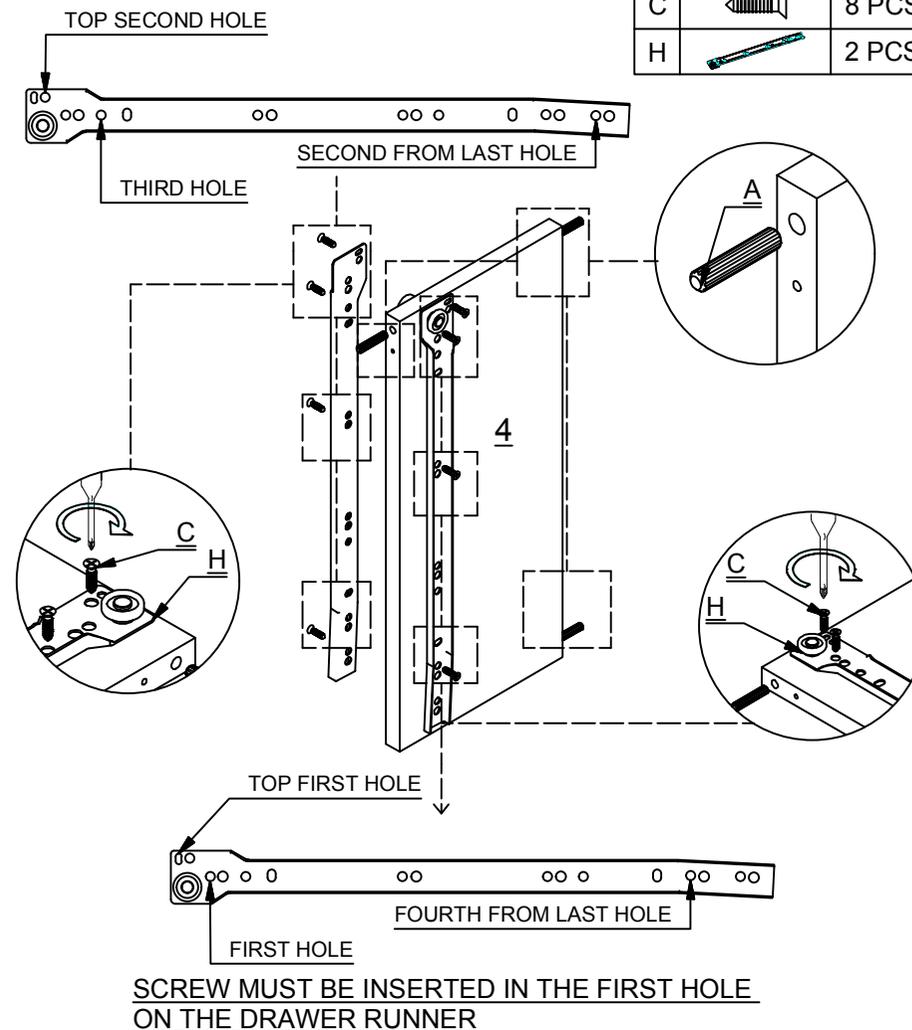


! CAUTION: THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

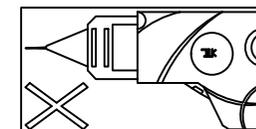

STEP 3

YOU WILL NEED:-


A		30 PCS
---	---	--------

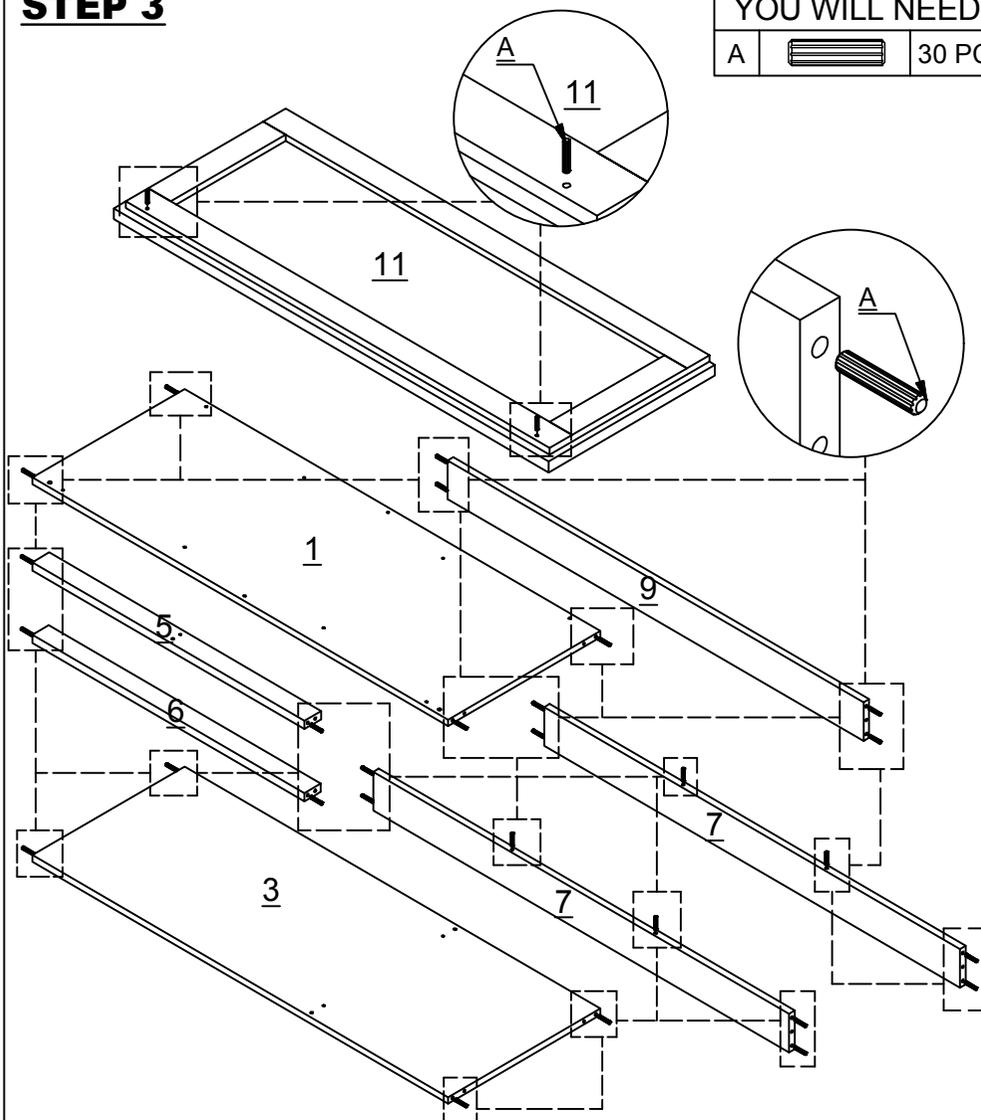


STEP 4

YOU WILL NEED:-

C		10 PCS
J		3 PCS
K		1 PC
L		2 PCS
N		2 PCS

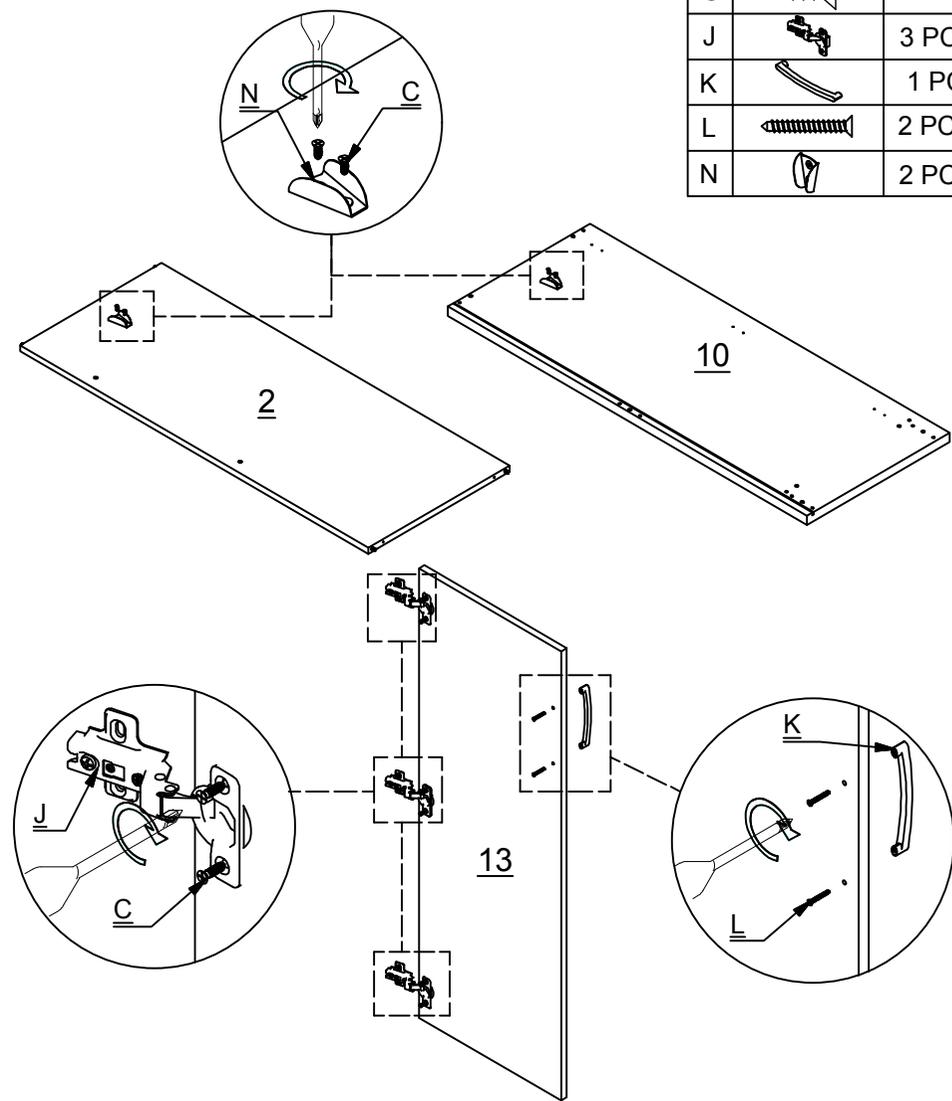


! **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

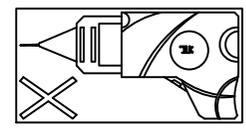

STEP 5

YOU WILL NEED:-


D		4 PCS
---	---	-------

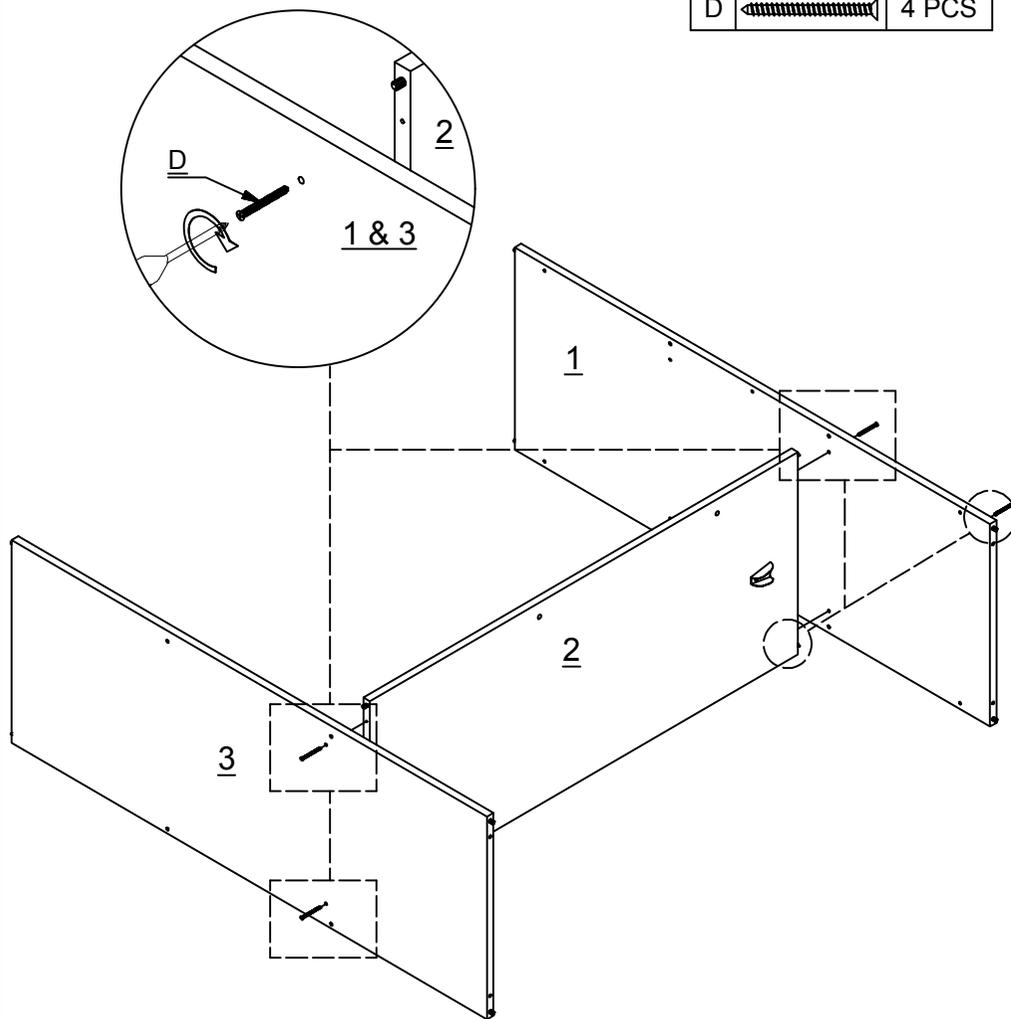


STEP 6

YOU WILL NEED:-

B		2 PCS
D		3 PCS
S		1 PC

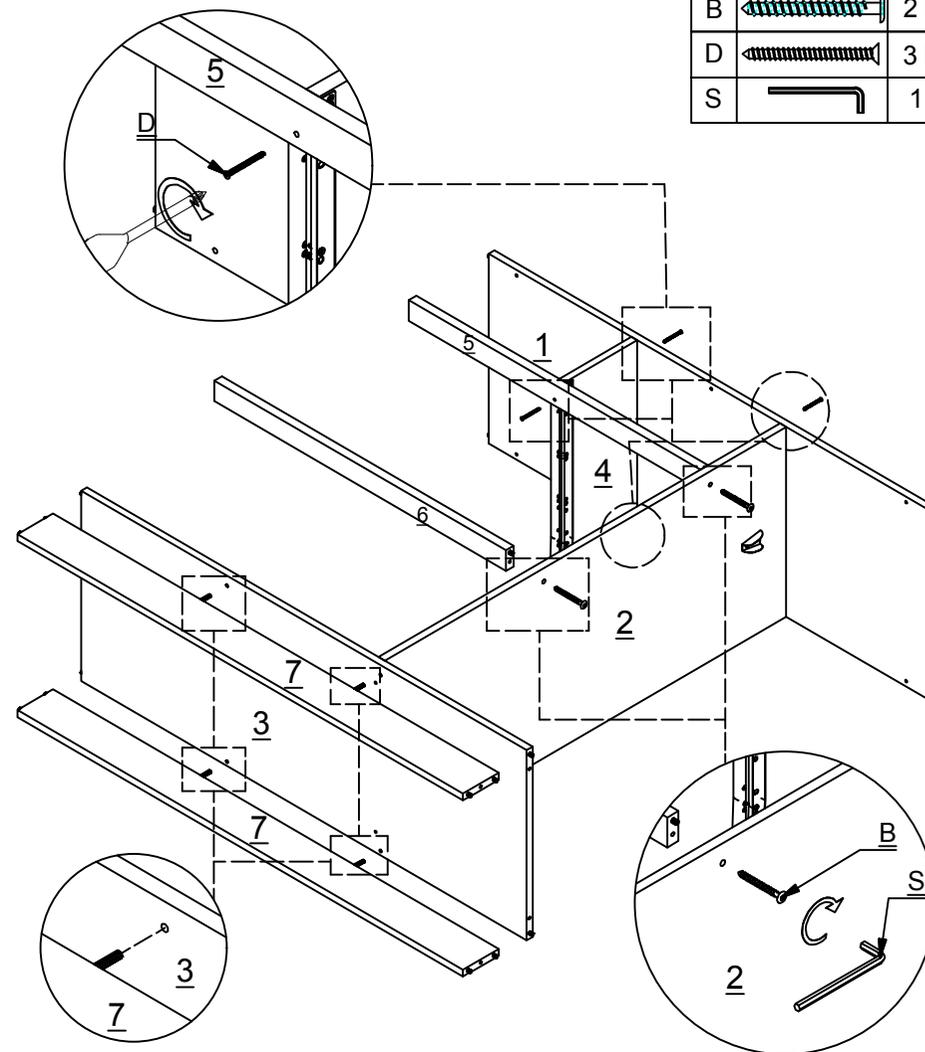




! **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

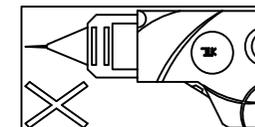

STEP 7

YOU WILL NEED:-


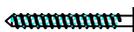
B		9 PCS
S		1 PC

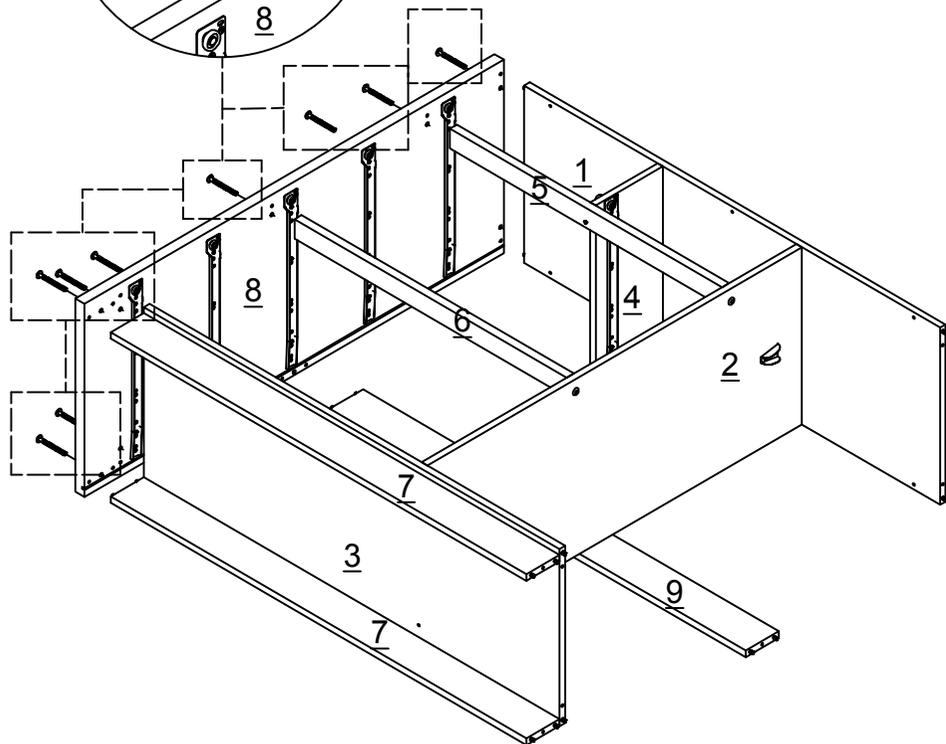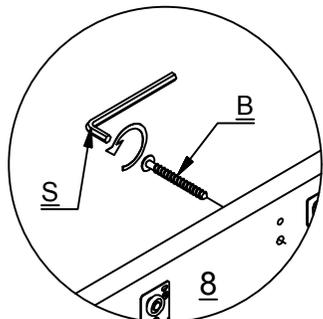


STEP 8

YOU WILL NEED:-


B		7 PCS
S		1 PC

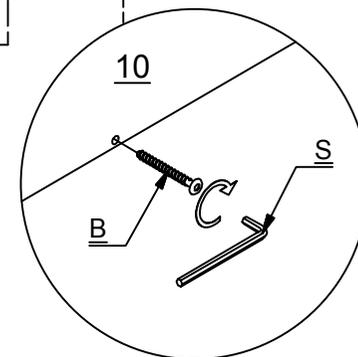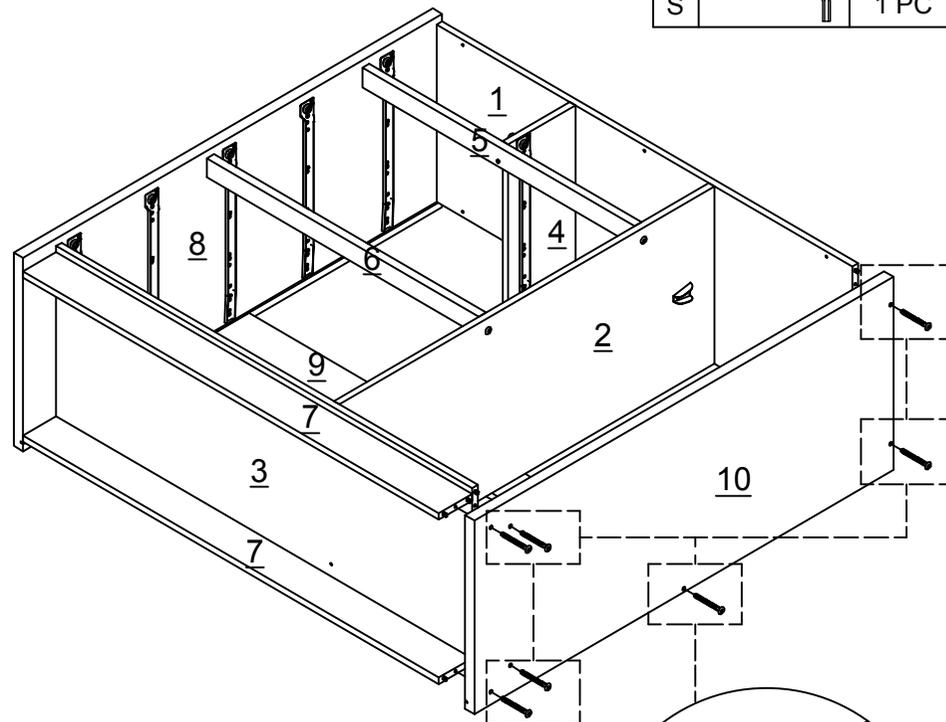

! **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

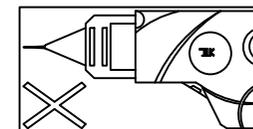


STEP 9

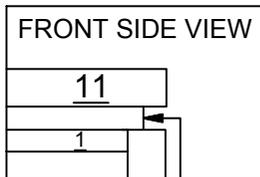

BEFORE FIXING THE TOP PANEL PLEASE ALIGN THE TOP PANEL WITH THE INNER TOP PANEL.

YOU WILL NEED:-


E		6 PCS
---	--	-------

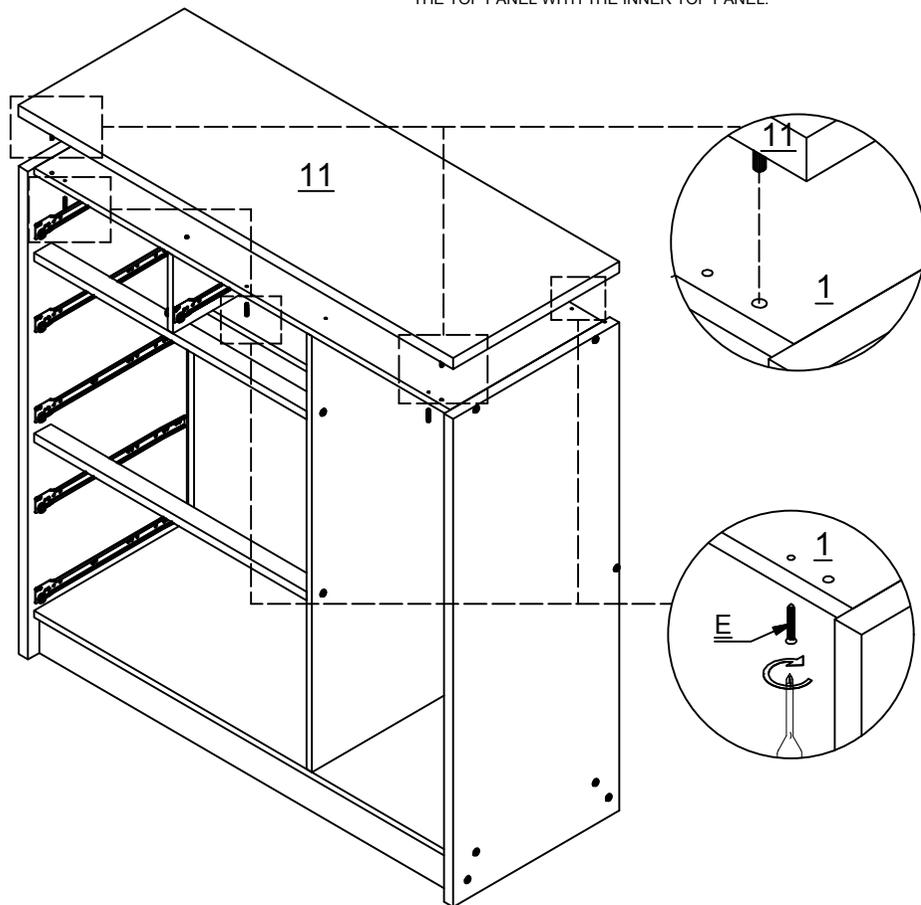


STEP 10

YOU WILL NEED:-


C		6 PCS
G		24 PCS
O		2 PCS
Q		2 SETS
R		2 PCS

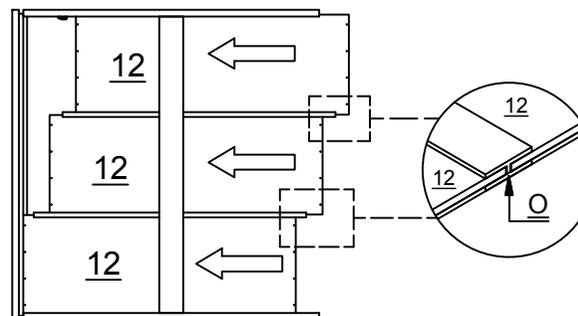


PLEASE INSERT THE BACK PANEL IN THE UNIT

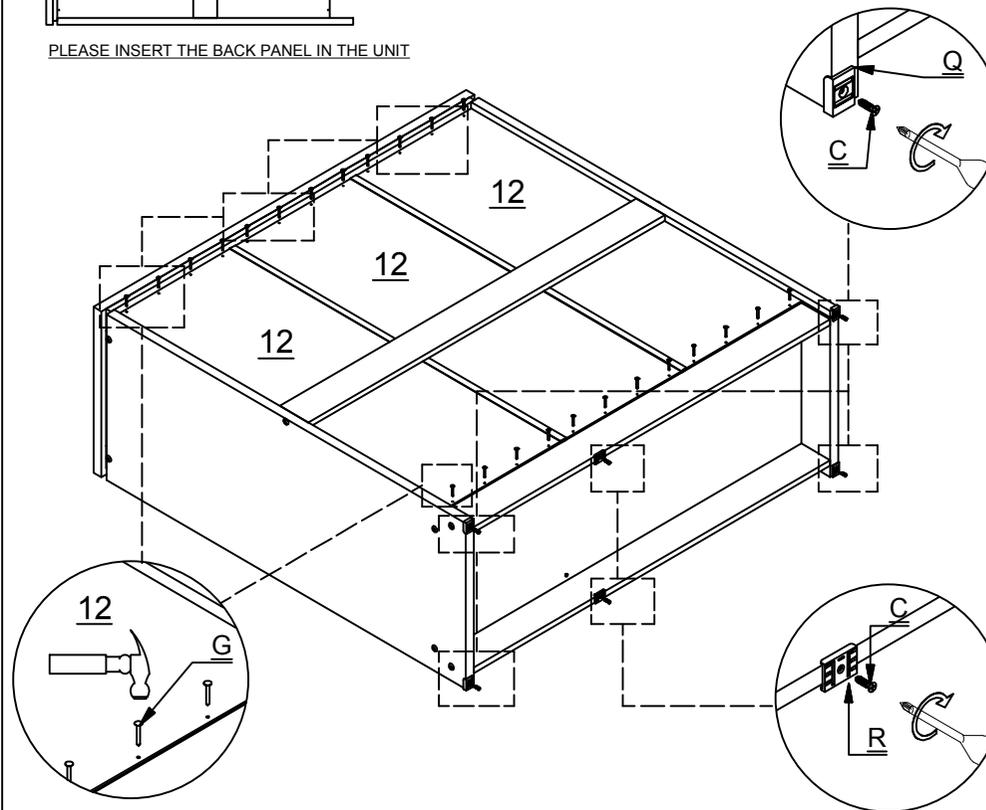


! CAUTION: THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

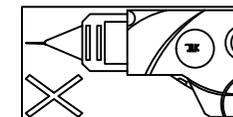


STEP 11.1

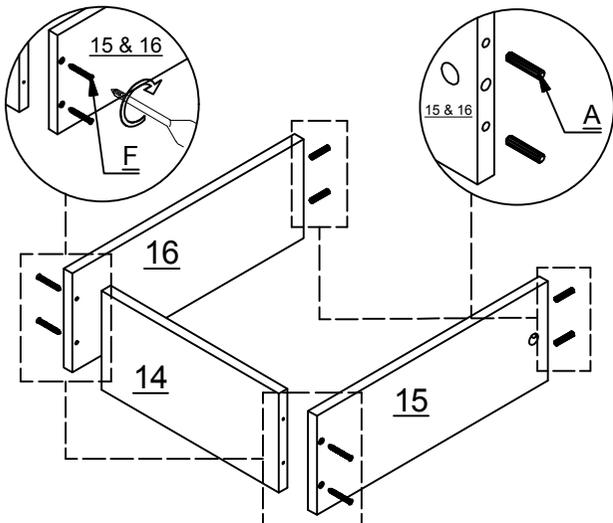

STEP 11.2

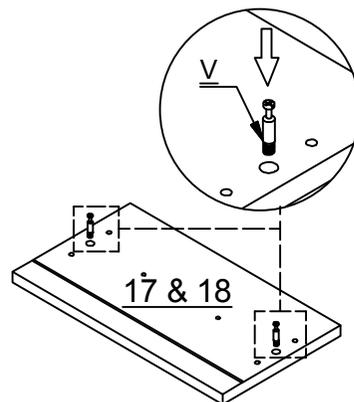


SMALL DRAWER X 2 (L&R)

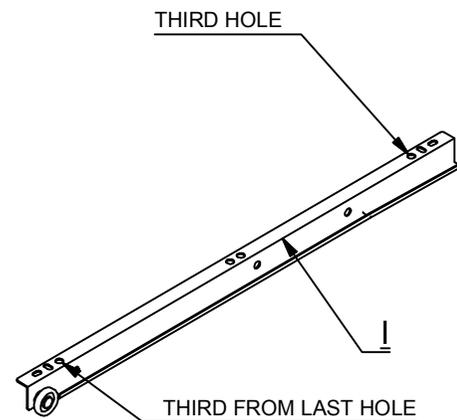


YOU WILL NEED:-		
A		8 PCS
C		12 PCS
F		8 PCS
G		8 PCS
I		4 PCS
K		2 PCS
L		4 PCS
V		4 SETS


STEP 11.3

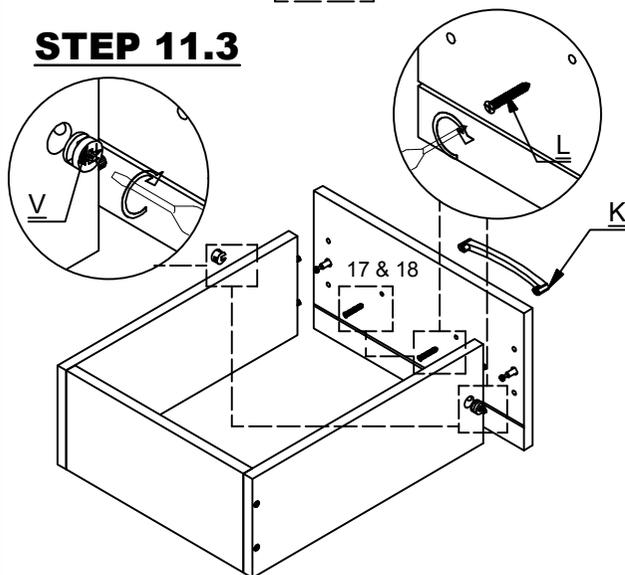


STEP 11.4

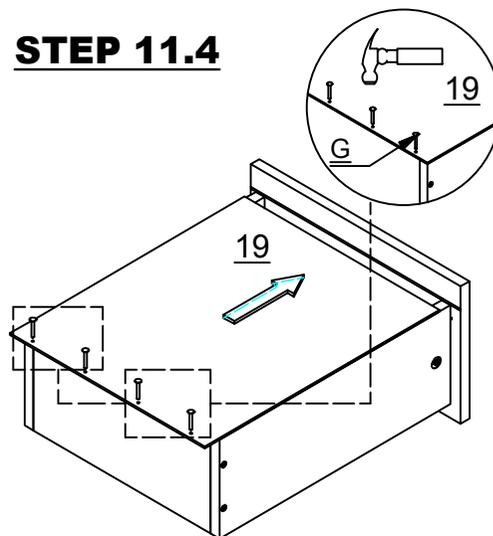


STEP 11.5

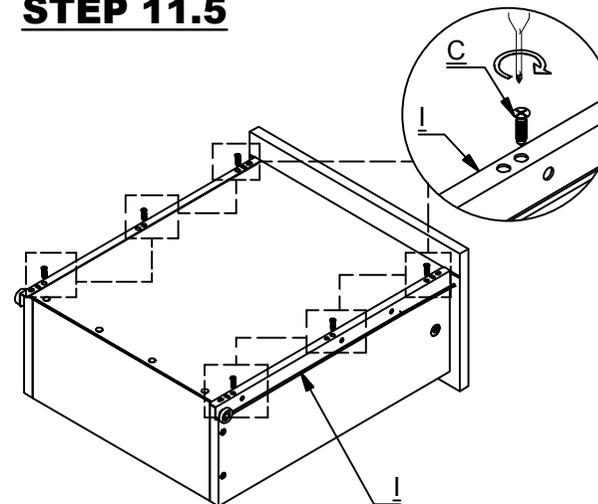


! CAUTION: THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

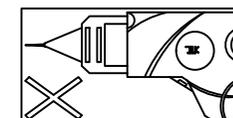


STEP 12.1

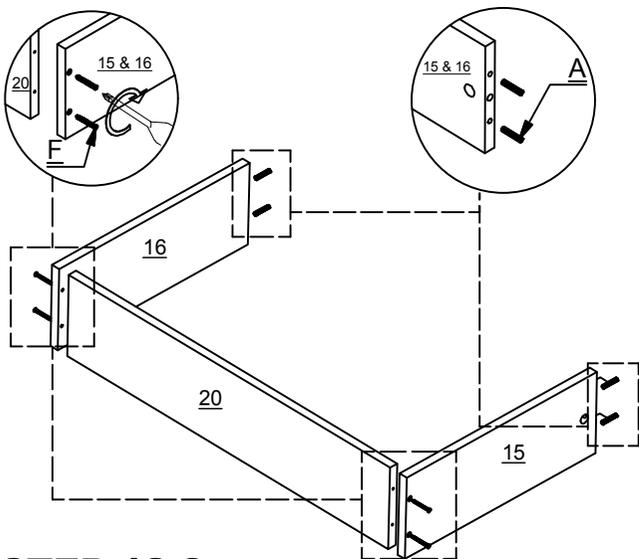

STEP 12.2

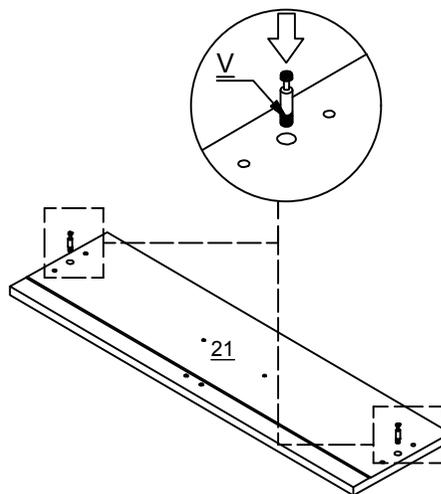


BIG DRAWER X 4

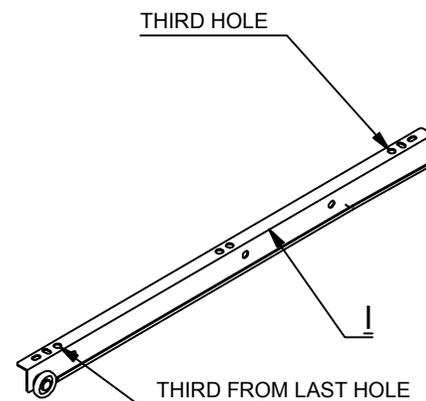


YOU WILL NEED:-

A		24 PCS
C		24 PCS
E		8 PCS
F		16 PCS
G		28 PCS
I		8 PCS
K		4 PCS
L		8 PCS
V		8 SETS


STEP 12.3

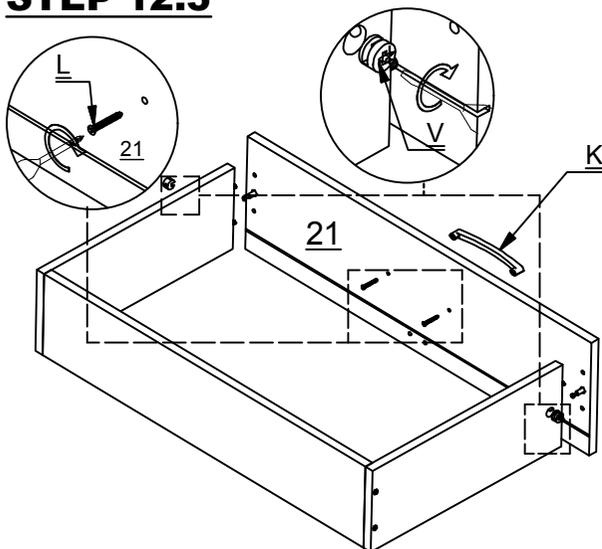


STEP 12.4

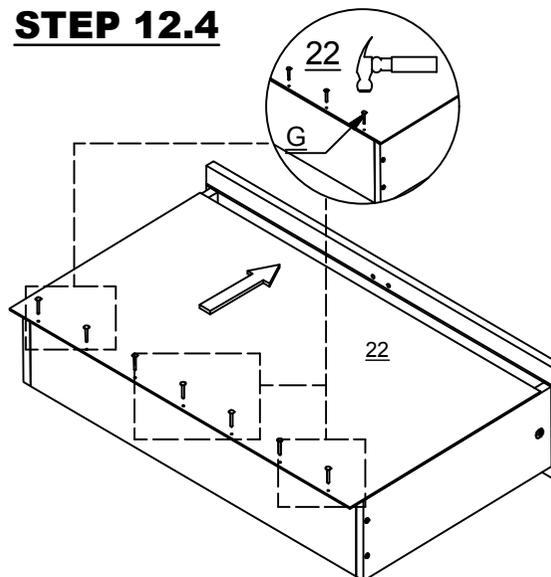


STEP 12.5



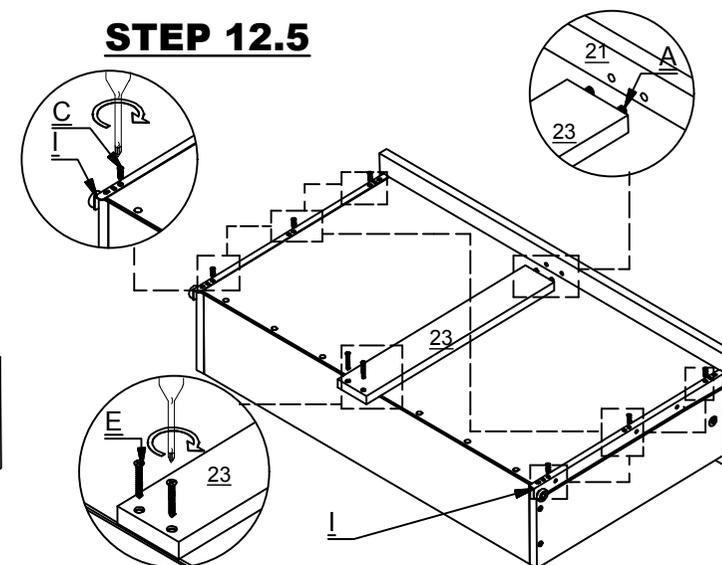


! **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

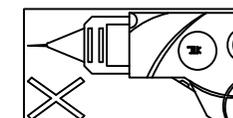


STEP 13

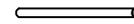
YOU WILL NEED:-		
M		1 PC
P		6 PCS

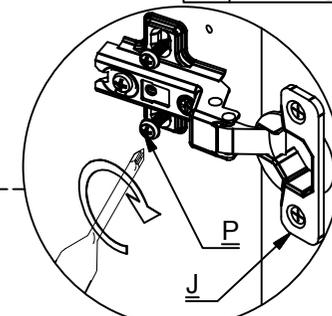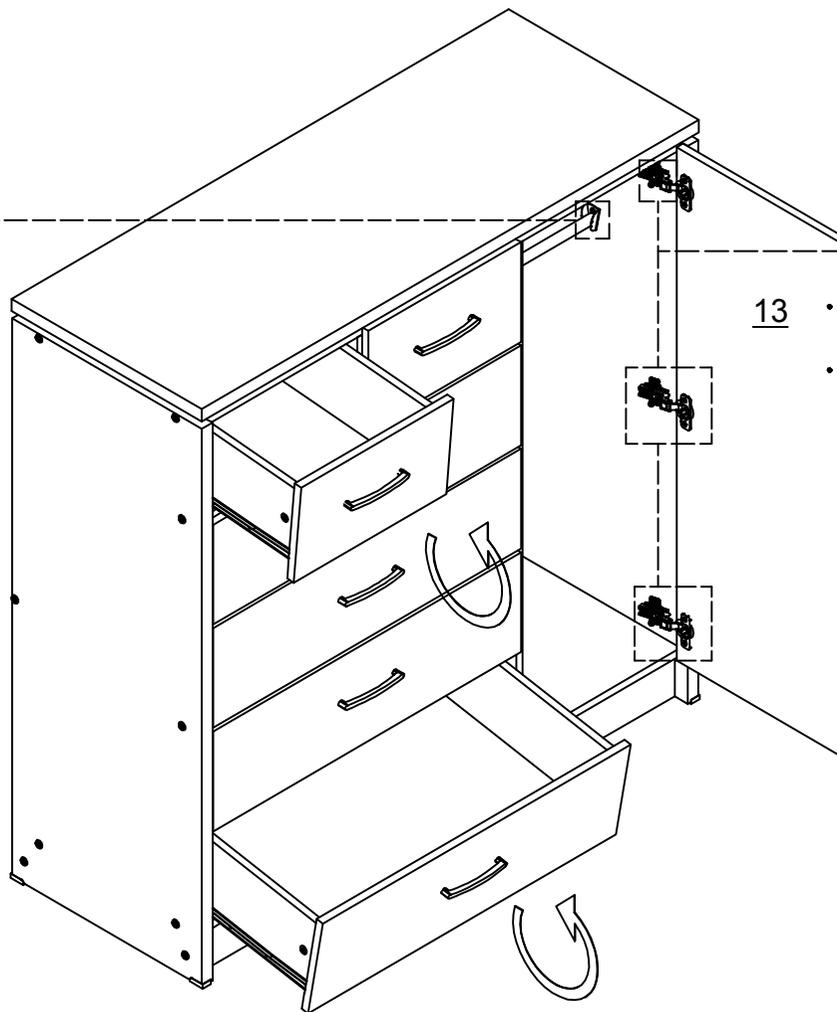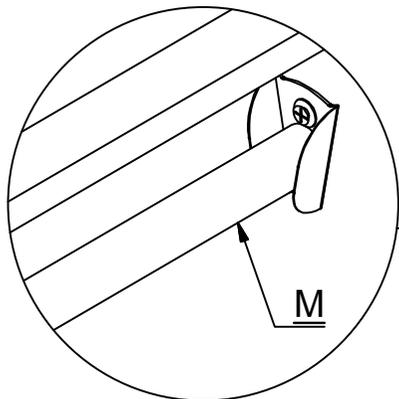

1. VERTICAL ADJUSTMENT VIA SLOT IN TH MOUNTING PLATE

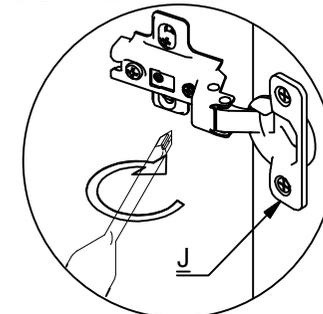


2. LATERAL ADJUSTMENT BY SCREW ADJUSTING

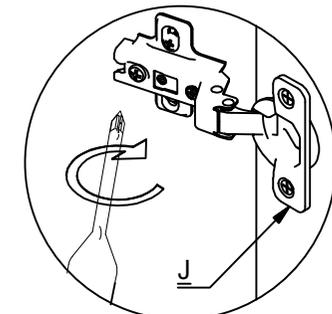

3. FRONT-TO-BACK BY THE HINGE ARM MOUNTING SCREW

YOU SHOULD RE-ADJUST SCREWS AS SHOWN ABOVE TO ALIGN DOOR ONCE HINGES HAVE BEEN ATTACHED

! CAUTION: THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

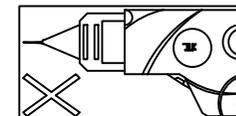

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.




HARDWARE LIST



(T) Anti-Tip Strap - 2 pcs



(U) M4 X 16MM - 2 pcs

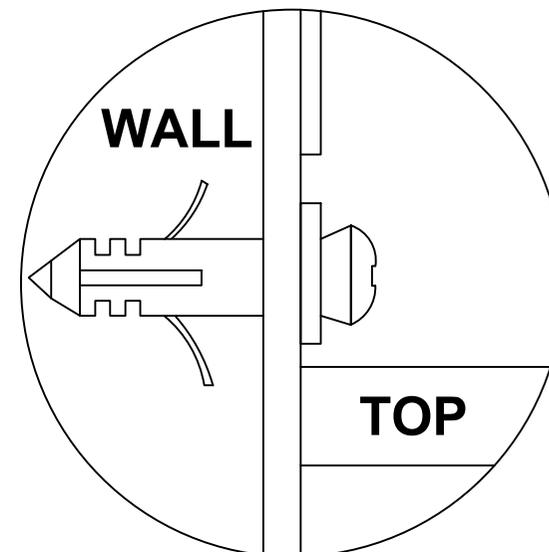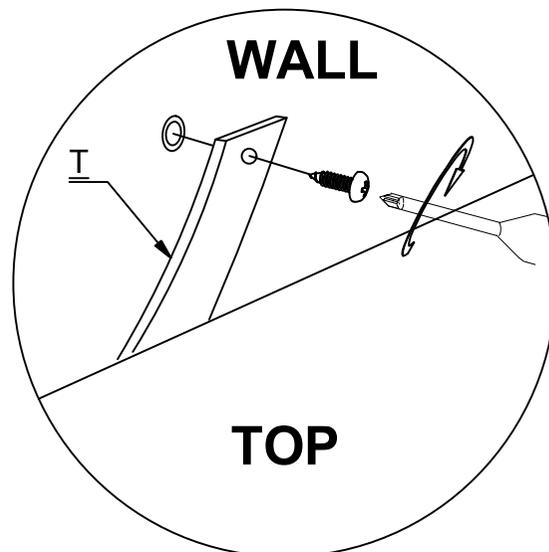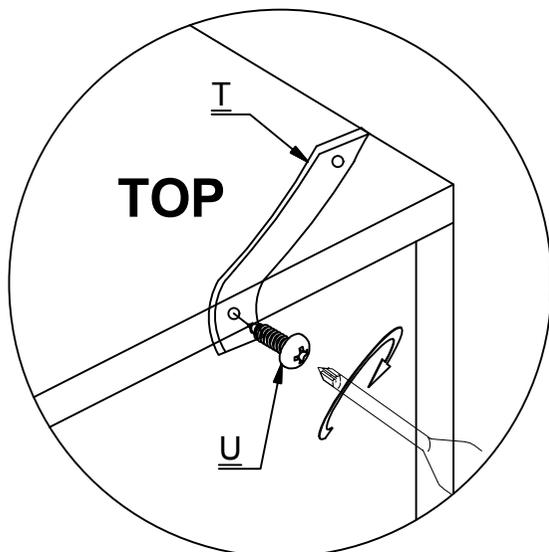

! **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

