


CORONA SINGLE STORAGE CHEST

ASSEMBLY INSTRUCTIONS


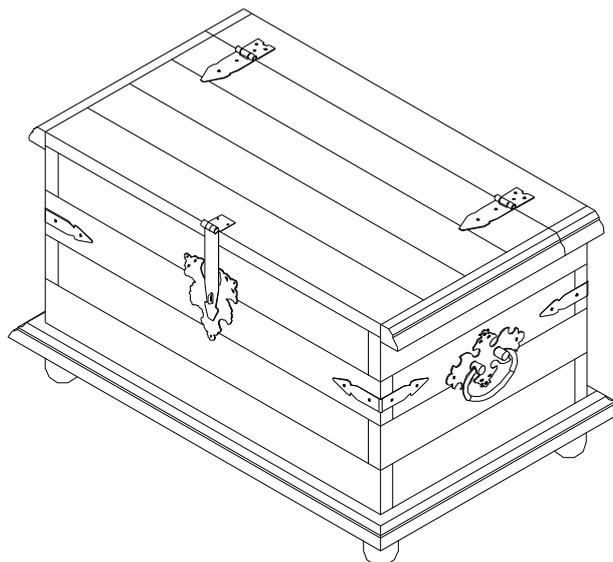


IMPORTANT

PLEASE READ BEFORE YOU CONTINUE FURTHER
FOR DOMESTIC USE ONLY
CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible.
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not place this product next to a radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a duster, and do not use detergents of any kind. However, the surface will need to be retreated from time to time. This can be done by using block wax (unperfumed) and rubbing it over the whole item.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

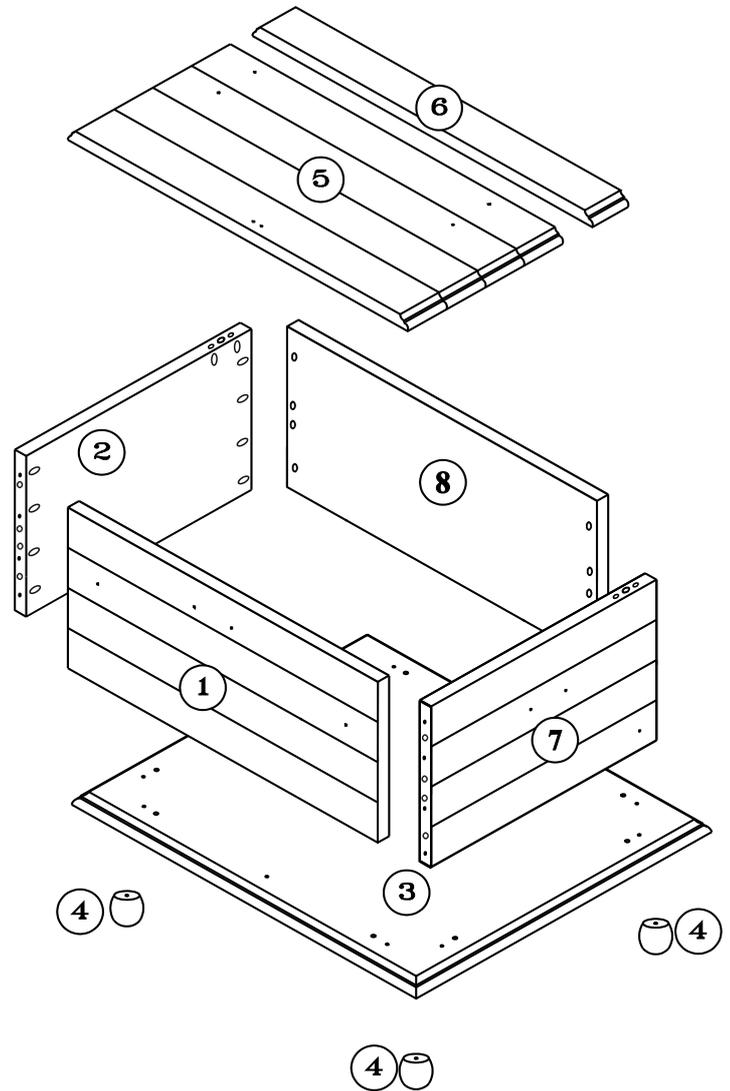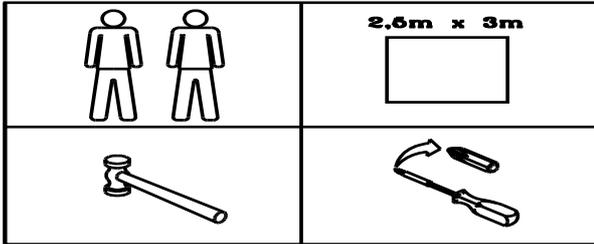

PARTS LIST

1	FRONT PANEL	01
2	PANEL LEFT (Yellow)	01
3	BASE	01
4	FOOT	04
5	TOP	01
6	TOP CROSSBEAM	01
7	PANEL RIGHT	01
8	BACK PANEL	01

!
 *Use of power tools to assemble this product will invalidate any claim and could damage this product making it unsafe!!!
 *Please assemble on a clean soft surface to avoid damage.





!
 *Please check contents and read the instructions before commencing assembly.
 *Assemble this product following the enclosed instructions carefully.
 *Please take care to avoid damaging parts during assembly.

FITTINGS LIST




A	4,0x45	14
B	4,0x35	20
C	3,5 x 16 black	39
D	ø8x30	26
E		04
F		02

G		01
H		01
I		02

STEP 1

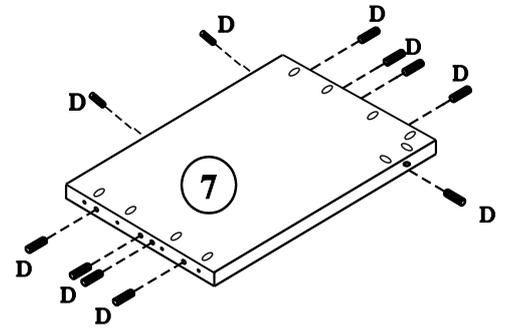
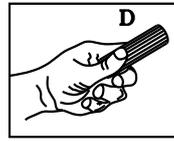
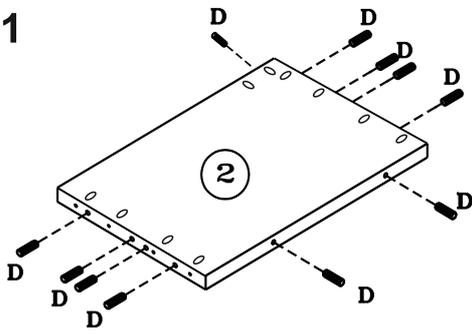


STEP 2

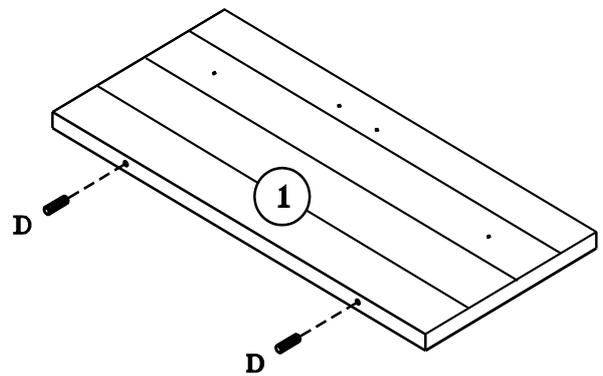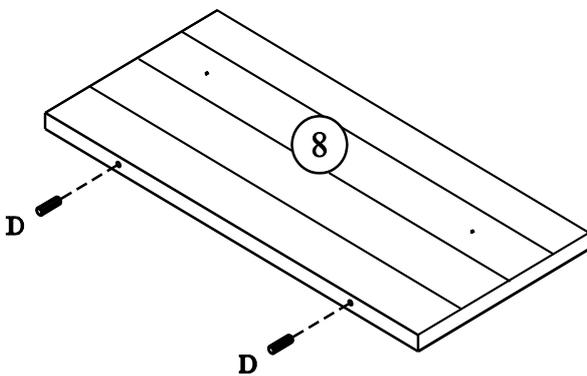



STEP 3

PLEASE NOTE PRE-DRILLED HOLES ON PART (1) WHEN ATTACHING TO PARTS 2 & 7. THE HOLES MUST BE AT THE FRONT OF THE UNIT TO ATTACH HARDWARE(G) IN THE CORRECT POSITION


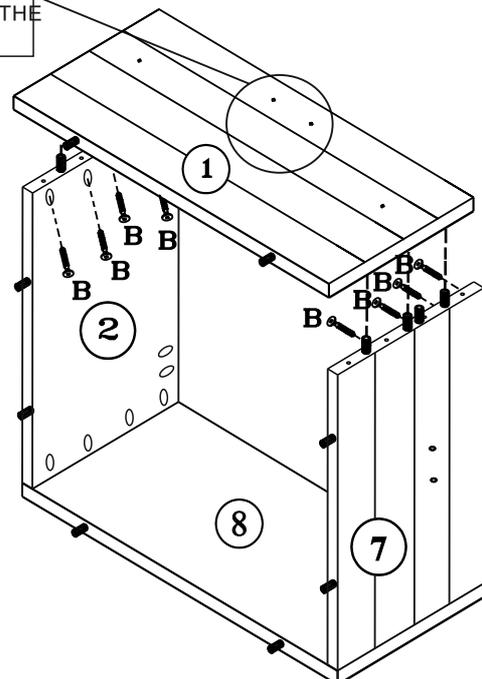
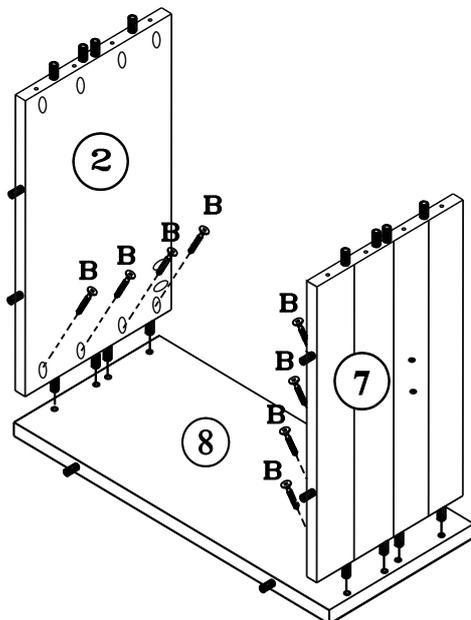


STEP 4


* For your future reference
SPD Number should be here

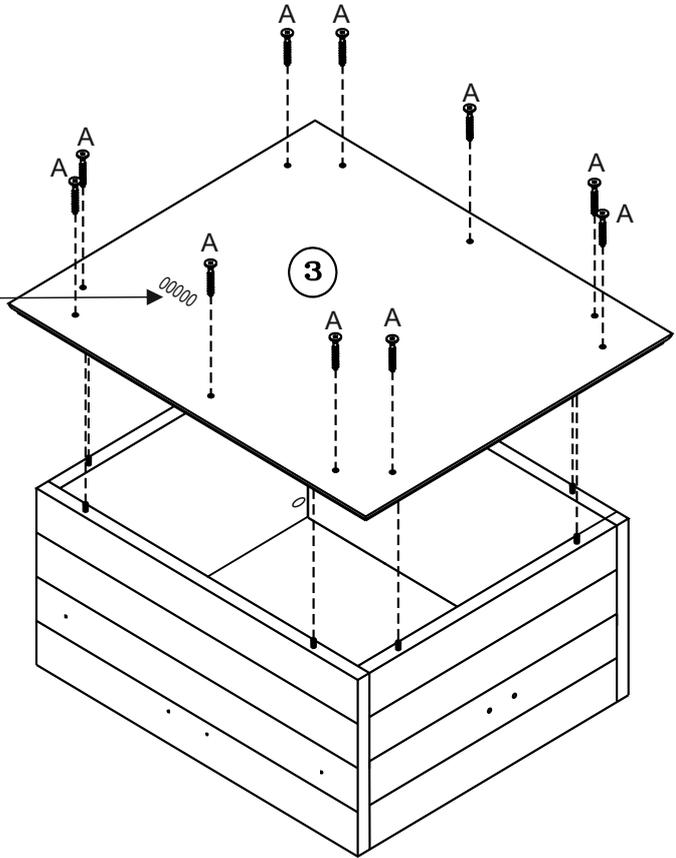


STEP 5

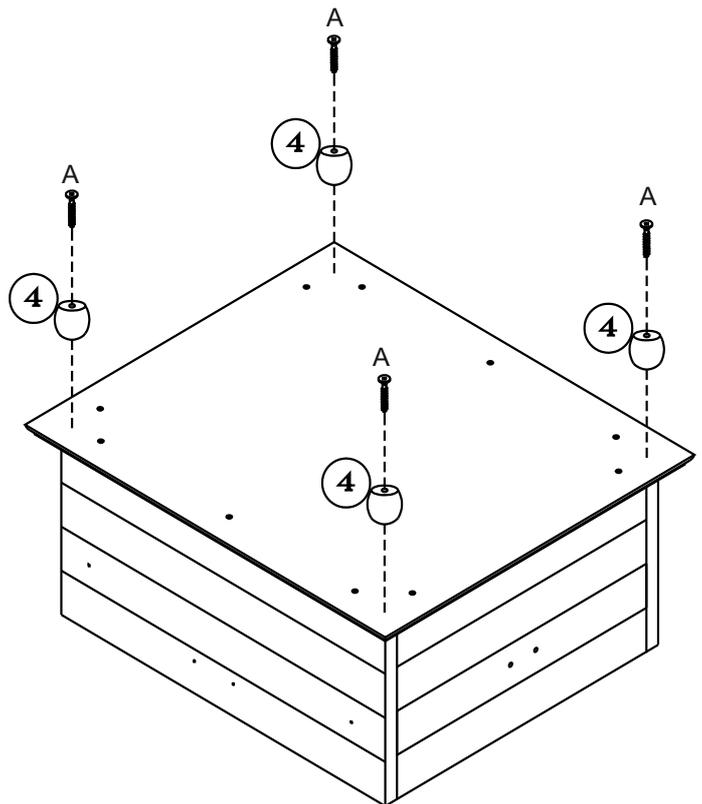
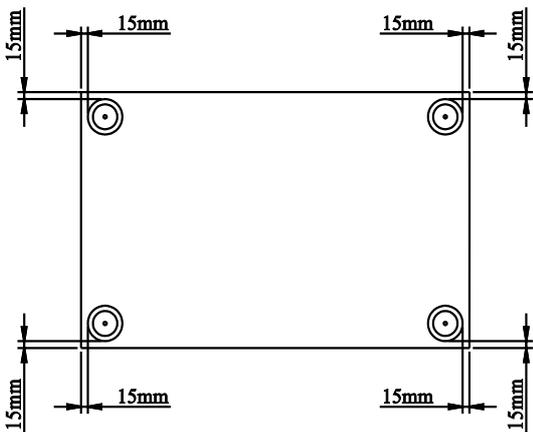


STEP 8

C	 3,5 x 16 black	12
H		01
I		02

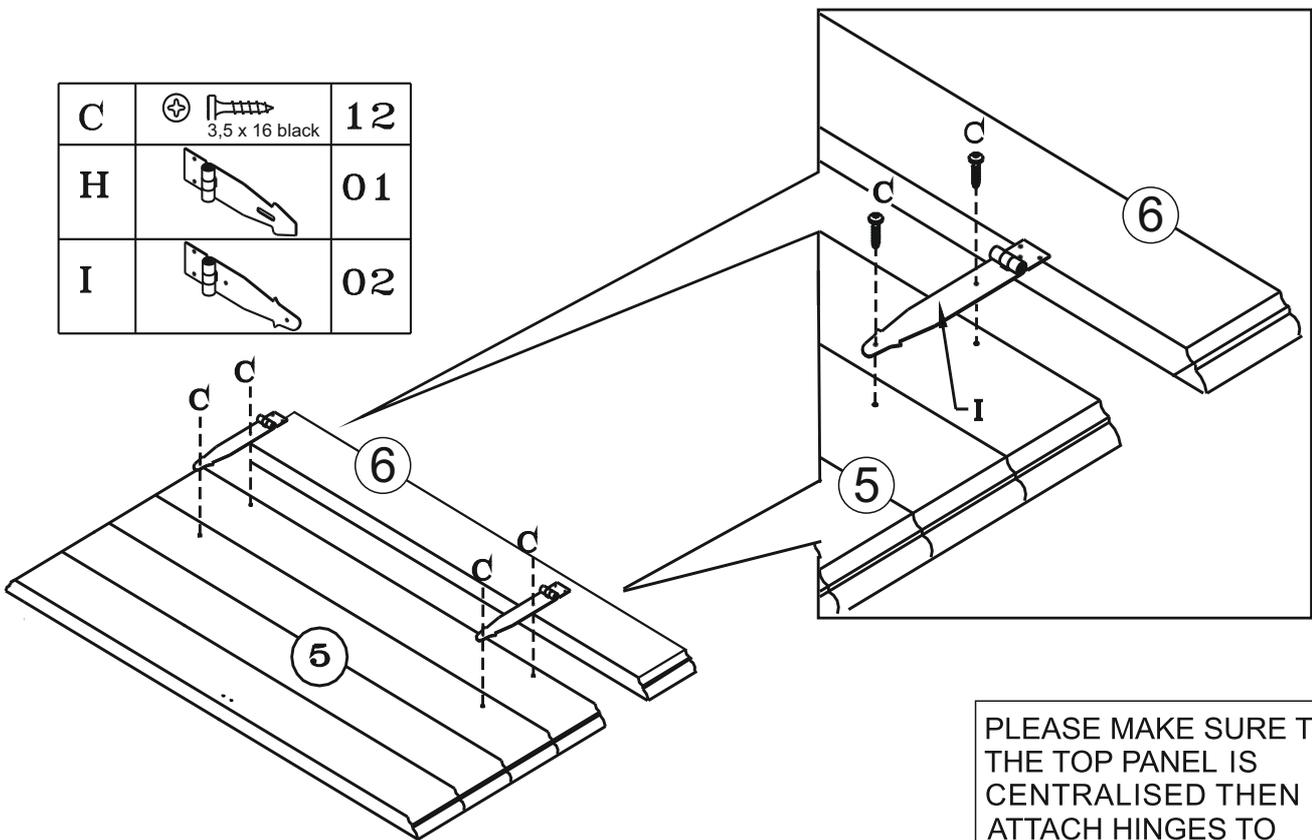




PLEASE MAKE SURE THAT THE TOP PANEL IS CENTRALISED THEN ATTACH HINGES TO PART 6 USING SCREW C.

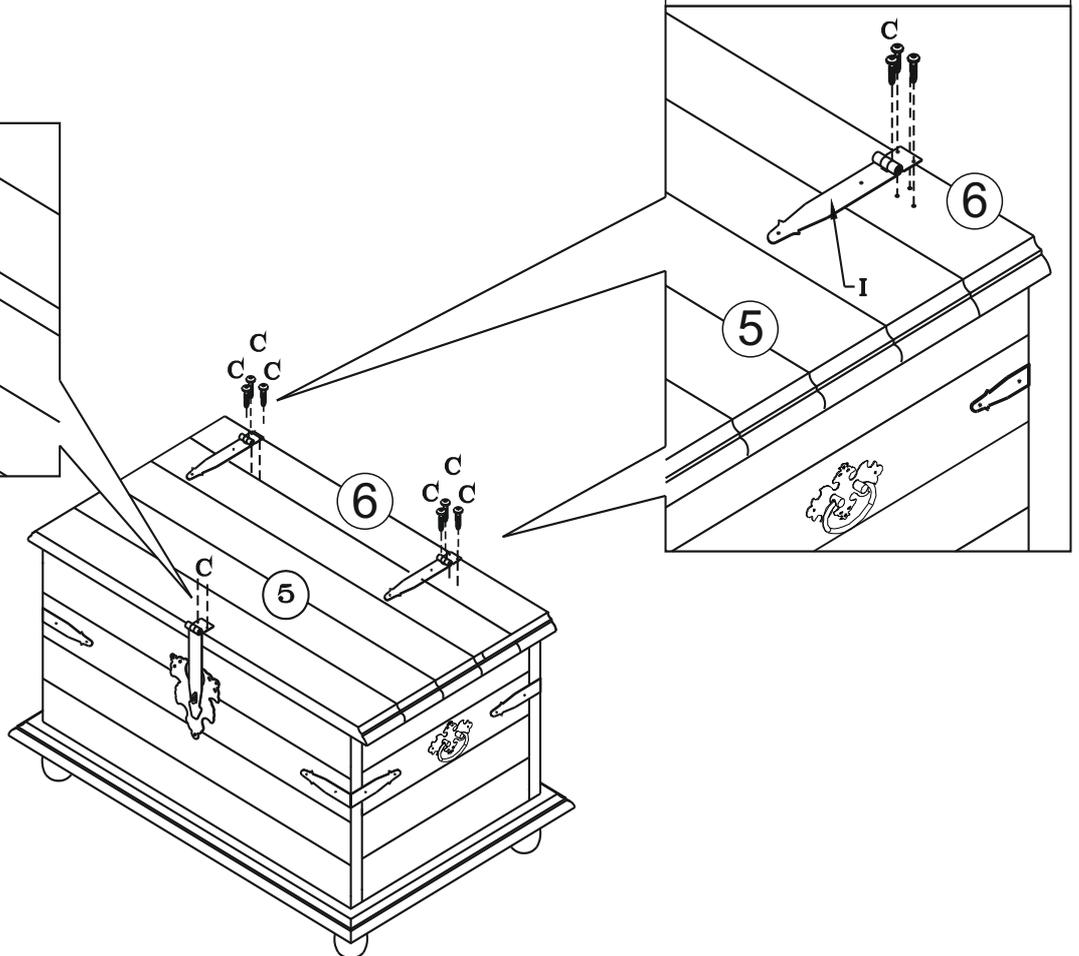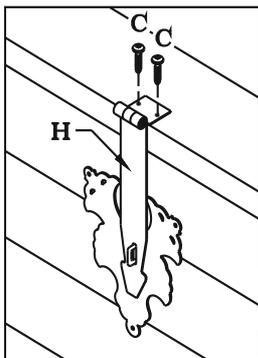


STEP 6


*Please line up bracket (E) with pre-drilled holes on parts 1 & 8


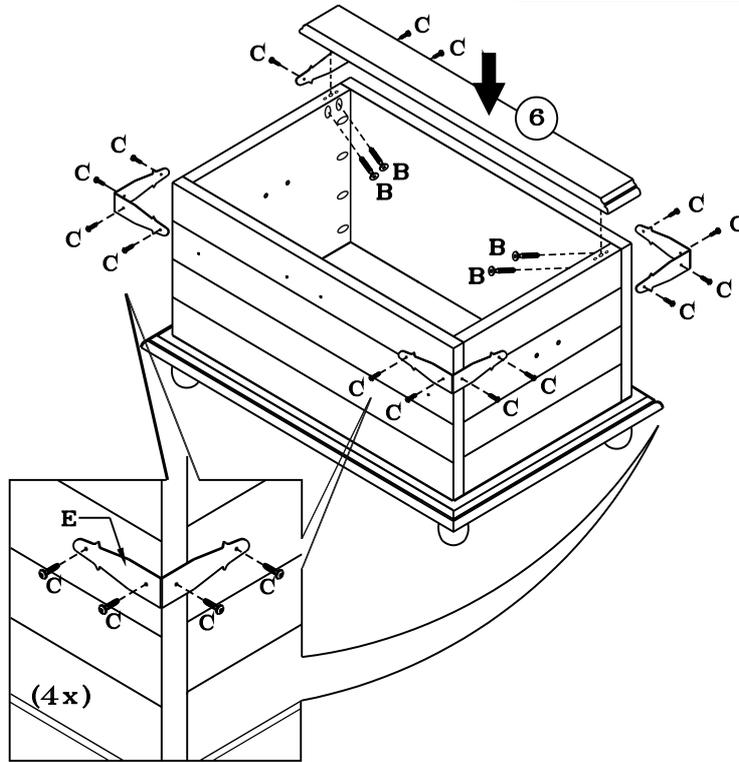


B		04
C		16
E		04

STEP 7

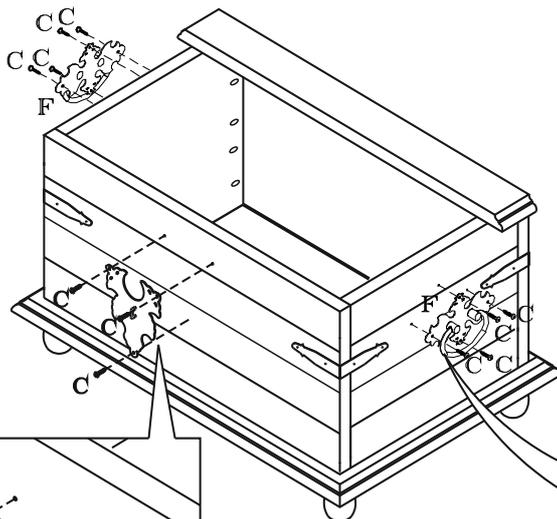

C		11
F		02
G		01

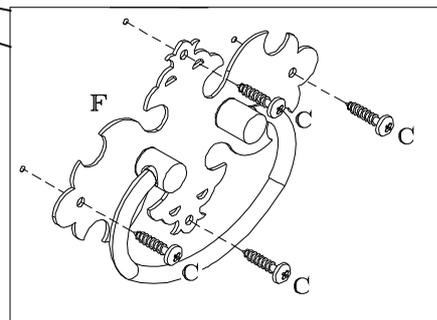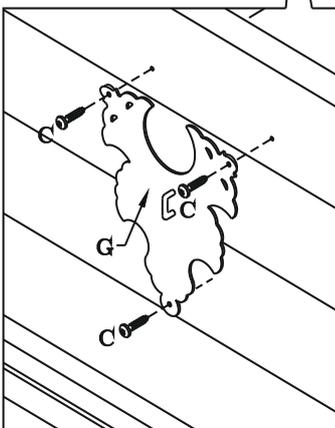

STEP 9

